INDUSTRIAL TUMBLE DRYERS

25kg
35kg

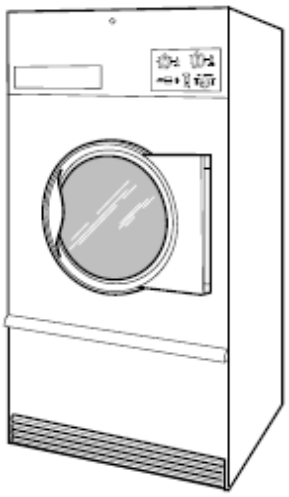

TROUBLESHOOTING MANUAL

70422101R1
Publication date: Apr 2013

Table of Contents

Section 1 – Safety Information 5
Locating an Authorized Service Person 7
Safety Warnings and Decals 7
Safety Precautions for Servicing Tumblers 7

Section 2 – Introduction 8
Model Identification 8
Serial Plate Location 11
Customer Service 11
Wiring Diagram 11
How a Tumble Dryer Works 12
Theory of Operation of Instant Electronic Ignition 12
Theory of Operation 13
Temperature Sensor 14

Section 3 – Troubleshooting 16
1. Motor Does Not Start 17
2. Motor Overload Protector Cycles Repeatedly 18
3. Motor Runs But Cylinder Does Not Turn 19
4. Motor Does Not Stop 20
5. No Heat Condition (Non-CE and Non-Australian Models) 21
6. Heating Element Does Not Heat or Burner Does Not Ignite 23
7. Igniter Does Not Shut Off After Gas Ignition — Gas Burner 25
8. Heating Element or Burner Shuts Off Prematurely 26
9. Heating Element or Burner Repeatedly Cycles Off On High Limit Thermostat 27
10. Heating Element or Burner Does Not Shut-Off 28
11. Clothes Do Not Dry 29
12. Tumble Dryer Overheating 30
13. Burners Not Burning Properly — Gas Models 31
14. Loading Door Opens During Operation 32
15. Tumble Dryer Runs But No Steam To Coils — Steam Models 33
16. Water In Steam Line — Steam Models 34
17. Door Open Light and Display Flash With Door Closed 35
18. Display Shows “SH” and Signals Sounds 36
19. Display Shows “OP” and Signal Sounds Three Minutes After Tumble Dryer is Started 37
20. Motor Runs, Time on Drying Timer But No Heat 38
21. No Main Burner Flame, Igniter Does Not Spark 40
22. Steam OM Control: No Heat With Cycle Selected, Unit Running and Calling For Heat 41
23. OM and RM Control: No Start With Cycle Selected, Start Button Pressed and Door Closed 42

24. OM Control: No Display After Selecting One of the ON/SELECT Keys 44
25. Electric OM Control: No Heat With Cycle Selected, Unit Running and Calling For Heat 45
26. Gas OM Control: No Heat With Cycle Selected, Unit Running and Calling For Heat 47
27. OM Control: No Fan Motor Rotation With Cycle Selected and Start Pressed 49
28. OM Reversing Control: No Cylinder Rotation or Reversing Capabilities 51
29. Coin Does Not Fall into Coin Vault or Coin Drop Sensor Does Not Register that Coin Has Been Entered 53
30. Cylinder Is "Stained" 56

Section 4 – Fire Supression System Troubleshooting 57
31. Tumble Dryer Does Not Operate and Light Is On 58
32. Water Discharge, but No Fire 59
33. Tumble Dryer Does Not Operate and Light Is Off 60
34. Tumble Dryer Operates, but Water Does Not Discharge and Light Is On 61

Section 5 – Adjustments 63
35. Main Gas Burner Air Inlet Shutters (Gas Models) 63
36. Airflow Switch 64
37. Loading Door Switch 64
38. Loading Door Catch 65
39. Aligning Door Strike 65
40. Drive Belt Tension 66
41. Cylinder Clearance 69
42. Cleaning Coin Drop 70

Section 6 – Micro Display Control (MDC) Troubleshooting 73
43. Coins Ignored When Entered 73
44. Control Has No Display 74
45. Door Open Indicator 76
46. Motor Will Not Start/Run 78
47. Unit Will Not Heat – Gas 81
48. Unit Will Not Heat – Steam 84
49. Unit Will Not Heat – Electric 87
50. Error Codes 90

Section 7 – NetMaster Troubleshooting – KT075 Models Only 91
51. No Infrared Communication 92
52. Coins Ignored When Entered 93
53. No Display 94
54. "Door Open" Indicator 96
55. No Start/Run 98
56. Unit Will Not Heat – Gas 100
57. Unit Will Not Heat – Steam 103
58. Unit Will Not Heat – Electric 105

59. CE Models No Display 108
60. CE Models “Door Open” Indicator..... 110
61. CE Models No Start/Run 112
62. CE Models Will Not Heat – Gas..... 114
63. CE Models Will Not Heat – Steam..... 117
64. CE Models Will Not Heat – Electric 119

Section 8 – On Premise Micro Control (OM) Troubleshooting 122
65. Control Has No Display..... 123
66. Door Open Indicator 125
67. Motor Will Not Start/Run 127
68. Unit Will Not Heat – Gas..... 130
69. Unit Will Not Heat – Steam..... 133
70. Unit Will Not Heat – Electric 135
71. Error Codes 138

Section 9 – Hybrid Timer Control Troubleshooting 139
72. Coins Ignored When Entered..... 140
73. Control Has No Display – QT and RQ Control Suffixes..... 141
74. Display Flashes “dr” With Door Closed – QT and RQ Control Suffixes1 43
75. Vend Satisfied, No In Use LED – SD and SX Control Suffixes1 46
76. In Use LED Lit, No Motor Run – SD and SX Control Suffixes1 49
77. Motor Will Not Start/Run – SD and SX Control Suffixes..... 151
78. Motor Will Not Start/Run – QT and RQ Control Suffixes..... 153
79. Unit Will Not Heat – Gas – SD and SX Control Suffixes 155
80. Unit Will Not Heat – Gas – QT and RQ Control Suffixes 158
81. Unit Will Not Heat – Electric – QT and RQ Control Suffixes1 61
82. Error Codes 164

Section 10 – Electronic Control Troubleshooting..... 165
83. No Infrared Communication 166
84. Coins Ignored When Entered L and W Control Suffixes only167
85. No Display 168
86. “Door Open” Indicator..... 170
87. No Start/Run 172
88. Unit Will Not Heat – Gas..... 175
89. Unit Will Not Heat – Steam..... 178
90. Unit Will Not Heat – Electric 180
91. CE Models No Display 184
92. CE Models “Door Open” Indicator..... 186
93. CE Models No Start/Run 188
94. CE Models Will Not Heat – Gas/Steam..... 191
95. CE Models Will Not Heat – Electric 194

Section 11 – LED OPL and UniLinc Troubleshooting..... 197
96. No Fan Motor Rotation..... 198
97. No Drive Motor Rotation..... 201
98. Stove and Cabinet Limit Errors..... 204
99. No Display..... 206
100. Airflow Errors..... 208
101. Fan Motor Centrifugal Switch Error..... 210
102. Close Door Indication..... 212
103. Moisture Sensor Error..... 214
Troubleshooting the Moisture Sensor Circuit..... 216
104. Troubleshooting at the Control..... 216
105. Troubleshooting From Control to Slip Ring Assembly..... 218
106. Troubleshooting At Slip Ring Assembly..... 220
107. Troubleshooting From Slip Ring Assembly to Moisture Sensing Baffle and Basket..... 220
108. Troubleshooting from Basket Shaft to Moisture Sensing Baffle with Machine Basket Removed..... 220
109. Troubleshooting at the Moisture Sensing Baffles with Machine Basket Removed..... 221
110. Fan Motor Contactor Error..... 222
111. Rotation Sensor Error..... 224
112. Shorted or Open Thermistor..... 226
113. Fuses and Transformer Configuration Jumper..... 228
114. Dip Switch/Harness Index Mismatch..... 229
115. Electronic Control Testing..... 230
Diagnostic Test Descriptions..... 232
116. Diagnostic Testing..... 239

Section 1
Safety Information

Throughout this manual and on machine decals, you will find precautionary statements ("CAUTION", "WARNING", and "DANGER") followed by specific instructions. These precautions are intended for the personal safety of the operator, user, servicer, and those maintaining the machine.

DANGER

Danger indicates an imminently hazardous situation that, if not avoided, will cause severe personal injury or death.

WARNING

Warning indicates a hazardous situation that, if not avoided, could cause severe personal injury or death.

CAUTION

Caution indicates a hazardous situation that, if not avoided, may cause minor or moderate personal injury or property damage.

Additional precautionary statements ("IMPORTANT" and "NOTE") are followed by specific instructions.

IMPORTANT: The word "IMPORTANT" is used to inform the reader of specific procedures where minor machine damage will occur if the procedure is not followed.

NOTE: The word "NOTE" is used to communicate installation, operation, maintenance or servicing information that is important but not hazard related.

In the interest of safety, some general precautions relating to the operation of this machine follow.

WARNING

- **Failure to install, maintain and/or operate this product according to the manufacturer's instructions may result in conditions which can produce serious injury, death and/or property damage.**
- **Do not repair or replace any part of the product or attempt any servicing unless specifically recommended or published in this Service Manual and unless you understand and have the skills to carry out the servicing.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the product is properly grounded and to reduce the risk of fire, electric shock, serious injury or death.**

W006R2

IMPORTANT INFORMATION: During the lifetime of a tumbler, it may require service. The information contained in this manual was written and is intended for use by qualified service technicians who are familiar with the safety procedures required in the repair of a tumbler, and who are equipped with the proper tools and testing equipment.

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:

- **Disconnect electric power to the tumble dryer before servicing.**
- **Never start the tumble dryer with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the tumble dryer is properly grounded.**

W240R1

WARNING

Repairs that are made to your products by unqualified persons can result in hazards due to improper assembly or adjustments subjecting you, or the inexperienced person making such repairs, to the risk of serious injury, electrical shock, or death.

W007

CAUTION

If you or an unqualified person perform service on your product, you must assume the responsibility for any personal injury or property damage which may result. The manufacturer will not be responsible for any injury or property damage arising from improper service and/or service procedures.

W008

NOTE: The WARNING and IMPORTANT instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and carefulness are factors which CANNOT be built into this tumbler. These factors MUST BE supplied by the person(s) installing, maintaining or operating the tumbler.

Always contact your dealer, distributor, service agent or the manufacturer on any problems or conditions you do not understand.

Locating an Authorized Service Person

Manufacturer is not responsible for personal injury or property damage resulting from improper service. Review all service information before beginning repairs.

Warranty service must be performed by an authorized technician, using authorized factory parts. If service is required after the warranty expires, manufacturer also recommends contacting an authorized technician and using authorized factory parts.

Safety Warnings and Decals

SAFETY WARNINGS and decals have been provided in key locations to remind you of important precautions for the safe operation and maintenance of your tumbler. Please take the time to review these warnings before proceeding with service work.

All decals have been designed and applied to withstand washing and cleaning. Decals should be checked periodically to be sure they have not been damaged, removed, or painted.

Safety Precautions for Servicing Tumblers

Prior to servicing tumbler:

- **Disconnect electrical service and "lockout" to prevent unintentional connection.**
- **Shut off supply gas valve.**
- **Allow machine to cool prior to servicing.**

After servicing tumbler:

- **Control/access panels must be reinstalled.**
- **Motor/drive/belt guards must be reinstalled.**
- **Contactor/junction/accessory box covers must be reinstalled.**
- **Use a non-corrosive leak detection solution to check all pipe connections for gas leaks. DO NOT USE AN OPEN FLAME TO CHECK FOR GAS LEAKS!**
- **The loading door switch, lint door switch and airflow switch must be operating properly.**

Section 2
Introduction

Model Identification

Information in this manual is applicable to these models:

	Gas			Steam/Thermal Oil		Electric
50 Pound	CA050L	GU050N	PK050N	CT050S	LT050T	CT050E
	CA050N	HA050L	PT050L	CT050T	LU050S	CU050E
	CK050N	HA050N	PT050N	CU050S	LU050T	DR50E2-BT050E
	CT050L	HK050N	PU050L	CU050T	PT050S	DR50E2-BU050E
	CT050N	HT050D	PU050N	DR50S2-BT050S	PT050T	DR55E2-BT050E
	CU050L	HT050L	SA050L	DR50S2-BT050T	PU050S	DR55E2-BU050E
	CU050N	HT050N	SA050N	DR50S2-BU050S	PU050T	GT050E
	DR50G2-BA050L	HU050L	SK050N	DR50S2-BU050T	ST050S	GU050E
	DR50G2-BA050N	HU050N	ST050D	DR55S2-BT050S	ST050T	HT050E
	DR50G2-BK050N	IPD50G2	ST050L	DR55S2-BT050T	SU050S	HU050E
	DR50G2-BT050D	IT050L	ST050N	DR55S2-BU050S	SU050T	IPD50E2
	DR50G2-BT050L	IT050N	SU050L	DR55S2-BU050T	UT050S	IT050E
	DR50G2-BT050N	KA050L	SU050N	GT050S	UT050T	KT050E
	DR50G2-BU050L	KA050N	UA050L	GT050T	UU050S	KU050E
	DR50G2-BU050N	KK050N	UA050N	GU050S	UU050T	LT050E
	DR55G2-BA050L	KT050L	UK050N	GU050T	YT050S	LU050E
	DR55G2-BA050N	KT050N	UT050L	HT050S	YT050T	PT050E
	DR55G2-BT050D	KU050L	UT050N	HT050T	YU050S	PU050E
	DR55G2-BT050L	KU050N	UU050L	HU050S	YU050T	ST050E
	DR55G2-BT050N	LA050L	UU050N	HU050T		SU050E
	DR55G2-BU050L	LA050N	YT050L	IPD50S2		UT050E
	DR55G2-BU050N	LK050N	YT050N	IT050S		UU050E
	GA050L	LT050L	YU050L	IT050T		YT050E
	GA050N	LT050N	YU050N	KT050S		YU050E
	GK050N	LU050L		KT050T		
	GT050L	LU050N		KU050S		
	GT050N	PA050L		KU050T		
	GU050L	PA050N		LT050S		

(continued)

NOTE: Control suffixes listed on next page.

(continued)

	Gas			Steam/Thermal Oil		Electric
75 Pound	CA075L	HA075N	PU075N	CT075S	LU075T	CT075E
	CA075N	HK075N	SA075L	CT075T	PT075S	CU075E
	CK075N	HT075D	SA075N	CU075S	PT075T	DR75E2-BT075E
	CT075L	HT075L	SK075N	CU075T	PU075S	DR75E2-BU075E
	CT075N	HT075N	ST075D	DR75S2-BT075S	PU075T	DR80E2-BT075E
	CU075L	HU075L	ST075L	DR75S2-BT075T	ST075S	DR80E2-BU075E
	CU075N	HU075N	ST075N	DR75S2-BU075S	ST075T	GT075E
	DR75G2-BA075L	IPD75G2	STF75L	DR75S2-BU075T	SU075S	GU075E
	DR75G2-BA075N	IT075L	STF75N	DR80S2-BT075S	SU075T	HT075E
	DR75G2-BK075N	IT075N	SU075L	DR80S2-BT075T	UT075S	HU075E
	DR75G2-BT075D	KA075L	SU075N	DR80S2-BU075S	UT075T	IPD75E2
	DR75G2-BT075L	KA075N	UA075L	DR80S2-BU075T	UU075S	IT075E
	DR75G2-BT075N	KK075N	UA075N	GT075S	UU075T	KT075E
	DR75G2-BU075L	KT075L	UK075N	GT075T	YT075S	KU075E
	DR75G2-BU075N	KT075N	UT075L	GU075S	YT075T	LT075E
	DR80G2-BA075L	KU075L	UT075N	GU075T	YU075S	LU075E
	DR80G2-BA075N	KU075N	UTF75L	HT075S	YU075T	PT075E
	DR80G2-BT075D	LA075L	UTF75N	HT075T		PU075E
	DR80G2-BT075L	LA075N	UU075L	HU075S		ST075E
	DR80G2-BT075N	LK075N	UU075N	HU075T		SU075E
	DR80G2-BU075L	LT075L	YT075L	IPD75S2		UB075E
	DR80G2-BU075N	LT075N	YT075N	IT075S		UT075E
	GA075L	LU075L	YU075L	IT075T		UU075E
	GA075N	LU075N	YU075N	KT075S		YT075E
	GK075N	PA075L		KT075T		YU075E
	GT075L	PA075N		KU075S		
	GT075N	PK075N		KU075T		
	GU075L	PT075L		LT075S		
	GU075N	PT075N		LT075T		
	HA075L	PU075L		LU075S		

NOTE: Control suffixes listed on next page.

Includes models with the following control suffixes:

3B – reversing DX4 vended
3O – DX4 OPL
3V – DX4 vended
3W – reversing DX4 prep for coin
3X – DX4 prep for coin
BB – reversing basic electronic, coin
BC – basic electronic, coin
BG – basic electronic, OPL mode
BL – basic electronic, central pay for coin
BW – reversing basic electronic, prep for coin
BX – basic electronic, prep for coin
BY – basic electronic, prep for card
BZ – reversing basic electronic, prep for card
DO – DMP OPL
DV – DMP vended
DX – DMP prep for coin
EO – LED OPL
KB – reversing single coin
KC – single coin
KW – reversing prep for coin
KX – prep for coin
KY – prep for card
KZ – reversing prep for card
LB – reversing network adaptable coin
LC – network adaptable coin
LW – reversing network adaptable, prep for coin
LX – network adaptable, prep for coin
LY – network adaptable, prep for card
LZ – reversing network adaptable, prep for card
NC – NetMaster coin
NX – NetMaster, prep for coin
NY – NetMaster, prep for card
OM – OPL micro
QT – dual digital timer
R3 – reversing DX4 OPL
RD – reversing DMP OPL
RE – reversing LED OPL
RM – reversing OPL micro
RQ – reversing dual digital timer
RU – reversing UniLinc OPL
SD – single drop
SX – single drop, prep for coin
UO – UniLinc OPL
WB – reversing network ready coin
WC – network ready coin
WW – reversing network ready, prep for coin
WX – network ready, prep for coin
WY – network ready, prep for card
WZ – reversing network ready, prep for card

Serial Plate Location

When calling or writing about your product, be sure to mention model and serial numbers. Model and serial numbers are found on serial plate on the rear of machine and inside door.

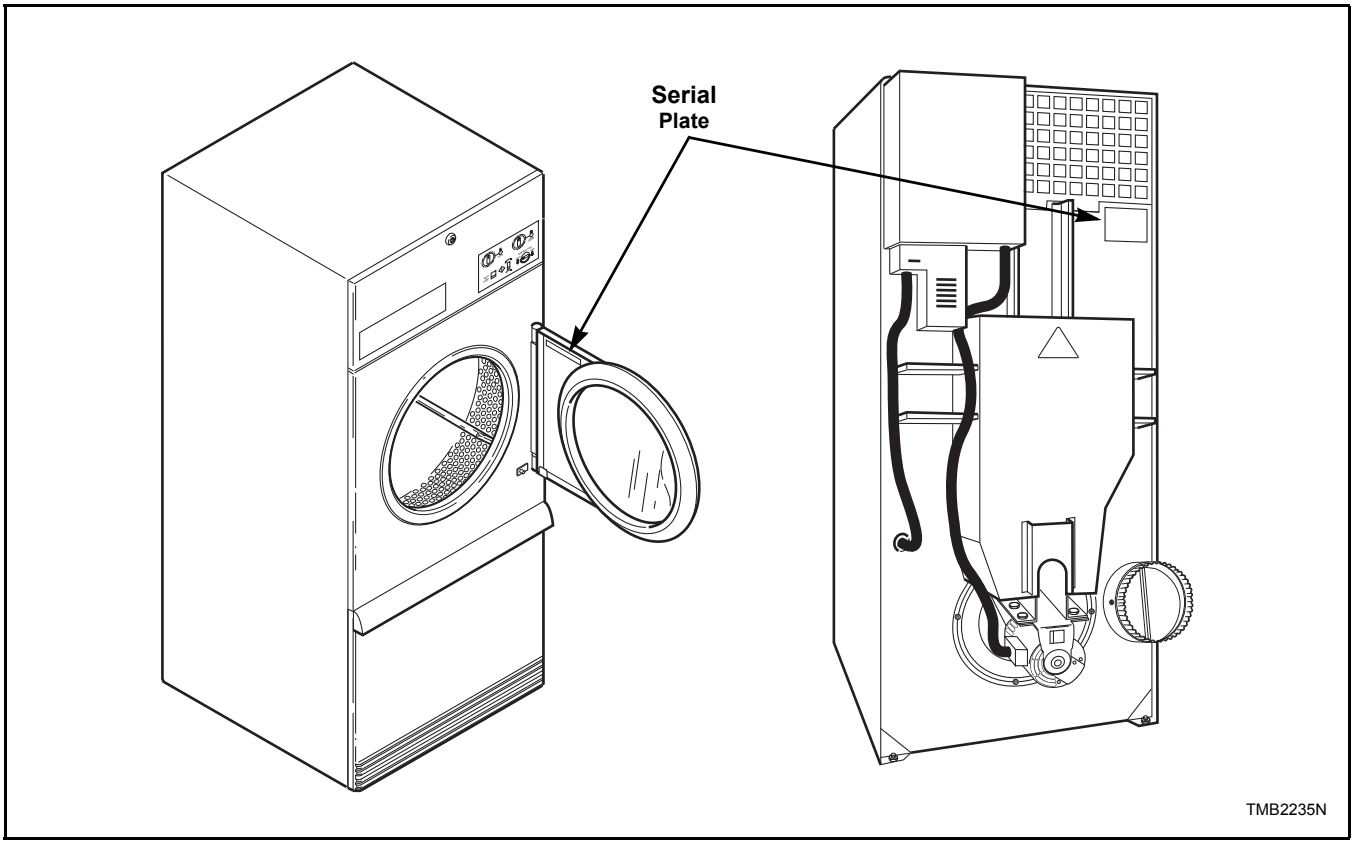

Customer Service

If literature or replacement parts are required, contact the source from which the machine was purchased.

Wiring Diagram

The wiring diagram is located inside the junction or contactor box.

The wiring diagram part number is in the lower portion of the electrical data on the serial plate.

How a Tumble Dryer Works

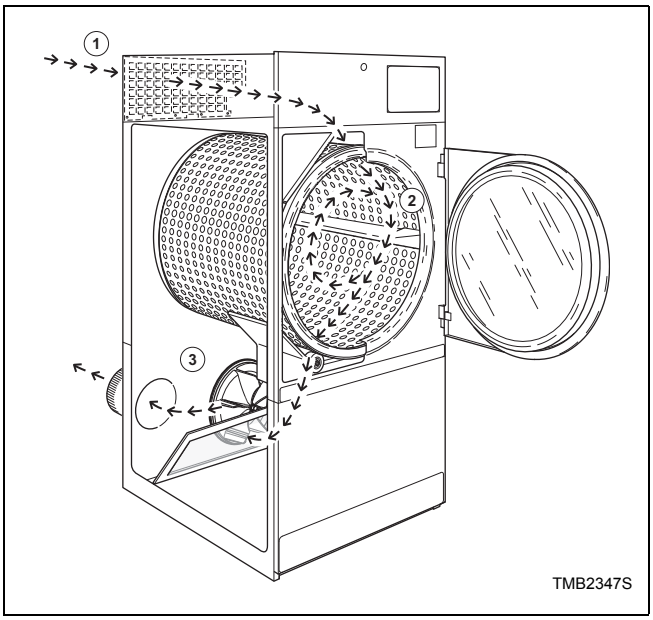

A tumble dryer uses heated air to dry loads of laundry.

(1) When the motor is started, the exhaust fan pulls room temperature air in through the air intake at the rear of the tumble dryer and over the heat source (burner flame for gas, heating element for electric, and coil for steam).

(2) The heated air moves into the cylinder, where it is circulated through the wet load by the tumbling action of the cylinder.

(3) The air then passes through the lint filter, exhaust fan, and is vented to the outdoors.

Theory of Operation of Instant Electronic Ignition

IMPORTANT: The Non-CE Marked Instant Electronic Ignition system will attempt to light the gas by sparking for approximately 15 seconds. If gas ignition does not take place within approximately 15 seconds, the Instant Electronic Ignition control will go into safety lockout and the valve will no longer open until Instant Electronic Ignition control is reset. To reset Instant Electronic Ignition control, remove power from control by opening and closing the tumble dryer door. If condition persists, check that the gas shut-off valve is in "on" position and that the gas service is properly connected.

If condition persists:

1. Check resistance of high tension lead (approximately 1000 ohms/inch), and replace if not within resistance range.
2. Check voltage present at valve.
3. Check that machine is properly grounded.
4. Check the gap between igniter and burner tube (gap should be 1/4-3/8 inch).
5. Check that burner ports are not blocked or plugged under the igniter.

Fire Suppression System Theory of Operation

IMPORTANT: The fire suppression system is designed to diminish a laundry fire starting inside a fire suppression system equipped tumble dryer. The fire suppression system is not designed to stop or eliminate high temperature and spontaneous combustion situations. Follow all instructions in the installation manual to ensure the fire suppression system operates properly. Train all operators in the proper preventative maintenance of the fire suppression system.

IMPORTANT: For safety purposes, do not operate tumble dryer if a fire has occurred.

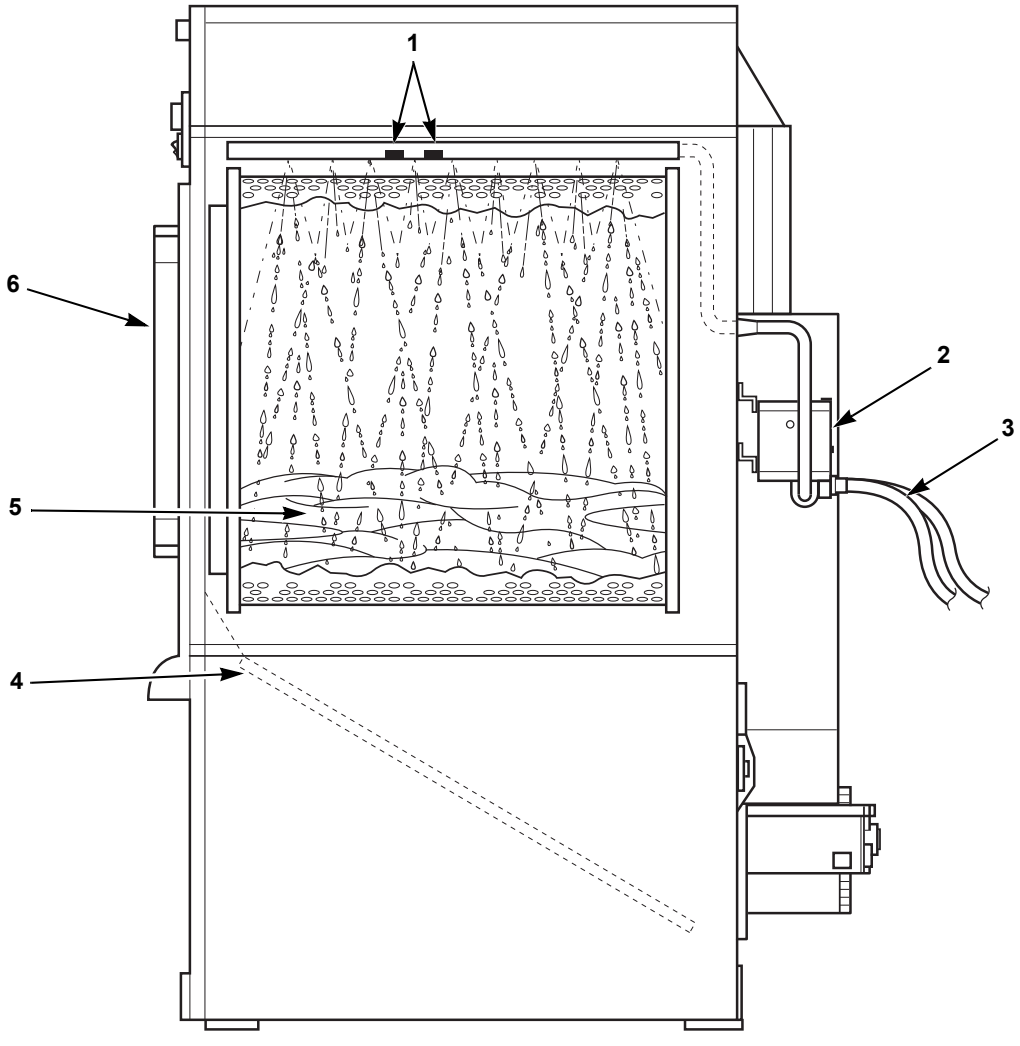

1	Temperature Sensors	**4**	Lint Screen
2	Fire Suppression System Control Box	**5**	Load
3	Water Flow to Machine	**6**	Loading Door

Figure 1

Temperature Sensor

Two temperature sensors are located in the cylinder area of the tumble dryer to provide temperature readings. Refer to *Figure 1* and *Figure* 2. These temperature sensors will trigger a mode change based on a pre-set temperature trip-point.

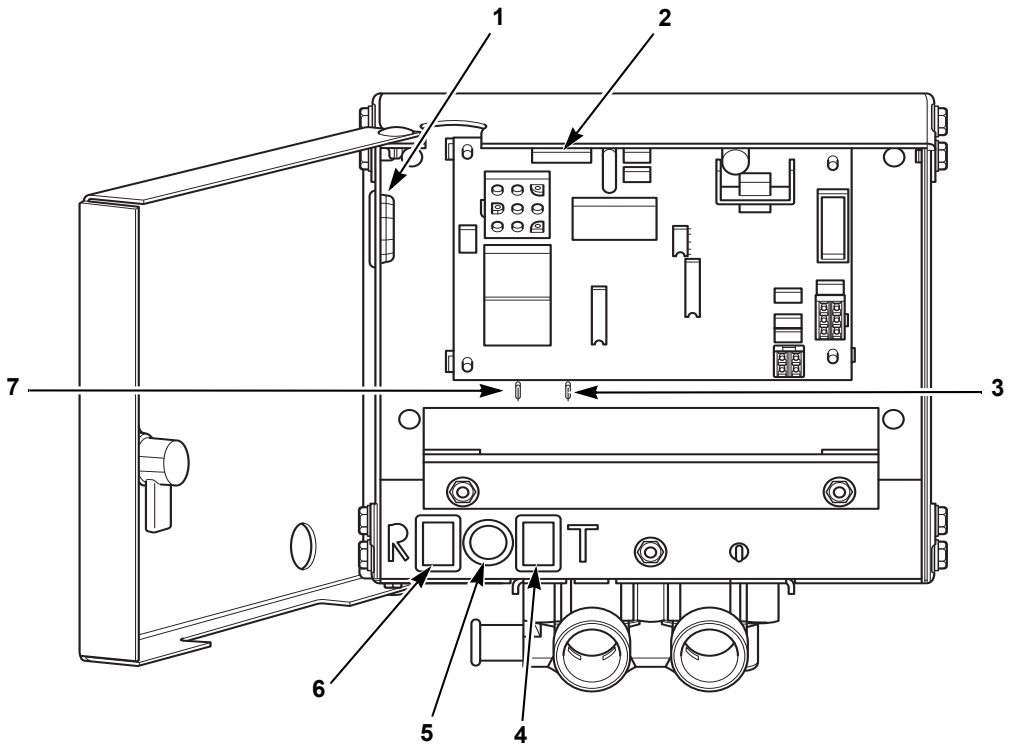

1	Opening for Auxiliary Alarm Cable	**5**	Light
2	Fuse	**6**	Reset Button
3	Auxiliary Alarm Fast-On Connection	**7**	Auxiliary Alarm Fast-On Connection
4	Test Button		

Figure 2

Modes of Operation

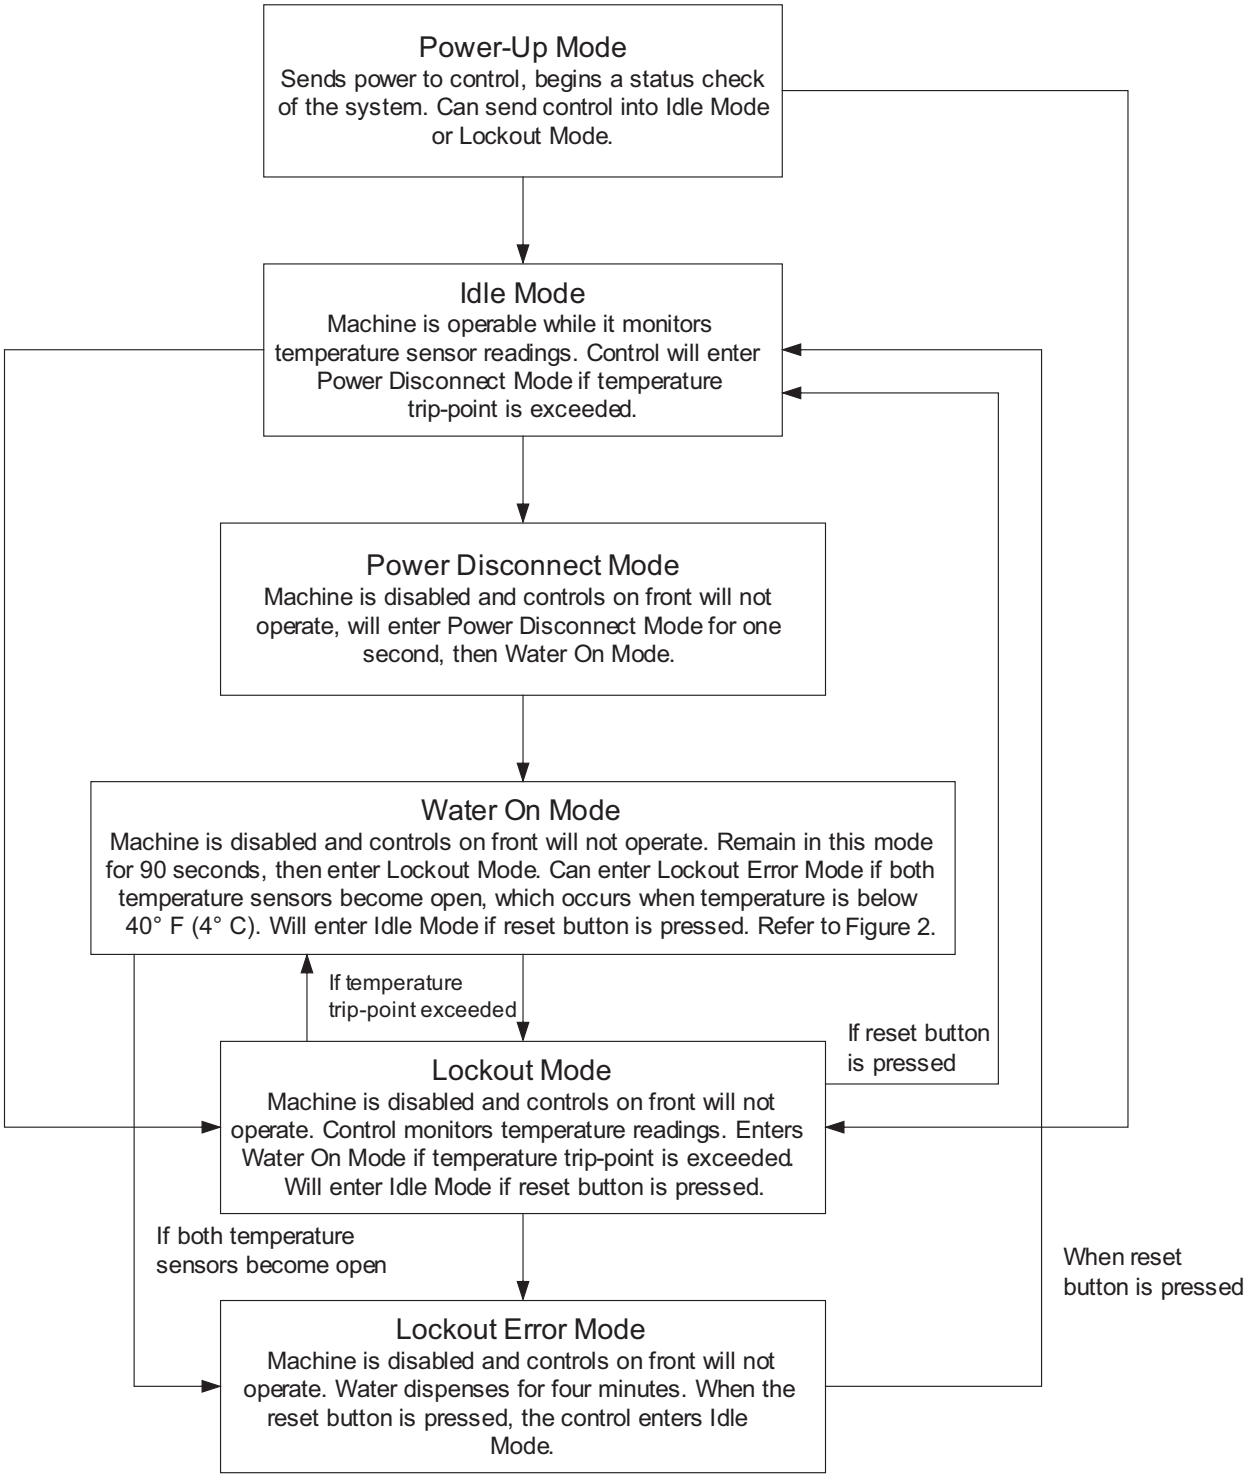
Power-Up Mode
Sends power to control, begins a status check of the system. Can send control into Idle Mode or Lockout Mode.
Idle Mode
Machine is operable while it monitors temperature sensor readings. Control will enter Power Disconnect Mode if temperature trip-point is exceeded.
Power Disconnect Mode
Machine is disabled and controls on front will not operate, will enter Power Disconnect Mode for one second, then Water On Mode.
Water On Mode
Machine is disabled and controls on front will not operate. Remain in this mode for 90 seconds, then enter Lockout Mode. Can enter Lockout Error Mode if both temperature sensors become open, which occurs when temperature is below 40° F (4° C). Will enter Idle Mode if reset button is pressed. Refer to Figure 2.
If temperature trip-point exceeded
If reset button is pressed
Lockout Mode
Machine is disabled and controls on front will not operate. Control monitors temperature readings. Enters Water On Mode if temperature trip-point is exceeded. Will enter Idle Mode if reset button is pressed.
If both temperature sensors become open
When reset button is pressed
Lockout Error Mode
Machine is disabled and controls on front will not operate. Water dispenses for four minutes. When the reset button is pressed, the control enters Idle Mode.

Section 1
Troubleshooting

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:
- **Disconnect electric power to the tumbler before servicing.**
- **Close gas shut-off valve to gas tumbler before servicing.**
- **Close steam valve to steam tumbler before servicing.**
- **Never start the tumbler with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the tumbler is properly grounded.**

W002

IMPORTANT: Refer to appropriate wiring diagram for aid in testing tumble dryer components.

1. Motor Does Not Start

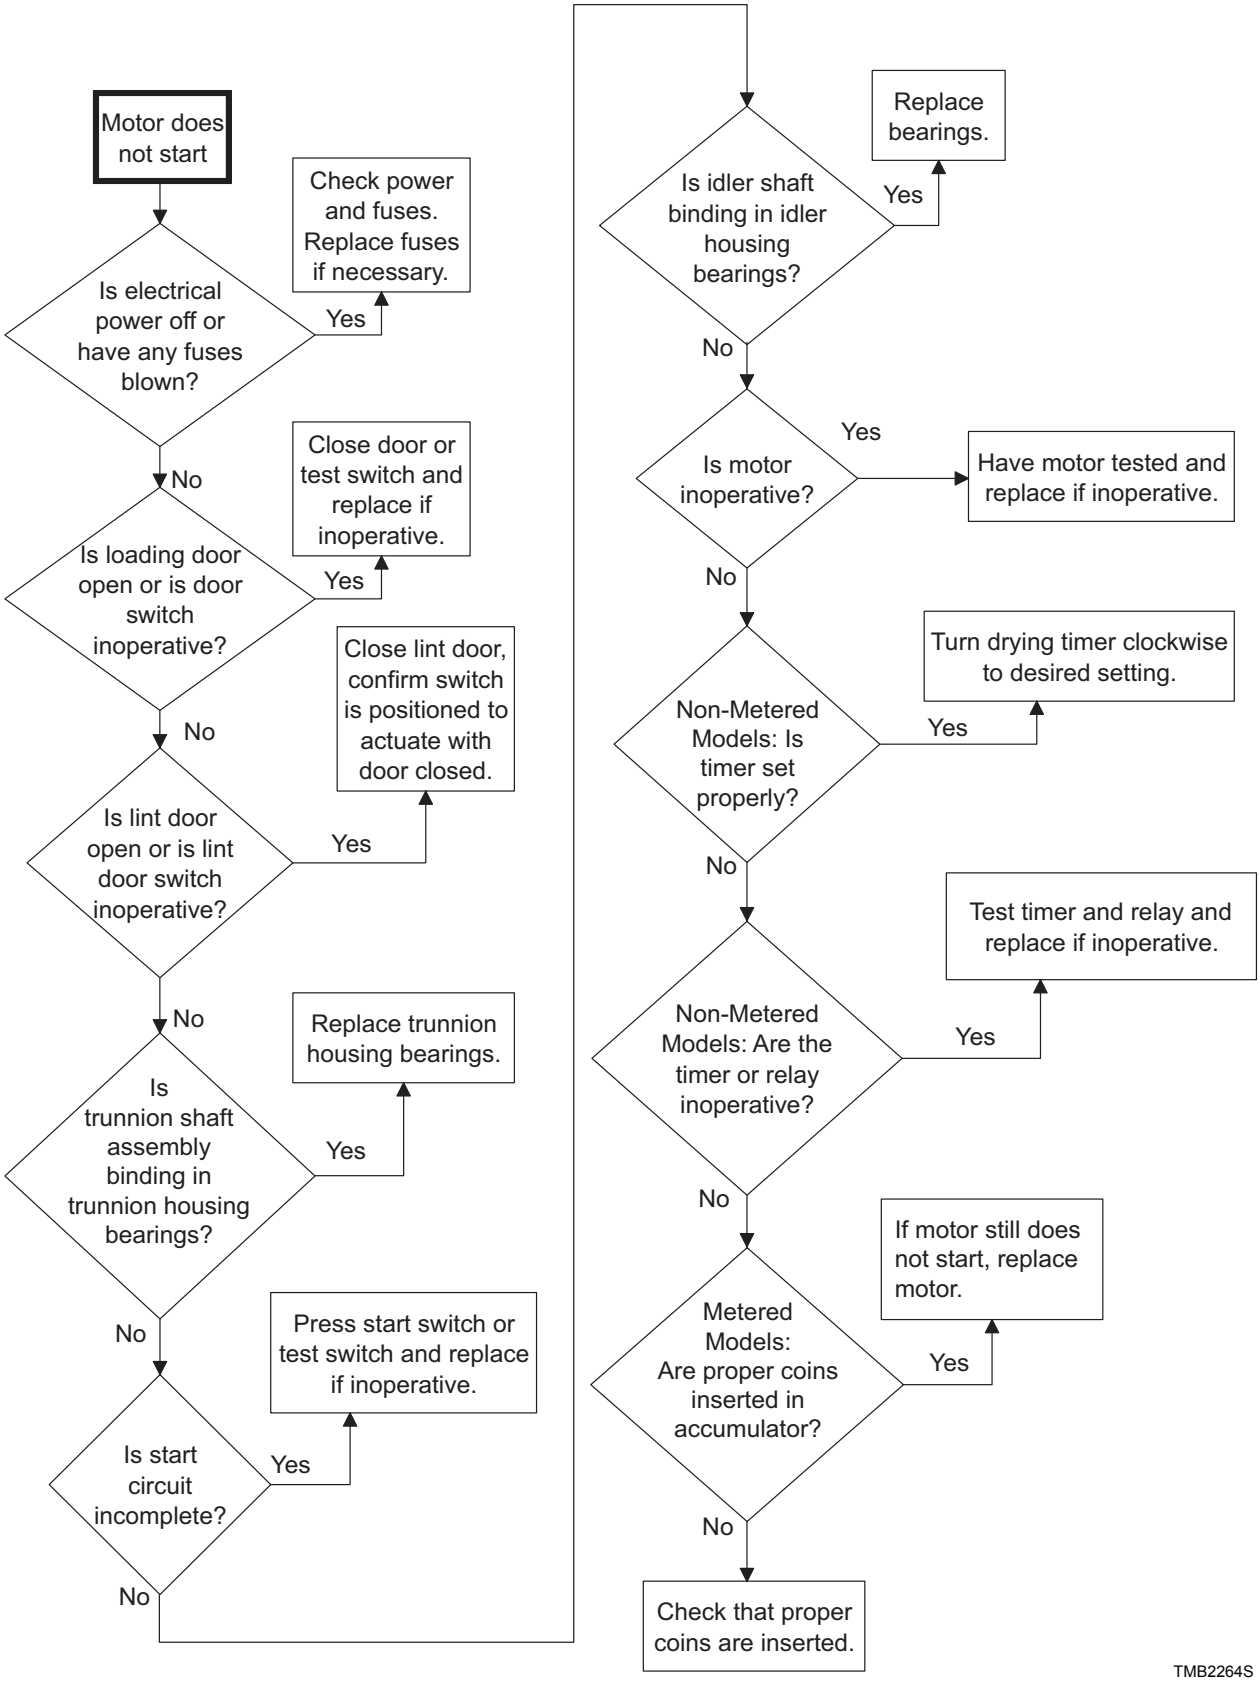
Motor does not start
Is electrical power off or have any fuses blown?
Yes
Check power and fuses. Replace fuses if necessary.
No
Is loading door open or is door switch inoperative?
Yes
Close door or test switch and replace if inoperative.
No
Is lint door open or is lint door switch inoperative?
Yes
Close lint door, confirm switch is positioned to actuate with door closed.
No
Is trunnion shaft assembly binding in trunnion housing bearings?
Yes
Replace trunnion housing bearings.
No
Is start circuit incomplete?
Yes
Press start switch or test switch and replace if inoperative.
No
Is idler shaft binding in idler housing bearings?
Yes
Replace bearings.
No
Is motor inoperative?
Yes
Have motor tested and replace if inoperative.
No
Non-Metered Models: Is timer set properly?
Yes
Turn drying timer clockwise to desired setting.
No
Non-Metered Models: Are the timer or relay inoperative?
Yes
Test timer and relay and replace if inoperative.
No
Metered Models: Are proper coins inserted in accumulator?
Yes
If motor still does not start, replace motor.
No
Check that proper coins are inserted.
TMB2264S

2. Motor Overload Protector Cycles Repeatedly

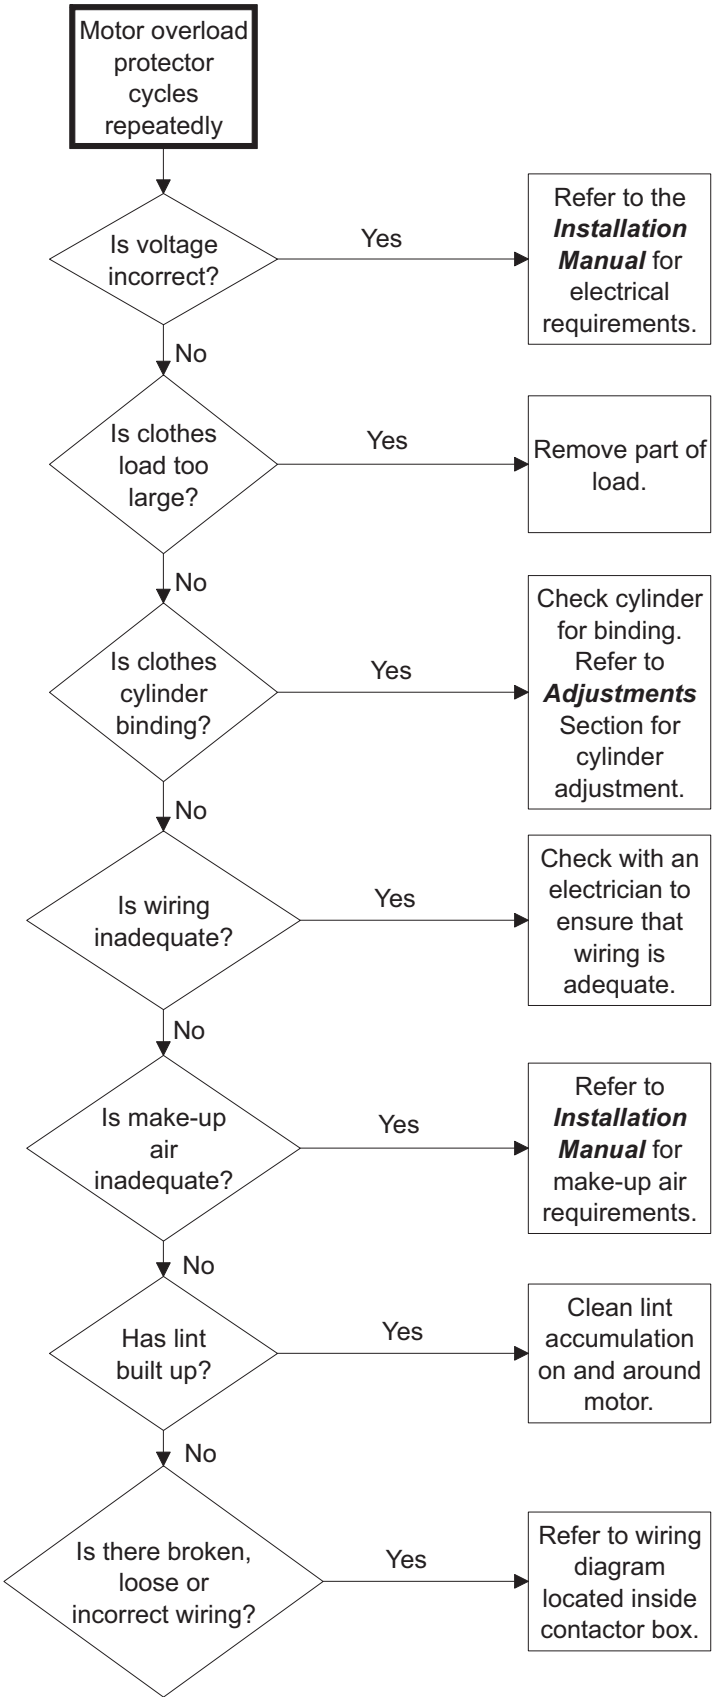

TMB1874S

3. Motor Runs But Cylinder Does Not Turn

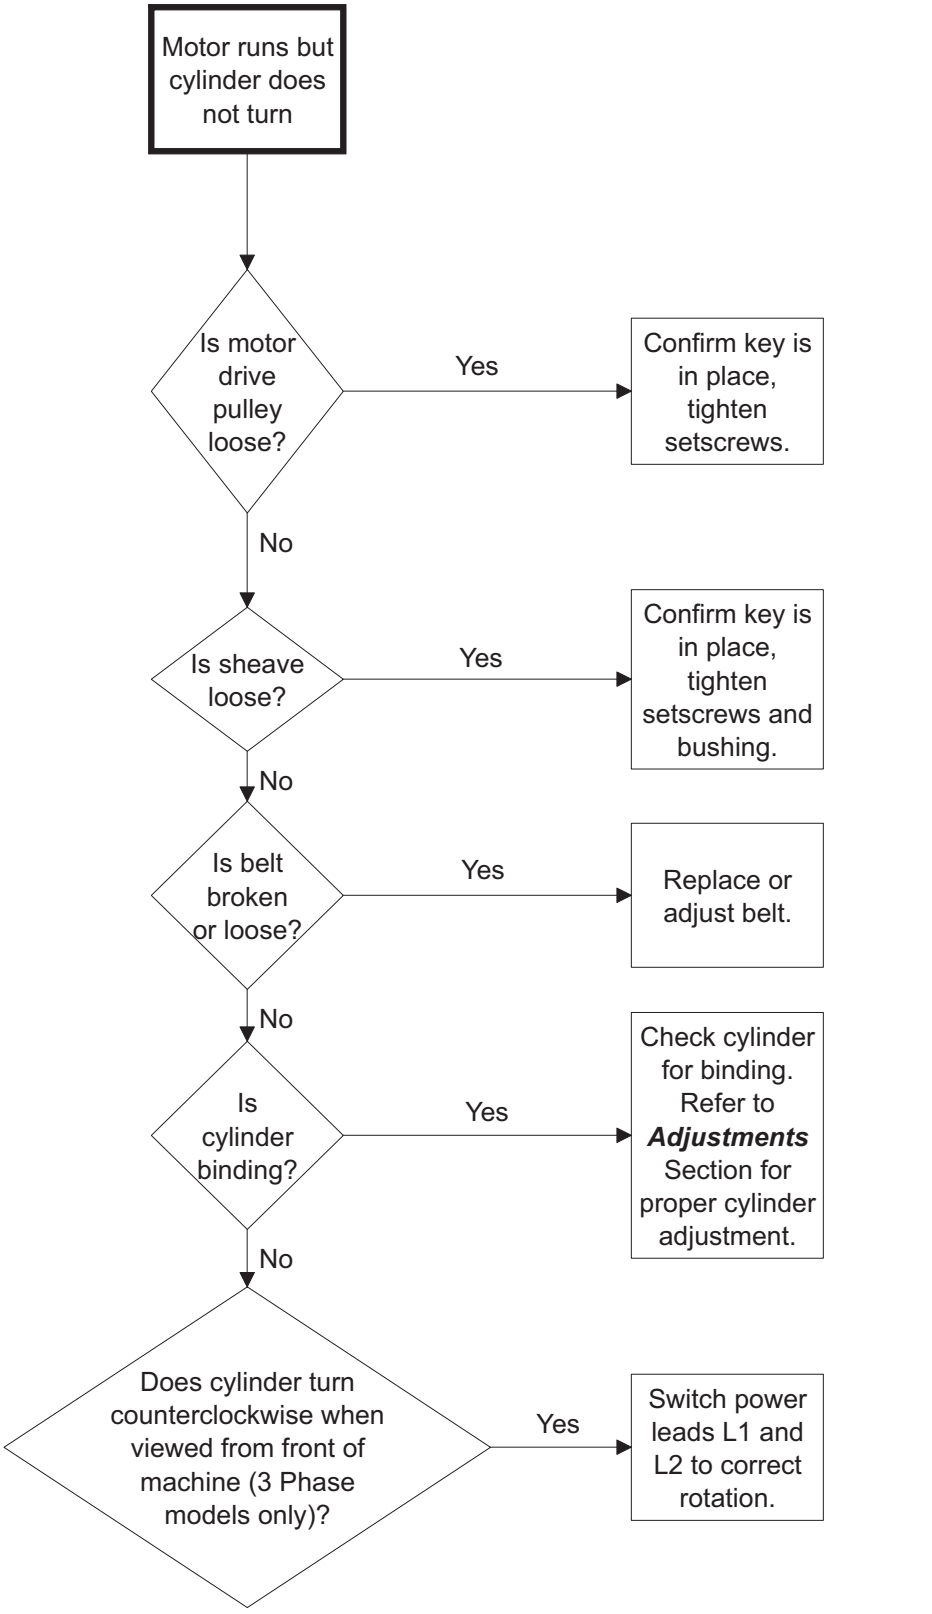
Motor runs but cylinder does not turn
Is motor drive pulley loose?
Yes
Confirm key is in place, tighten setscrews.
No
Is sheave loose?
Yes
Confirm key is in place, tighten setscrews and bushing.
No
Is belt broken or loose?
Yes
Replace or adjust belt.
No
Is cylinder binding?
Yes
Check cylinder for binding. Refer to ***Adjustments*** Section for proper cylinder adjustment.
No
Does cylinder turn counterclockwise when viewed from front of machine (3 Phase models only)?
Yes
Switch power leads L1 and L2 to correct rotation.

TMB1875S

4. Motor Does Not Stop

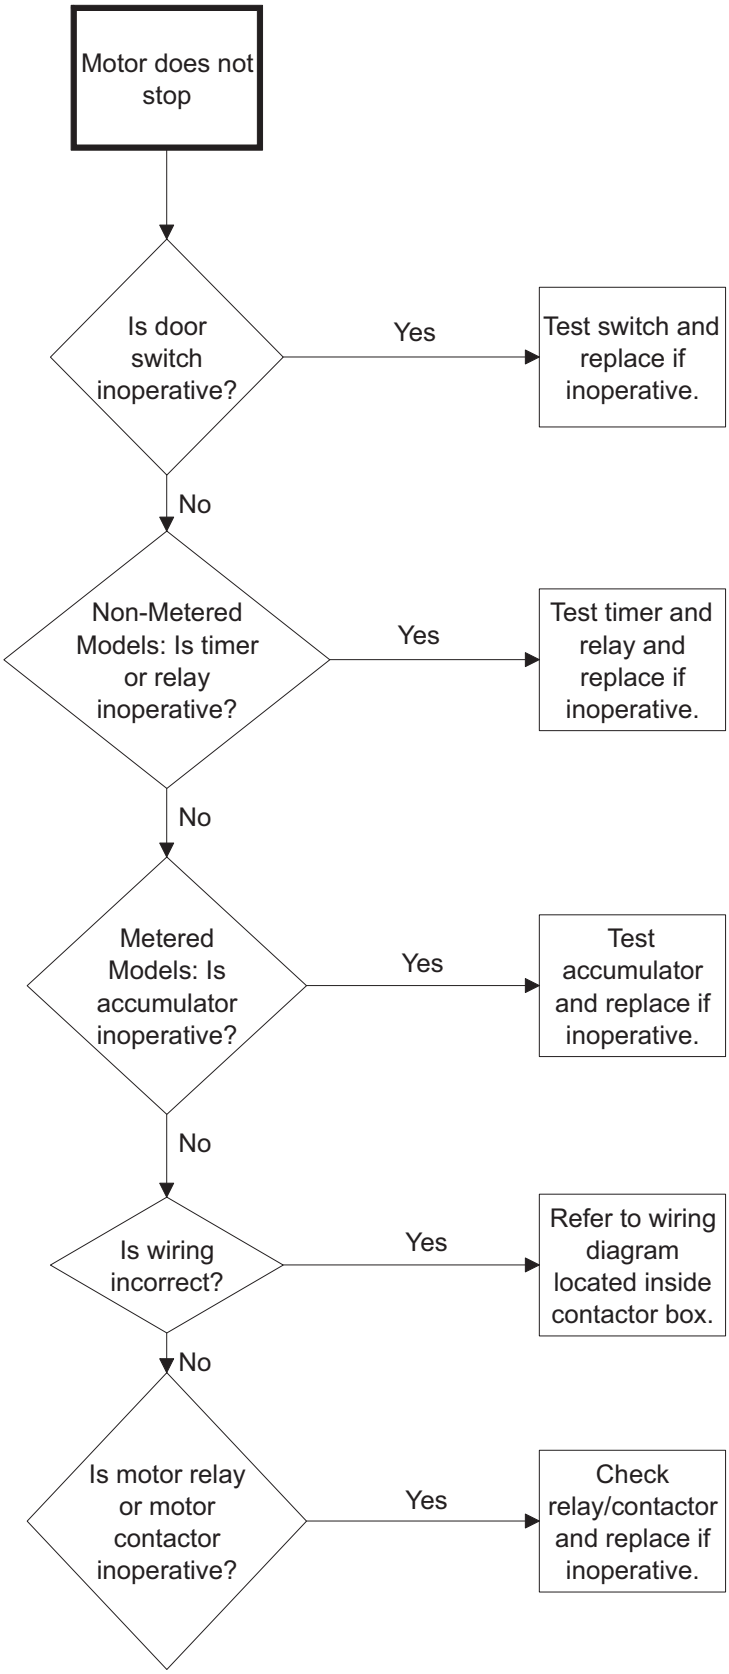

TMB1876S

5. No Heat Condition (Non-CE and Non-Australian Models)

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:
- **Disconnect electric power to the tumble dryer before servicing.**
- **Close gas shut-off valve to gas tumble dryer before servicing.**
- **Close steam valve to steam tumble dryer before servicing.**
- **Never start the tumble dryer with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the tumble dryer is properly grounded.**

W002R1

Ignition Control Module Function

There are four components to the ignition system: the module, the spark igniter, the high voltage cable and ground wire. When 24 VAC is applied between the TH and GND terminals on the module, the module will send the high voltage signal to the igniter and 24 VAC to the gas valve coils. Gas will hit the sparking igniter and flame will be established. The igniter being engulfed in flame will create a millivolt electric signal that is sent back to the module by the high voltage cable; this is what the module sees as flame recognition. If the millivolt signal is not at the module in ten seconds, the module will go into safety lockout. The voltage will be cut from the igniter and gas valve coils and will not be restored until voltage is cycled at the module.

Intermittent Heat Test Procedure

On ignition control modules with date codes higher than 08t2, perform the following test.

Start the tumble dryer and run for 10 minutes (verify that the tumble dryer is heating properly). After the 10 minute cycle, re-start the tumble dryer and once again verify the unit is heating. Repeat this procedure 3 times. If the tumble dryer passes this test, the ignition control module is operating properly and SHOULD NOT be changed. Refer to Troubleshooting Manual for additional service procedures.

5. No Heat Condition

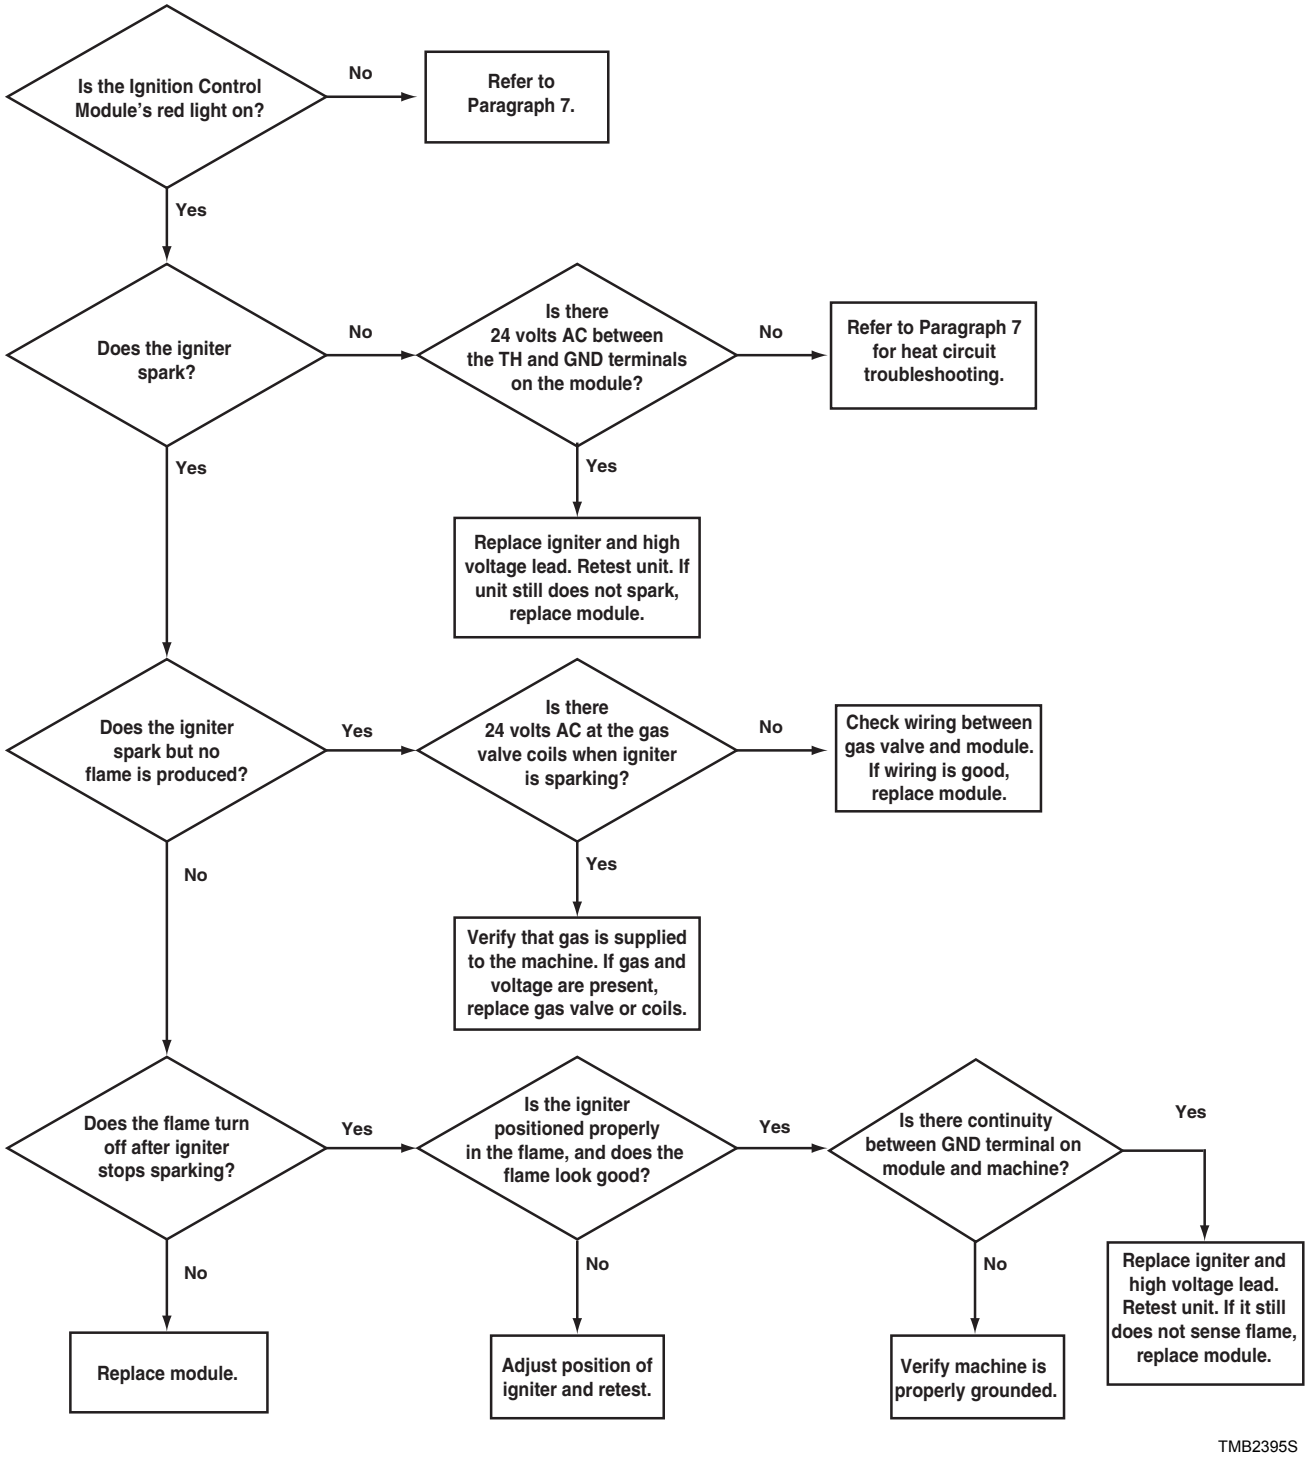
Is the Ignition Control Module's red light on?
No
Refer to Paragraph 7.
Yes
Does the igniter spark?
No
Is there 24 volts AC between the TH and GND terminals on the module?
No
Refer to Paragraph 7 for heat circuit troubleshooting.
Yes
Yes
Replace igniter and high voltage lead. Retest unit. If unit still does not spark, replace module.
Does the igniter spark but no flame is produced?
Yes
Is there 24 volts AC at the gas valve coils when igniter is sparking?
No
Check wiring between gas valve and module. If wiring is good, replace module.
No
Yes
Verify that gas is supplied to the machine. If gas and voltage are present, replace gas valve or coils.
Does the flame turn off after igniter stops sparking?
Yes
Is the igniter positioned properly in the flame, and does the flame look good?
Yes
Is there continuity between GND terminal on module and machine?
Yes
Replace igniter and high voltage lead. Retest unit. If it still does not sense flame, replace module.
No
No
No
Replace module.
Adjust position of igniter and retest.
Verify machine is properly grounded.

TMB2395S

6. Heating Element Does Not Heat or Burner Does Not Ignite

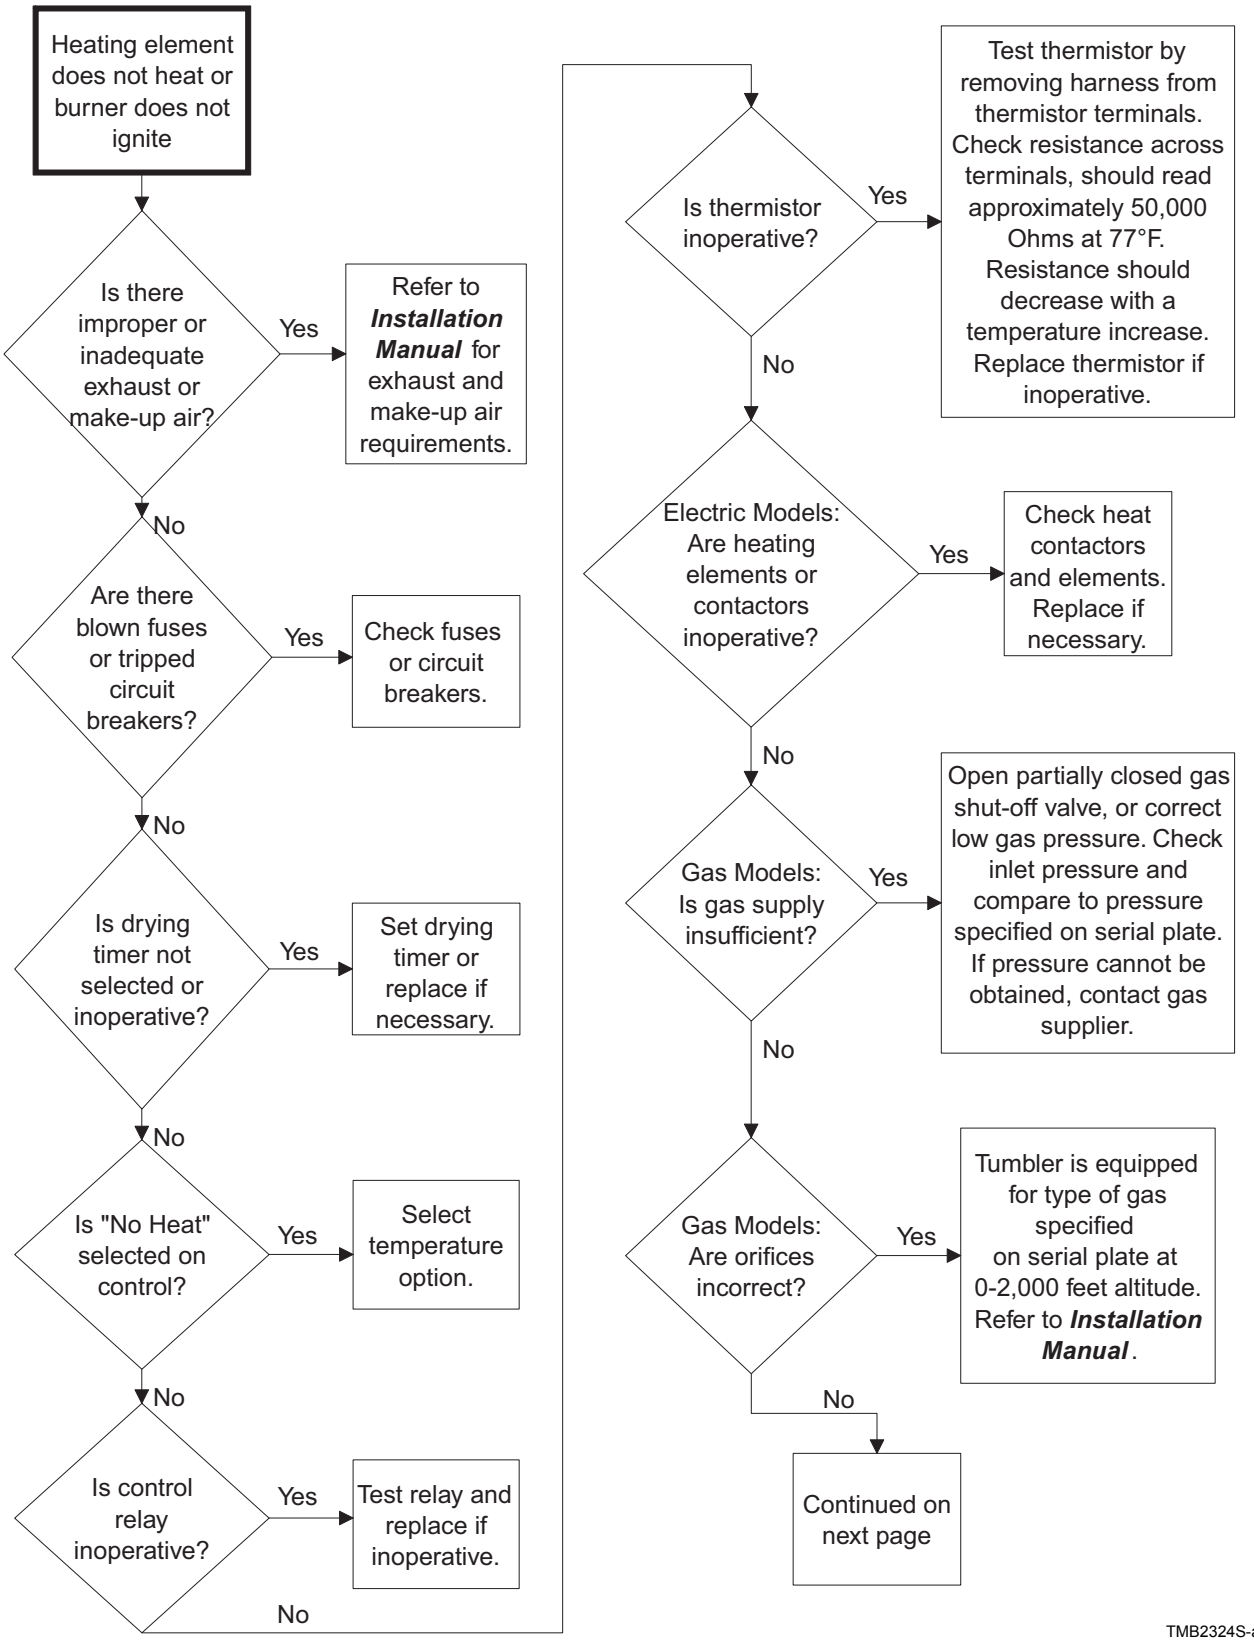
Heating element does not heat or burner does not ignite
Is there improper or inadequate exhaust or make-up air?
Yes
Refer to ***Installation Manual*** for exhaust and make-up air requirements.
No
Are there blown fuses or tripped circuit breakers?
Yes
Check fuses or circuit breakers.
No
Is drying timer not selected or inoperative?
Yes
Set drying timer or replace if necessary.
No
Is "No Heat" selected on control?
Yes
Select temperature option.
No
Is control relay inoperative?
Yes
Test relay and replace if inoperative.
No
Is thermistor inoperative?
Yes
Test thermistor by removing harness from thermistor terminals. Check resistance across terminals, should read approximately 50,000 Ohms at 77°F. Resistance should decrease with a temperature increase. Replace thermistor if inoperative.
No
Electric Models: Are heating elements or contactors inoperative?
Yes
Check heat contactors and elements. Replace if necessary.
No
Gas Models: Is gas supply insufficient?
Yes
Open partially closed gas shut-off valve, or correct low gas pressure. Check inlet pressure and compare to pressure specified on serial plate. If pressure cannot be obtained, contact gas supplier.
No
Gas Models: Are orifices incorrect?
Yes
Tumbler is equipped for type of gas specified on serial plate at 0-2,000 feet altitude. Refer to ***Installation Manual***.
No
Continued on next page
TMB2324S-a

6. Heating Element Does Not Heat or Burner Does Not Ignite (continued)

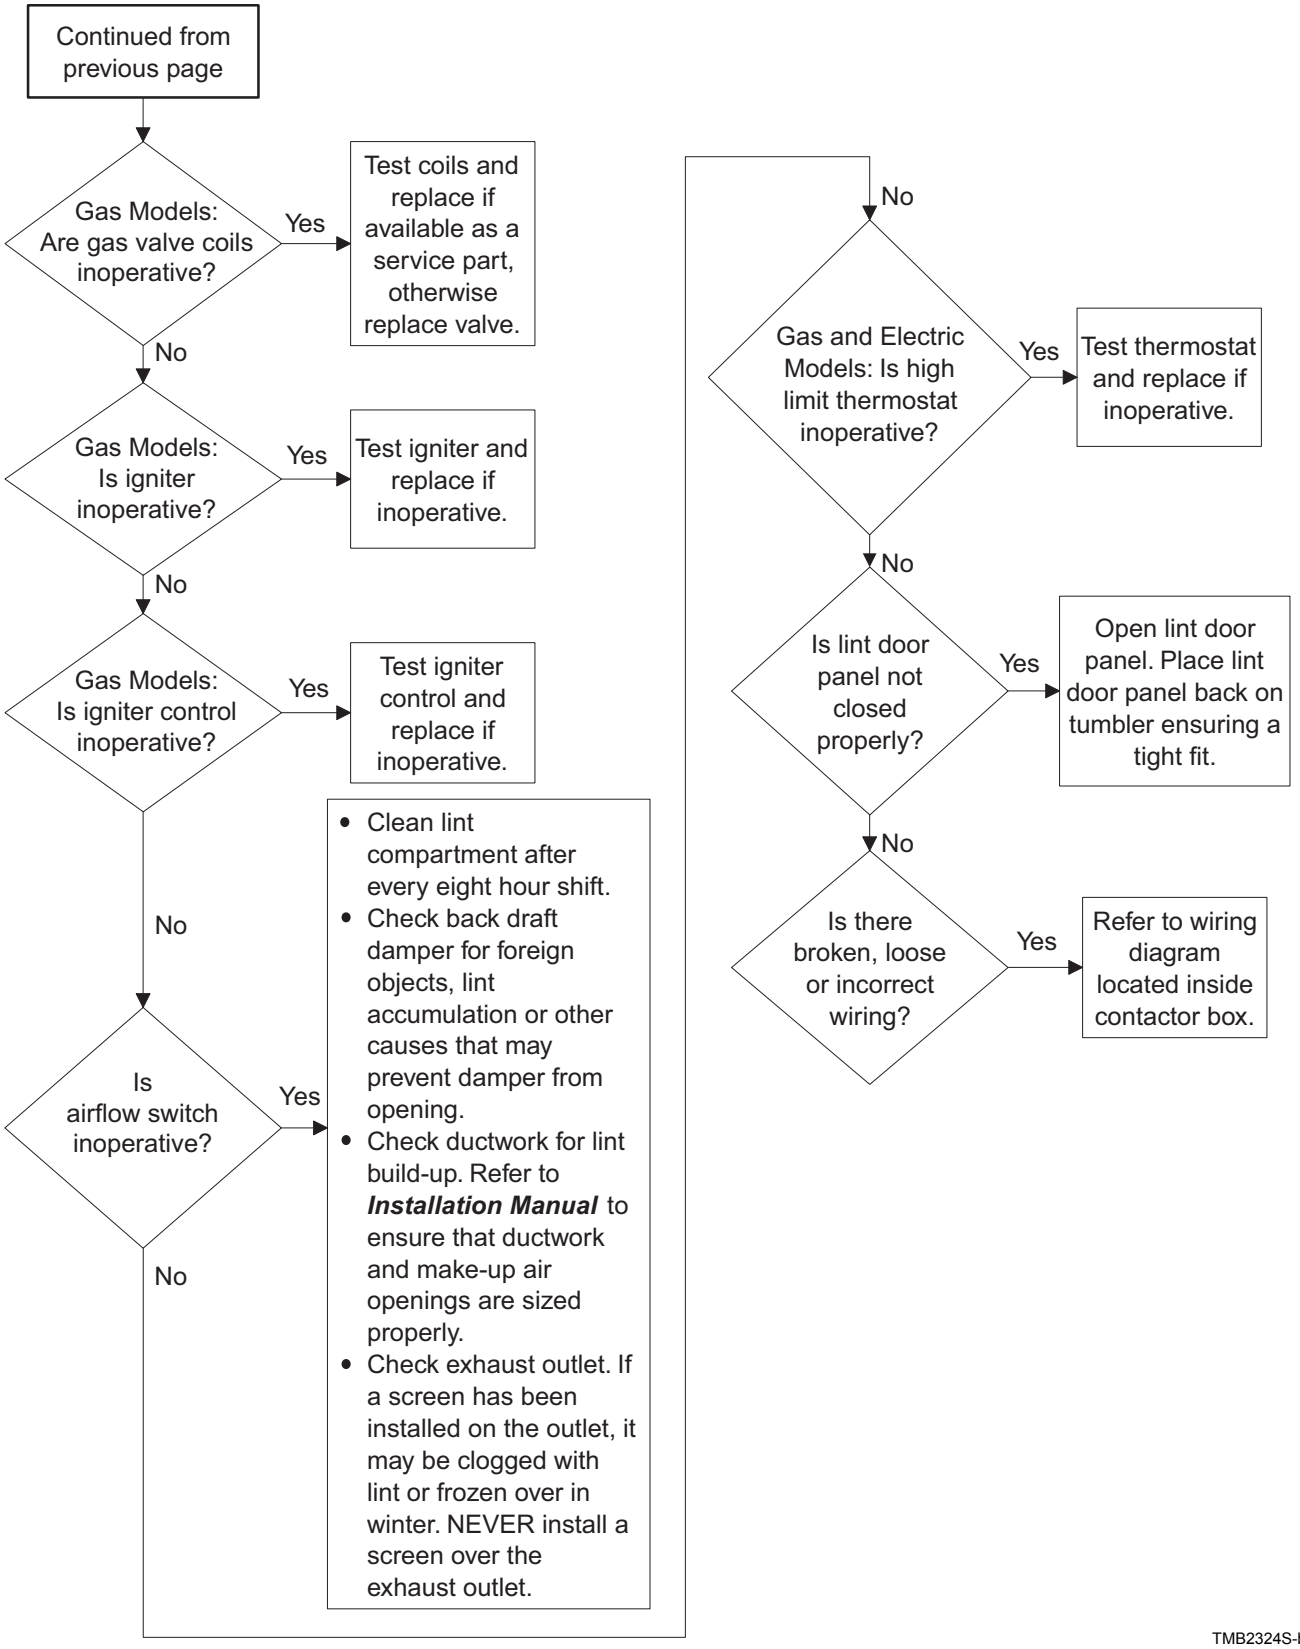
Continued from previous page
Gas Models: Are gas valve coils inoperative?
Yes
Test coils and replace if available as a service part, otherwise replace valve.
No
Gas Models: Is igniter inoperative?
Yes
Test igniter and replace if inoperative.
No
Gas Models: Is igniter control inoperative?
Yes
Test igniter control and replace if inoperative.
No
Is airflow switch inoperative?
Yes
• Clean lint compartment after every eight hour shift.
• Check back draft damper for foreign objects, lint accumulation or other causes that may prevent damper from opening.
• Check ductwork for lint build-up. Refer to ***Installation Manual*** to ensure that ductwork and make-up air openings are sized properly.
• Check exhaust outlet. If a screen has been installed on the outlet, it may be clogged with lint or frozen over in winter. NEVER install a screen over the exhaust outlet.
No
No
Gas and Electric Models: Is high limit thermostat inoperative?
Yes
Test thermostat and replace if inoperative.
No
Is lint door panel not closed properly?
Yes
Open lint door panel. Place lint door panel back on tumbler ensuring a tight fit.
No
Is there broken, loose or incorrect wiring?
Yes
Refer to wiring diagram located inside contactor box.

TMB2324S-b

7. Igniter Does Not Shut Off After Gas Ignition — Gas Burner

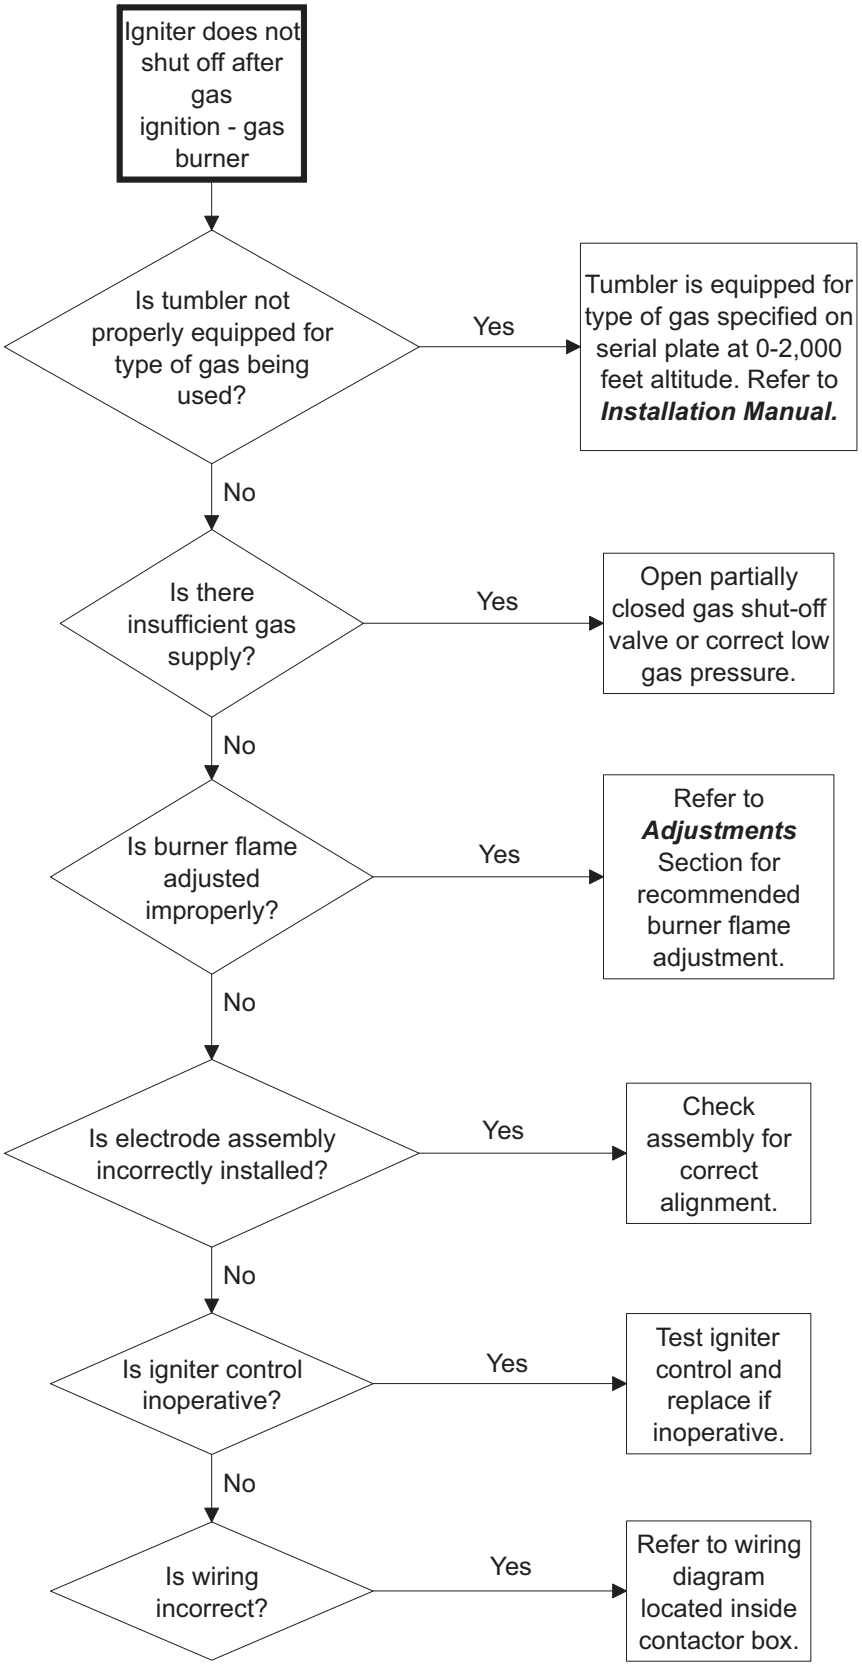
Igniter does not shut off after gas ignition - gas burner
Is tumbler not properly equipped for type of gas being used?
Yes
Tumbler is equipped for type of gas specified on serial plate at 0-2,000 feet altitude. Refer to ***Installation Manual.***
No
Is there insufficient gas supply?
Yes
Open partially closed gas shut-off valve or correct low gas pressure.
No
Is burner flame adjusted improperly?
Yes
Refer to ***Adjustments*** Section for recommended burner flame adjustment.
No
Is electrode assembly incorrectly installed?
Yes
Check assembly for correct alignment.
No
Is igniter control inoperative?
Yes
Test igniter control and replace if inoperative.
No
Is wiring incorrect?
Yes
Refer to wiring diagram located inside contactor box.

TMB1878S

8. Heating Element or Burner Shuts Off Prematurely

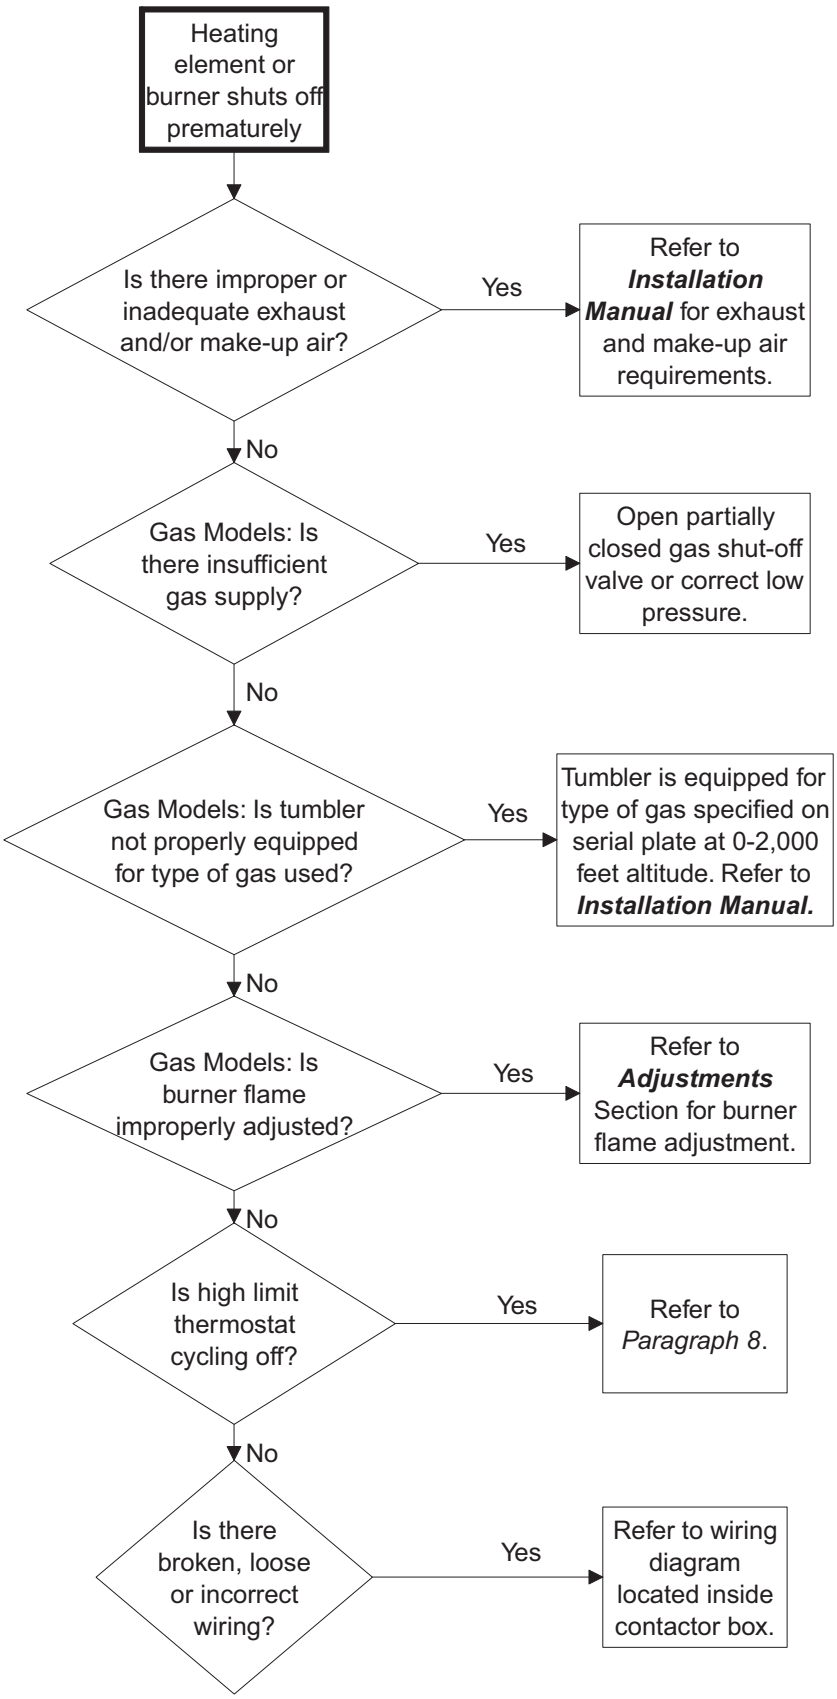
Heating element or burner shuts off prematurely
Is there improper or inadequate exhaust and/or make-up air?
Yes
Refer to ***Installation Manual*** for exhaust and make-up air requirements.
No
Gas Models: Is there insufficient gas supply?
Yes
Open partially closed gas shut-off valve or correct low pressure.
No
Gas Models: Is tumbler not properly equipped for type of gas used?
Yes
Tumbler is equipped for type of gas specified on serial plate at 0-2,000 feet altitude. Refer to ***Installation Manual.***
No
Gas Models: Is burner flame improperly adjusted?
Yes
Refer to ***Adjustments*** Section for burner flame adjustment.
No
Is high limit thermostat cycling off?
Yes
Refer to *Paragraph 8*.
No
Is there broken, loose or incorrect wiring?
Yes
Refer to wiring diagram located inside contactor box.

TMB1879S

9. Heating Element or Burner Repeatedly Cycles Off On High Limit Thermostat

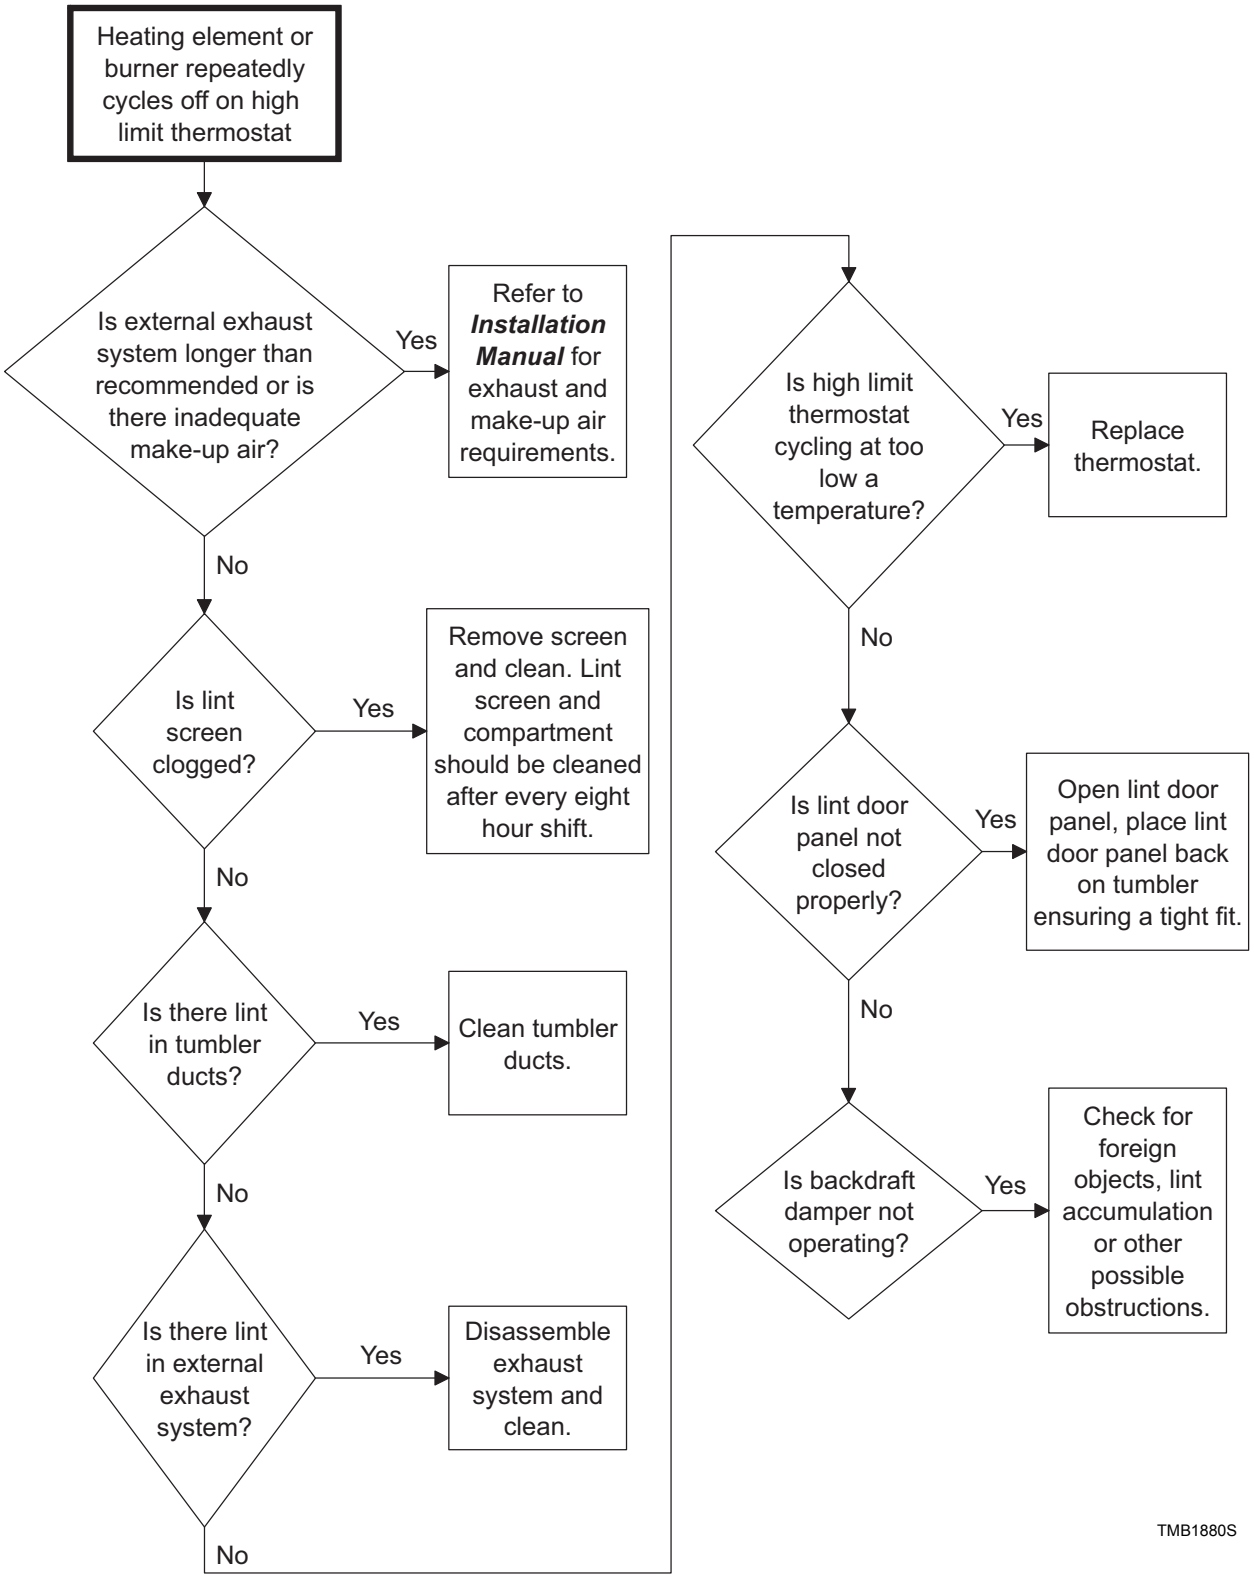
Heating element or burner repeatedly cycles off on high limit thermostat
Is external exhaust system longer than recommended or is there inadequate make-up air?
Yes
Refer to ***Installation Manual*** for exhaust and make-up air requirements.
No
Is lint screen clogged?
Yes
Remove screen and clean. Lint screen and compartment should be cleaned after every eight hour shift.
No
Is there lint in tumbler ducts?
Yes
Clean tumbler ducts.
No
Is there lint in external exhaust system?
Yes
Disassemble exhaust system and clean.
No
Is high limit thermostat cycling at too low a temperature?
Yes
Replace thermostat.
No
Is lint door panel not closed properly?
Yes
Open lint door panel, place lint door panel back on tumbler ensuring a tight fit.
No
Is backdraft damper not operating?
Yes
Check for foreign objects, lint accumulation or other possible obstructions.
TMB1880S

10. Heating Element or Burner Does Not Shut-Off

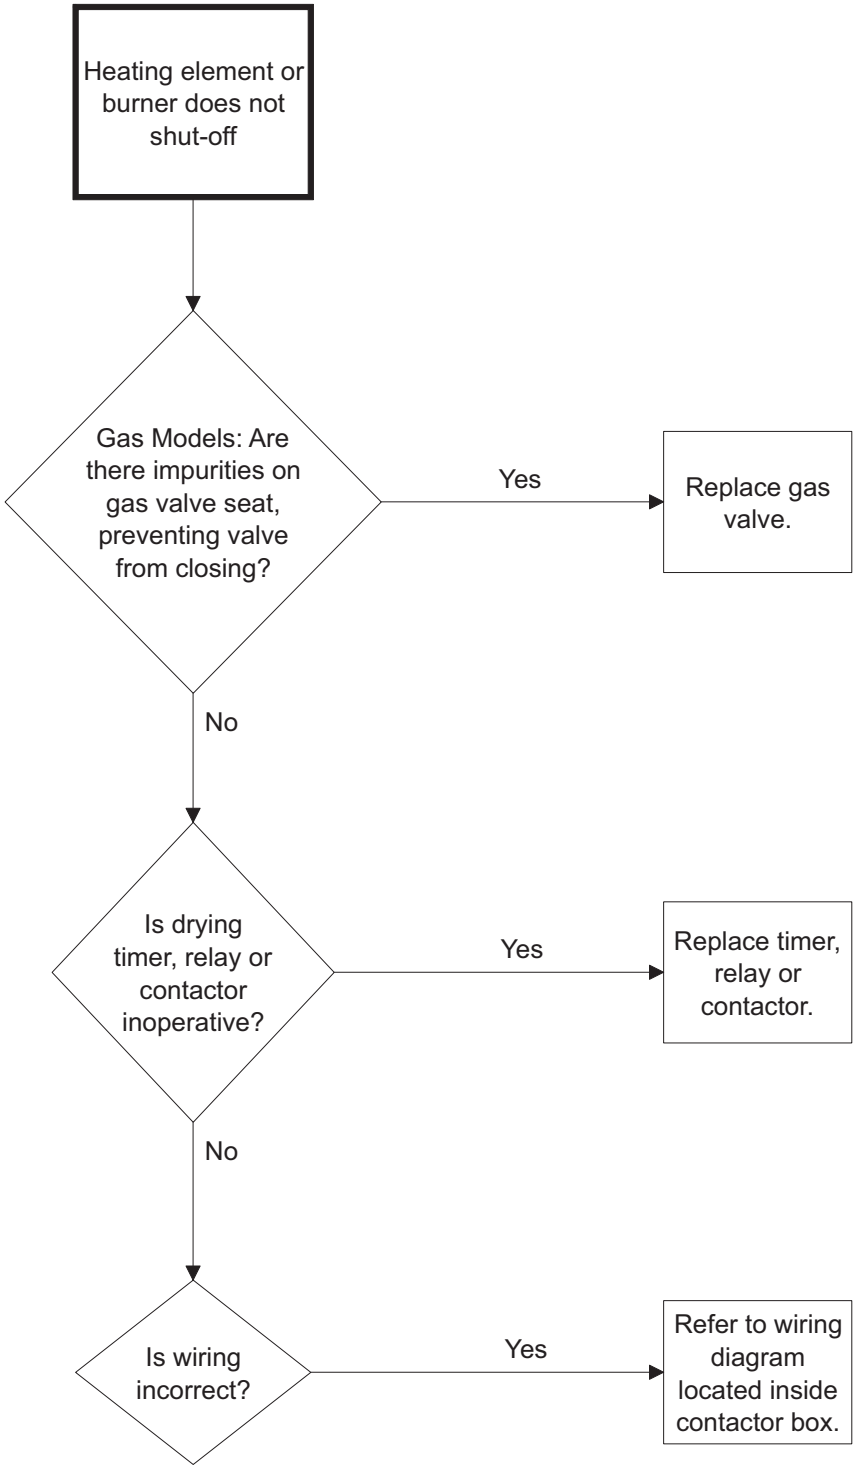
Heating element or burner does not shut-off
Gas Models: Are there impurities on gas valve seat, preventing valve from closing?
Yes
Replace gas valve.
No
Is drying timer, relay or contactor inoperative?
Yes
Replace timer, relay or contactor.
No
Is wiring incorrect?
Yes
Refer to wiring diagram located inside contactor box.

TMB1881S

11. Clothes Do Not Dry

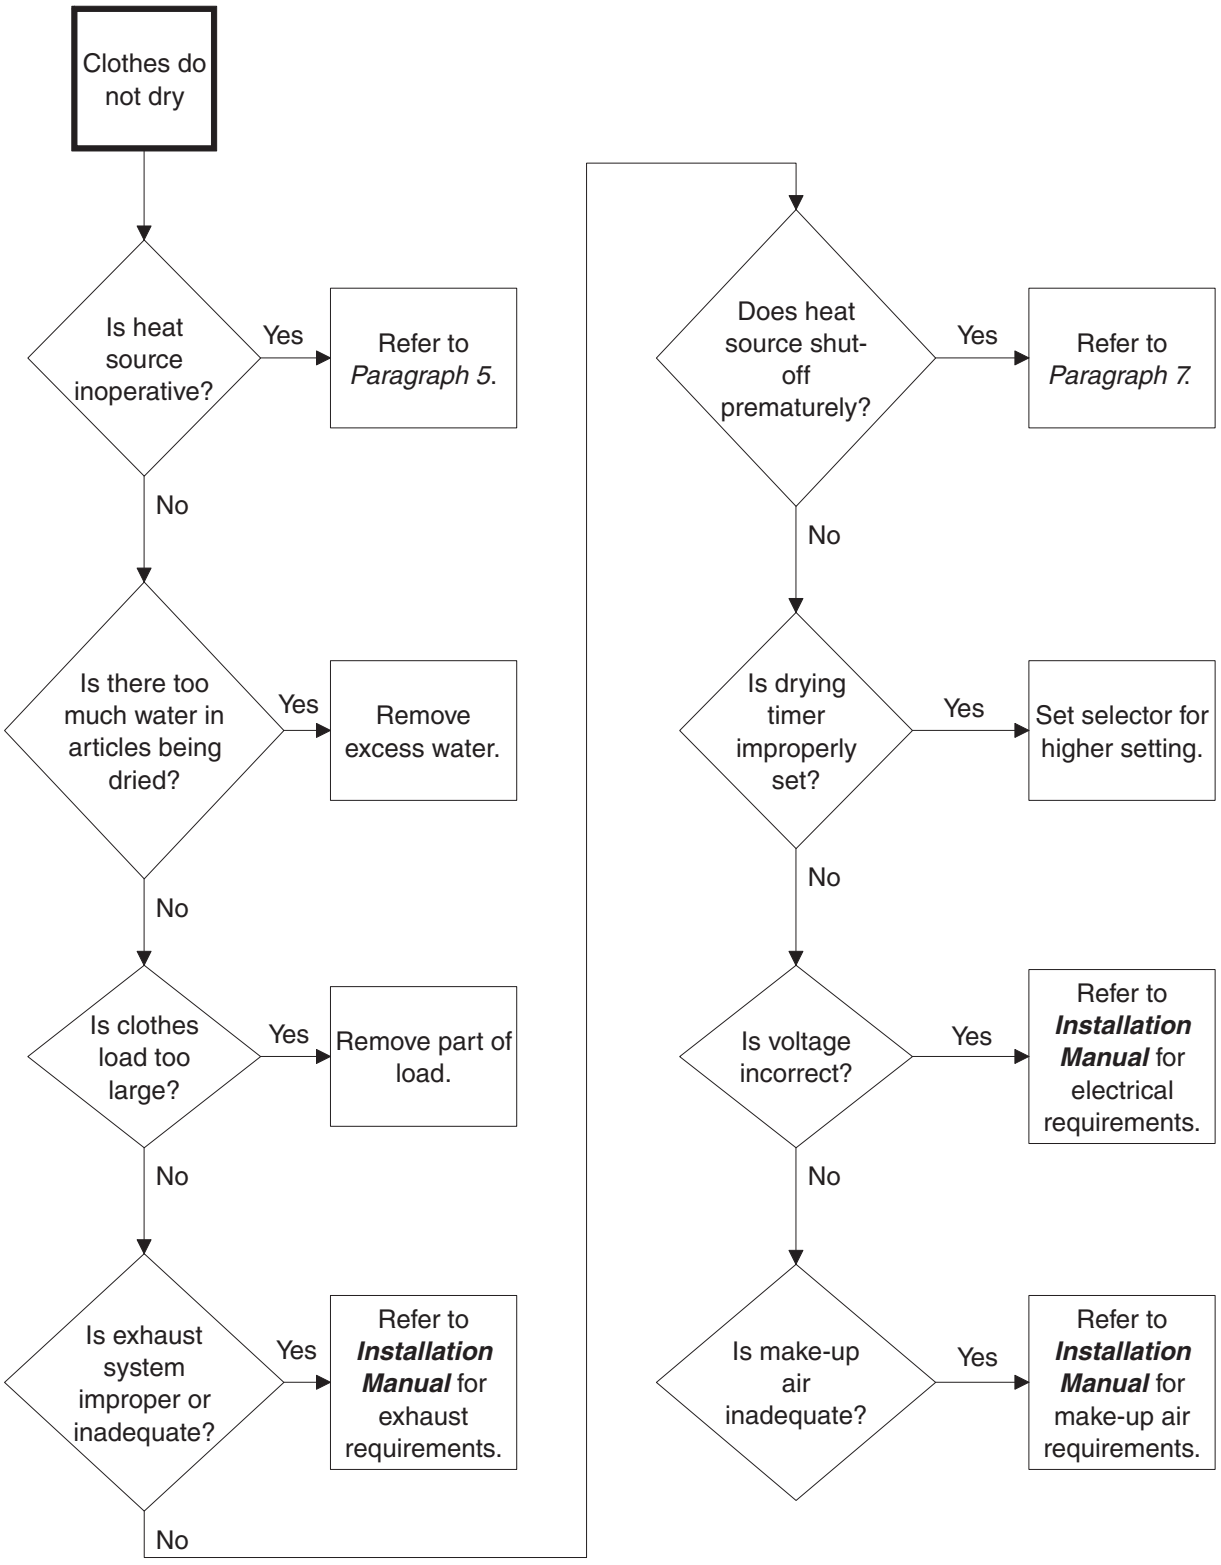

TMB1882S

12. Tumble Dryer Overheating

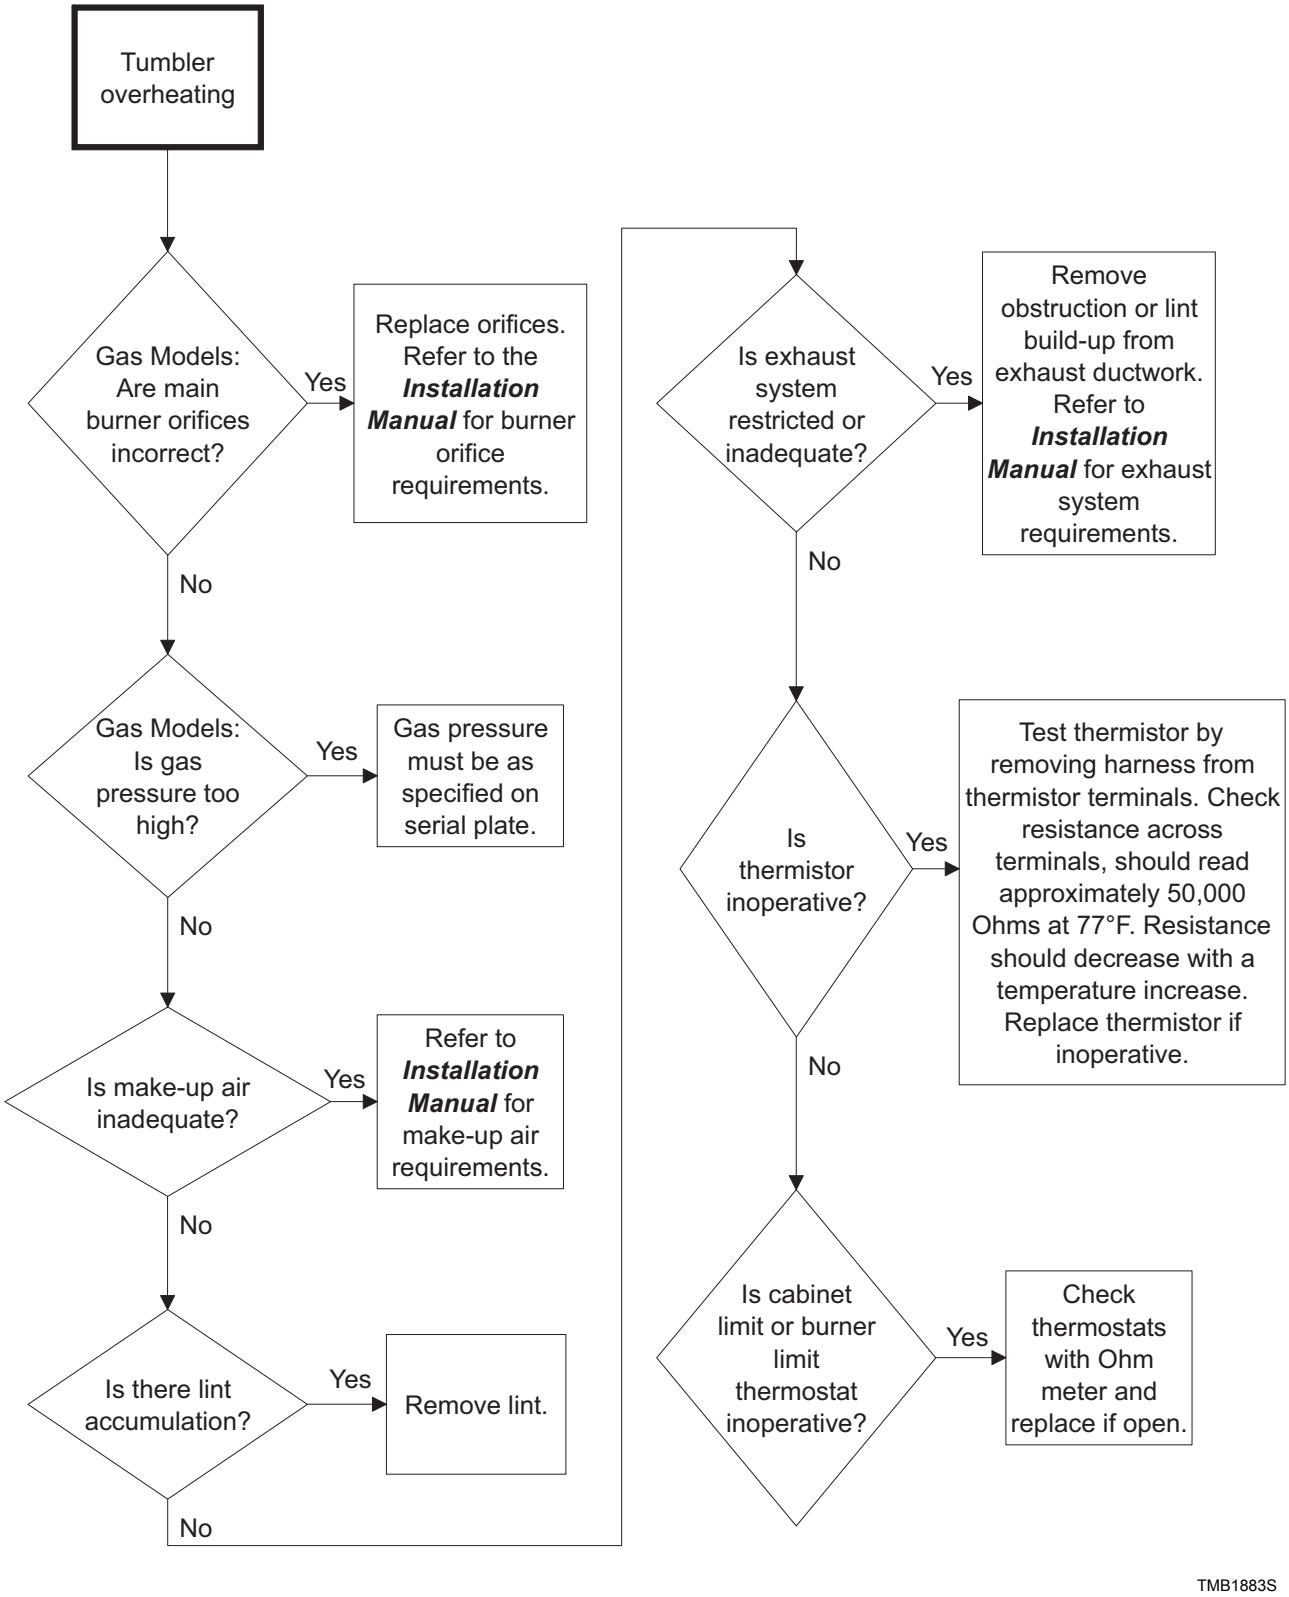
Tumbler overheating
Gas Models: Are main burner orifices incorrect?
Yes
Replace orifices. Refer to the *Installation Manual* for burner orifice requirements.
No
Gas Models: Is gas pressure too high?
Yes
Gas pressure must be as specified on serial plate.
No
Is make-up air inadequate?
Yes
Refer to *Installation Manual* for make-up air requirements.
No
Is there lint accumulation?
Yes
Remove lint.
No
Is exhaust system restricted or inadequate?
Yes
Remove obstruction or lint build-up from exhaust ductwork. Refer to *Installation Manual* for exhaust system requirements.
No
Is thermistor inoperative?
Yes
Test thermistor by removing harness from thermistor terminals. Check resistance across terminals, should read approximately 50,000 Ohms at 77°F. Resistance should decrease with a temperature increase. Replace thermistor if inoperative.
No
Is cabinet limit or burner limit thermostat inoperative?
Yes
Check thermostats with Ohm meter and replace if open.

TMB1883S

13. Burners Not Burning Properly — Gas Models

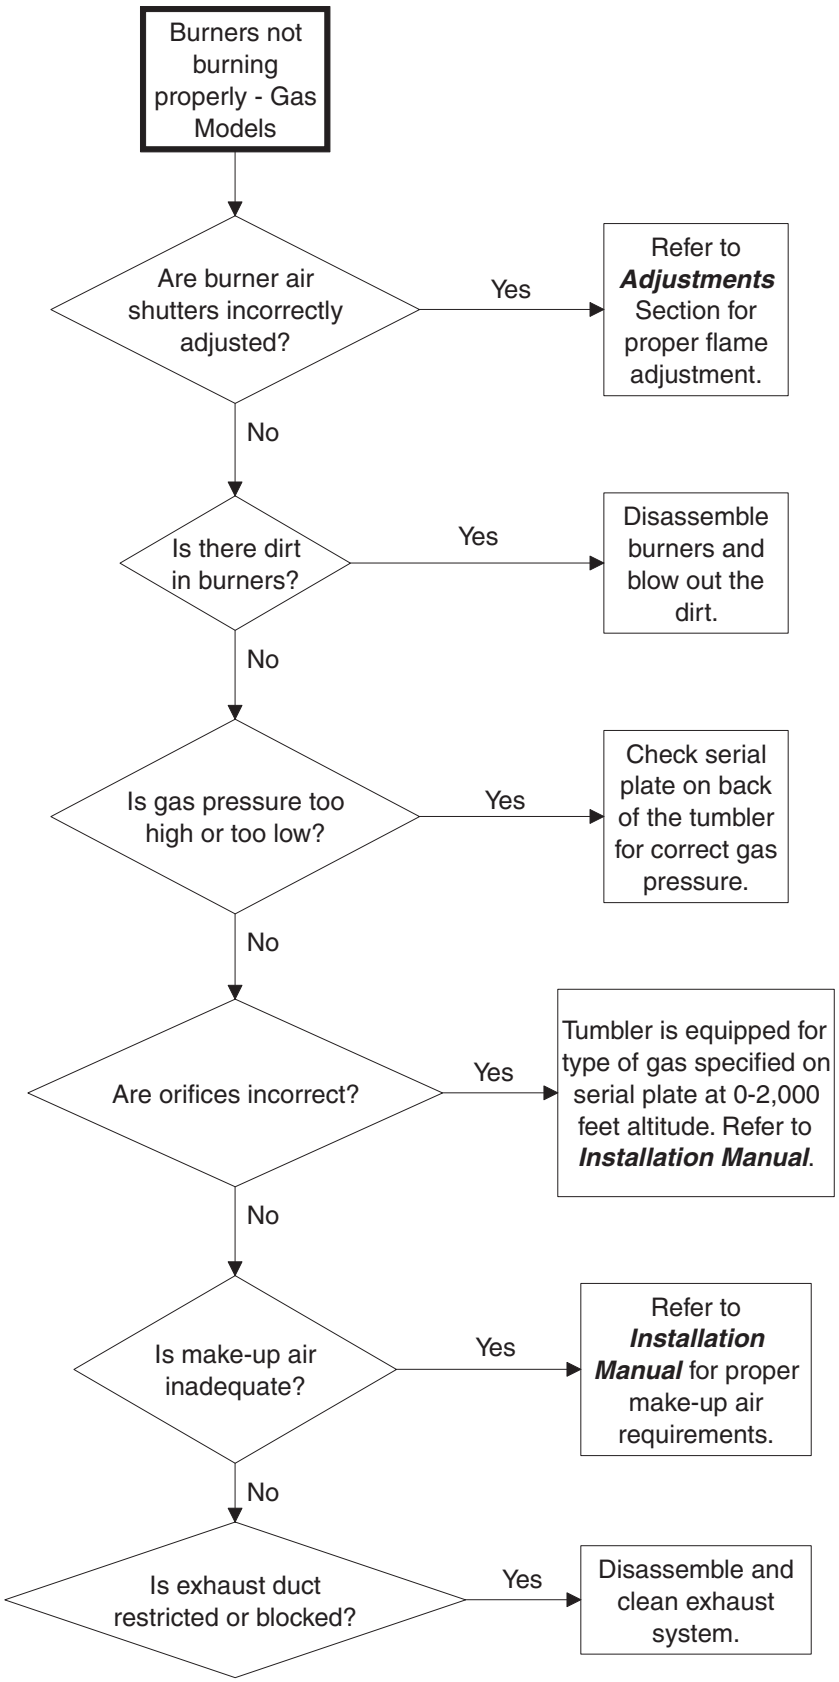
Burners not burning properly - Gas Models
Are burner air shutters incorrectly adjusted?
Yes
Refer to ***Adjustments*** Section for proper flame adjustment.
No
Is there dirt in burners?
Yes
Disassemble burners and blow out the dirt.
No
Is gas pressure too high or too low?
Yes
Check serial plate on back of the tumbler for correct gas pressure.
No
Are orifices incorrect?
Yes
Tumbler is equipped for type of gas specified on serial plate at 0-2,000 feet altitude. Refer to ***Installation Manual***.
No
Is make-up air inadequate?
Yes
Refer to ***Installation Manual*** for proper make-up air requirements.
No
Is exhaust duct restricted or blocked?
Yes
Disassemble and clean exhaust system.

TMB1884S

14. Loading Door Opens During Operation

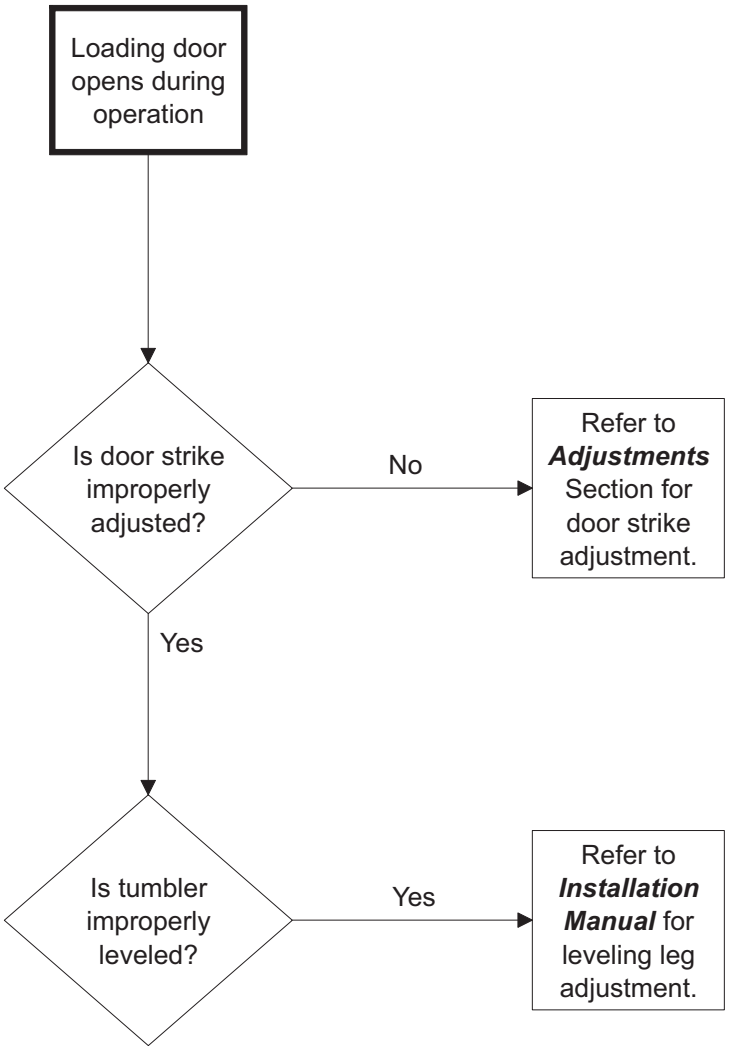
Loading door opens during operation
Is door strike improperly adjusted?
No
Refer to ***Adjustments*** Section for door strike adjustment.
Yes
Is tumbler improperly leveled?
Yes
Refer to ***Installation Manual*** for leveling leg adjustment.

TMB1885S

15. Tumble Dryer Runs But No Steam To Coils — Steam Models

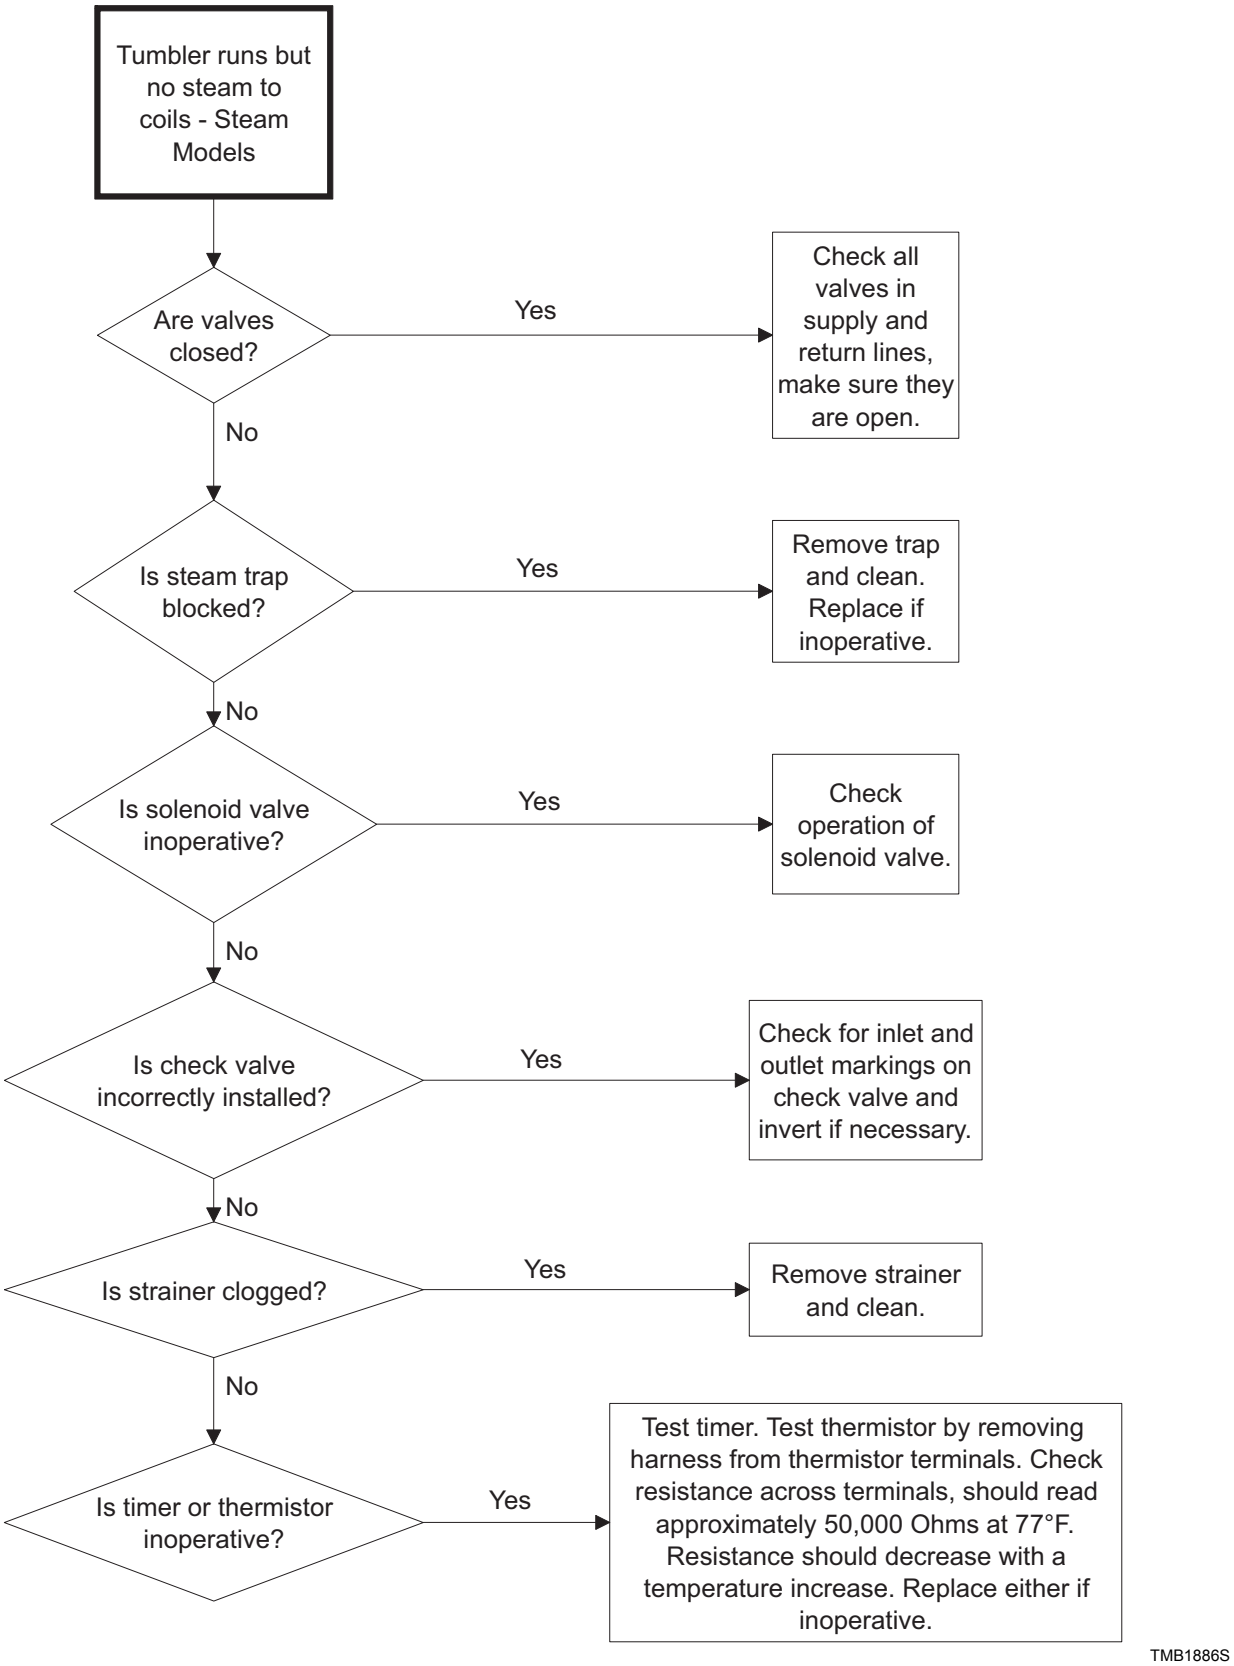
Tumbler runs but no steam to coils - Steam Models
Are valves closed?
Yes
Check all valves in supply and return lines, make sure they are open.
No
Is steam trap blocked?
Yes
Remove trap and clean. Replace if inoperative.
No
Is solenoid valve inoperative?
Yes
Check operation of solenoid valve.
No
Is check valve incorrectly installed?
Yes
Check for inlet and outlet markings on check valve and invert if necessary.
No
Is strainer clogged?
Yes
Remove strainer and clean.
No
Is timer or thermistor inoperative?
Yes
Test timer. Test thermistor by removing harness from thermistor terminals. Check resistance across terminals, should read approximately 50,000 Ohms at 77°F. Resistance should decrease with a temperature increase. Replace either if inoperative.

TMB1886S

16. Water In Steam Line — Steam Models

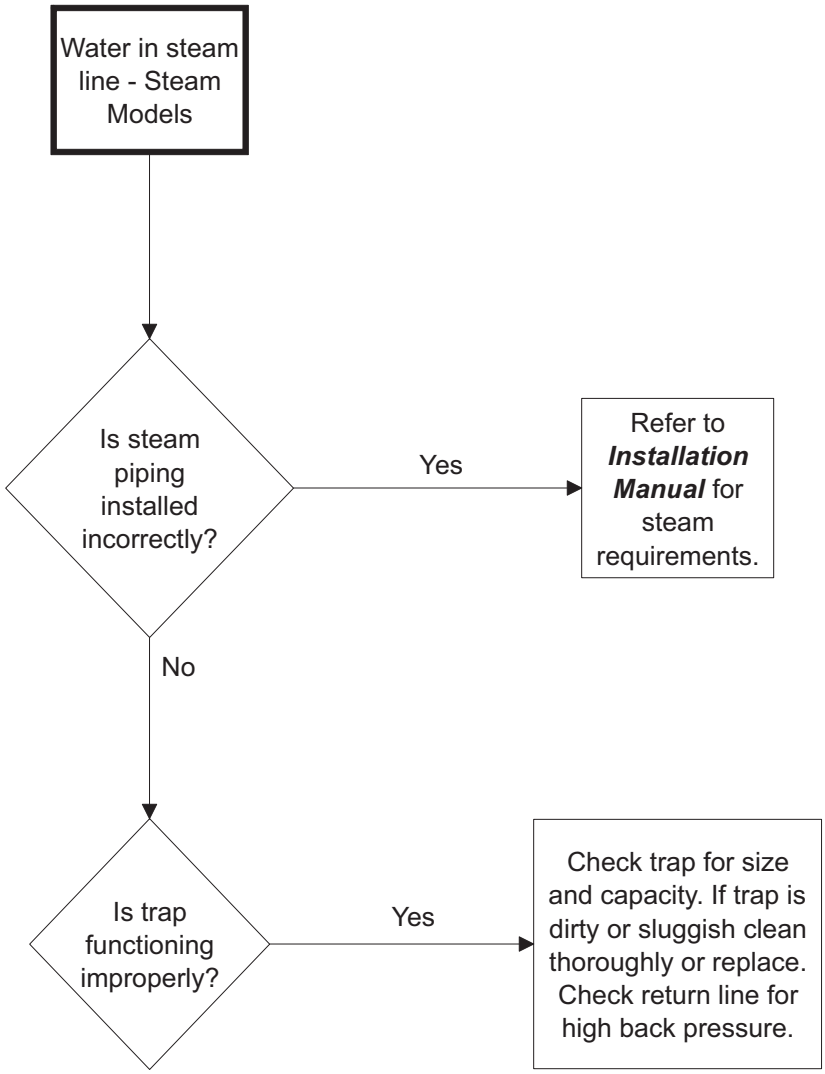
Water in steam line - Steam Models
Is steam piping installed incorrectly?
Yes
Refer to ***Installation Manual*** for steam requirements.
No
Is trap functioning improperly?
Yes
Check trap for size and capacity. If trap is dirty or sluggish clean thoroughly or replace. Check return line for high back pressure.

TMB1887S

17. Door Open Light and Display Flash With Door Closed

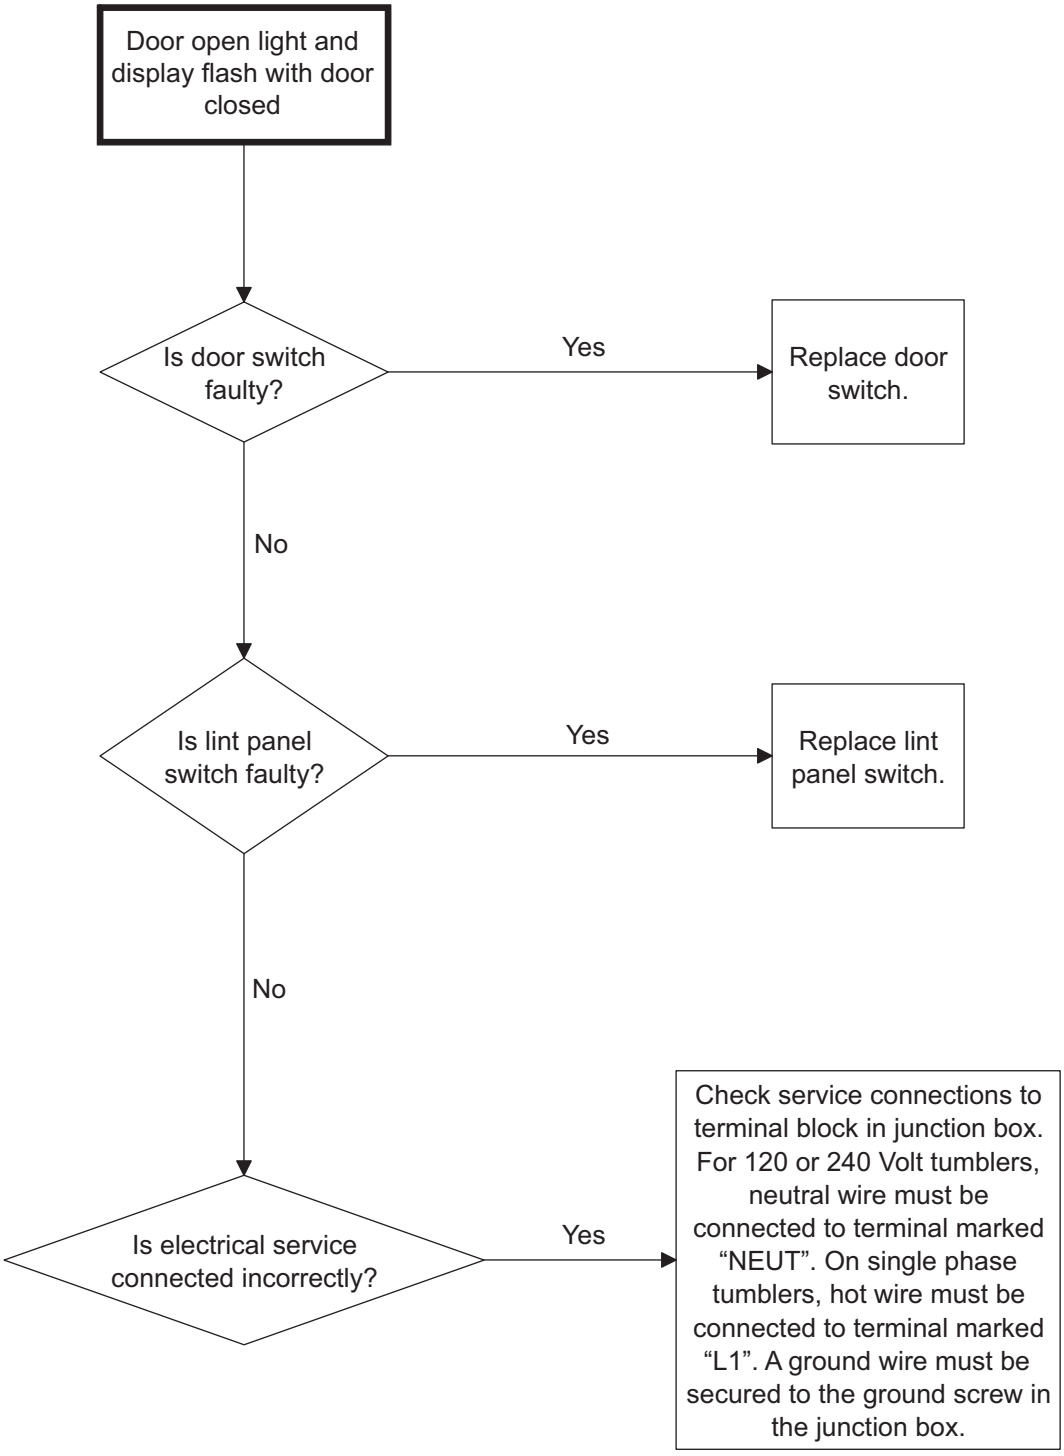
Door open light and display flash with door closed
Is door switch faulty?
Yes
Replace door switch.
No
Is lint panel switch faulty?
Yes
Replace lint panel switch.
No
Is electrical service connected incorrectly?
Yes
Check service connections to terminal block in junction box. For 120 or 240 Volt tumblers, neutral wire must be connected to terminal marked “NEUT”. On single phase tumblers, hot wire must be connected to terminal marked “L1”. A ground wire must be secured to the ground screw in the junction box.

TMB2265S

18. Display Shows “SH” and Signals Sounds

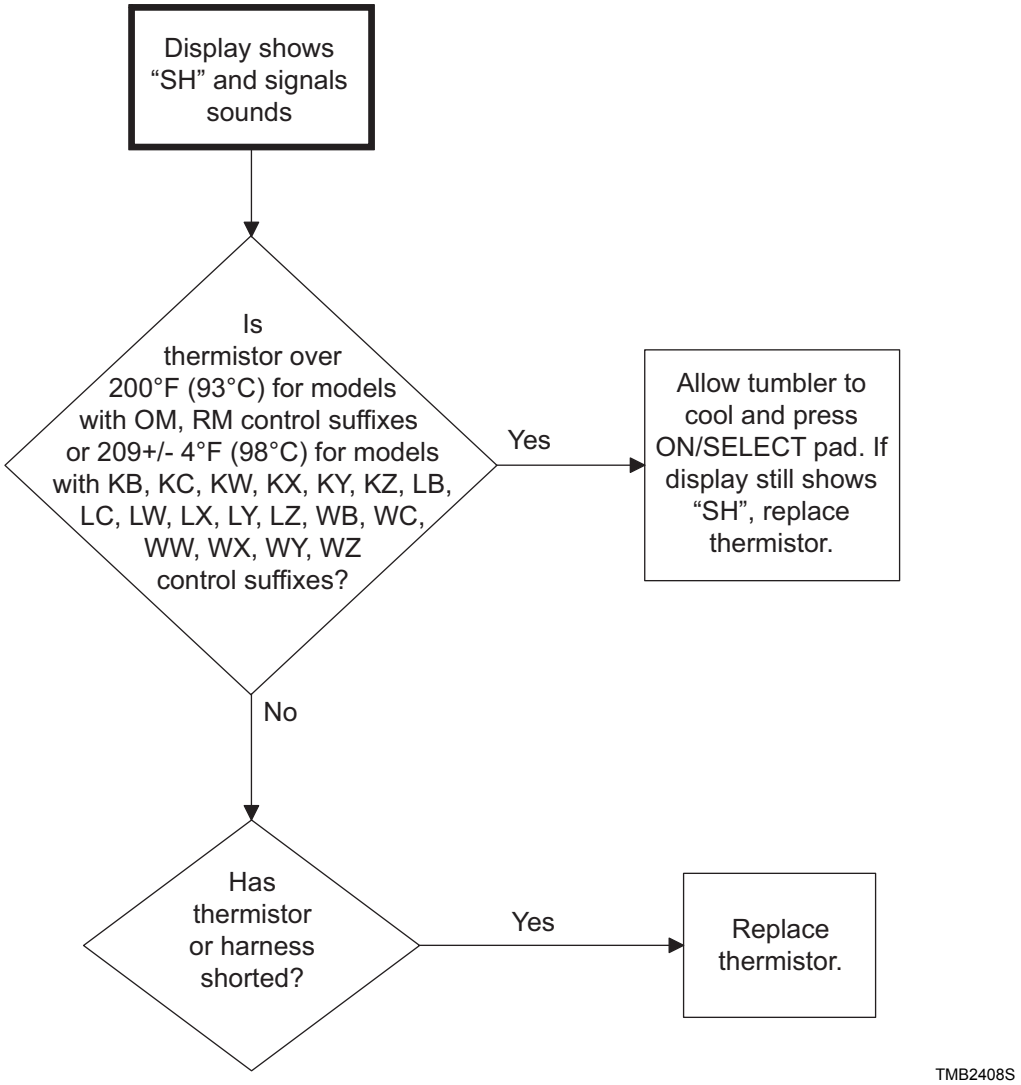
Display shows “SH” and signals sounds
Is thermistor over 200°F (93°C) for models with OM, RM control suffixes or 209+/- 4°F (98°C) for models with KB, KC, KW, KX, KY, KZ, LB, LC, LW, LX, LY, LZ, WB, WC, WW, WX, WY, WZ control suffixes?
Yes
Allow tumbler to cool and press ON/SELECT pad. If display still shows “SH”, replace thermistor.
No
Has thermistor or harness shorted?
Yes
Replace thermistor.
TMB2408S

19. Display Shows “OP” and Signal Sounds Three Minutes After Tumble Dryer is Started

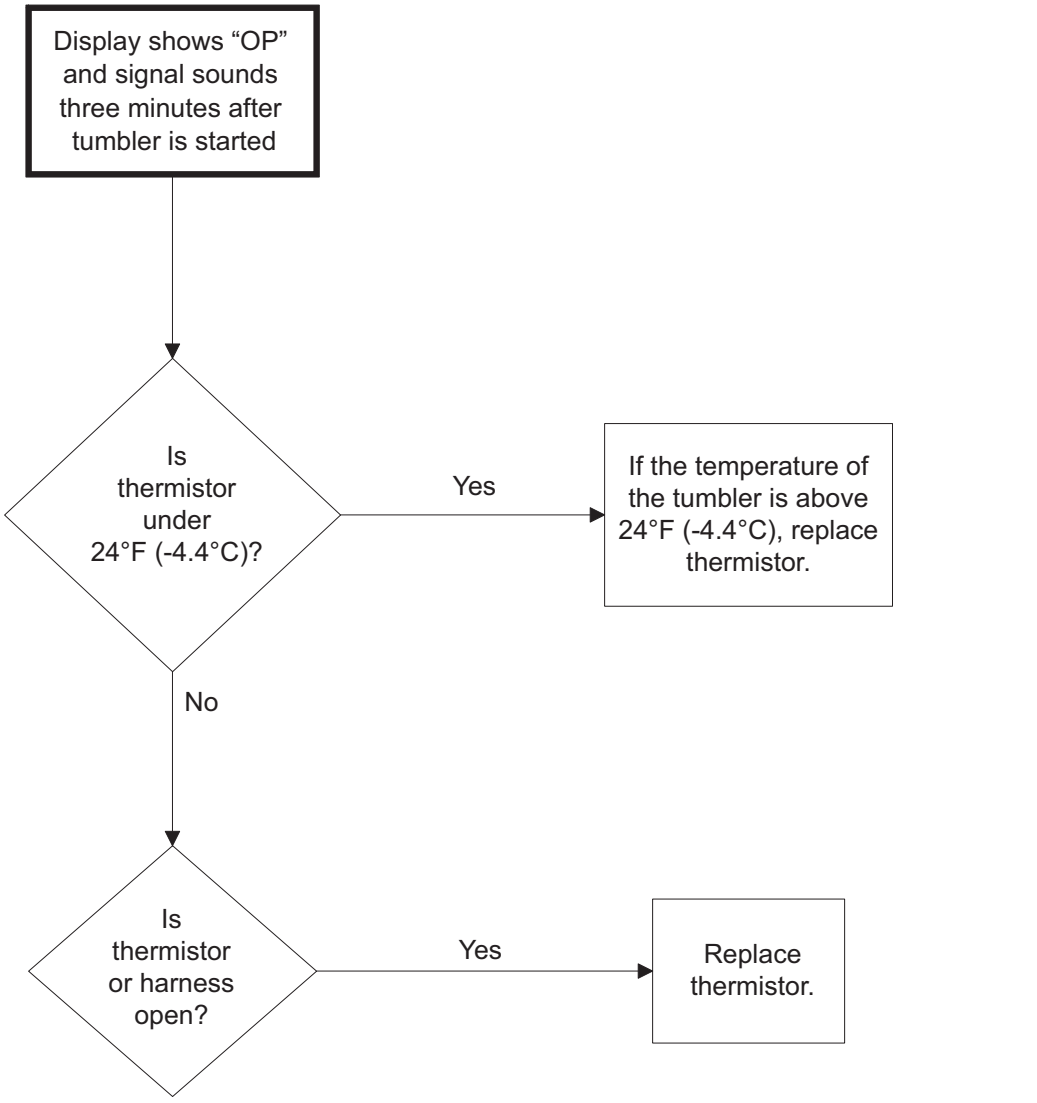
Display shows “OP” and signal sounds three minutes after tumbler is started
Is thermistor under 24°F (-4.4°C)?
Yes
If the temperature of the tumbler is above 24°F (-4.4°C), replace thermistor.
No
Is thermistor or harness open?
Yes
Replace thermistor.

TMB2267S

20. Motor Runs, Time on Drying Timer But No Heat

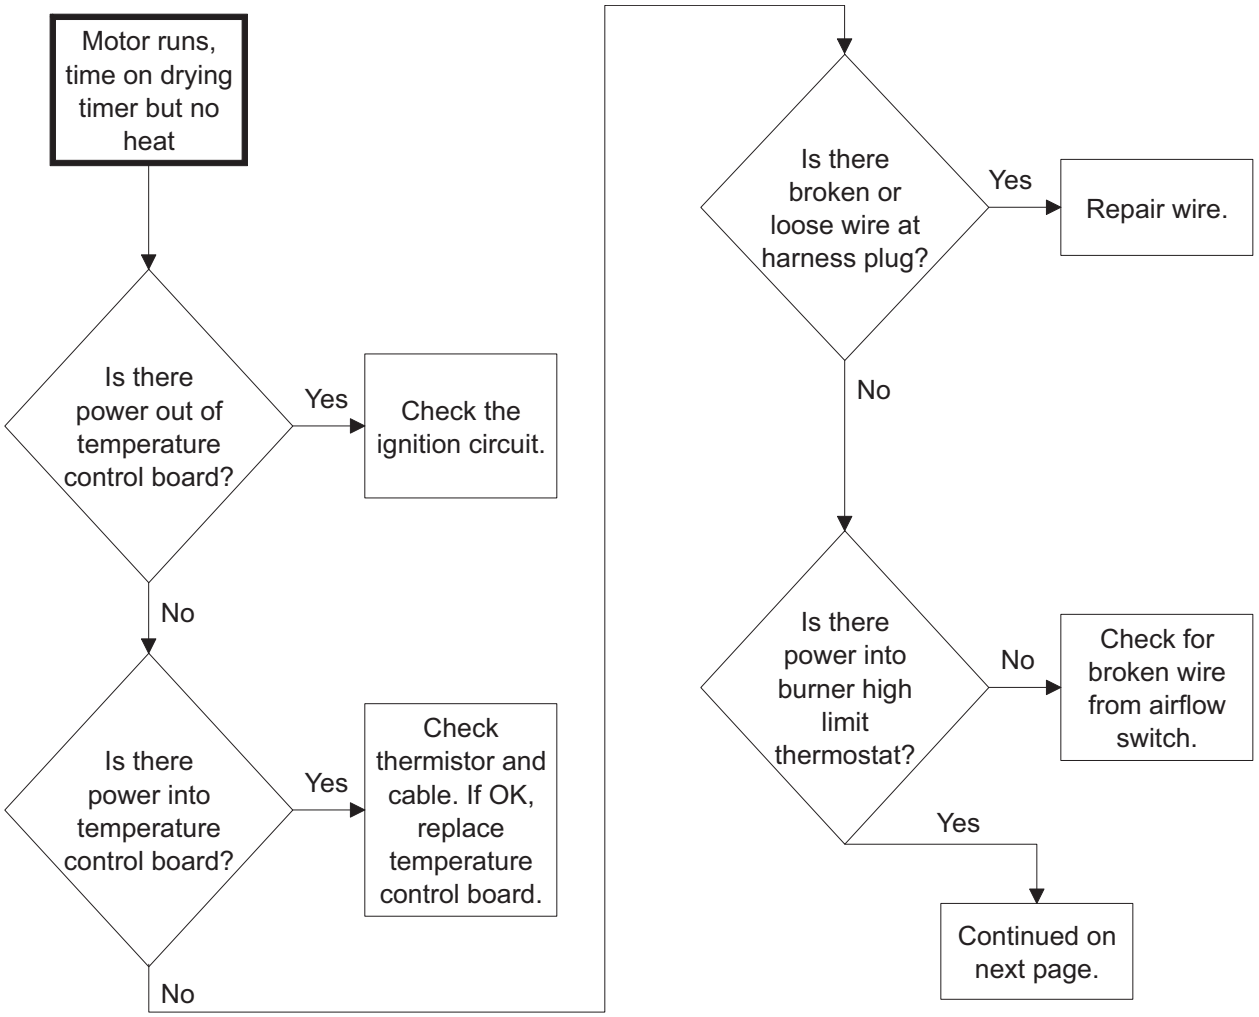
Motor runs, time on drying timer but no heat
Is there power out of temperature control board?
Yes
Check the ignition circuit.
No
Is there power into temperature control board?
Yes
Check thermistor and cable. If OK, replace temperature control board.
No
Is there broken or loose wire at harness plug?
Yes
Repair wire.
No
Is there power into burner high limit thermostat?
No
Check for broken wire from airflow switch.
Yes
Continued on next page.

TMB2268S-a

20. Motor Runs, Time on Drying Timer But No Heat (continued)

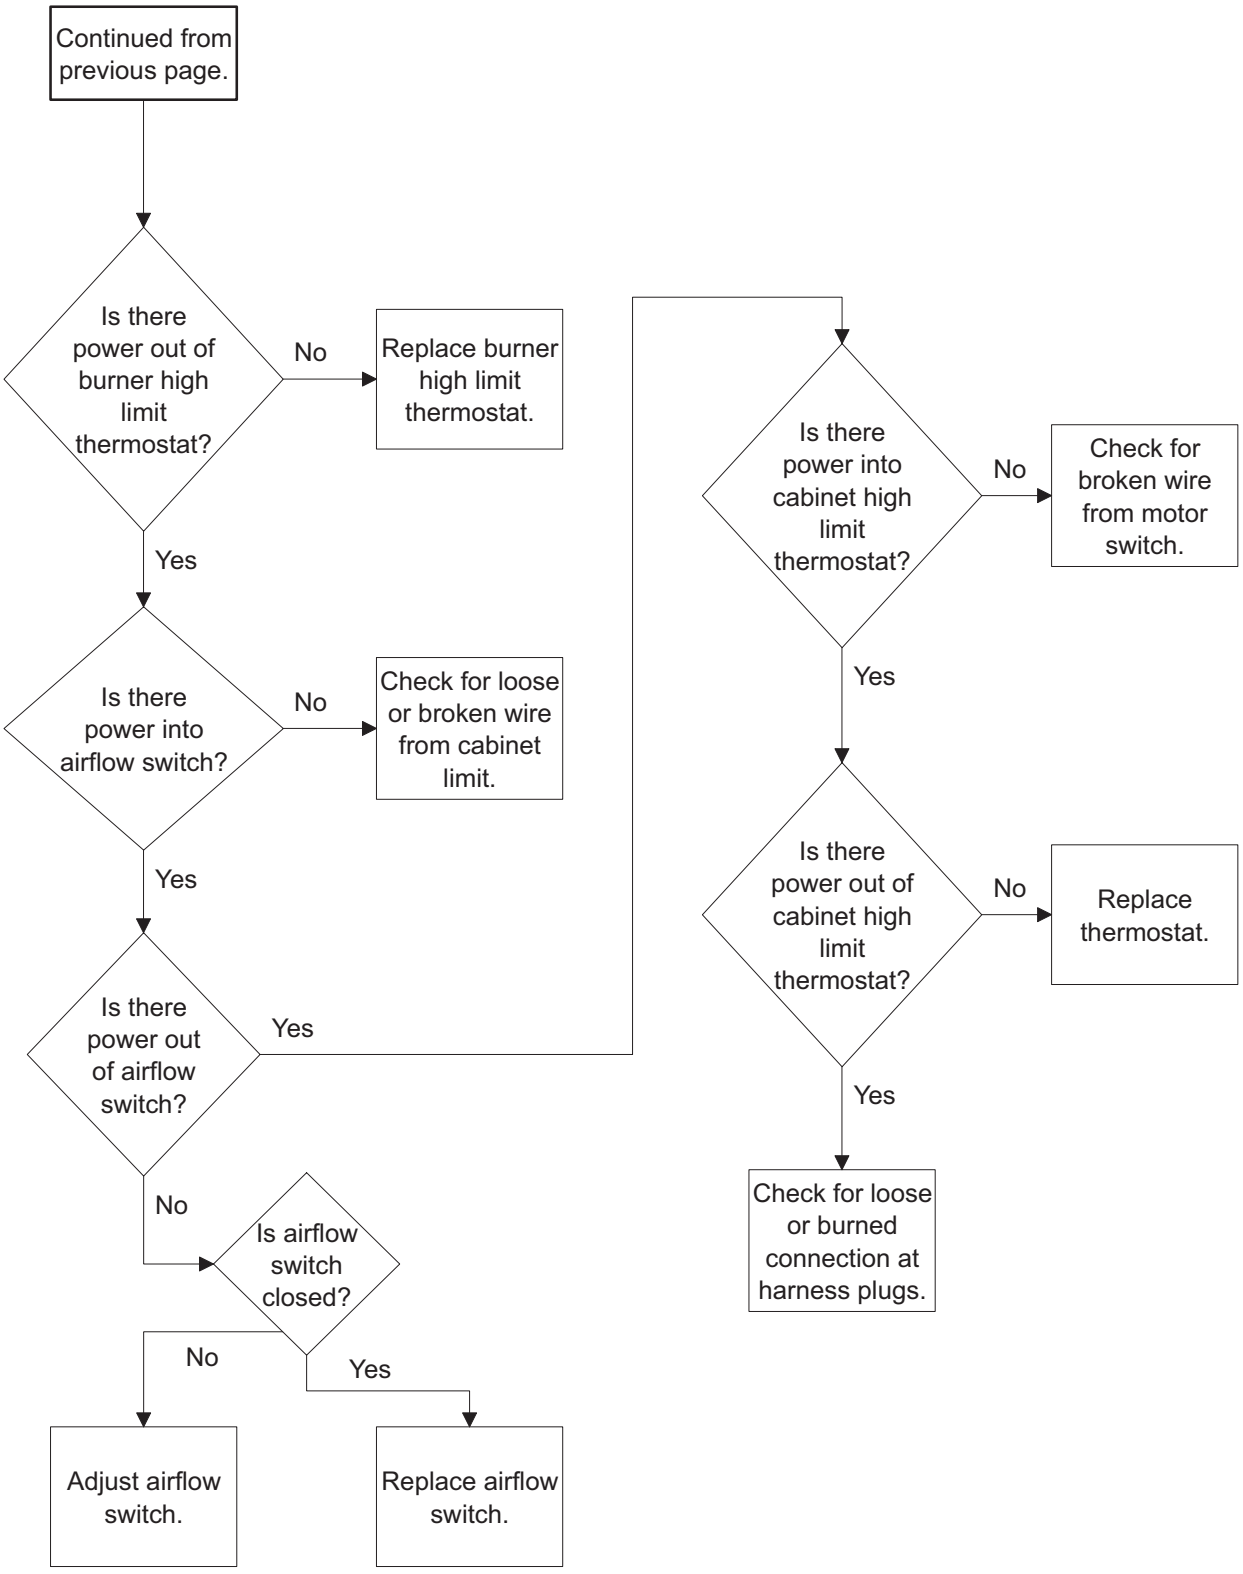

TMB2268S-b

21. No Main Burner Flame, Igniter Does Not Spark

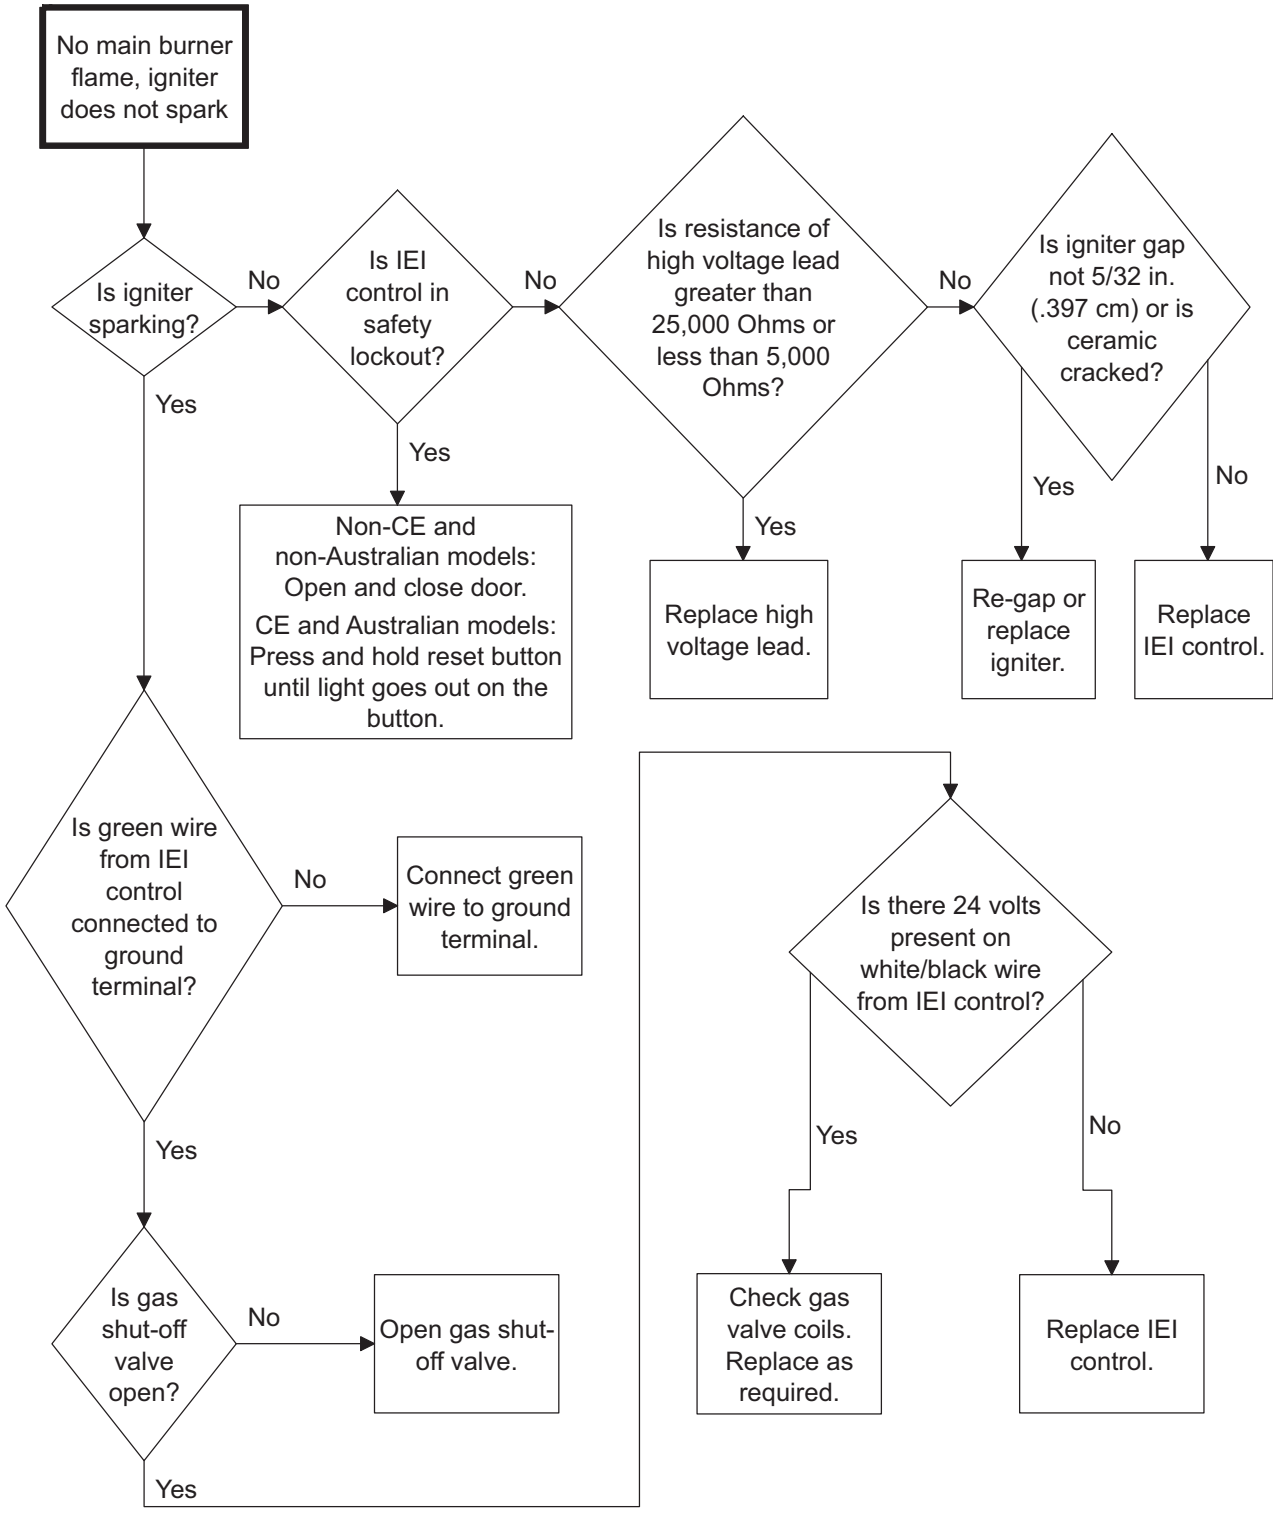
No main burner flame, igniter does not spark
Is igniter sparking?
No
Is IEI control in safety lockout?
No
Is resistance of high voltage lead greater than 25,000 Ohms or less than 5,000 Ohms?
No
Is igniter gap not 5/32 in. (.397 cm) or is ceramic cracked?
Yes
No
Yes
Yes
Yes
Non-CE and non-Australian models: Open and close door.
CE and Australian models: Press and hold reset button until light goes out on the button.
Replace high voltage lead.
Re-gap or replace igniter.
Replace IEI control.
Is green wire from IEI control connected to ground terminal?
No
Connect green wire to ground terminal.
Yes
Is gas shut-off valve open?
No
Open gas shut-off valve.
Yes
Is there 24 volts present on white/black wire from IEI control?
Yes
No
Check gas valve coils. Replace as required.
Replace IEI control.

TMB2326S

22. Steam OM Control: No Heat With Cycle Selected, Unit Running and Calling For Heat

120 Volt/60 Hertz/1 Phase and 208-240 Volt/60 Hertz/1 Phase Nonreversing
460-480 Volt/60 Hertz/3 Phase and 208-240 Volt/60 Hertz/3 Phase Reversing and Nonreversing

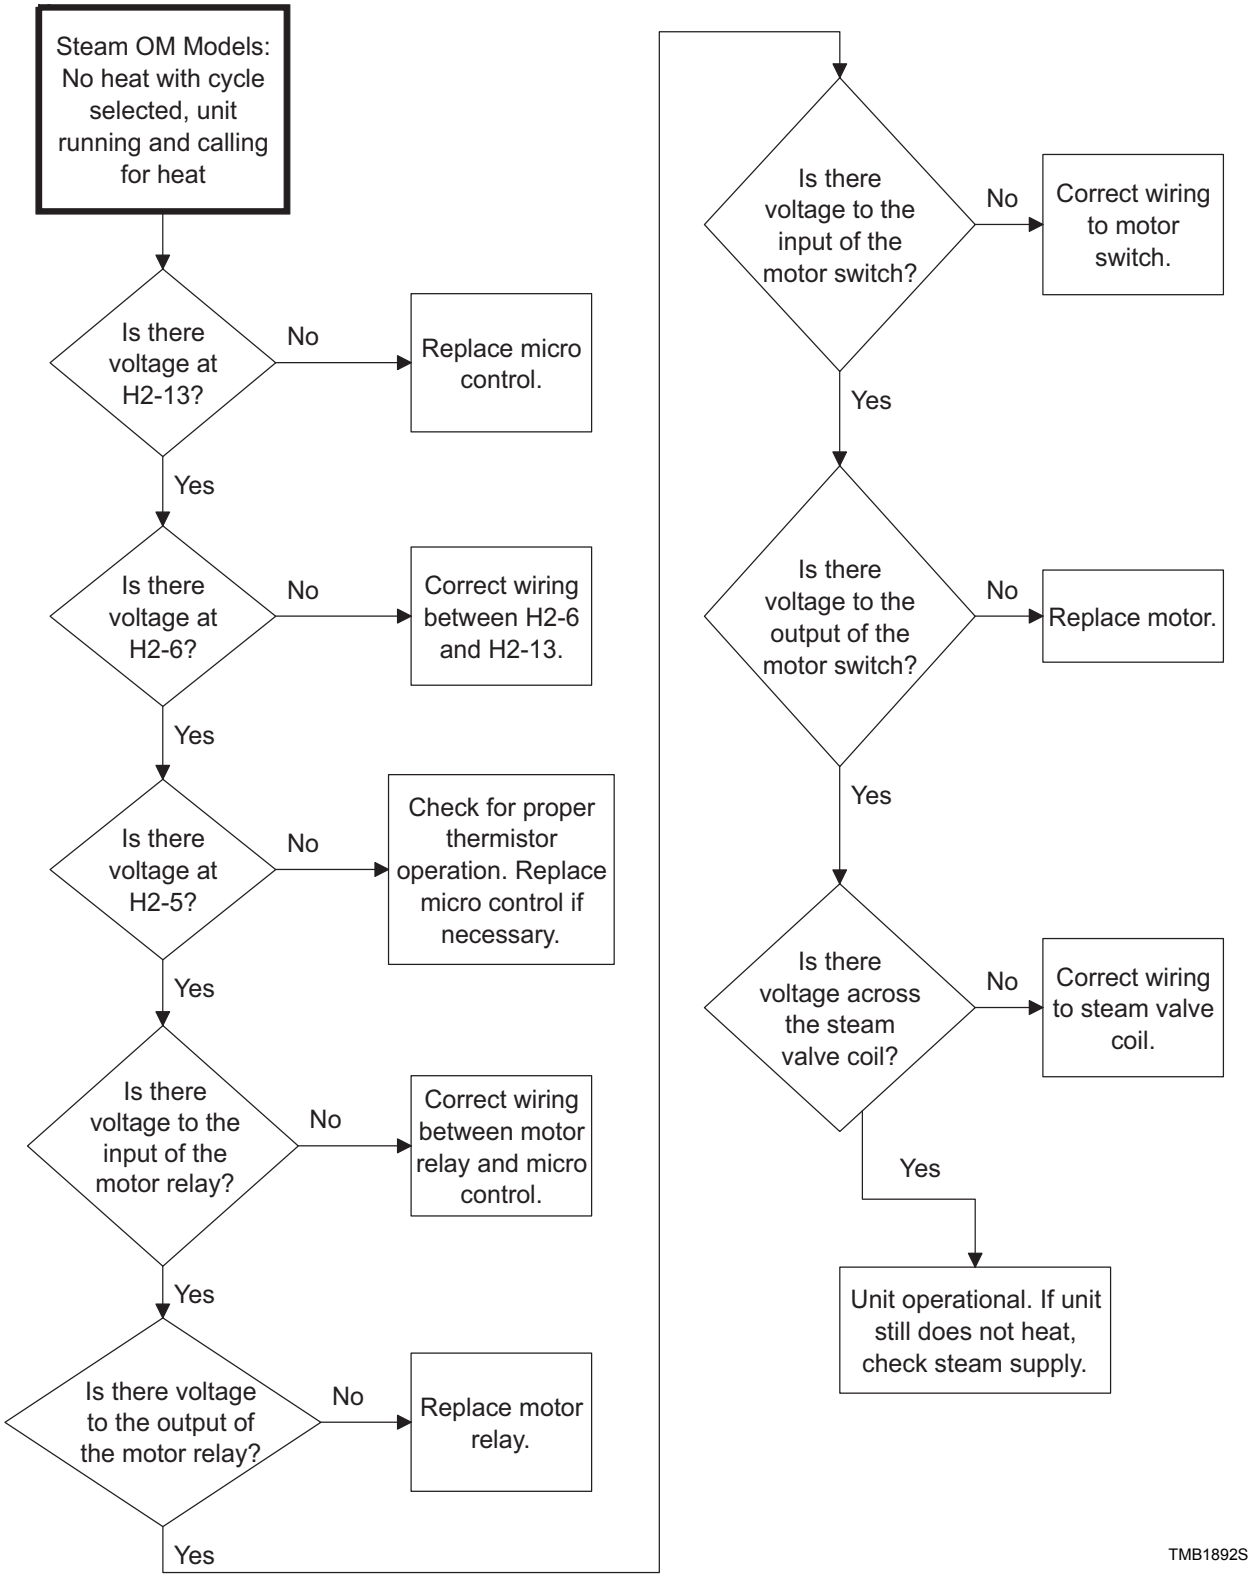
Steam OM Models: No heat with cycle selected, unit running and calling for heat
Is there voltage at H2-13?
No
Replace micro control.
Yes
Is there voltage at H2-6?
No
Correct wiring between H2-6 and H2-13.
Yes
Is there voltage at H2-5?
No
Check for proper thermistor operation. Replace micro control if necessary.
Yes
Is there voltage to the input of the motor relay?
No
Correct wiring between motor relay and micro control.
Yes
Is there voltage to the output of the motor relay?
No
Replace motor relay.
Yes
Is there voltage to the input of the motor switch?
No
Correct wiring to motor switch.
Yes
Is there voltage to the output of the motor switch?
No
Replace motor.
Yes
Is there voltage across the steam valve coil?
No
Correct wiring to steam valve coil.
Yes
Unit operational. If unit still does not heat, check steam supply.
TMB1892S

23. OM and RM Control: No Start With Cycle Selected, Start Button Pressed and Door Closed

120 Volt/60 Hertz/1 Phase Gas and Steam Nonreversing
208-240 Volt/60 Hertz/1 or 3 Phase Steam Nonreversing
208-240 Volt/60 Hertz/3 Phase Electric Nonreversing
460-480 Volt/60 Hertz/3 Phase Gas, Electric and Steam Nonreversing

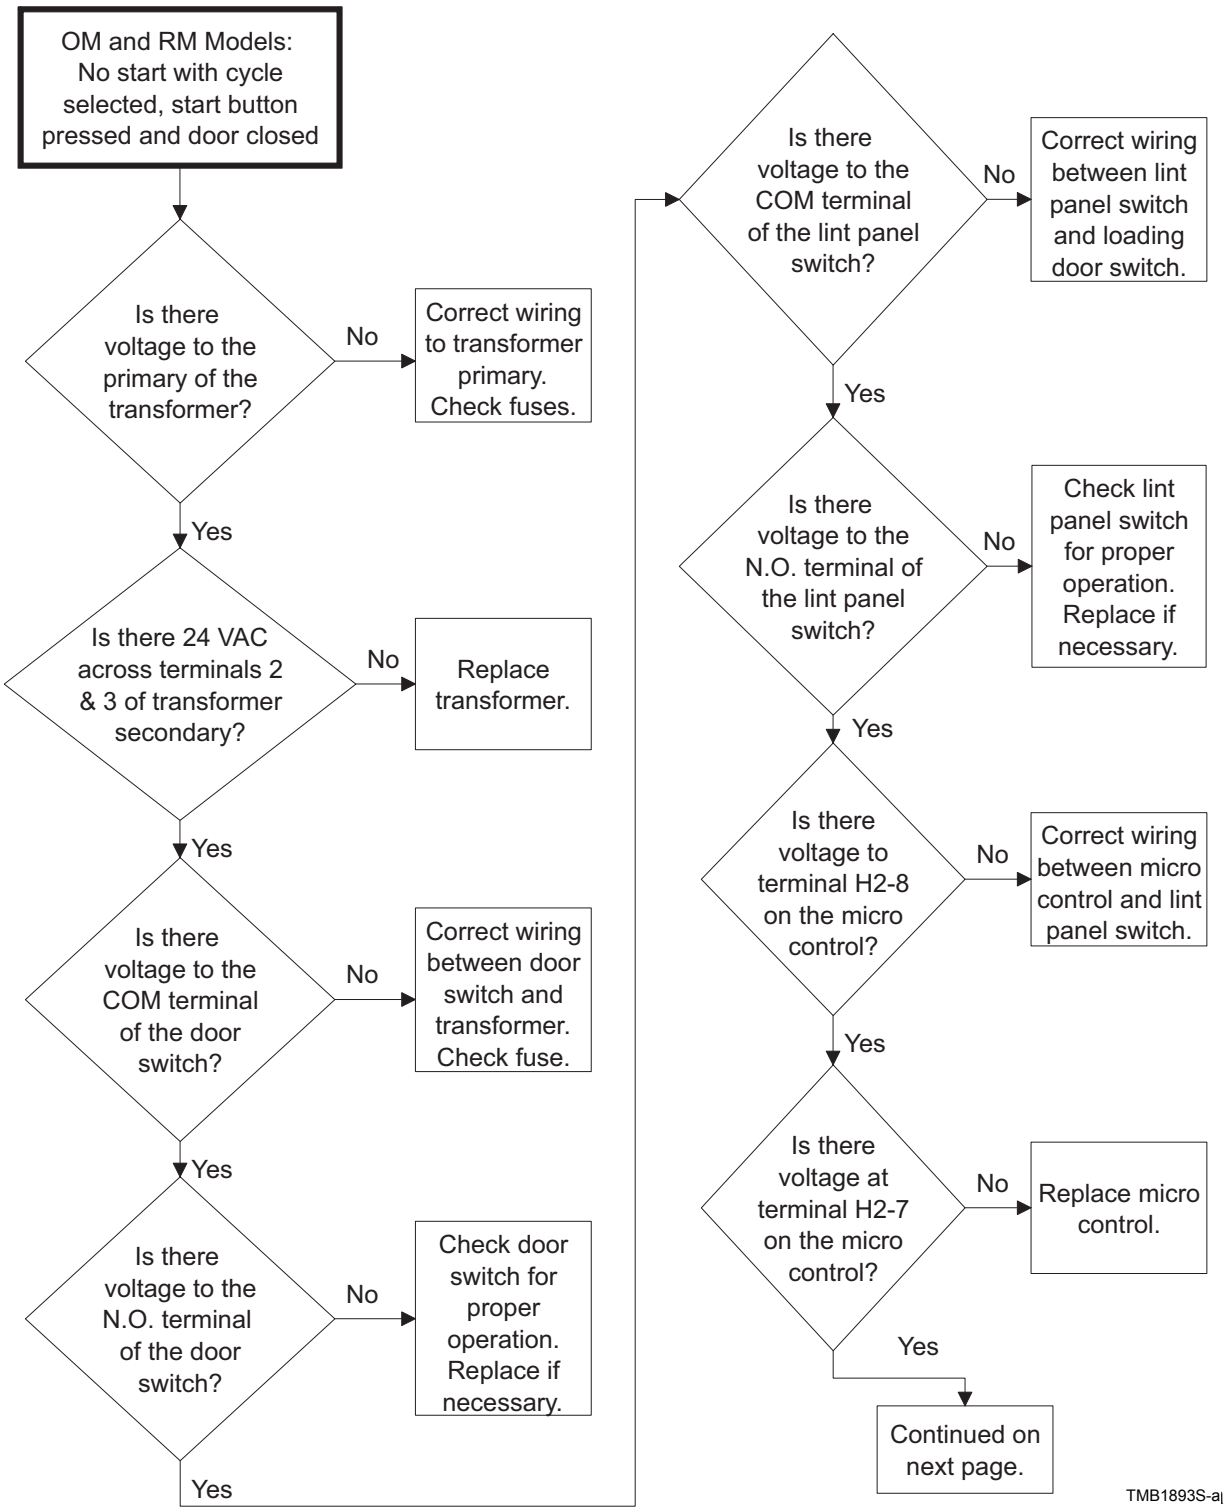
OM and RM Models: No start with cycle selected, start button pressed and door closed
Is there voltage to the primary of the transformer?
No
Correct wiring to transformer primary. Check fuses.
Yes
Is there 24 VAC across terminals 2 & 3 of transformer secondary?
No
Replace transformer.
Yes
Is there voltage to the COM terminal of the door switch?
No
Correct wiring between door switch and transformer. Check fuse.
Yes
Is there voltage to the N.O. terminal of the door switch?
No
Check door switch for proper operation. Replace if necessary.
Yes
Is there voltage to the COM terminal of the lint panel switch?
No
Correct wiring between lint panel switch and loading door switch.
Yes
Is there voltage to the N.O. terminal of the lint panel switch?
No
Check lint panel switch for proper operation. Replace if necessary.
Yes
Is there voltage to terminal H2-8 on the micro control?
No
Correct wiring between micro control and lint panel switch.
Yes
Is there voltage at terminal H2-7 on the micro control?
No
Replace micro control.
Yes
Continued on next page.
TMB1893S-a

23. OM and RM Control: No Start With Cycle Selected, Start Button Pressed and Door Closed (continued)

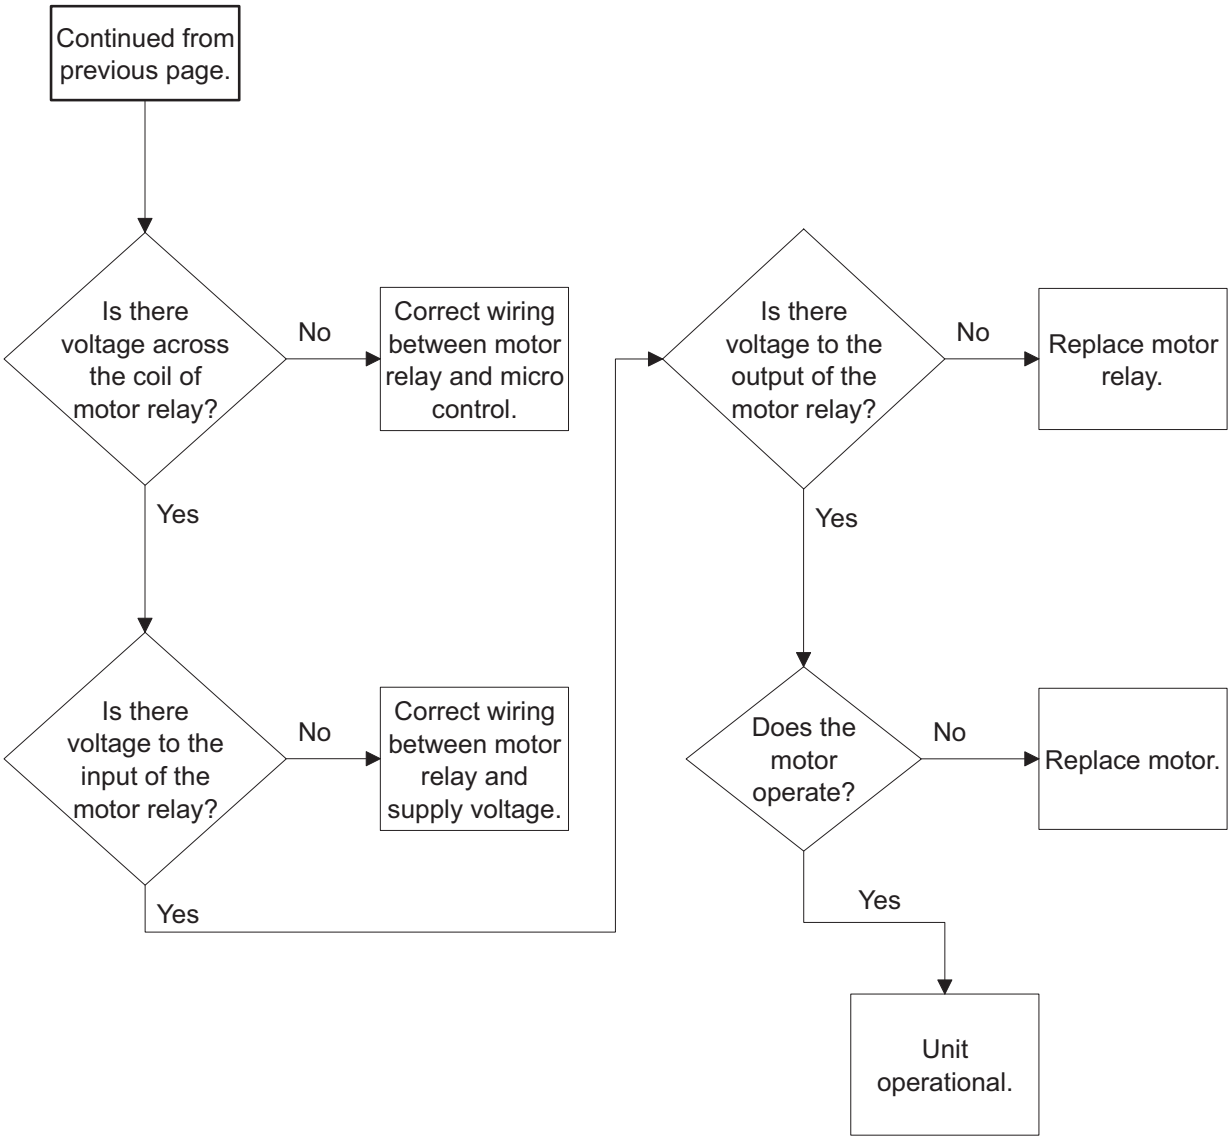

TMB1893S-b

TMB2325S-a

24. OM Control: No Display After Selecting One of the ON/SELECT Keys

120 Volt/60 Hertz/1 Phase Gas and Steam Nonreversing
208-240 Volt/60 Hertz/1 Phase Gas and Steam Nonreversing
208-240 Volt/60 Hertz/3 Phase Gas and Steam Reversing/Nonreversing
208-240 Volt/60 Hertz/3 Phase Electric Reversing/Nonreversing
460-480 Volt/60 Hertz/3 Phase Gas, Electric and Steam Reversing/Nonreversing

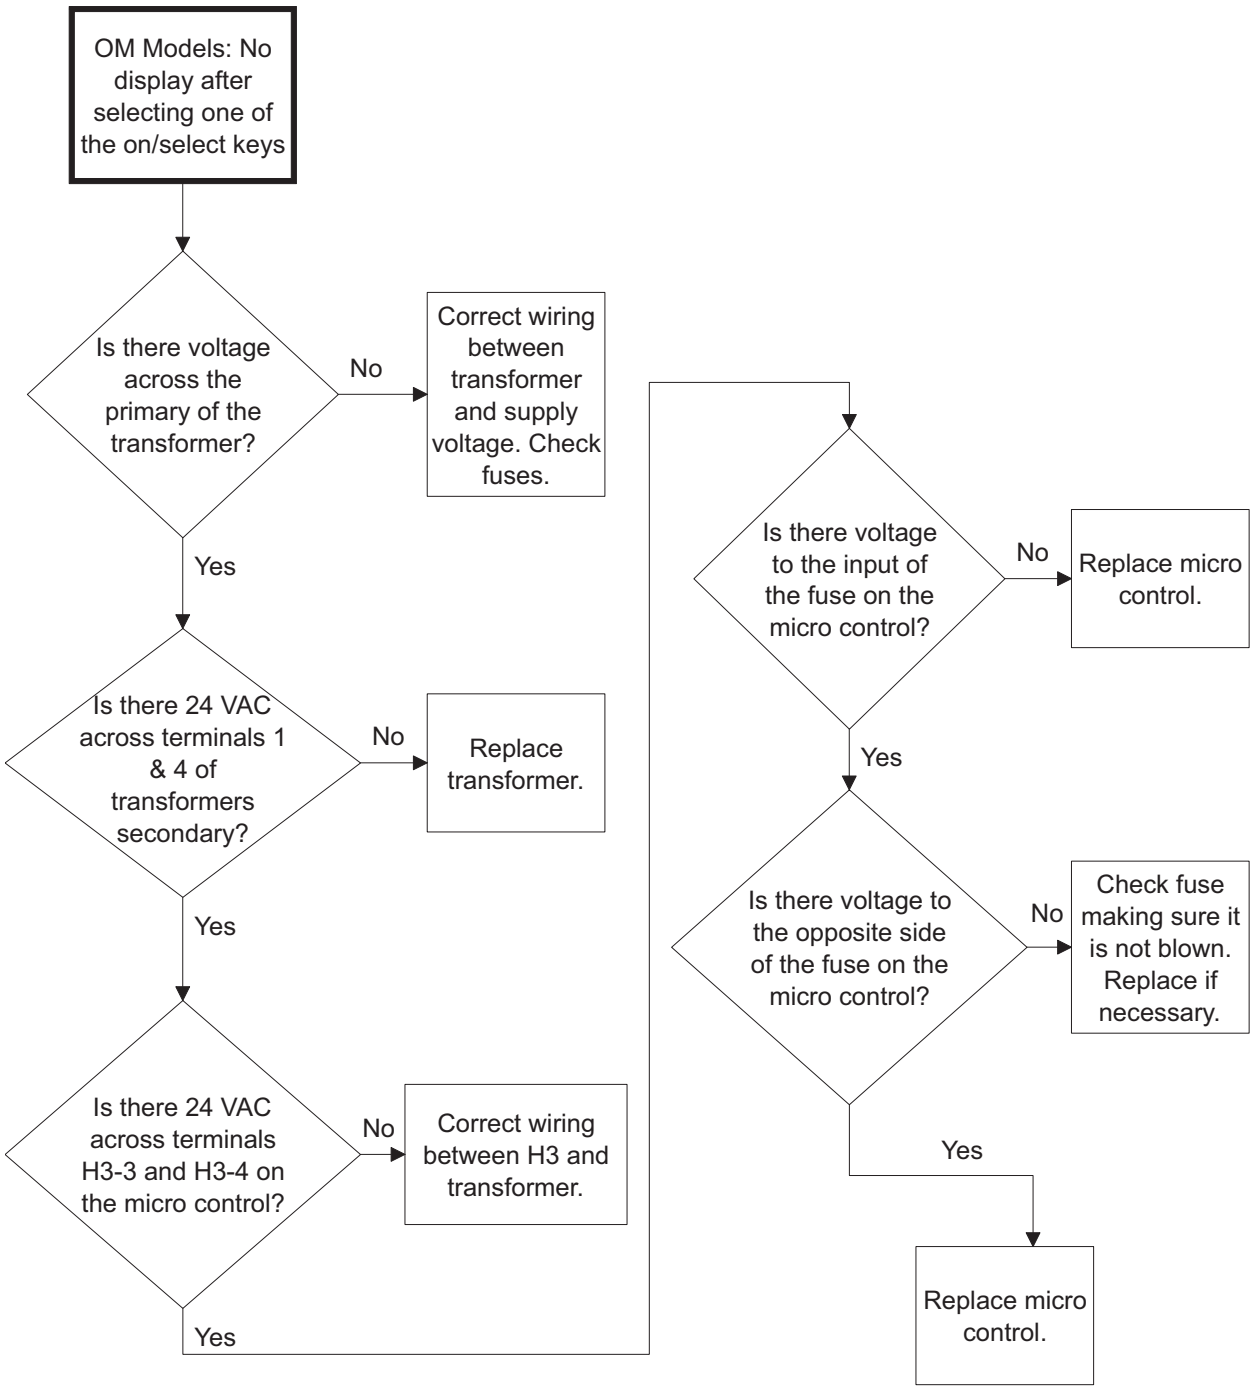
OM Models: No display after selecting one of the on/select keys
Is there voltage across the primary of the transformer?
No
Correct wiring between transformer and supply voltage. Check fuses.
Yes
Is there 24 VAC across terminals 1 & 4 of transformers secondary?
No
Replace transformer.
Yes
Is there 24 VAC across terminals H3-3 and H3-4 on the micro control?
No
Correct wiring between H3 and transformer.
Yes
Is there voltage to the input of the fuse on the micro control?
No
Replace micro control.
Yes
Is there voltage to the opposite side of the fuse on the micro control?
No
Check fuse making sure it is not blown. Replace if necessary.
Yes
Replace micro control.
TMB1894S

25. Electric OM Control: No Heat With Cycle Selected, Unit Running and Calling For Heat

460-480 Volt/60 Hertz/3 Phase and 208-240 Volt/60 Hertz/3 Phase Reversing and Nonreversing

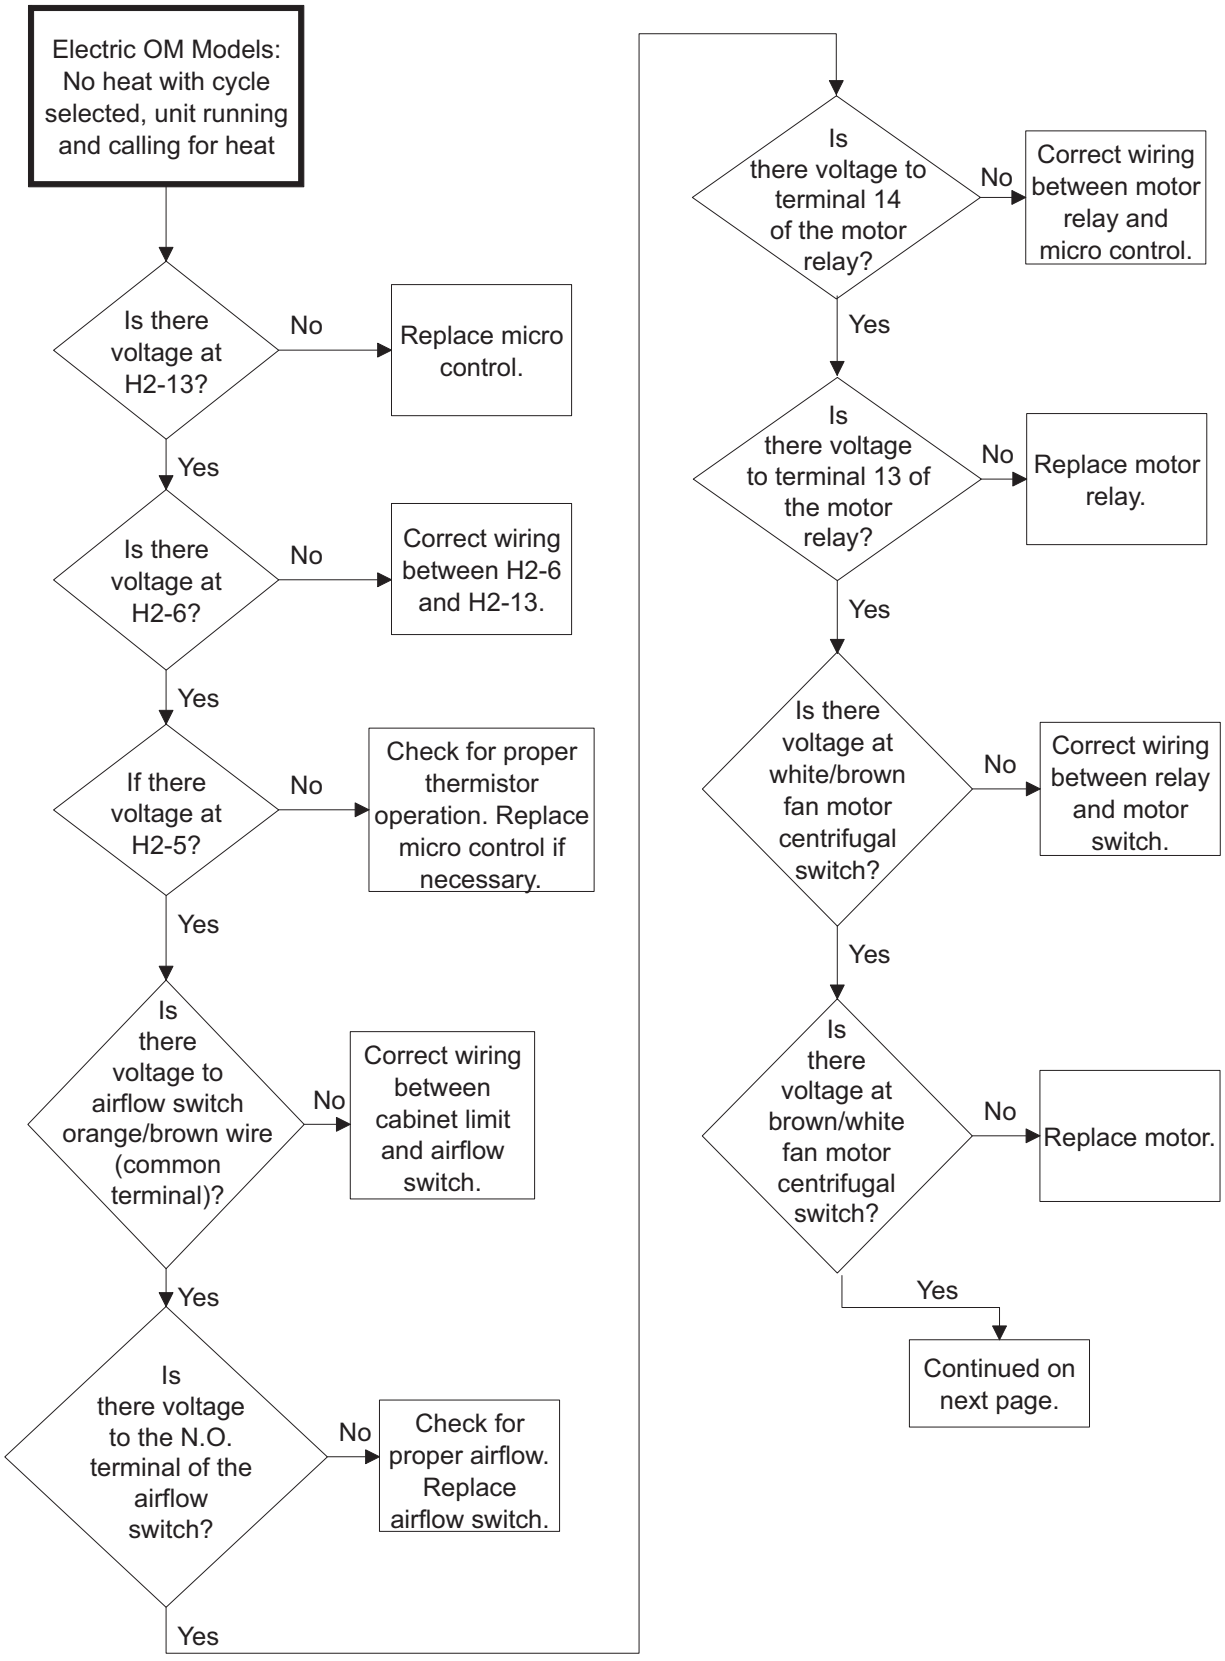
Electric OM Models: No heat with cycle selected, unit running and calling for heat
Is there voltage at H2-13?
No
Replace micro control.
Yes
Is there voltage at H2-6?
No
Correct wiring between H2-6 and H2-13.
Yes
If there voltage at H2-5?
No
Check for proper thermistor operation. Replace micro control if necessary.
Yes
Is there voltage to airflow switch orange/brown wire (common terminal)?
No
Correct wiring between cabinet limit and airflow switch.
Yes
Is there voltage to the N.O. terminal of the airflow switch?
No
Check for proper airflow. Replace airflow switch.
Yes
Is there voltage to terminal 14 of the motor relay?
No
Correct wiring between motor relay and micro control.
Yes
Is there voltage to terminal 13 of the motor relay?
No
Replace motor relay.
Yes
Is there voltage at white/brown fan motor centrifugal switch?
No
Correct wiring between relay and motor switch.
Yes
Is there voltage at brown/white fan motor centrifugal switch?
No
Replace motor.
Yes
Continued on next page.

25. Electric OM Control: No Heat With Cycle Selected, Unit Running and Calling For Heat (continued)

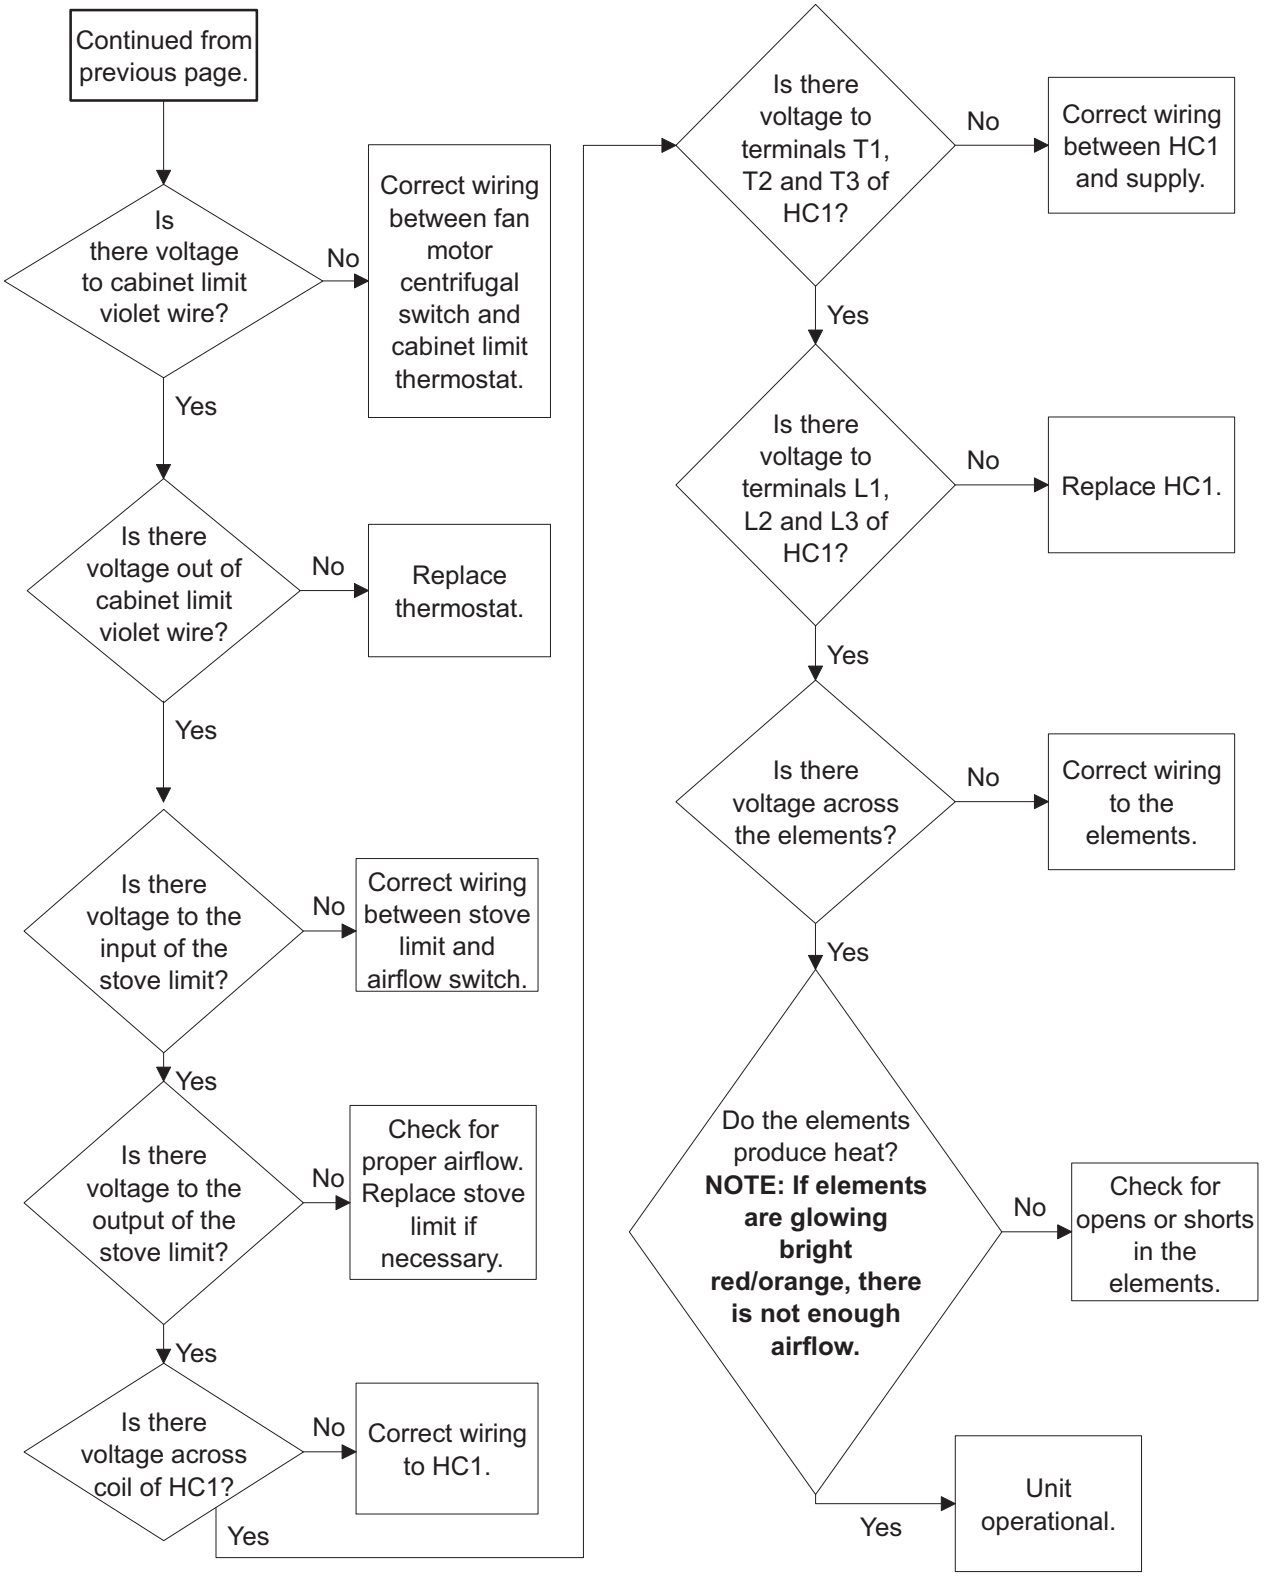
Continued from previous page.
Is there voltage to cabinet limit violet wire?
No
Correct wiring between fan motor centrifugal switch and cabinet limit thermostat.
Yes
Is there voltage out of cabinet limit violet wire?
No
Replace thermostat.
Yes
Is there voltage to the input of the stove limit?
No
Correct wiring between stove limit and airflow switch.
Yes
Is there voltage to the output of the stove limit?
No
Check for proper airflow. Replace stove limit if necessary.
Yes
Is there voltage across coil of HC1?
No
Correct wiring to HC1.
Yes
Is there voltage to terminals T1, T2 and T3 of HC1?
No
Correct wiring between HC1 and supply.
Yes
Is there voltage to terminals L1, L2 and L3 of HC1?
No
Replace HC1.
Yes
Is there voltage across the elements?
No
Correct wiring to the elements.
Yes
Do the elements produce heat? NOTE: If elements are glowing bright red/orange, there is not enough airflow.
No
Check for opens or shorts in the elements.
Yes
Unit operational.

TMB2325S-b

26. Gas OM Control: No Heat With Cycle Selected, Unit Running and Calling For Heat

120 Volt/60 Hertz/1 Phase and 208-240 Volt/60 Hertz/1 Phase Nonreversing
460-480 Volt/60 Hertz/3 Phase and 208-240 Volt/60 Hertz/3 Phase Reversing and Nonreversing

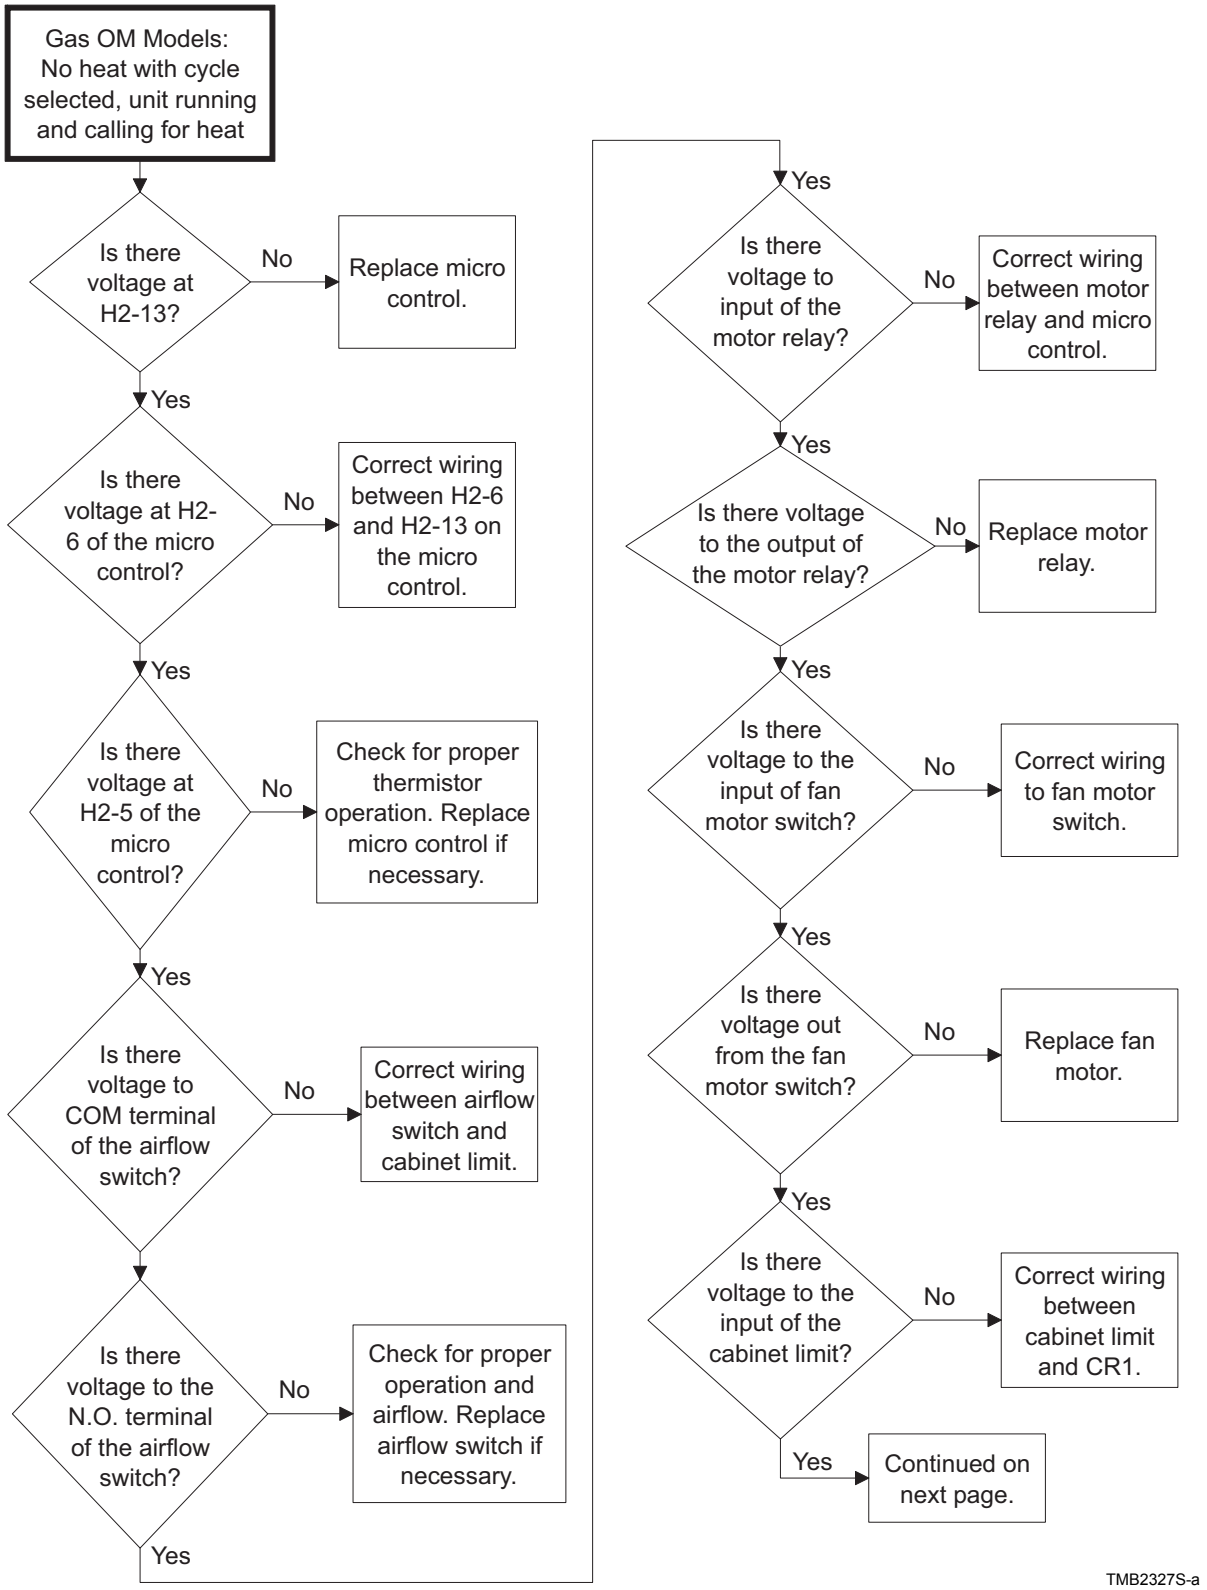
Gas OM Models: No heat with cycle selected, unit running and calling for heat
Is there voltage at H2-13?
No
Replace micro control.
Yes
Is there voltage at H2-6 of the micro control?
No
Correct wiring between H2-6 and H2-13 on the micro control.
Yes
Is there voltage at H2-5 of the micro control?
No
Check for proper thermistor operation. Replace micro control if necessary.
Yes
Is there voltage to COM terminal of the airflow switch?
No
Correct wiring between airflow switch and cabinet limit.
Is there voltage to the N.O. terminal of the airflow switch?
No
Check for proper operation and airflow. Replace airflow switch if necessary.
Yes
Yes
Is there voltage to input of the motor relay?
No
Correct wiring between motor relay and micro control.
Yes
Is there voltage to the output of the motor relay?
No
Replace motor relay.
Yes
Is there voltage to the input of fan motor switch?
No
Correct wiring to fan motor switch.
Yes
Is there voltage out from the fan motor switch?
No
Replace fan motor.
Yes
Is there voltage to the input of the cabinet limit?
No
Correct wiring between cabinet limit and CR1.
Yes
Continued on next page.
TMB2327S-a

26. Gas OM Control: No Heat With Cycle Selected, Unit Running and Calling For Heat (continued)

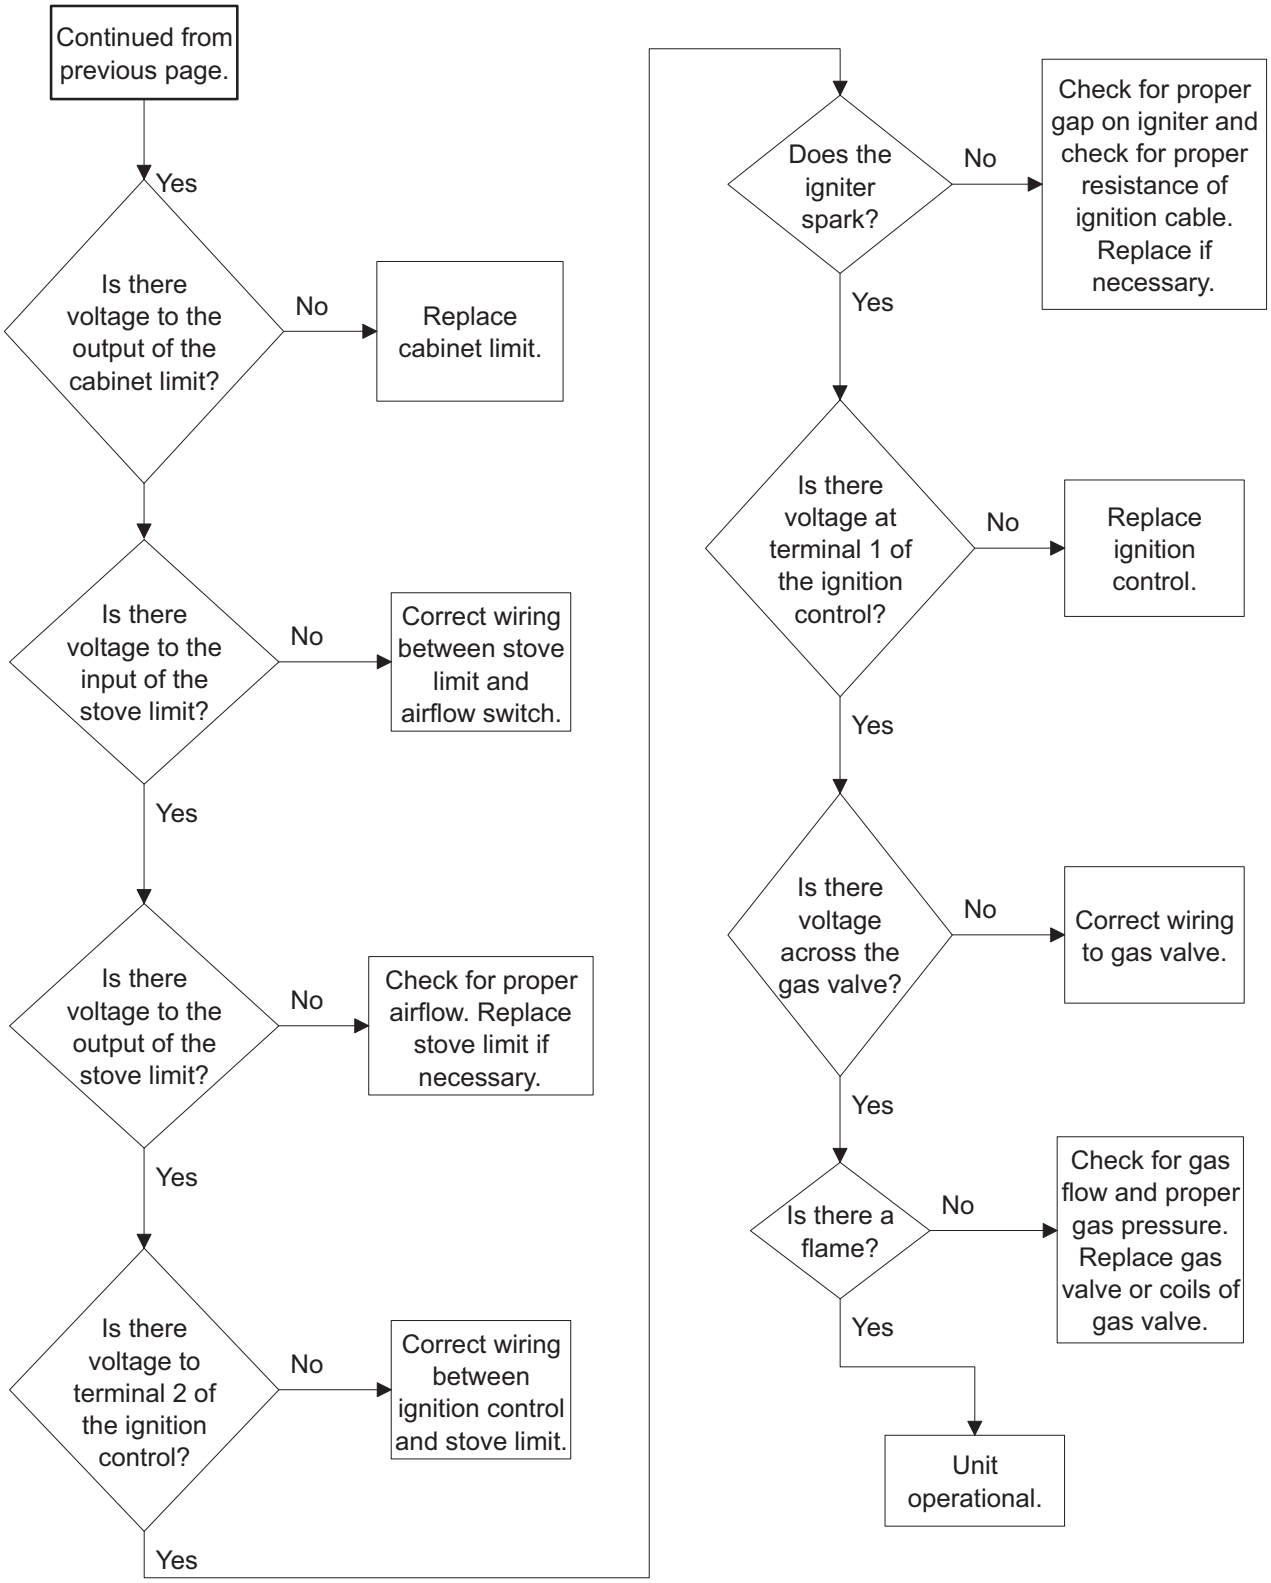
Continued from previous page.
Yes
Is there voltage to the output of the cabinet limit?
No
Replace cabinet limit.
Is there voltage to the input of the stove limit?
No
Correct wiring between stove limit and airflow switch.
Yes
Is there voltage to the output of the stove limit?
No
Check for proper airflow. Replace stove limit if necessary.
Yes
Is there voltage to terminal 2 of the ignition control?
No
Correct wiring between ignition control and stove limit.
Yes
Does the igniter spark?
No
Check for proper gap on igniter and check for proper resistance of ignition cable. Replace if necessary.
Yes
Is there voltage at terminal 1 of the ignition control?
No
Replace ignition control.
Yes
Is there voltage across the gas valve?
No
Correct wiring to gas valve.
Yes
Is there a flame?
No
Check for gas flow and proper gas pressure. Replace gas valve or coils of gas valve.
Yes
Unit operational.

TMB2327S-b

27. OM Control: No Fan Motor Rotation With Cycle Selected and Start Pressed

208-240 Volt/60 Hertz/3 Phase and 480 Volt/60 Hertz/3 Phase Electric Reversing Models
208-240 Volt/60 Hertz/3 Phase and 460-480 Volt/60 Hertz/3 Phase Gas Reversing and Steam Models

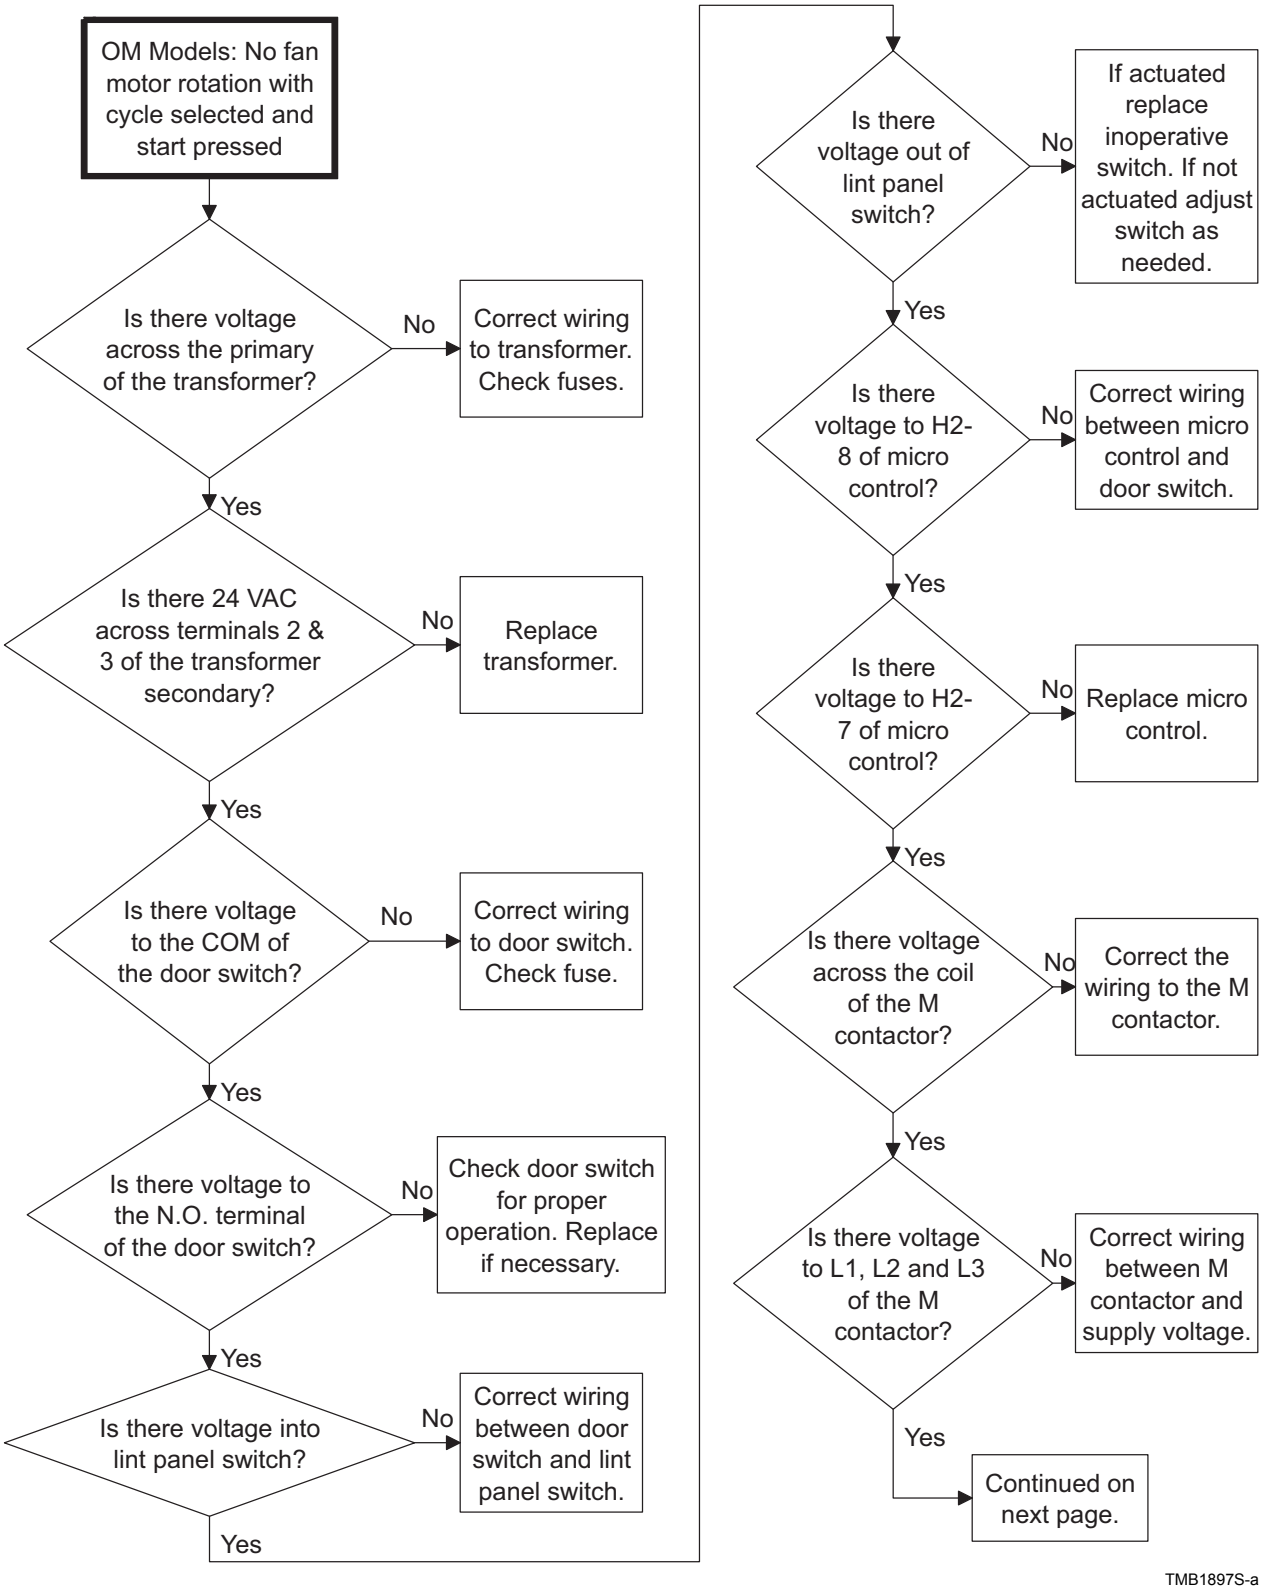
OM Models: No fan motor rotation with cycle selected and start pressed
Is there voltage across the primary of the transformer?
No
Correct wiring to transformer. Check fuses.
Yes
Is there 24 VAC across terminals 2 & 3 of the transformer secondary?
No
Replace transformer.
Yes
Is there voltage to the COM of the door switch?
No
Correct wiring to door switch. Check fuse.
Yes
Is there voltage to the N.O. terminal of the door switch?
No
Check door switch for proper operation. Replace if necessary.
Yes
Is there voltage into lint panel switch?
No
Correct wiring between door switch and lint panel switch.
Yes
Is there voltage out of lint panel switch?
No
If actuated replace inoperative switch. If not actuated adjust switch as needed.
Yes
Is there voltage to H2-8 of micro control?
No
Correct wiring between micro control and door switch.
Yes
Is there voltage to H2-7 of micro control?
No
Replace micro control.
Yes
Is there voltage across the coil of the M contactor?
No
Correct the wiring to the M contactor.
Yes
Is there voltage to L1, L2 and L3 of the M contactor?
No
Correct wiring between M contactor and supply voltage.
Yes
Continued on next page.

TMB1897S-a

27. OM Control: No Fan Motor Rotation With Cycle Selected and Start Pressed (continued)

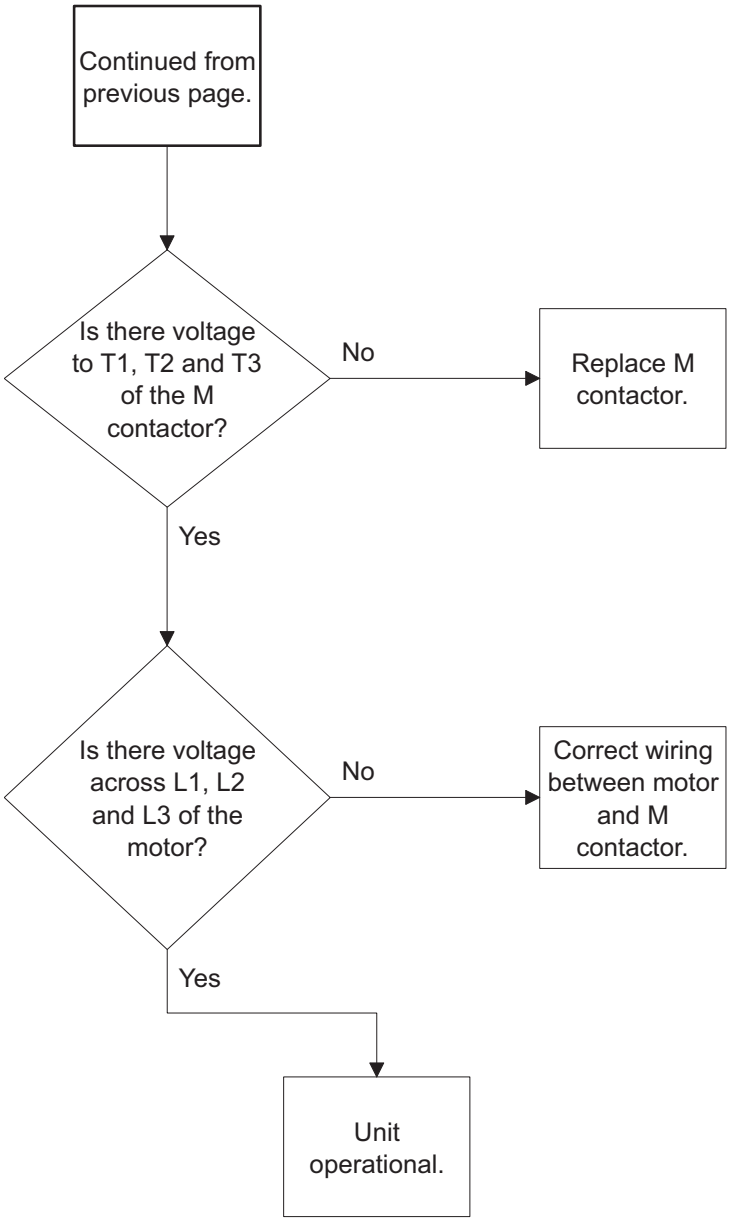
Continued from previous page.
Is there voltage to T1, T2 and T3 of the M contactor?
No
Replace M contactor.
Yes
Is there voltage across L1, L2 and L3 of the motor?
No
Correct wiring between motor and M contactor.
Yes
Unit operational.

TMB1897S-b

28. OM Reversing Control: No Cylinder Rotation or Reversing Capabilities

208-240 Volt/60 Hertz/3 Phase and 480 Volt/60 Hertz/3 Phase Electric Models
208-240 Volt/60 Hertz/3 Phase and 460-480 Volt/60 Hertz/3 Phase Gas and Steam Models

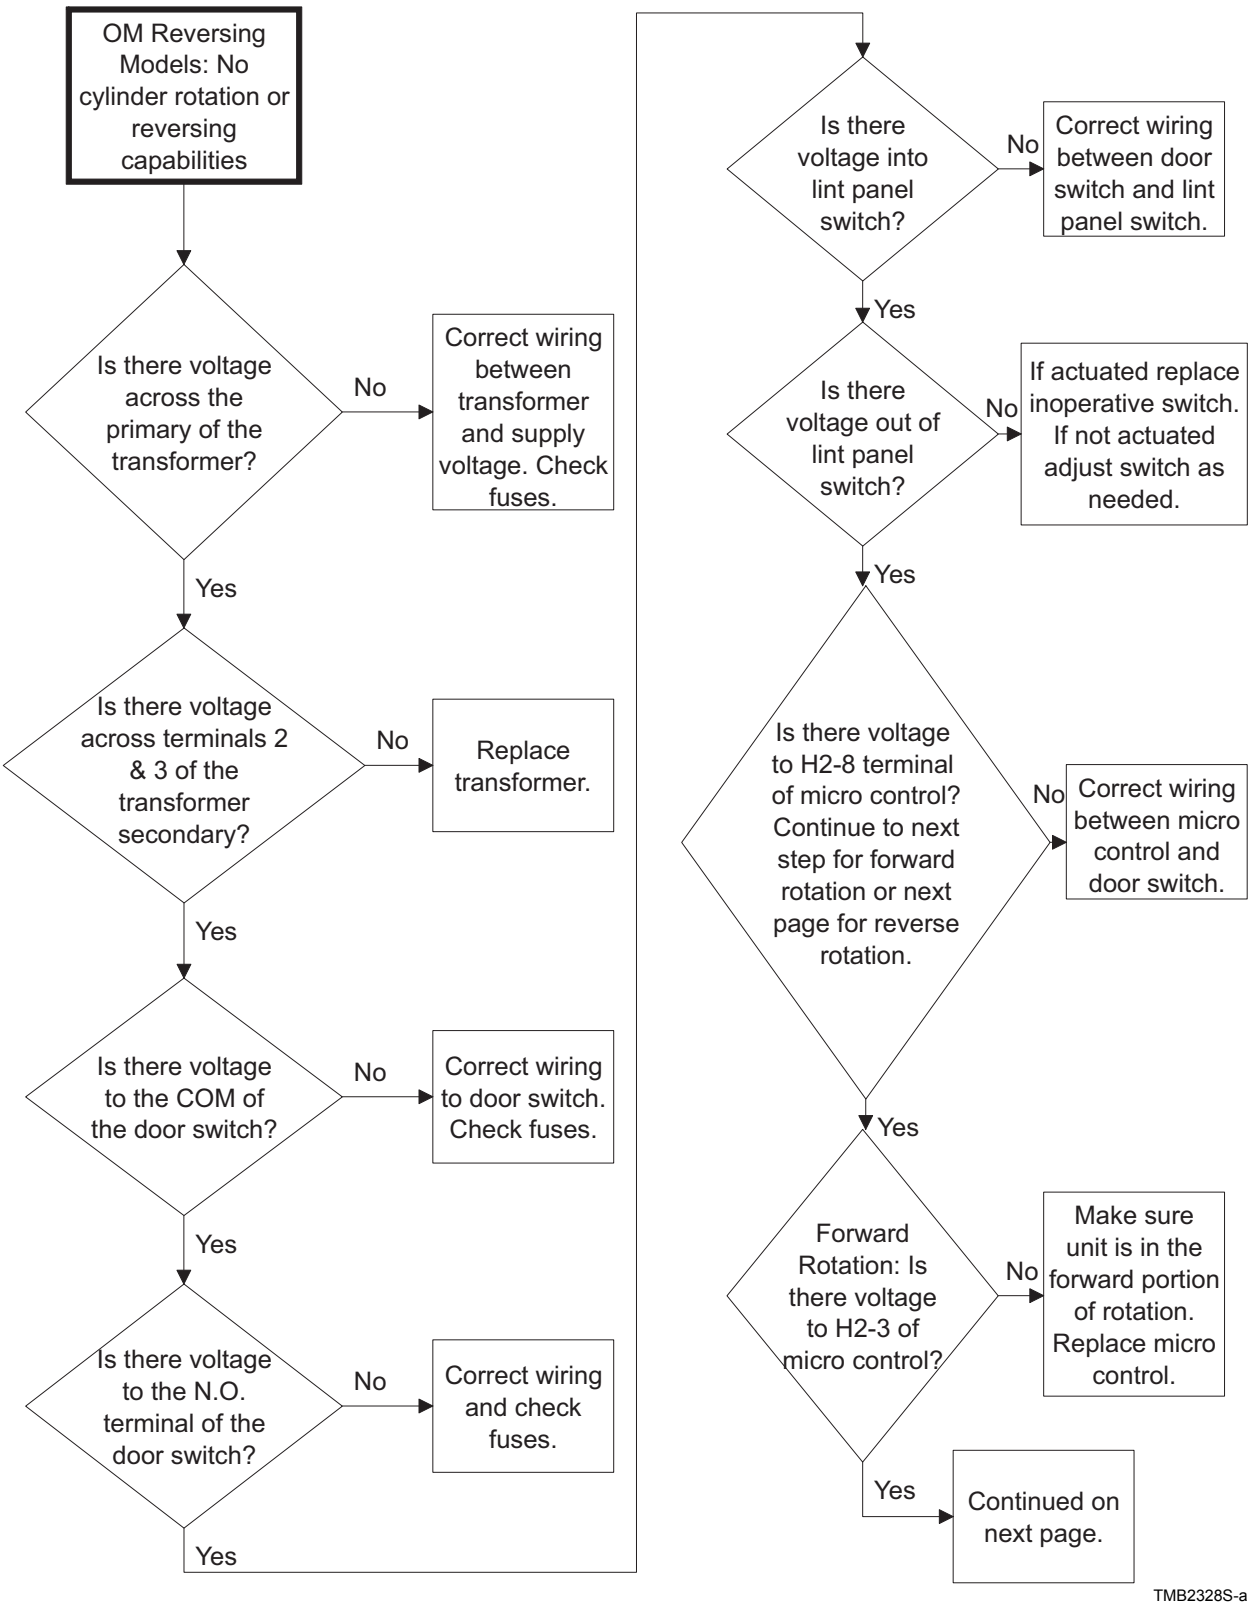
OM Reversing Models: No cylinder rotation or reversing capabilities
Is there voltage across the primary of the transformer?
No
Correct wiring between transformer and supply voltage. Check fuses.
Yes
Is there voltage across terminals 2 & 3 of the transformer secondary?
No
Replace transformer.
Yes
Is there voltage to the COM of the door switch?
No
Correct wiring to door switch. Check fuses.
Yes
Is there voltage to the N.O. terminal of the door switch?
No
Correct wiring and check fuses.
Yes
Is there voltage into lint panel switch?
No
Correct wiring between door switch and lint panel switch.
Yes
Is there voltage out of lint panel switch?
No
If actuated replace inoperative switch. If not actuated adjust switch as needed.
Yes
Is there voltage to H2-8 terminal of micro control? Continue to next step for forward rotation or next page for reverse rotation.
No
Correct wiring between micro control and door switch.
Yes
Forward Rotation: Is there voltage to H2-3 of micro control?
No
Make sure unit is in the forward portion of rotation. Replace micro control.
Yes
Continued on next page.
TMB2328S-a

28. OM Reversing Control: No Cylinder Rotation or Reversing Capabilities (continued)

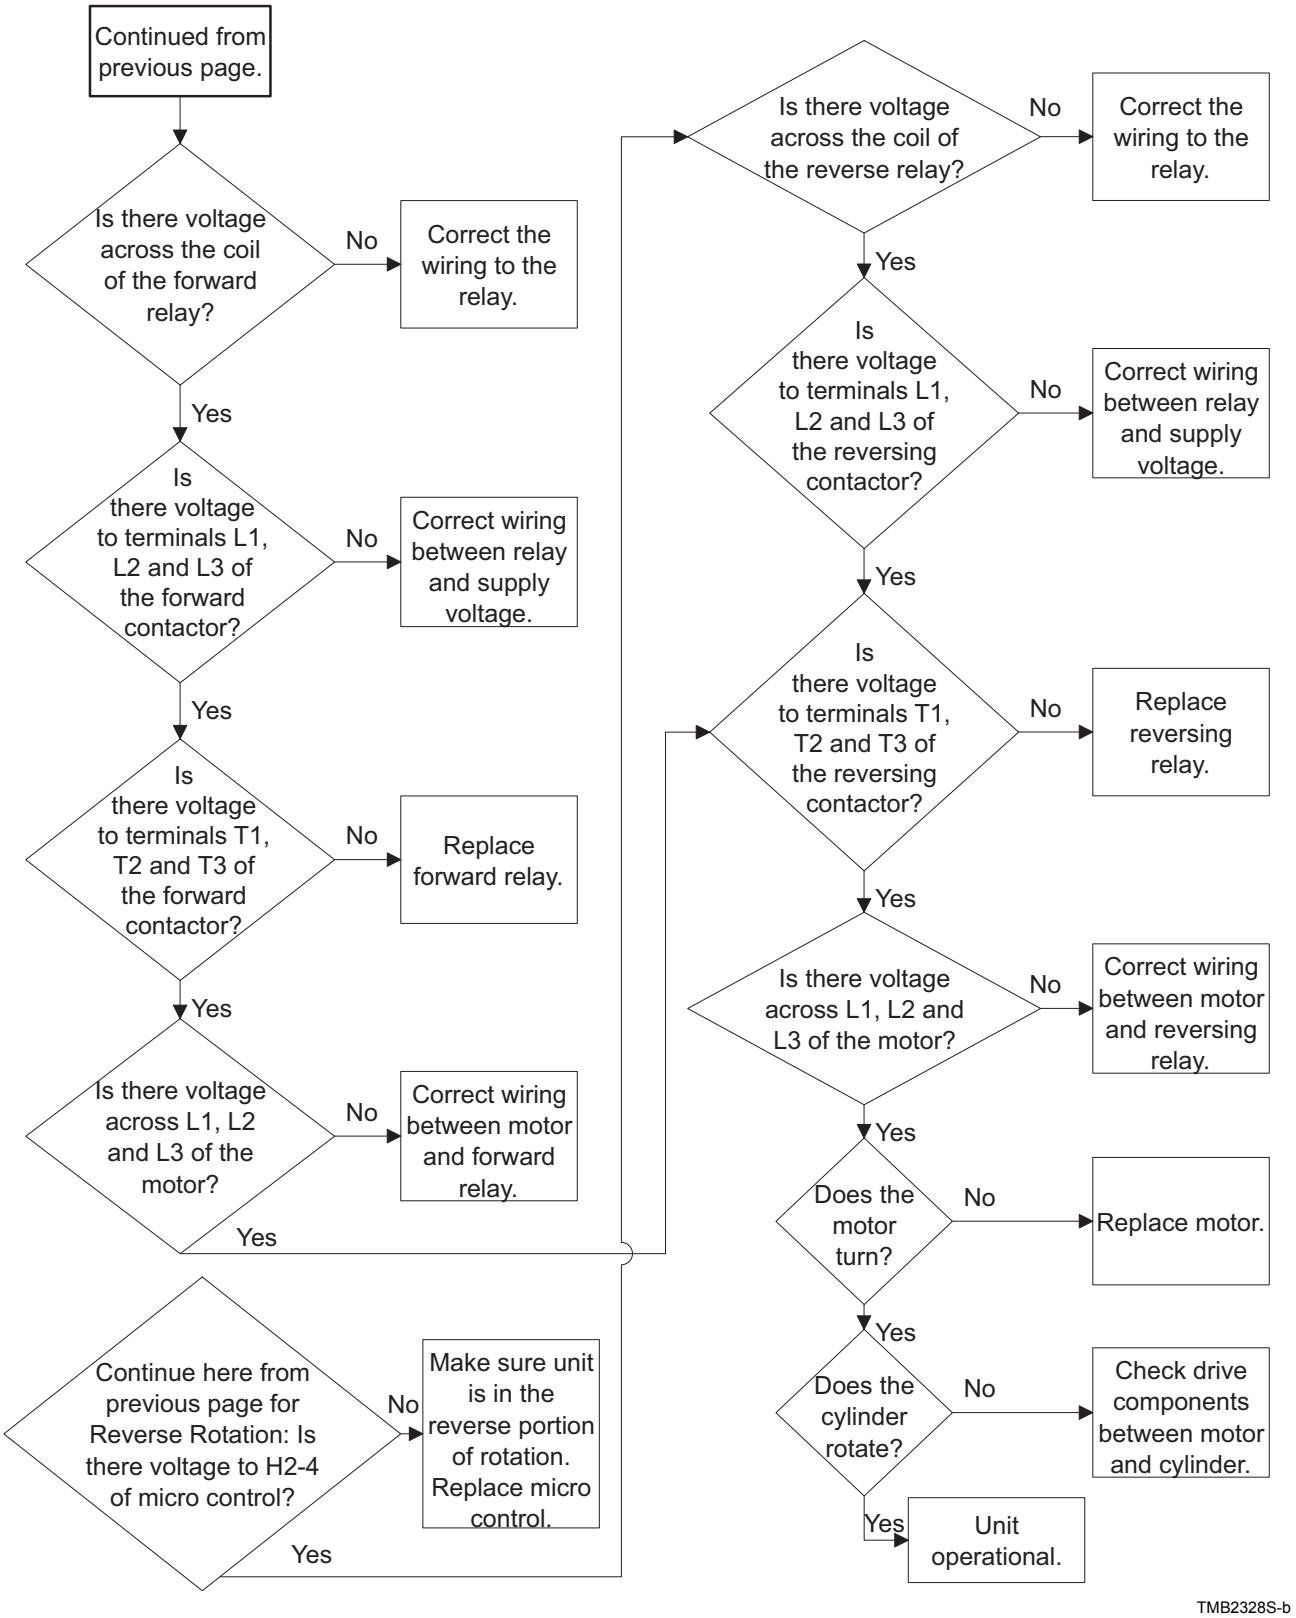
Continued from previous page.
Is there voltage across the coil of the forward relay?
No
Correct the wiring to the relay.
Yes
Is there voltage to terminals L1, L2 and L3 of the forward contactor?
No
Correct wiring between relay and supply voltage.
Yes
Is there voltage to terminals T1, T2 and T3 of the forward contactor?
No
Replace forward relay.
Yes
Is there voltage across L1, L2 and L3 of the motor?
No
Correct wiring between motor and forward relay.
Yes
Continue here from previous page for Reverse Rotation: Is there voltage to H2-4 of micro control?
No
Make sure unit is in the reverse portion of rotation. Replace micro control.
Yes
Is there voltage across the coil of the reverse relay?
No
Correct the wiring to the relay.
Yes
Is there voltage to terminals L1, L2 and L3 of the reversing contactor?
No
Correct wiring between relay and supply voltage.
Yes
Is there voltage to terminals T1, T2 and T3 of the reversing contactor?
No
Replace reversing relay.
Yes
Is there voltage across L1, L2 and L3 of the motor?
No
Correct wiring between motor and reversing relay.
Yes
Does the motor turn?
No
Replace motor.
Yes
Does the cylinder rotate?
No
Check drive components between motor and cylinder.
Yes
Unit operational.

TMB2328S-b

29. Coin Does Not Fall into Coin Vault or Coin Drop Sensor Does Not Register that Coin Has Been Entered

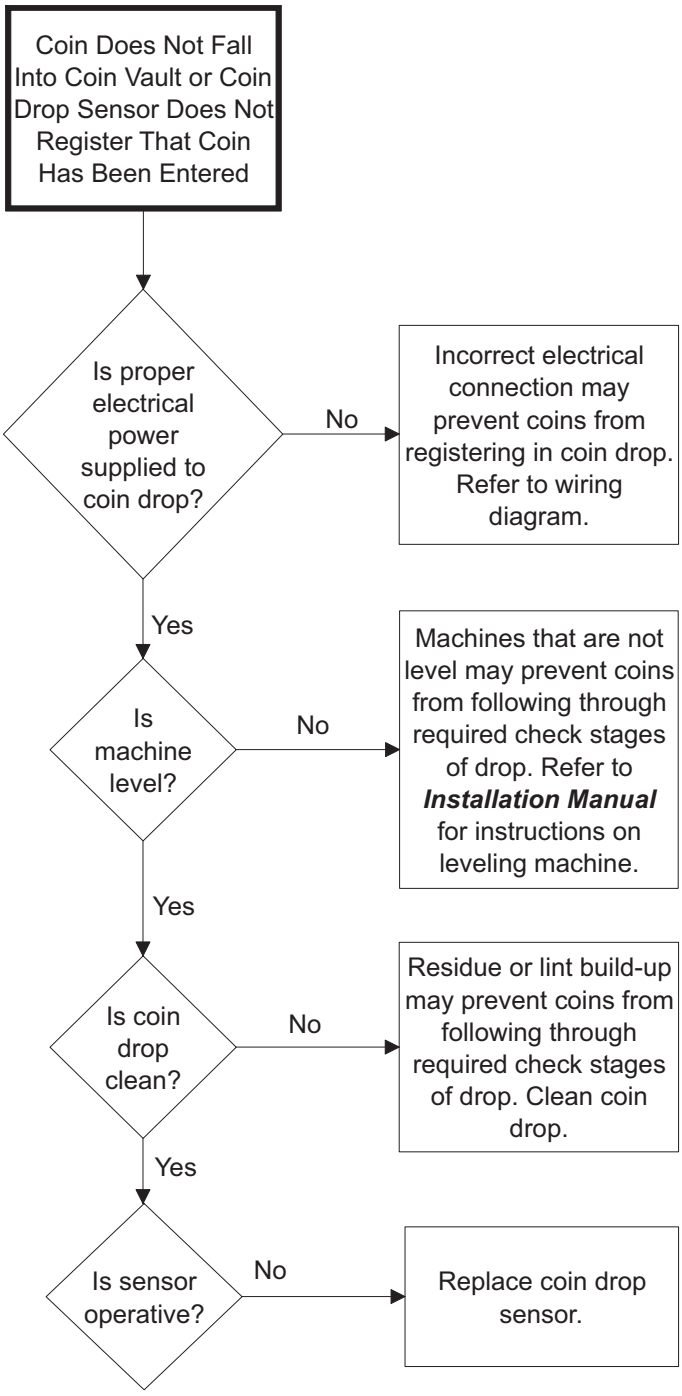
Coin Does Not Fall Into Coin Vault or Coin Drop Sensor Does Not Register That Coin Has Been Entered
Is proper electrical power supplied to coin drop?
No
Incorrect electrical connection may prevent coins from registering in coin drop. Refer to wiring diagram.
Yes
Is machine level?
No
Machines that are not level may prevent coins from following through required check stages of drop. Refer to ***Installation Manual*** for instructions on leveling machine.
Yes
Is coin drop clean?
No
Residue or lint build-up may prevent coins from following through required check stages of drop. Clean coin drop.
Yes
Is sensor operative?
No
Replace coin drop sensor.

TMB1915S

IMPORTANT: Never use oil to correct coin drop problem. Oil residue will prevent coins from rolling properly.

IMPORTANT: Do not bend or damage mechanical parts within coin drop.

Troubleshooting Coin Drop

If coin drop is not accepting coins, perform the following:

1. Clean coin drop. Refer to *Paragraph 23.*
2. On electronic coin drops with an old-style tension spring (shown in *Figure 1* and *Figure 3*), test and replace tension spring using the following instructions.

Remove Coin Drop From Machine

1. Disconnect electrical power to machine and drop.
2. Remove coin drop from machine.

Test Tension Spring

1. Push coin return button to open and close coin drop cover to clear possible coin jams. Refer to *Figure 1*.

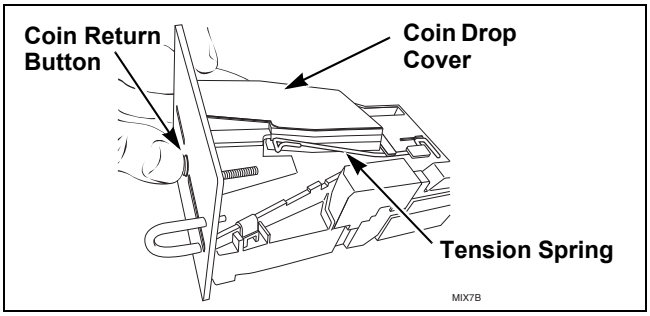

Figure 1

2. Manually hold down coin drop cover and insert coin. Refer to *Figure 2*.

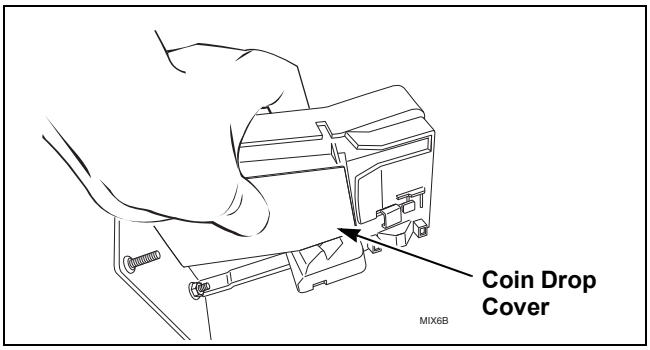

Figure 2

3. If coin drop now operates properly, replace tension spring using instructions on following pages.

Replace Tension Spring

1. Move tension spring downward until cover catch is free. Refer to *Figure 3*.

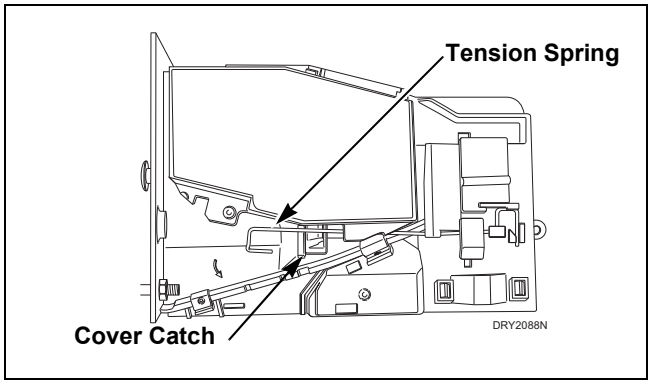

Figure 3

2. Open cover for coin drop.
3. Place a small flathead screwdriver under right side of tension spring and lift up. Refer to *Figure 4*.

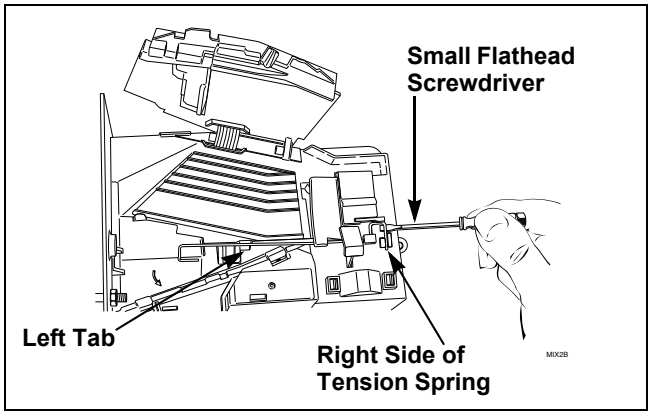

Figure 4

4. Use screwdriver to move spring approximately 3 mm to left.
5. Lift spring over left tab. Refer to *Figure 4*.
6. Rotate spring clockwise, 40 to 60 degrees, until it is free from right tabs. Refer to *Figure 5*.

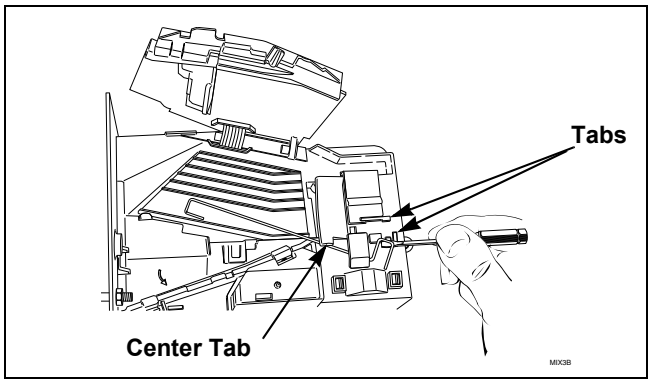

Figure 5

7. Use screwdriver to remove spring from center tab. Refer to *Figure 5*.
8. Lift spring, with attached clip, off drop.
9. Remove clip from spring. Refer to *Figure 6*.

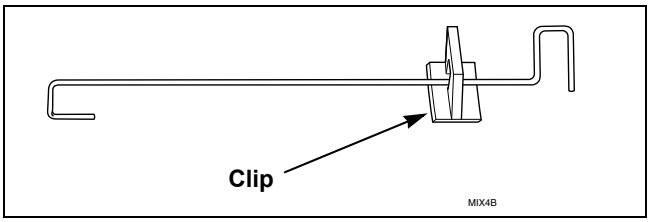

Figure 6

10. Attach clip to new tension spring, Part No. 209/00598/02.
11. Place clip, installed on spring, in slot on coin drop. Refer to *Figure 7*.

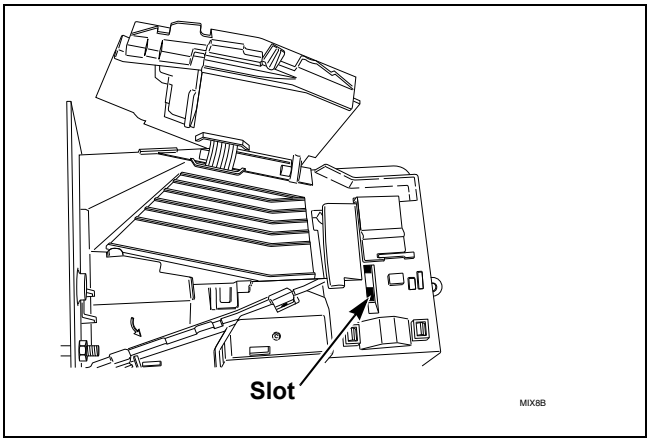

Figure 7

12. Use a small flathead screwdriver to push spring under center tab. Refer to *Figure 8*.

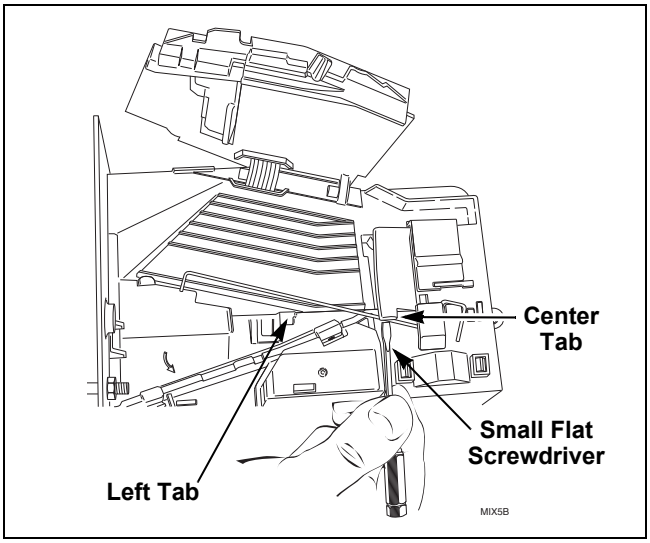

Figure 8

13. Lift spring gently to place in position under left tab.
14. Push spring to right until it snaps into position. Refer to *Figure 4*.
15. Close coin drop cover.
16. Move tension spring over cover catch. Refer to *Figure 3*.

Reinstall Coin Drop Into Machine

1. Reinstall coin drop into machine.
2. Reconnect electrical power to machine and drop.
3. Add a coin to drop to verify that coin drop is operating properly and that electrical connection is working properly.

30. Cylinder Is “Stained”

Over time, the cylinder and cylinder backs of tumble dryers can become “stained” from various melted fabrics. These discolored areas can be removed by scrubbing the inside of the cylinder with cleaner and a cleaning pad, such as Scotch- Brite®.

IMPORTANT: Do not use a steel wool pad to clean the cylinder. Steel wool can damage your machine.

Galvanized Cylinders

For galvanized cylinders, use an all-purpose cleaner (such as 409®) and a cleaning pad (such as Scotch-Brite®) to clean the inside of the cylinder.

1. Spray the cleaner on the discolored areas and let soak for a few minutes.
2. Using the pad, scrub the areas until the discoloration is removed.
3. Repeat steps 1-2 as necessary.
4. Thoroughly wipe the entire cylinder after cleaning to insure the cleaner has been removed.

Stainless Steel Cylinders

For stainless steel cylinders, use a heavy duty powder cleanser (such as Zud®) and a cleaning pad (such as Scotch- Brite®) to clean the inside of the cylinder.

1. Using a water spray bottle, wet the cylinder and cylinder back.
2. Sprinkle cleanser onto the pad and scrub the discolored areas.
3. Repeat steps 1-2 as necessary.
4. Thoroughly wipe the entire cylinder after cleaning to insure the cleanser has been removed.

Section 4
Fire Supression System Troubleshooting

CAUTION

To reduce the risk of electric shock, fire, explosion, serious injury or death:

- **Disconnect electric power to the tumble dryer before servicing.**
- **Close gas shut-off valve to gas tumble dryer before servicing.**
- **Close steam valve to steam tumble dryer before servicing.**
- **Never start the tumble dryer with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the tumble dryer is properly grounded.**

W002R1

A water discharge or system fault is indicated when the fire suppression system control box light is on.

IMPORTANT: When handling electronic controls, use a ground wrist strap. Due to the sensitivity of electronic controls, careful handling is required. Wrist strap, cord and alligator clip are designed to carry away any electrostatic charge from your body and to direct charge to an available ground. By using this static protection device, potential electrostatic discharge problems associated with handling of electronic control will be minimized. Always handle electronic control by its metal edges.

31. Tumble Dryer Does Not Operate and Light Is On

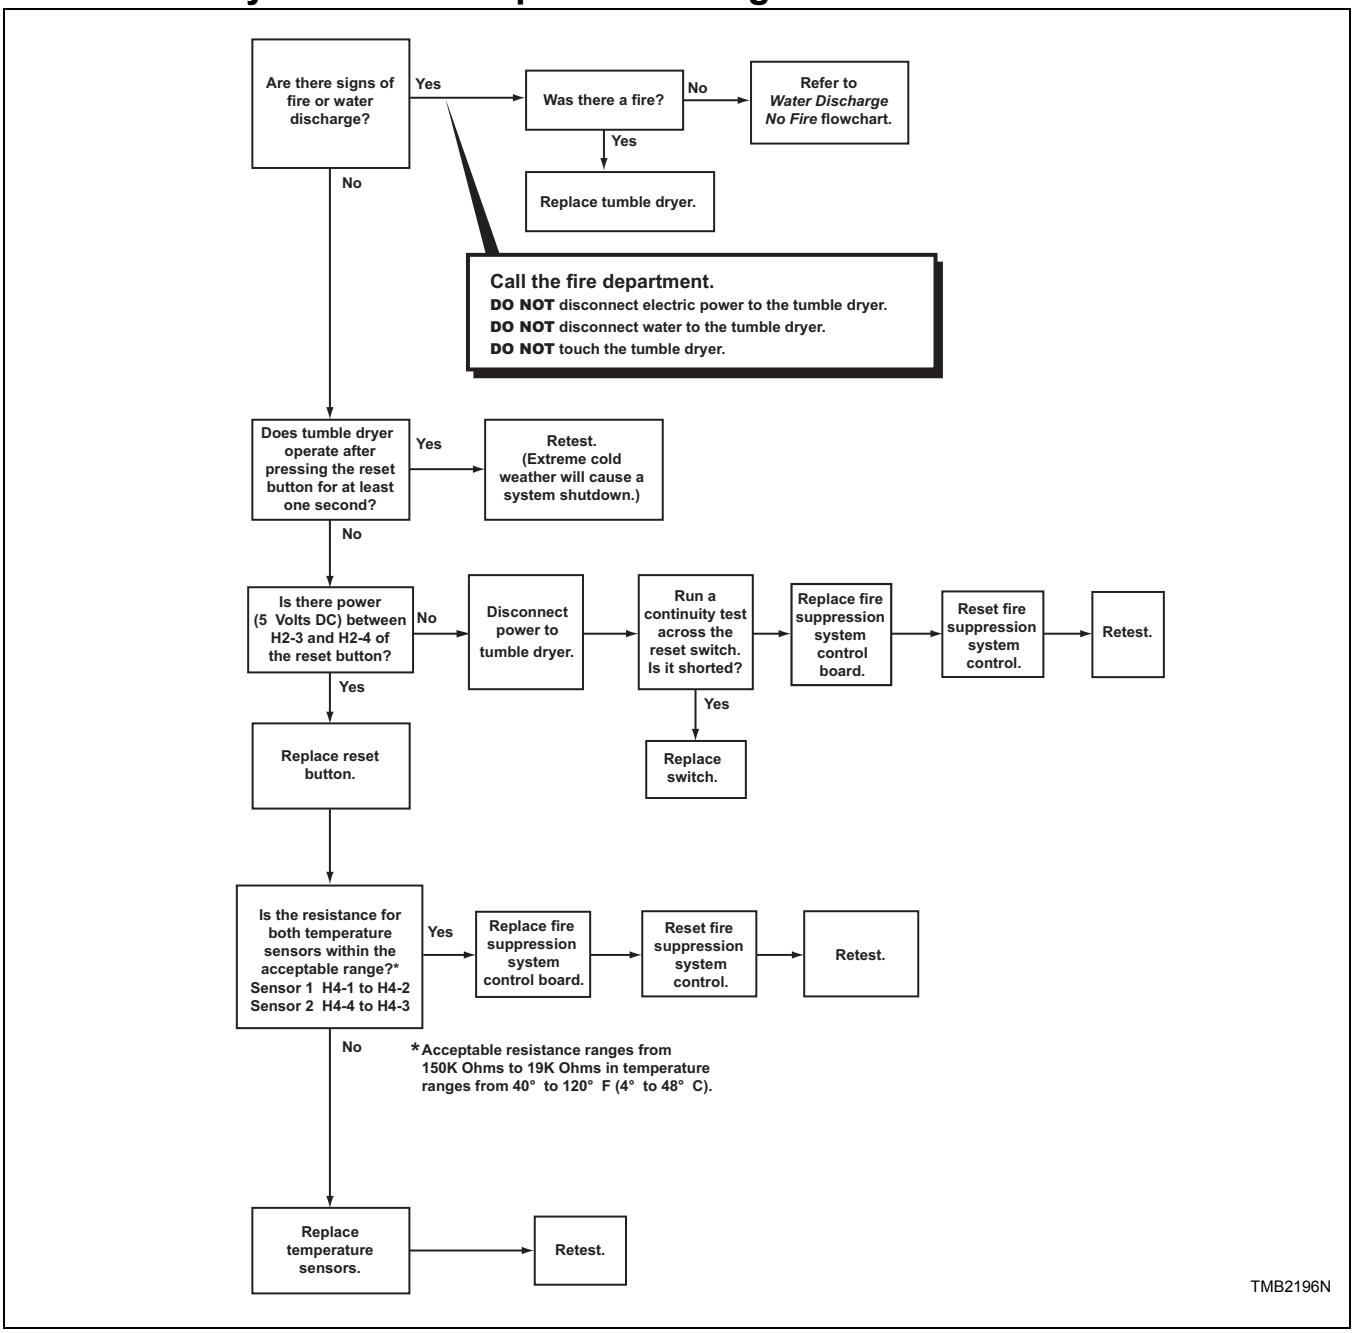
Are there signs of fire or water discharge?
Yes
Was there a fire?
No
Refer to *Water Discharge No Fire* flowchart.
Yes
Replace tumble dryer.
No
Call the fire department.
DO NOT disconnect electric power to the tumble dryer.
DO NOT disconnect water to the tumble dryer.
DO NOT touch the tumble dryer.
Does tumble dryer operate after pressing the reset button for at least one second?
Yes
Retest. (Extreme cold weather will cause a system shutdown.)
No
Is there power (5 Volts DC) between H2-3 and H2-4 of the reset button?
No
Disconnect power to tumble dryer.
Run a continuity test across the reset switch. Is it shorted?
Replace fire suppression system control board.
Reset fire suppression system control.
Retest.
Yes
Yes
Replace switch.
Replace reset button.
Is the resistance for both temperature sensors within the acceptable range?* Sensor 1 H4-1 to H4-2 Sensor 2 H4-4 to H4-3
Yes
Replace fire suppression system control board.
Reset fire suppression system control.
Retest.
No
*Acceptable resistance ranges from 150K Ohms to 19K Ohms in temperature ranges from 40° to 120° F (4° to 48° C).
Replace temperature sensors.
Retest.
TMB2196N

32. Water Discharge, but No Fire

IMPORTANT: Electric Models: If water has discharged into machine, you MUST perform this diagnostic test with NO HEAT to the machine.

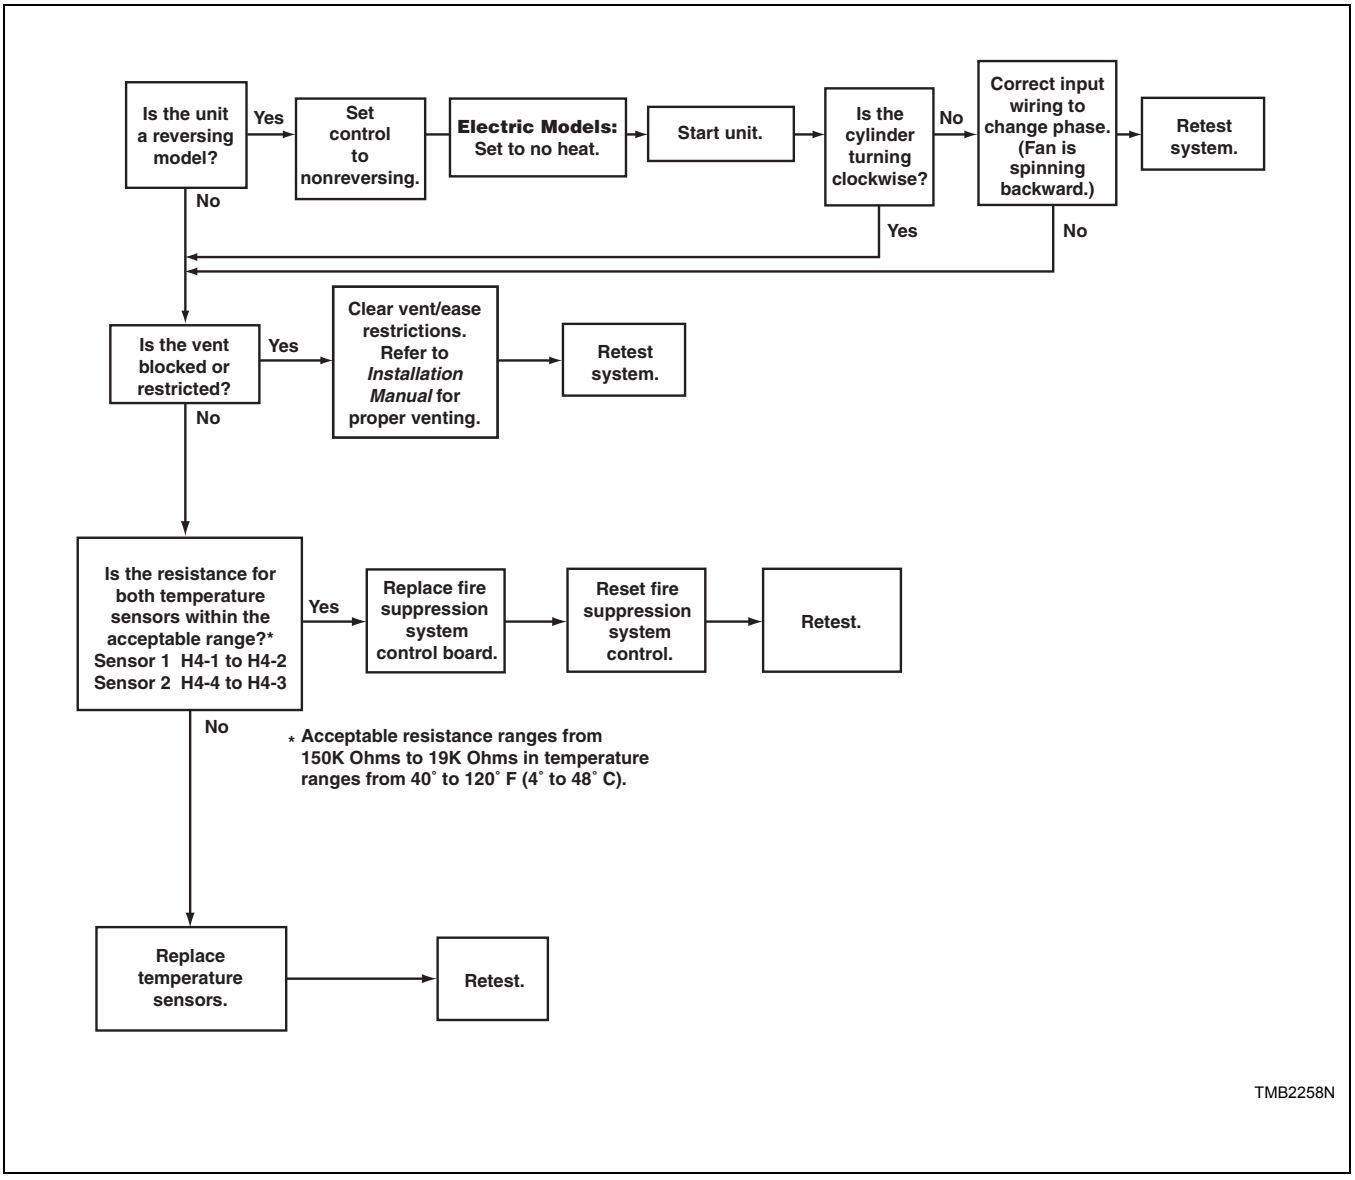
Is the unit a reversing model?
Yes
Set control to nonreversing.
Electric Models: Set to no heat.
Start unit.
Is the cylinder turning clockwise?
No
Correct input wiring to change phase. (Fan is spinning backward.)
Retest system.
No
Yes
No
Is the vent blocked or restricted?
Yes
Clear vent/ease restrictions. Refer to Installation Manual for proper venting.
Retest system.
No
Is the resistance for both temperature sensors within the acceptable range?* Sensor 1 H4-1 to H4-2 Sensor 2 H4-4 to H4-3
Yes
Replace fire suppression system control board.
Reset fire suppression system control.
Retest.
No
* Acceptable resistance ranges from 150K Ohms to 19K Ohms in temperature ranges from 40˚ to 120˚ F (4˚ to 48˚ C).
Replace temperature sensors.
Retest.
TMB2258N

33. Tumble Dryer Does Not Operate and Light Is Off

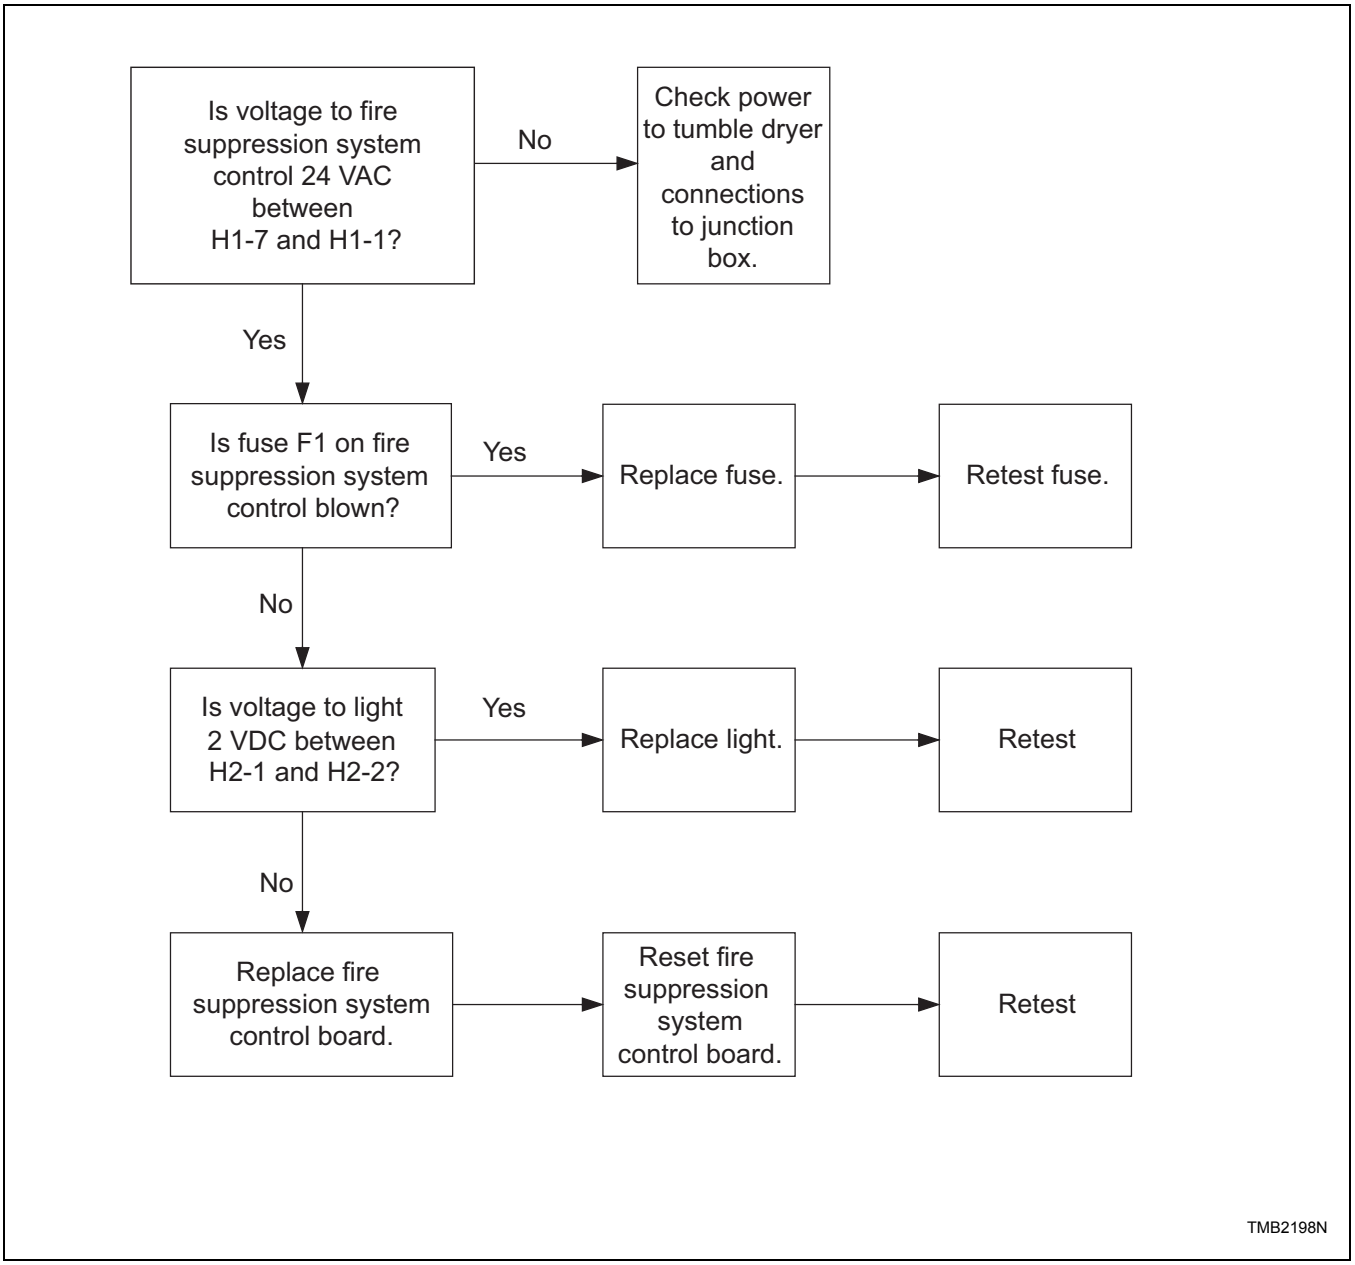

34. Tumble Dryer Operates, but Water Does Not Discharge and Light Is On

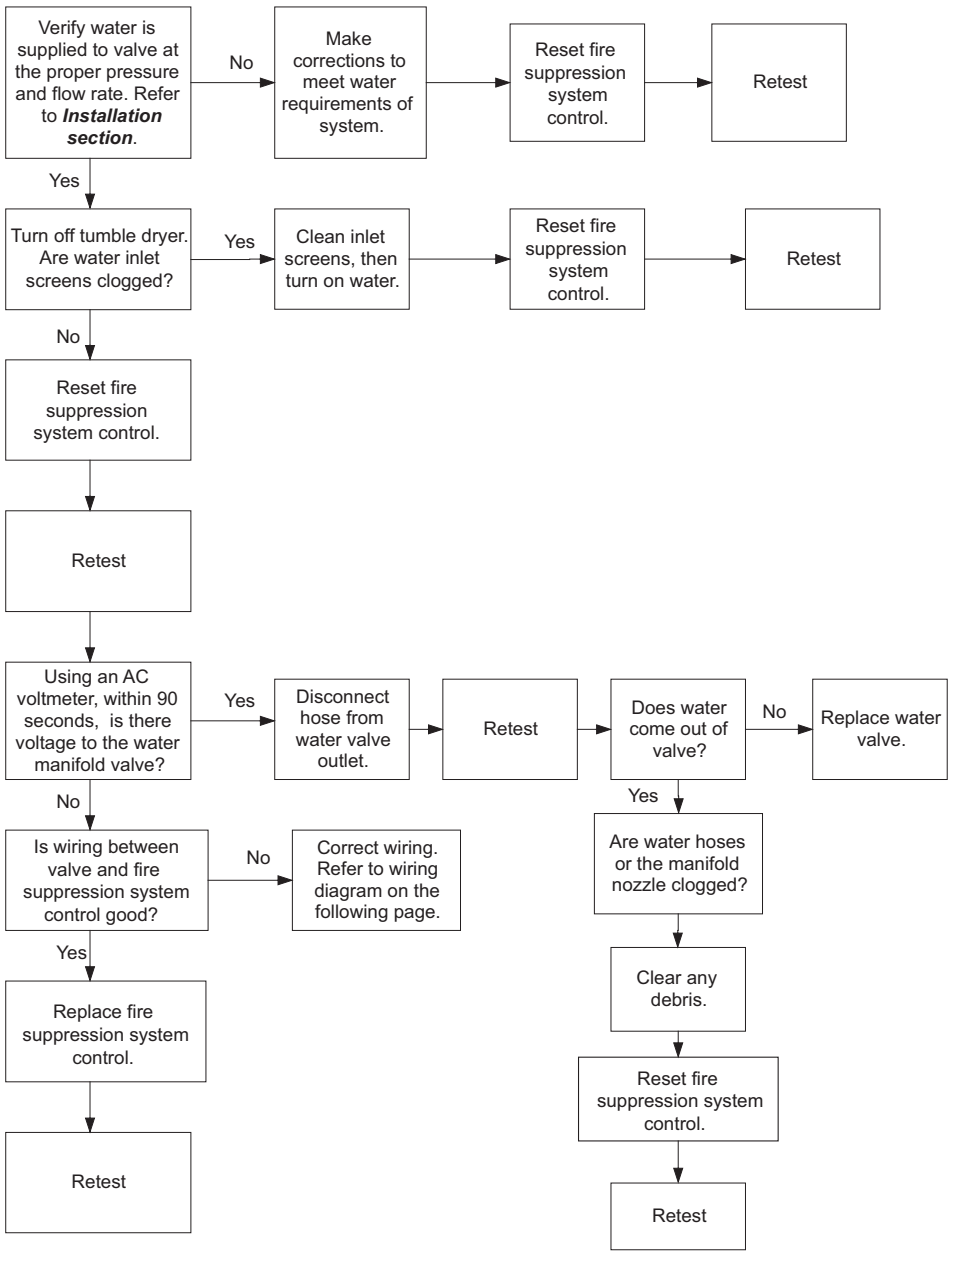
Verify water is supplied to valve at the proper pressure and flow rate. Refer to ***Installation section***.
No
Make corrections to meet water requirements of system.
Reset fire suppression system control.
Retest
Yes
Turn off tumble dryer. Are water inlet screens clogged?
Yes
Clean inlet screens, then turn on water.
Reset fire suppression system control.
Retest
No
Reset fire suppression system control.
Retest
Using an AC voltmeter, within 90 seconds, is there voltage to the water manifold valve?
Yes
Disconnect hose from water valve outlet.
Retest
Does water come out of valve?
No
Replace water valve.
Yes
Are water hoses or the manifold nozzle clogged?
Clear any debris.
Reset fire suppression system control.
Retest
No
Is wiring between valve and fire suppression system control good?
No
Correct wiring. Refer to wiring diagram on the following page.
Yes
Replace fire suppression system control.
Retest
TMB2199N

Tumble Dryer Operates, but Water Does Not Discharge and Light Is On

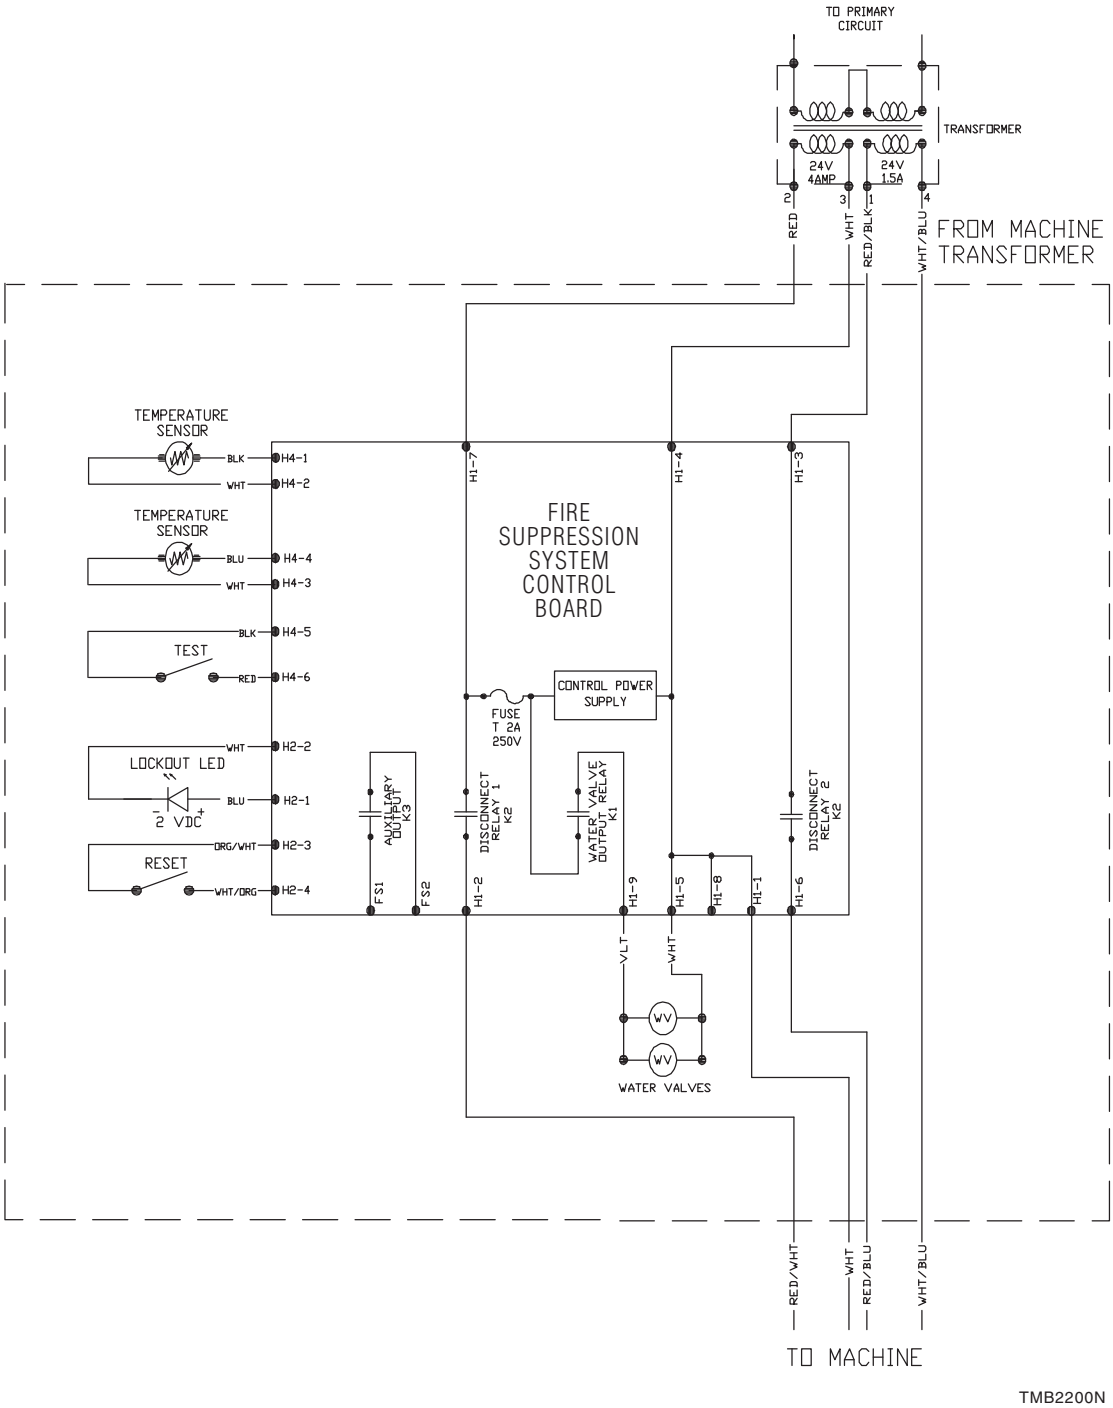

Section 5
Adjustments

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:
- **Disconnect electric power to the tumbler before servicing.**
- **Close gas shut-off valve to gas tumbler before servicing.**
- **Close steam valve to steam tumbler before servicing.**
- **Never start the tumbler with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the tumbler is properly grounded.**

W002

35. Main Gas Burner Air Inlet Shutters (Gas Models)

Refer to *Figure 11*.

CAUTION

The air inlet shutters on the burner must be adjusted so sufficient primary air is metered into the system for proper combustion and maximum efficiency. Before adjusting the inlet shutter be sure that all lint is removed from lint compartment and lint screen.

W281

Air inlet shutter adjustments will vary from location to location and will depend on the vent system, number of units installed, make-up air and line gas pressure. Opening the shutter increases the amount of air supplied to the burner while closing the shutter decreases the air supply. Adjust air shutter as follows:

a. Unlock and remove the access door. Remove guard on rear of unit.
b. Start the tumbler and check the flame pattern. Correct air and gas mixture is indicated if the flame pattern is primarily blue, with small yellow tips, and bends to the left of the heater section. Too little air is indicated if the flame is yellow, lazy and smoky.
c. To adjust the air inlet shutter, loosen adjusting screws.
d. Push or pull shutters in or out as necessary to obtain desired flame intensity.
e. After shutter is adjusted, tighten locking screw securely.
f. If the shutter is correctly adjusted, but the flame pattern is stright up, insufficient air is flowing through the tumbler. A flame pattern that flares to the right and left indicates that no air is flowing through the tumbler. Check make-up air and exhaust vent.

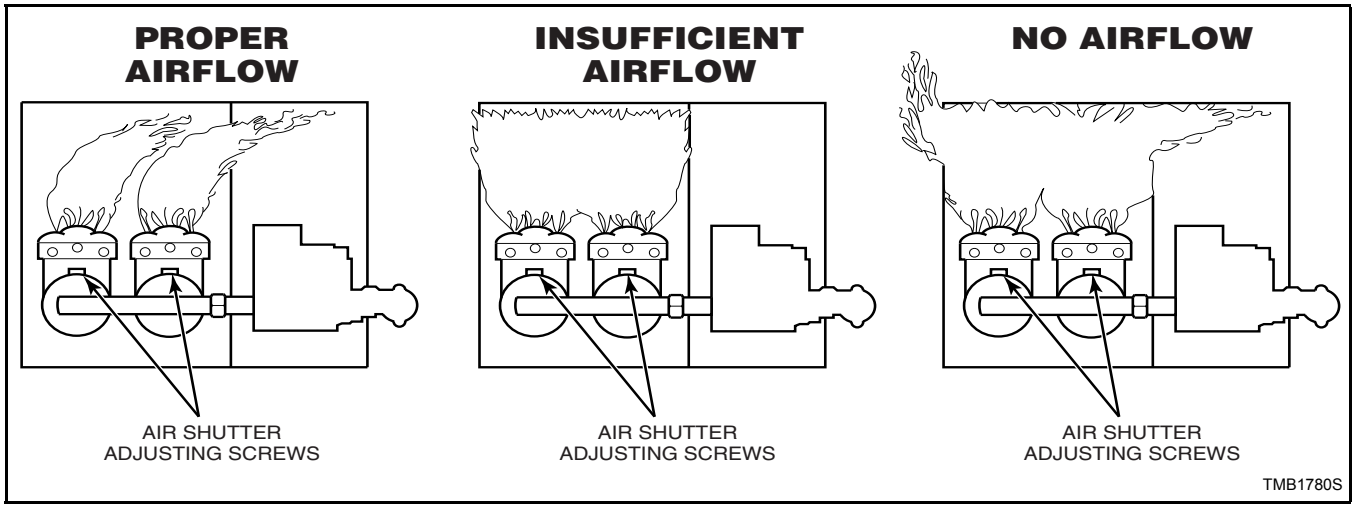

Figure 11

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:
- **Disconnect electric power to the tumbler before servicing.**
- **Close gas shut-off valve to gas tumbler before servicing.**
- **Close steam valve to steam tumbler before servicing.**
- **Never start the tumbler with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the tumbler is properly grounded.**

W002

36. Airflow Switch

The airflow switch is set at the factory for proper operation. No adjustment necessary.

The airflow switch operation may be affected by shipping tape still in place, lack of make-up air, or an obstruction in the exhaust duct. These should be checked and the required corrective action taken.

WARNING

The tumble dryer must not be operated if the airflow switch does not operate properly. Faulty airflow switch operation may cause an explosive gas mixture to collect in the tumble dryer.

W072R1

IMPORTANT: Airflow switch vane must remain closed during operation. If it opens and closes during the drying cycle, this indicates insufficient airflow through the tumble dryer. If switch remains open, or pops open and closed during the cycle, the heating system will shut off. The cylinder and fan will continue to operate even though the airflow switch is indicating insufficient airflow.

NOTE: To properly mount the airflow switch bracket, or in case of a load not drying, the airflow switch bracket may need to be checked for proper alignment. Be sure the locator pins are securely in their respective holes before tightening the bracket mounting screws. This will assure proper alignment of the airflow switch arm in the channel of the airflow switch bracket and prevent binding of the arm.

37. Loading Door Switch

The door switch should be adjusted so the cylinder stops when door is opened 51 mm (2 inches) plus or minus 6 mm (0.25 inch). This switch is a normally open switch and is closed by the hinge cam when the door is closed. If adjustment is required, refer to *Figure 12* and proceed as follows:

1. Close door and start tumble dryer, slowly open loading door. Cylinder and heat system should shut off when door is open 51 mm (2 inches) plus or minus 6 mm (0.25 inch).
2. Slowly close the loading door. When door is 51 mm (2 inches) from being fully closed, the door switch actuating bracket (located on the door) should depress the button and the switch arm with an audible “click.”
3. If the actuating bracket does not operate the switch at the appropriate door closure, bend the actuating switch arm in or out to achieve proper actuation.

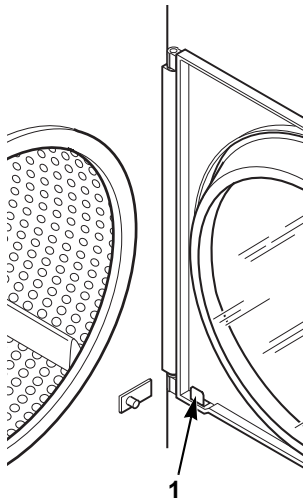

TMB2105N

1 Switch Actuator

Figure 12

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:
- **Disconnect electric power to the tumbler before servicing.**
- **Close gas shut-off valve to gas tumbler before servicing.**
- **Close steam valve to steam tumbler before servicing.**
- **Never start the tumbler with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the tumbler is properly grounded.**

W002

38. Loading Door Catch

The door catch must be adjusted to have sufficient tension to hold loading door closed against force of load tumbling against it. Proper adjustment is when 0.48-1.03 bar (7-15 pounds) pull is required to open door.

If adjustment is required, refer to *Figure 13* and proceed as follows:

To adjust, open door, loosen acorn nut and turn door strike screw in or out as required. Tighten acorn nut.

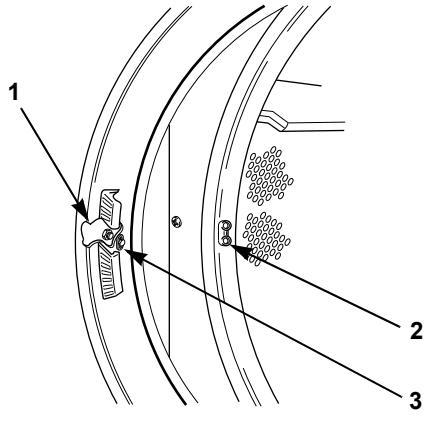

T048I

1	Door Latch
2	Door Catch
3	Acorn Nut

Figure 13

39. Aligning Door Strike

If the door acorn nut is breaking or the door catch is prematurely wearing (refer to *Figure 13*), a door adjustment may be necessary to align the two striking surfaces.

a. Visually check door strike to catch position to determine if door is striking low or high.
b. Make sure the door frame to the tumble dryer hinge mounting screws are secure.
c. To adjust the strike position slightly, loosen both hinge hex bolts until the door frame can be moved. If the door is striking low, lift up on the door and while maintaining pressure tighten both hinge bolts. If the door is striking high, push down on the door and while maintaing pressure tighten both hinge bolts. Re-check strike position and repeat until position is correct.

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:
- **Disconnect electric power to the tumbler before servicing.**
- **Close gas shut-off valve to gas tumbler before servicing.**
- **Close steam valve to steam tumbler before servicing.**
- **Never start the tumbler with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the tumbler is properly grounded.**

W002

40. Drive Belt Tension

Proper tension is when drive belt can be depressed 1/2 inch (12.7 mm) by applying light thumb pressure (approximately 5 pounds) at a point midway between sheave and motor pulley.

Reversing Belt Drive Models: Proper tension is when each cylinder belt can be depressed approximately 3/16 inch (4.77 mm) by applying light thumb pressure (approximately 5 pounds) at a point midway between the sheave and the idler.

Nonreversing Models:
Refer to *Figure 14*.

a. Remove guard from rear of tumbler.
b. Loosen idler housing capscrews holding idler housing to the housing support.
c. Position housing assembly by turning adjusting bolt until proper belt tension is reached, then retighten idler housing capscrews.
d. Replace guard on rear of tumbler.

Reversing Models:
Refer to *Figure 15*.

a. Remove guard from rear of tumbler.
b. To adjust cylinder belt tension, loosen idler housing bolts holding idler housing assembly to the housing support.
c. Position housing assembly by turning adjusting bolt until proper belt tension is reached, then retighten idler housing bolts.

NOTE: Adjust cylinder belt tension first, then adjust motor to idler belt tension. Refer to *Figure 15*.

d. Loosen the locking bolt.
e. Loosen the adjusting nut and use the adjusting screw to move the motor up or down.
f. Once proper belt tension is reached, retighten the adjusting nut and locking bolt.
g. Replace the guard on rear of tumbler.

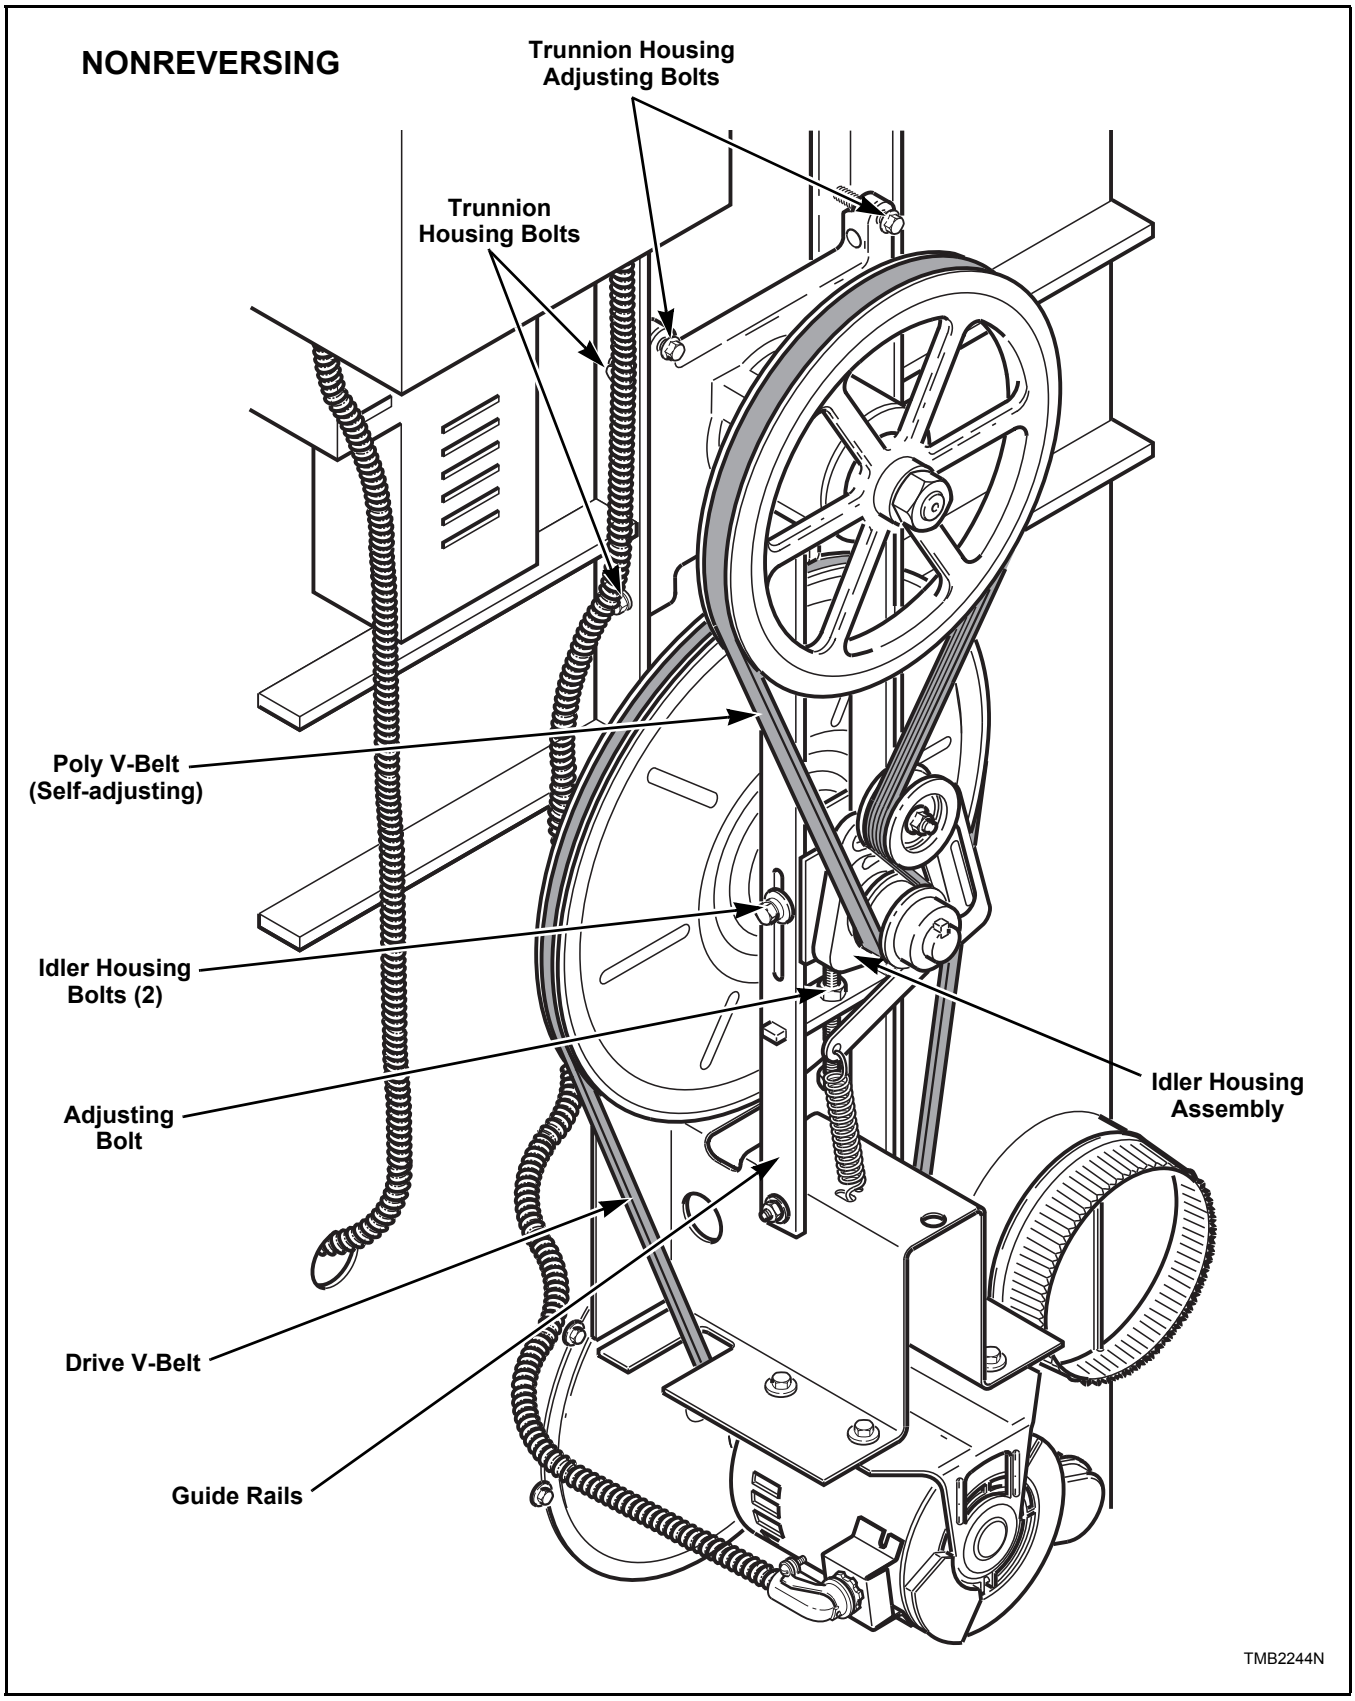
NONREVERSING
Trunnion Housing Adjusting Bolts
Trunnion Housing Bolts
Poly V-Belt (Self-adjusting)
Idler Housing Bolts (2)
Adjusting Bolt
Drive V-Belt
Guide Rails
Idler Housing Assembly
TMB2244N

Figure 14

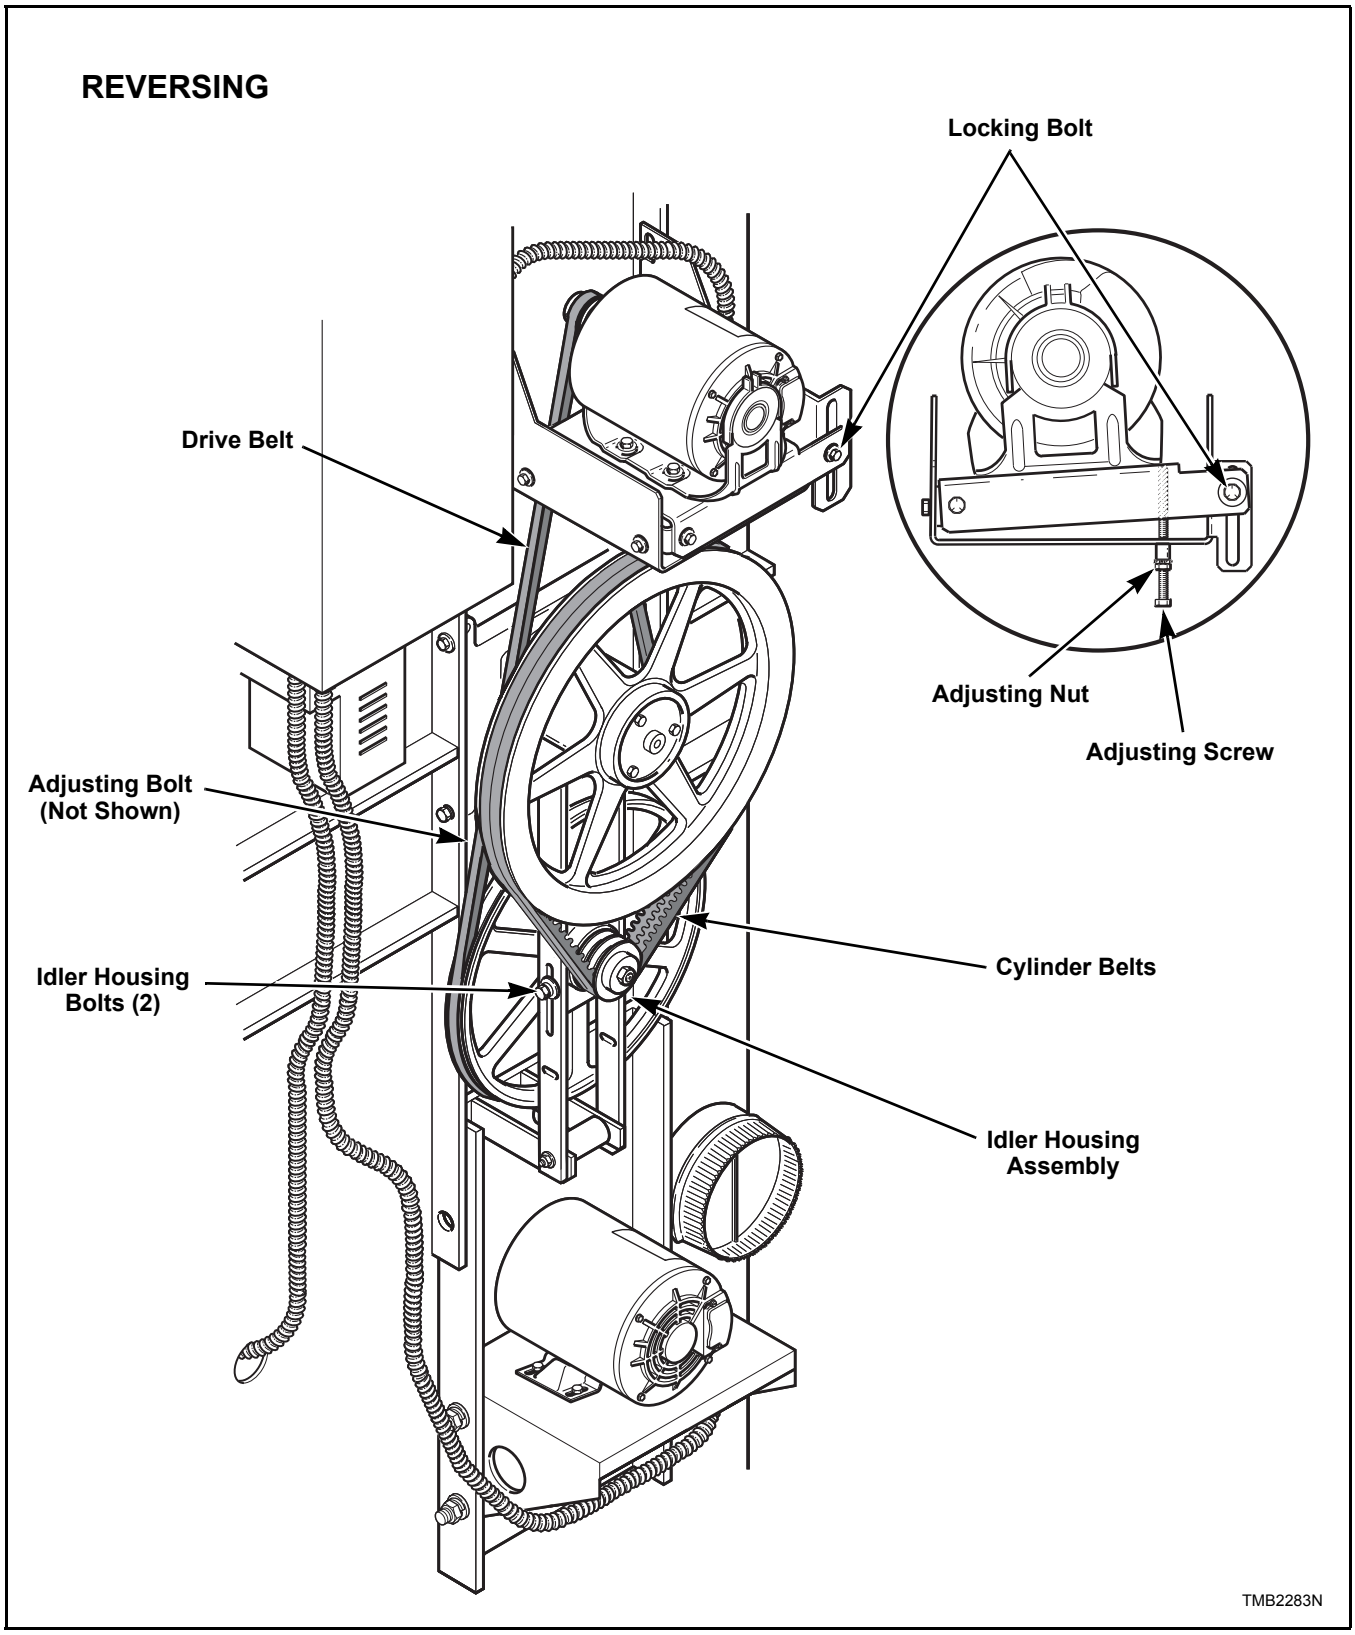
REVERSING
Locking Bolt
Drive Belt
Adjusting Nut
Adjusting Screw
Adjusting Bolt
(Not Shown)
Idler Housing
Bolts (2)
Cylinder Belts
Idler Housing
Assembly
TMB2283N

Figure 15

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:
- **Disconnect electric power to the tumbler before servicing.**
- **Close gas shut-off valve to gas tumbler before servicing.**
- **Close steam valve to steam tumbler before servicing.**
- **Never start the tumbler with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the tumbler is properly grounded.**

W002

41. Cylinder Clearance

The clearance between the cylinder rim and front panel must be adjusted so the cylinder is centered within the front panel opening when the cylinder is fully loaded and is turning. However, the adjustment should be made when the cylinder is empty.

a. Open loading door and check the gap between the center of the front panel top flange and the cylinder rim. Proper adjustment is when the gap is 1/2 - 3/4 inch (12.7 - 19.05 mm). Refer to *Figure 16*.
b. Remove drive guard.
c. Loosen the four trunnion housing bolts. Refer to *Figure 14*.
d. Loosen the locknuts on the trunnion housing adjusting bolts. Refer to *Figure 14*.
e. Turn the adjusting bolts in or out as necessary to obtain proper clearance between cylinder rim and front panel.

NOTE: Turning the adjusting bolts clockwise will raise the cylinder and turning them counter-clockwise will lower the cylinder. Turn both bolts evenly to adjust top and bottom clearance. Turn one or the other adjusting bolt in or out to adjust side clearance.

f. After the cylinder is properly adjusted, tighten the adjusting bolt locknuts and the four trunnion housing bolts.
g. Install the belt guard removed in *Step b*.

NOTE: If adjusting the trunnion housing fails to correct the clearance, the problem is probably due to a worn trunnion shaft or bearings.

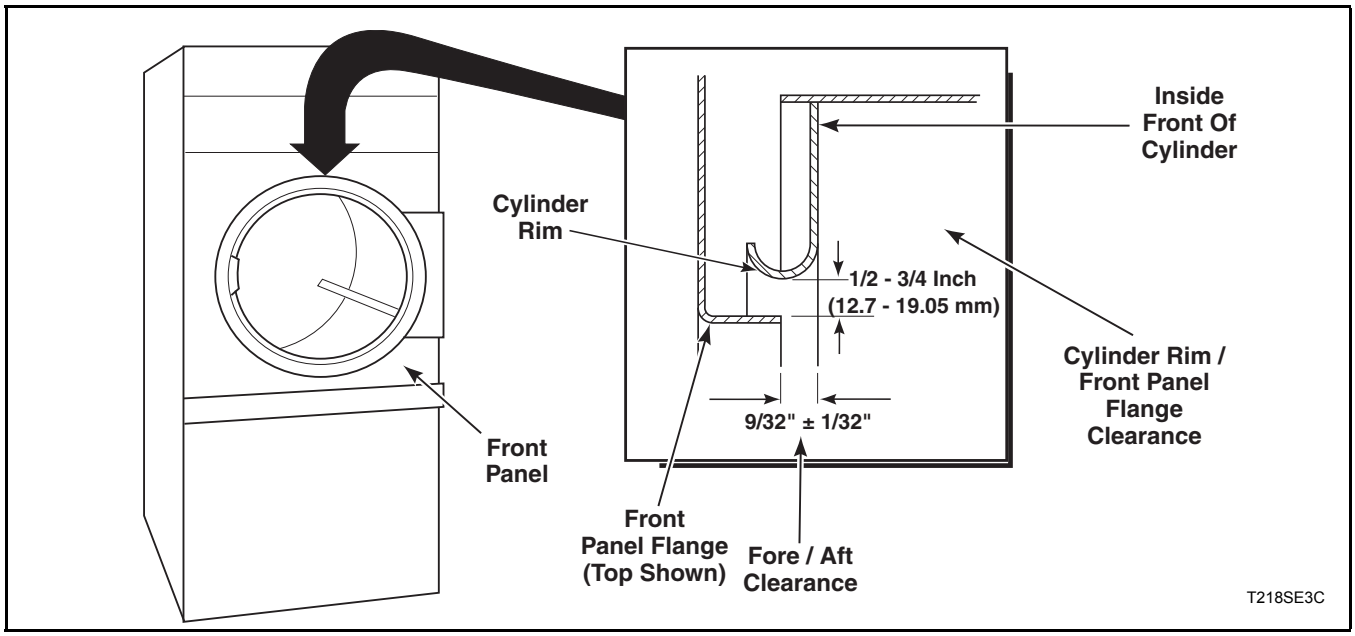

Figure 16

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:
- **Disconnect electric power to the tumbler before servicing.**
- **Close gas shut-off valve to gas tumbler before servicing.**
- **Close steam valve to steam tumbler before servicing.**
- **Never start the tumbler with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the tumbler is properly grounded.**

W002

42. Cleaning Coin Drop

NOTE: The coin drop should be cleaned once a year. Clean the drop more often if it is exposed to high levels of residue or lint build-up.

a. Disconnect electrical power to machine and drop.
b. Remove coin drop from machine.
c. Check the spring style of coin drop.
Coin Drops with Old-Style Spring (refer to *Figure 17*):
(1) Move spring downward until cover catch is free. Refer to *Figure 17*.

NOTE: Do not lift or overbend the spring in any direction.

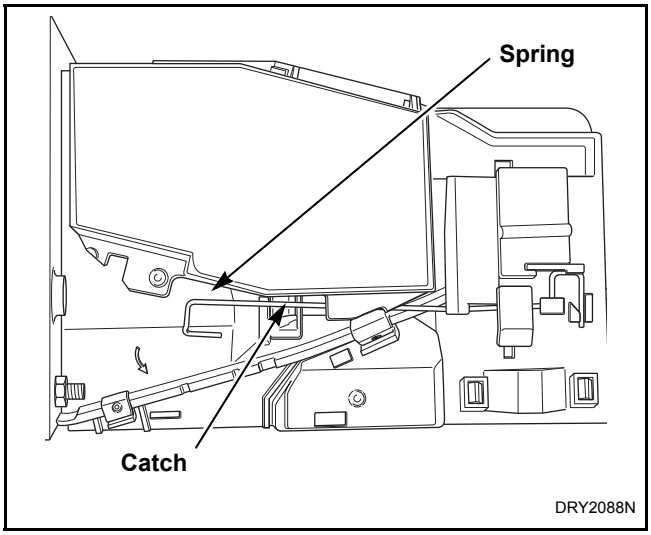

Figure 17

(2) Open cover for coin drop. Refer to *Figure 18*.

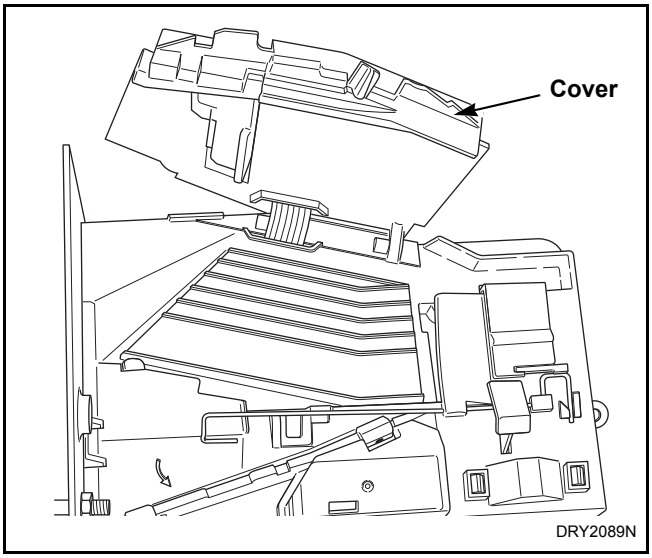

Figure 18

Coin Drops with New-Style Spring (refer to *Figure 19*):

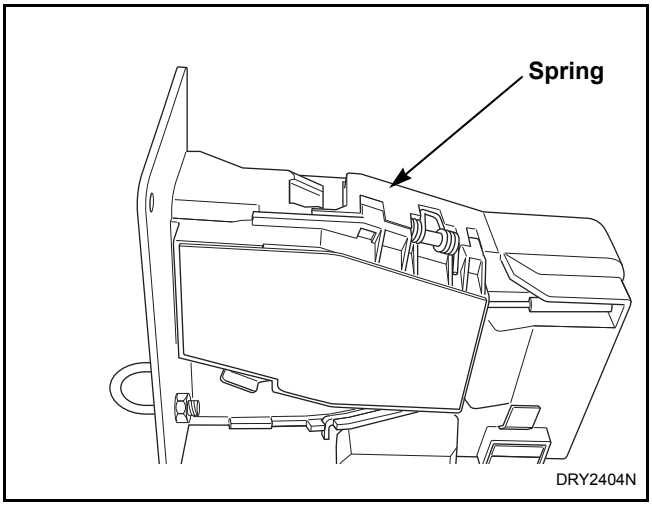

Figure 19

(3) Open cover of coin drop. Refer to *Figure 20*.

NOTE: Do not overbend the spring by opening cover too far.

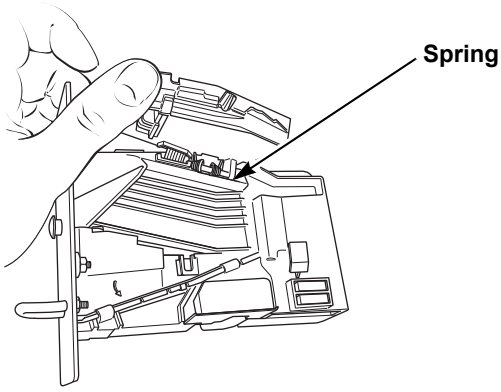

DRY2408N

Figure 20

d. Clean the coin path with a soft brush and wipe exposed surfaces with an alcohol moistened cloth. Refer to *Figure 21* or *Figure 22*.

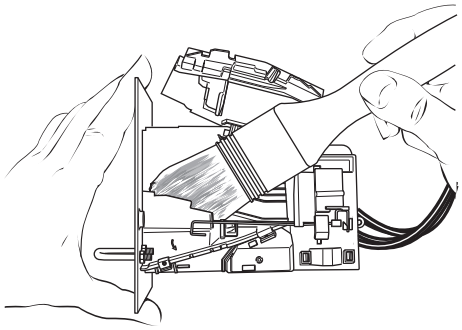

Old-Style Spring Coin Drop

DRY2090N

Figure 21

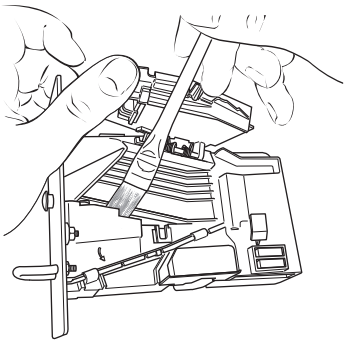

New-Style Spring Coin Drop

DRY2405N

Figure 22

e. Clean residue from coin rail with an alcohol moistened cloth. Refer to *Figure 23*.

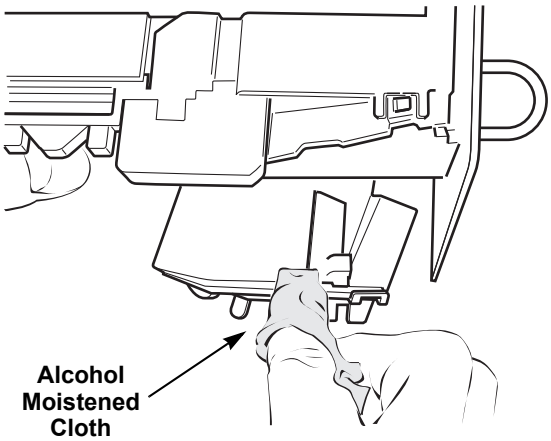

DRY2406N

Figure 23

f. Clean light sensors with a soft brush or air spray duster. Refer to *Figure 24*.

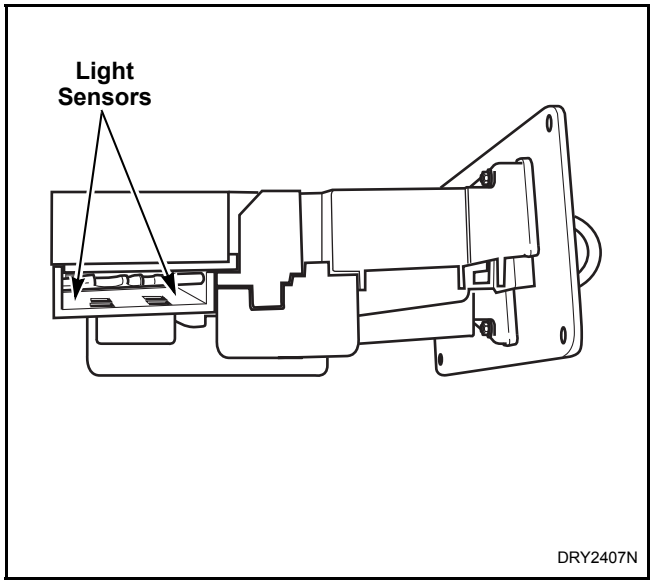

Figure 24

g. Close cover for coin drop.
h. **Coin Drops with OLD-Style Spring** – Move spring back over cover catch.
i. Reinstall coin drop into machine.
j. Reconnect electrical power to machine and drop.
k. Add a coin to drop to verify that coin drop is operating properly and that electrical connection is working properly.

Section 6
Micro Display Control (MDC) Troubleshooting

43. Coins Ignored When Entered

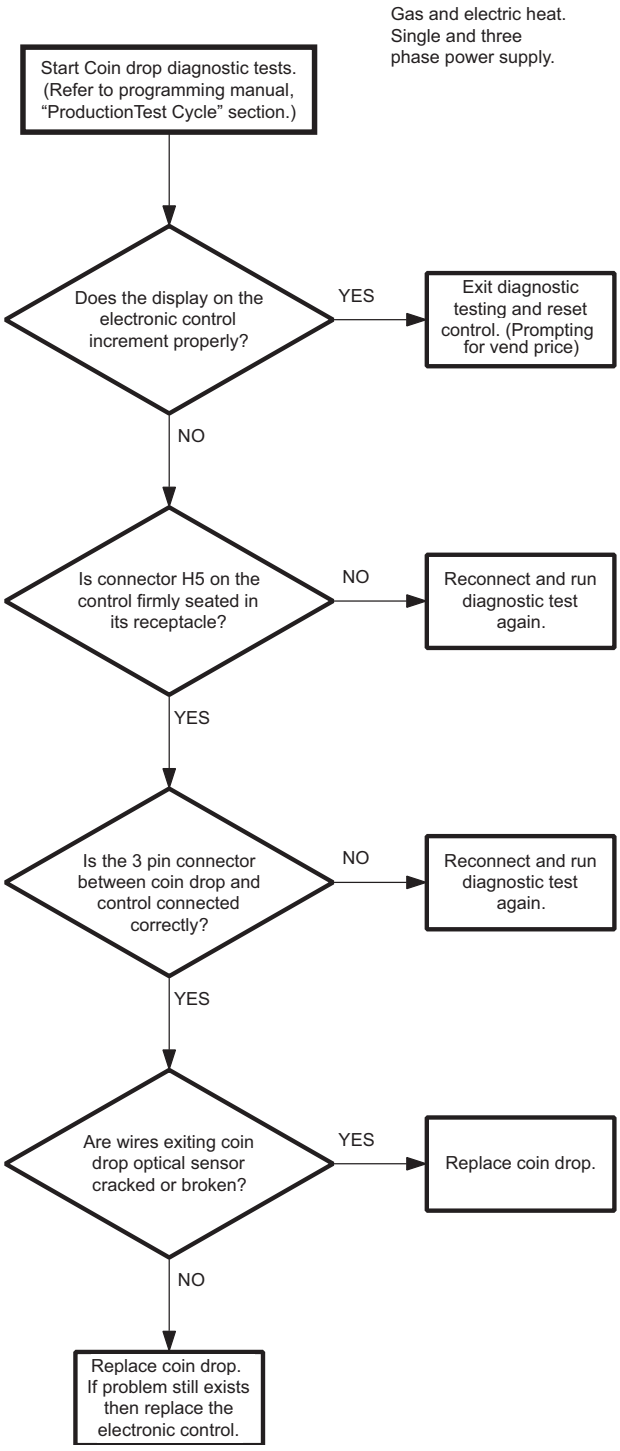
Gas and electric heat.
Single and three
phase power supply.
Start Coin drop diagnostic tests. (Refer to programming manual, “ProductionTest Cycle” section.)
Does the display on the electronic control increment properly?
YES
Exit diagnostic testing and reset control. (Prompting for vend price)
NO
Is connector H5 on the control firmly seated in its receptacle?
NO
Reconnect and run diagnostic test again.
YES
Is the 3 pin connector between coin drop and control connected correctly?
NO
Reconnect and run diagnostic test again.
YES
Are wires exiting coin drop optical sensor cracked or broken?
YES
Replace coin drop.
NO
Replace coin drop. If problem still exists then replace the electronic control.

TMB2304S

44. Control Has No Display

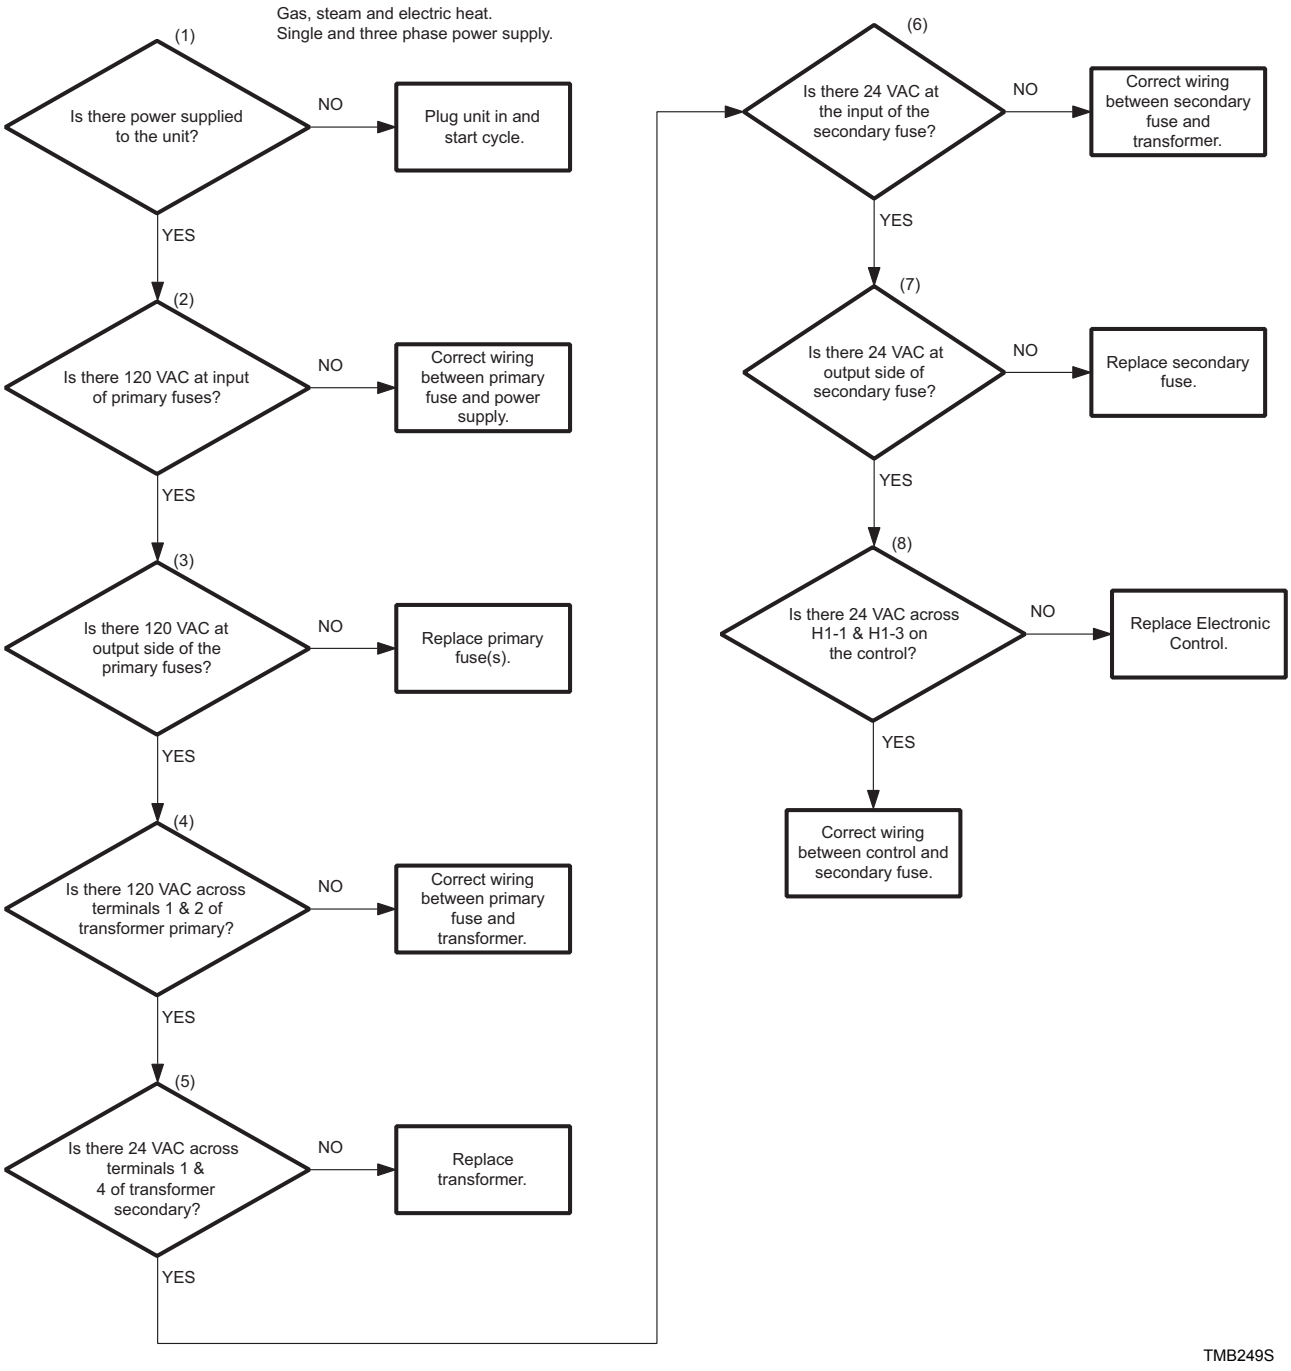

Control Has No Display

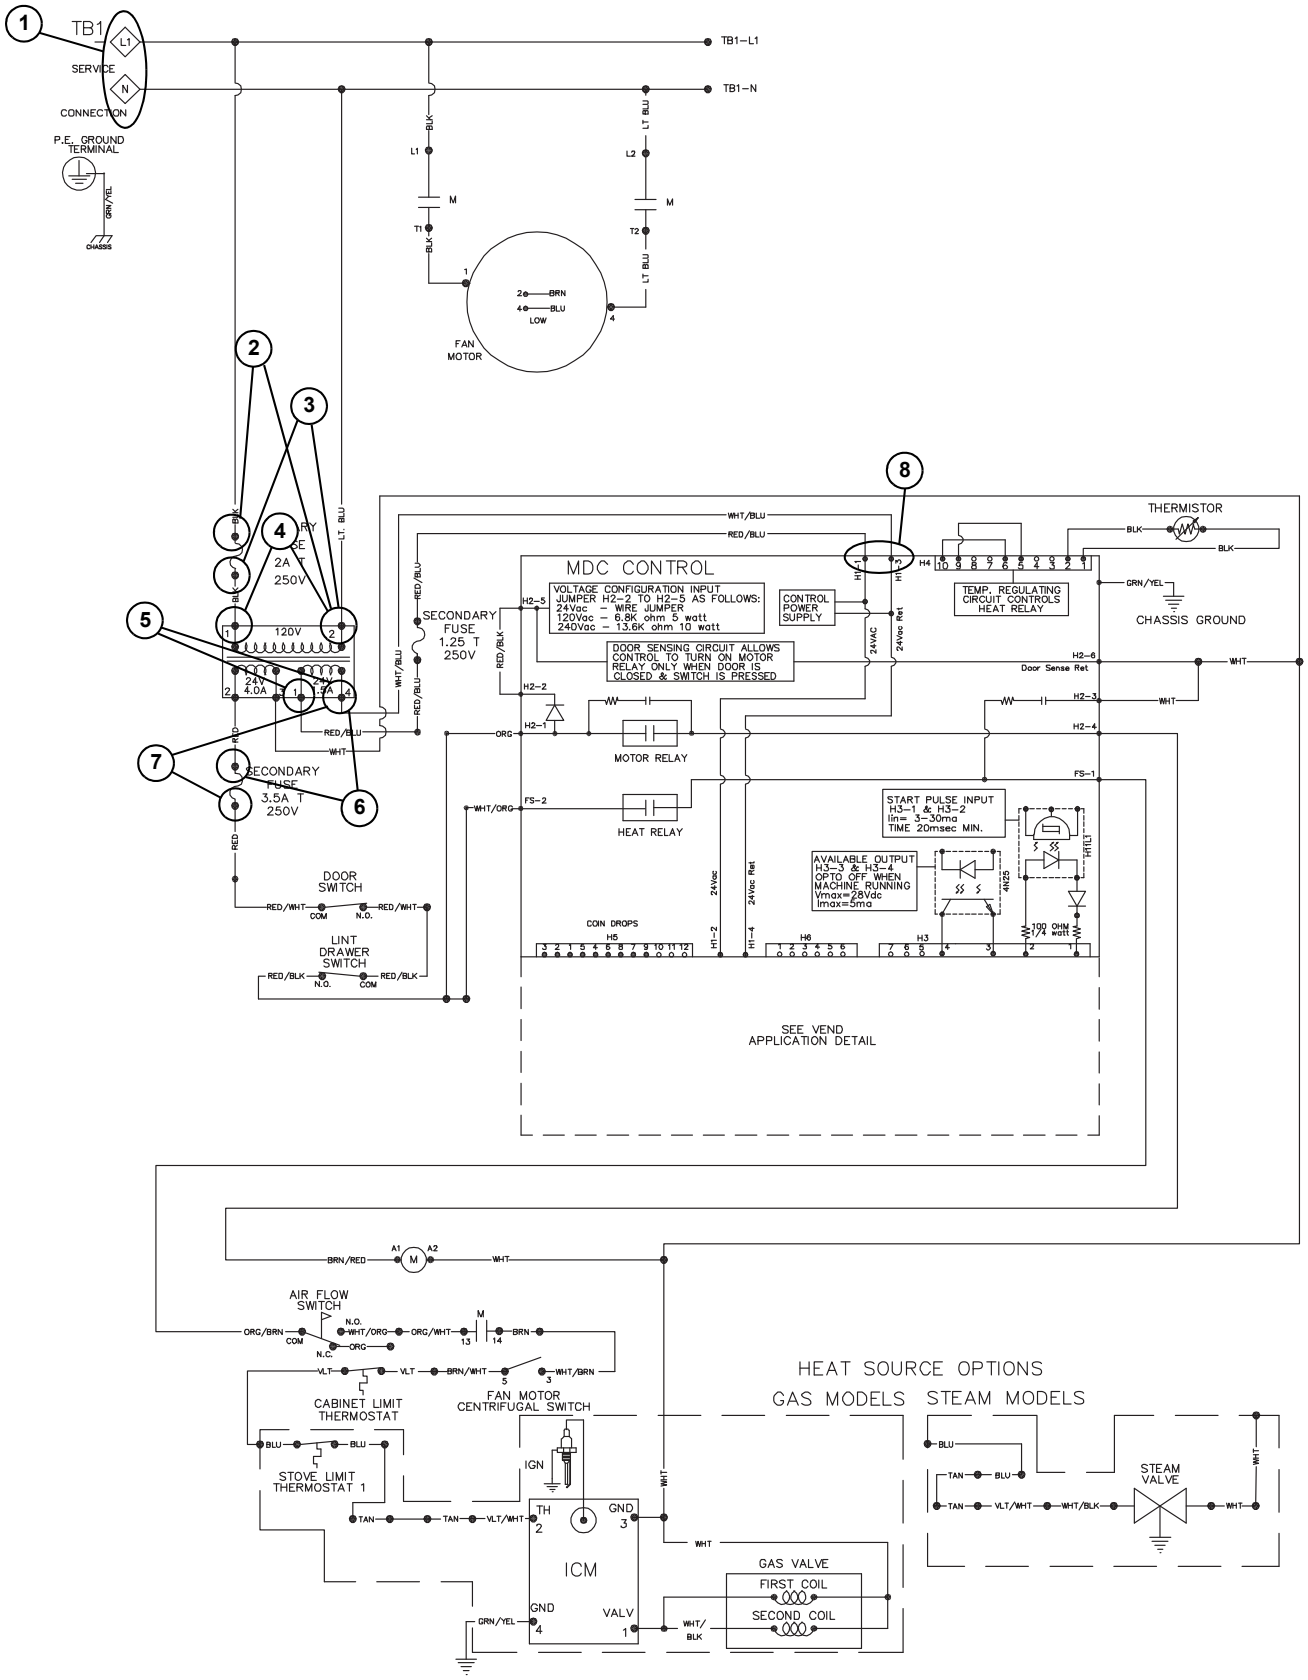

TMB2329S

45. Door Open Indicator

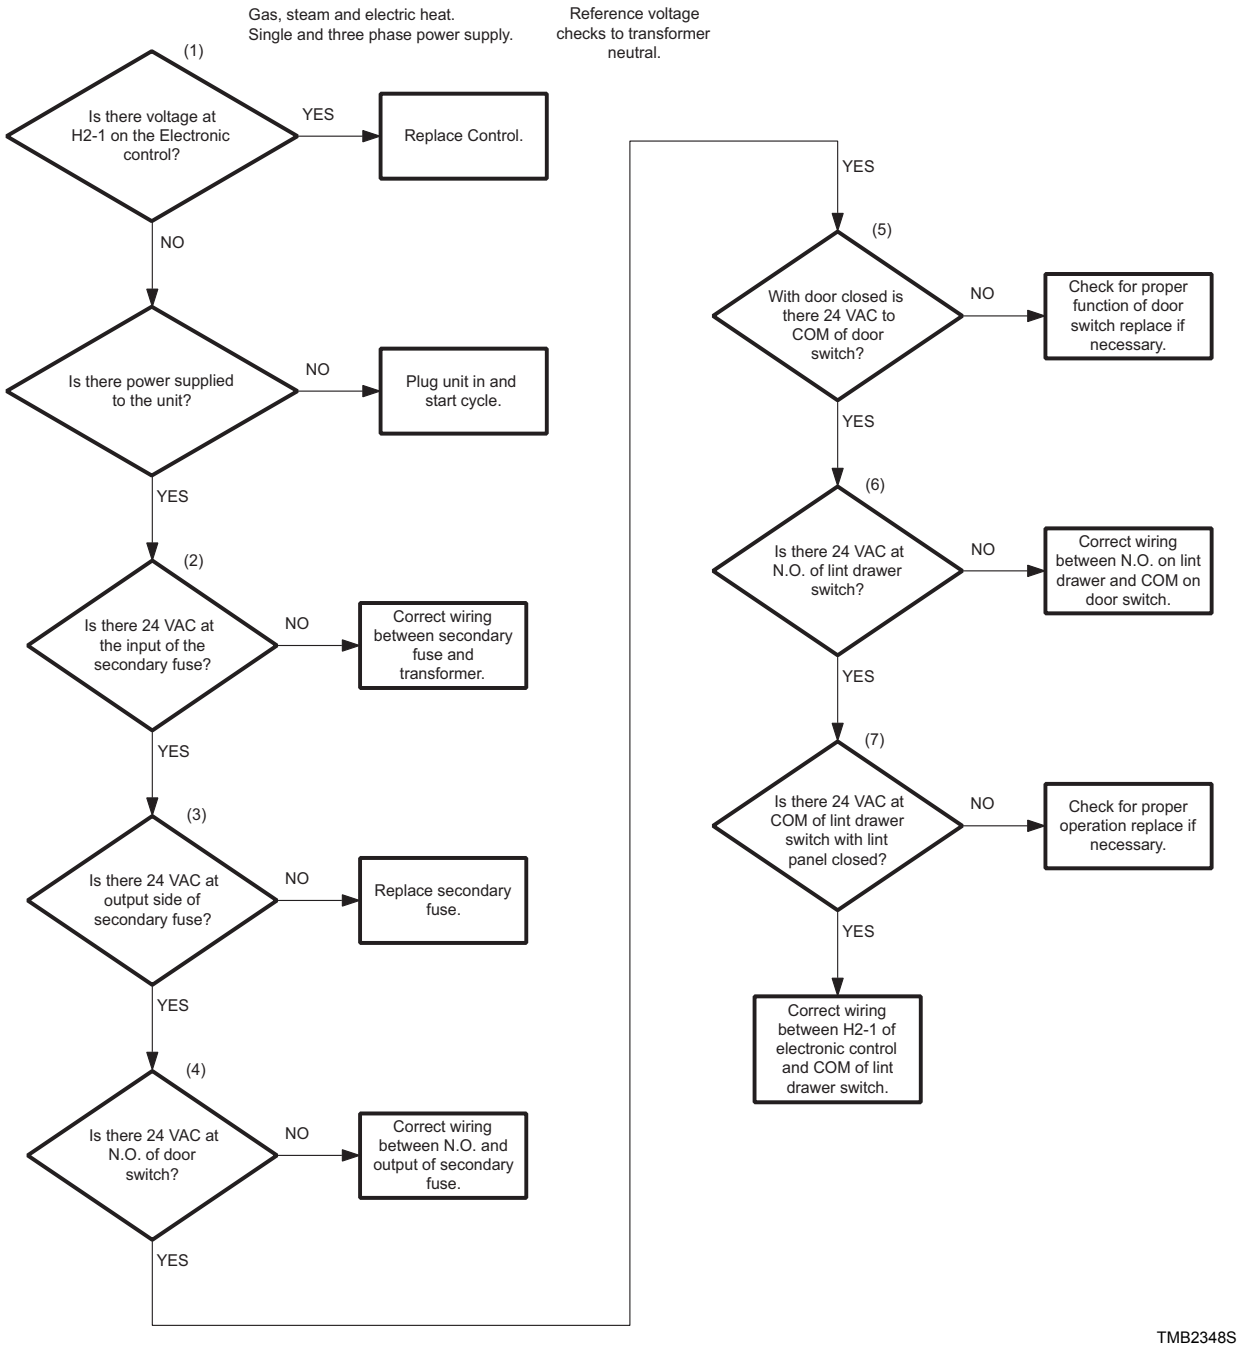
Gas, steam and electric heat.
Single and three phase power supply.
Reference voltage checks to transformer neutral.
(1)
Is there voltage at H2-1 on the Electronic control?
YES
Replace Control.
NO
Is there power supplied to the unit?
NO
Plug unit in and start cycle.
YES
(2)
Is there 24 VAC at the input of the secondary fuse?
NO
Correct wiring between secondary fuse and transformer.
YES
(3)
Is there 24 VAC at output side of secondary fuse?
NO
Replace secondary fuse.
YES
(4)
Is there 24 VAC at N.O. of door switch?
NO
Correct wiring between N.O. and output of secondary fuse.
YES
YES
(5)
With door closed is there 24 VAC to COM of door switch?
NO
Check for proper function of door switch replace if necessary.
YES
(6)
Is there 24 VAC at N.O. of lint drawer switch?
NO
Correct wiring between N.O. on lint drawer and COM on door switch.
YES
(7)
Is there 24 VAC at COM of lint drawer switch with lint panel closed?
NO
Check for proper operation replace if necessary.
YES
Correct wiring between H2-1 of electronic control and COM of lint drawer switch.
TMB2348S

Door Open Indicator

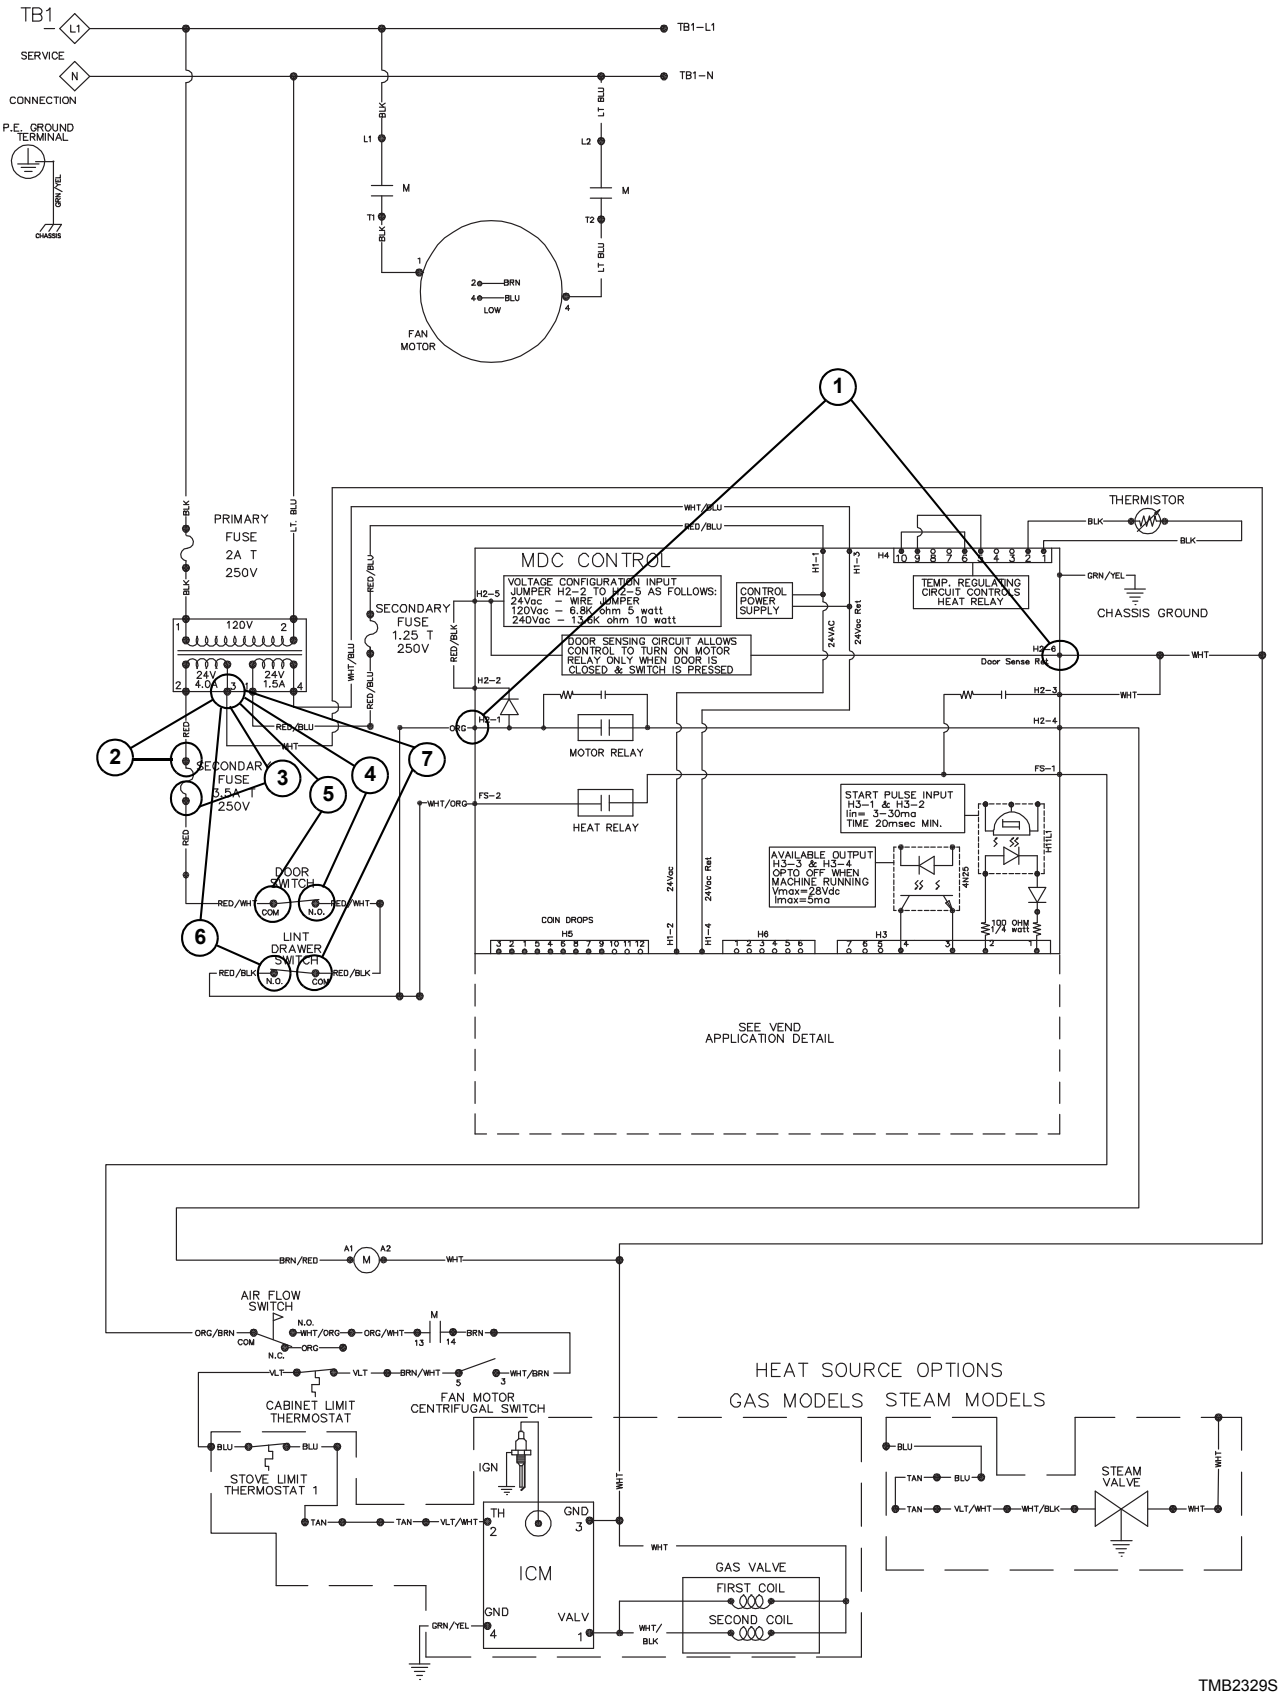

TMB2329S

46. Motor Will Not Start/Run

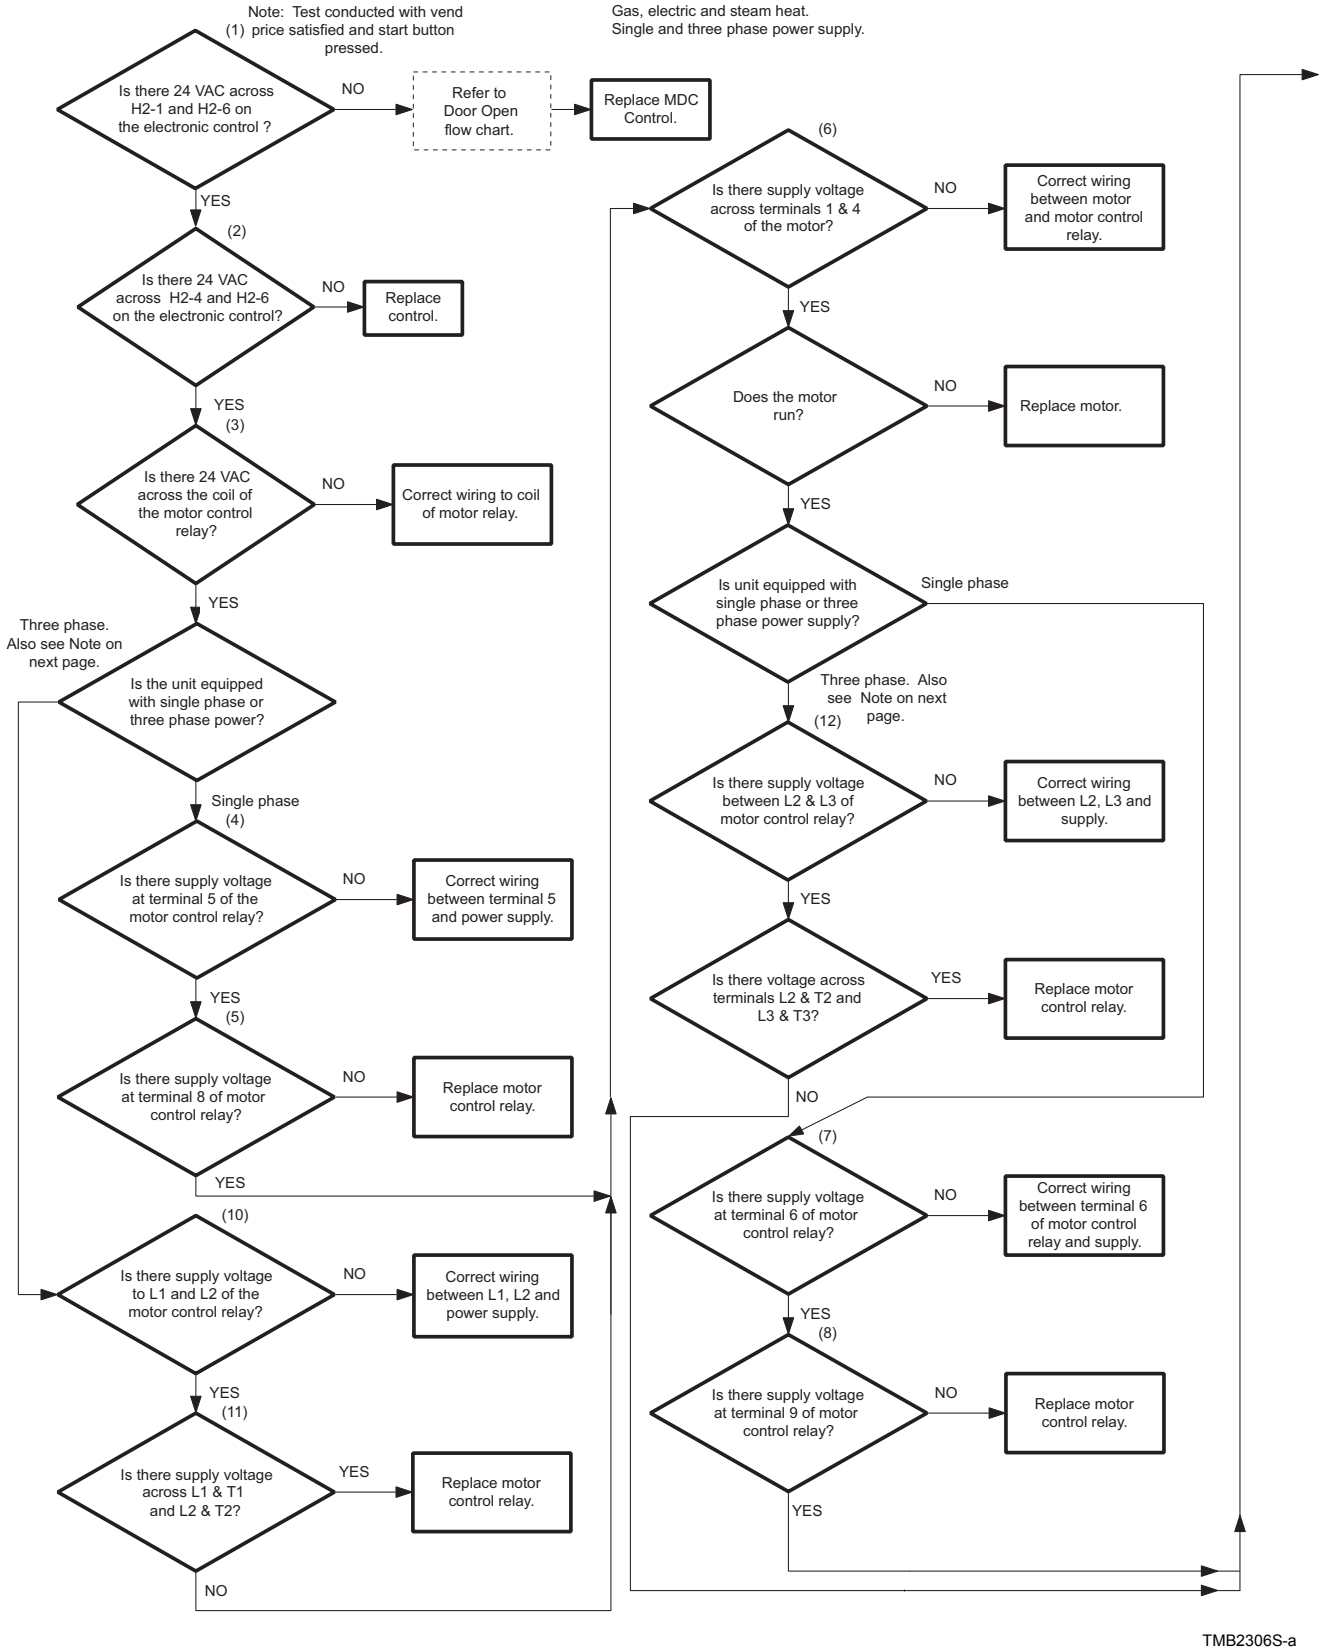
Note: Test conducted with vend (1) price satisfied and start button pressed.
Gas, electric and steam heat. Single and three phase power supply.
Is there 24 VAC across H2-1 and H2-6 on the electronic control ?
NO
Refer to Door Open flow chart.
Replace MDC Control.
YES
(2)
Is there 24 VAC across H2-4 and H2-6 on the electronic control?
NO
Replace control.
YES
(3)
Is there 24 VAC across the coil of the motor control relay?
NO
Correct wiring to coil of motor relay.
YES
Three phase. Also see Note on next page.
Is the unit equipped with single phase or three phase power?
Single phase
(4)
Is there supply voltage at terminal 5 of the motor control relay?
NO
Correct wiring between terminal 5 and power supply.
YES
(5)
Is there supply voltage at terminal 8 of motor control relay?
NO
Replace motor control relay.
YES
(10)
Is there supply voltage to L1 and L2 of the motor control relay?
NO
Correct wiring between L1, L2 and power supply.
YES
(11)
Is there supply voltage across L1 & T1 and L2 & T2?
YES
Replace motor control relay.
NO
(6)
Is there supply voltage across terminals 1 & 4 of the motor?
NO
Correct wiring between motor and motor control relay.
YES
Does the motor run?
NO
Replace motor.
YES
Is unit equipped with single phase or three phase power supply?
Single phase
Three phase. Also see Note on next page.
(12)
Is there supply voltage between L2 & L3 of motor control relay?
NO
Correct wiring between L2, L3 and supply.
YES
Is there voltage across terminals L2 & T2 and L3 & T3?
YES
Replace motor control relay.
NO
(7)
Is there supply voltage at terminal 6 of motor control relay?
NO
Correct wiring between terminal 6 of motor control relay and supply.
YES
(8)
Is there supply voltage at terminal 9 of motor control relay?
NO
Replace motor control relay.
YES

TMB2306S-a

46. Motor Will Not Start/Run (continued)

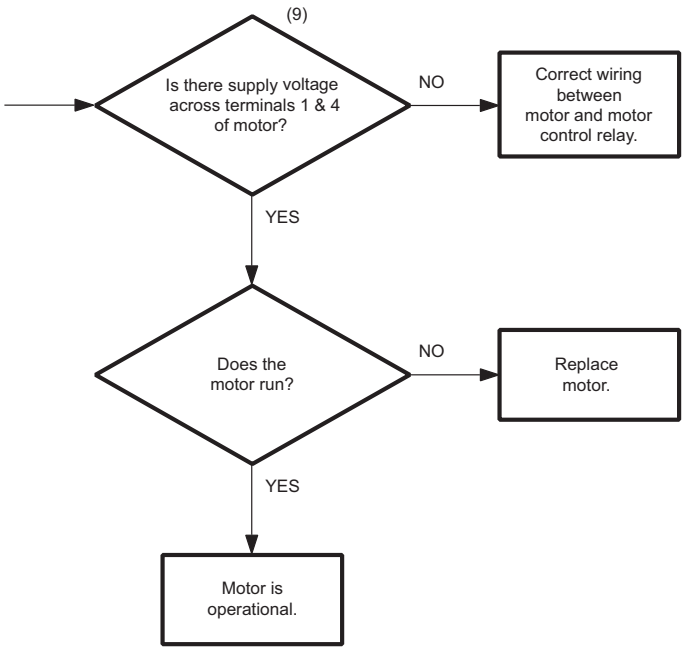

Note: For high voltage three phase supply (200 volts or higher), the motor is supplied by L1, L2, L3 through the motor contactor terminals T1, T2, T3. Make the appropriate adjustments when doing voltage checks.

TMB2306S-b

Please see following page for wiring diagram information.

Motor Will Not Start/Run

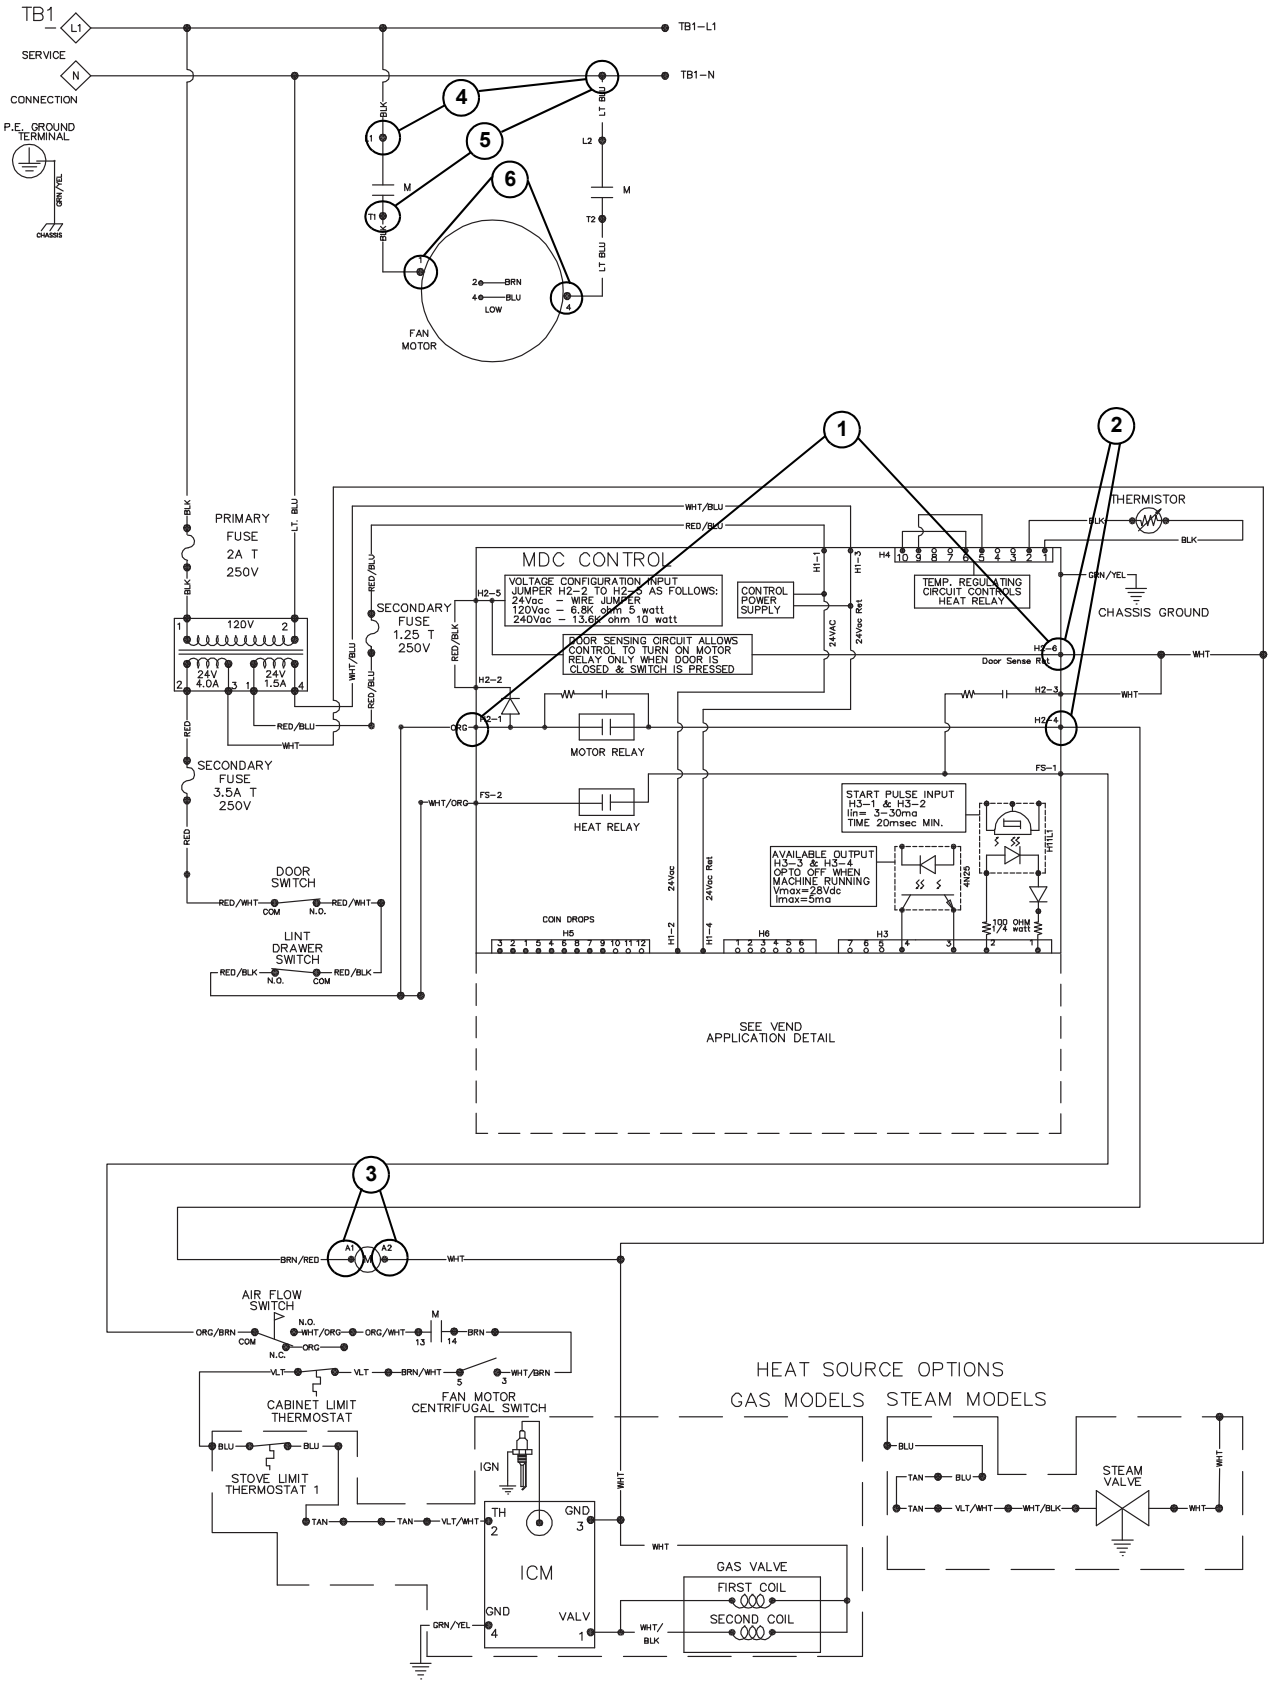

TMB2329S

47. Unit Will Not Heat – Gas

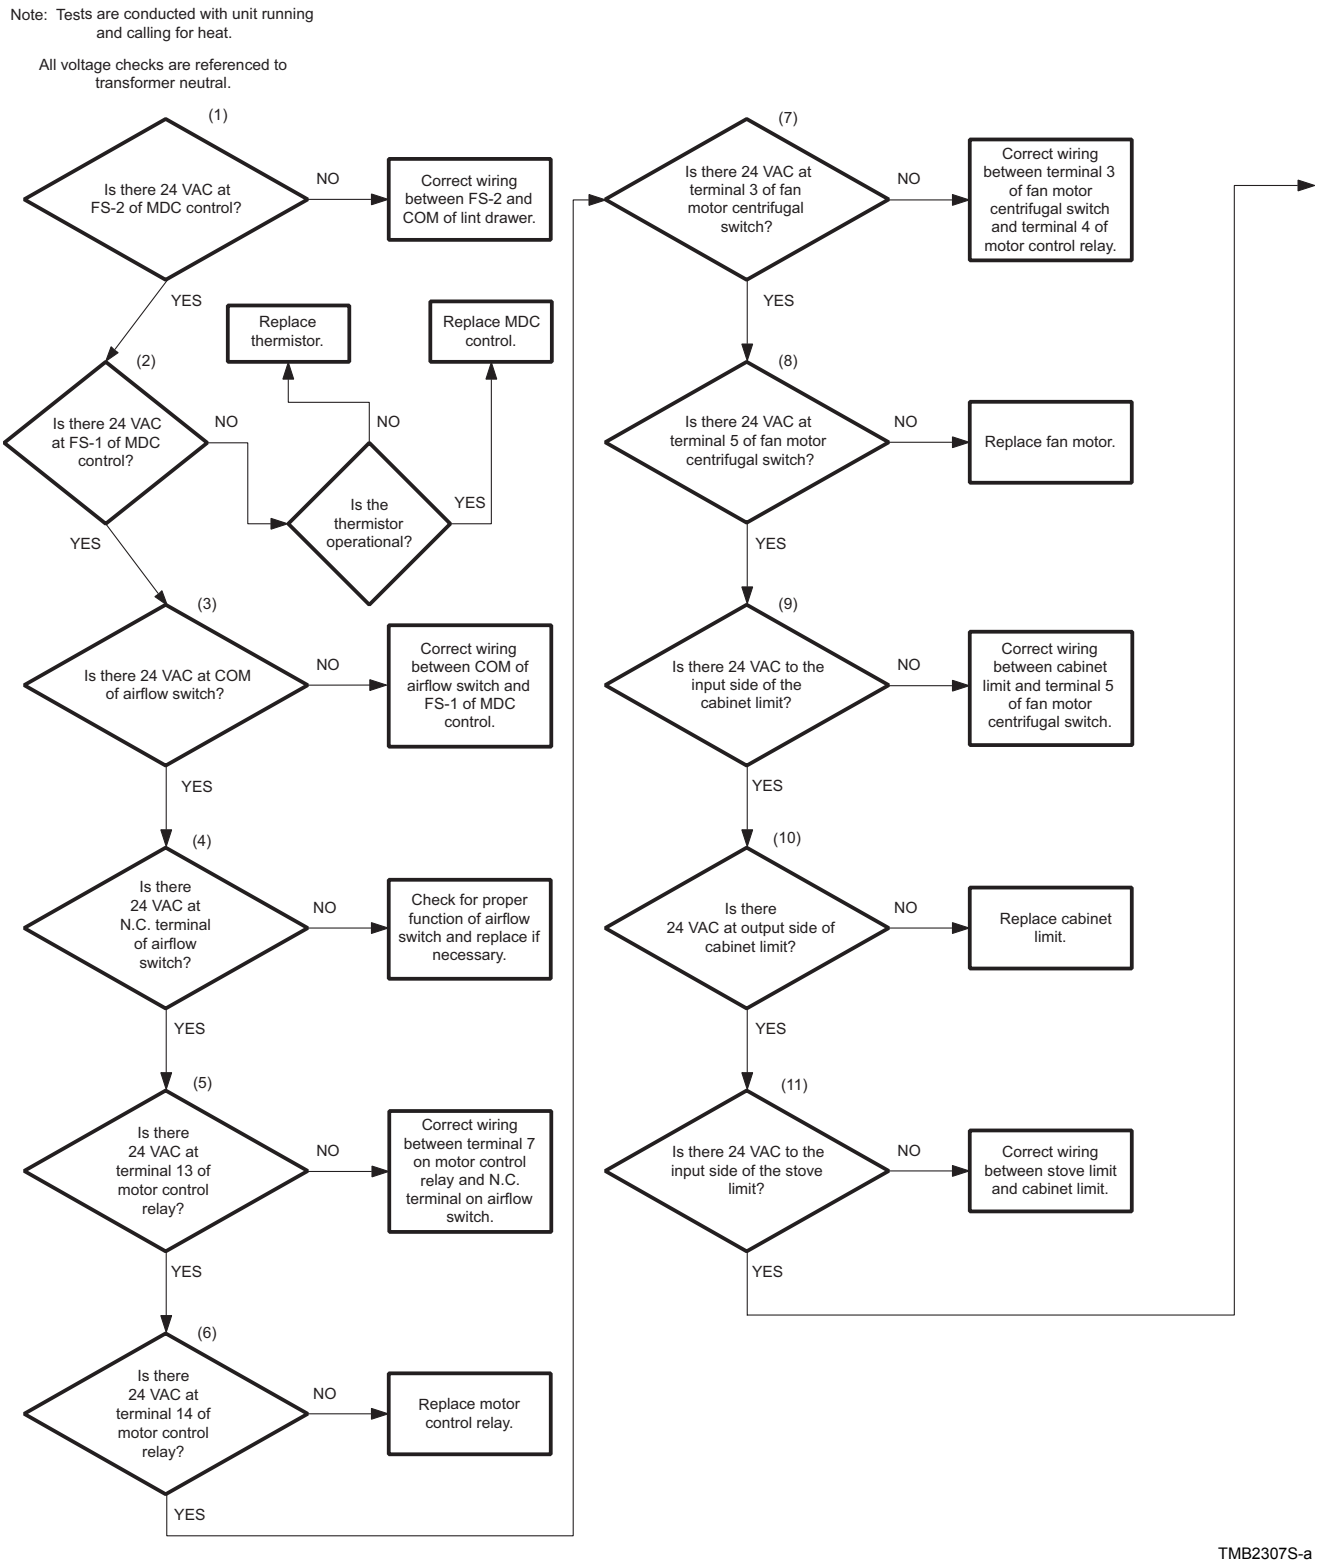
Note: Tests are conducted with unit running and calling for heat.
All voltage checks are referenced to transformer neutral.
(1)
Is there 24 VAC at FS-2 of MDC control?
NO
Correct wiring between FS-2 and COM of lint drawer.
YES
(2)
Is there 24 VAC at FS-1 of MDC control?
NO
Is the thermistor operational?
NO
Replace thermistor.
YES
Replace MDC control.
YES
(3)
Is there 24 VAC at COM of airflow switch?
NO
Correct wiring between COM of airflow switch and FS-1 of MDC control.
YES
(4)
Is there 24 VAC at N.C. terminal of airflow switch?
NO
Check for proper function of airflow switch and replace if necessary.
YES
(5)
Is there 24 VAC at terminal 13 of motor control relay?
NO
Correct wiring between terminal 7 on motor control relay and N.C. terminal on airflow switch.
YES
(6)
Is there 24 VAC at terminal 14 of motor control relay?
NO
Replace motor control relay.
YES
(7)
Is there 24 VAC at terminal 3 of fan motor centrifugal switch?
NO
Correct wiring between terminal 3 of fan motor centrifugal switch and terminal 4 of motor control relay.
YES
(8)
Is there 24 VAC at terminal 5 of fan motor centrifugal switch?
NO
Replace fan motor.
YES
(9)
Is there 24 VAC to the input side of the cabinet limit?
NO
Correct wiring between cabinet limit and terminal 5 of fan motor centrifugal switch.
YES
(10)
Is there 24 VAC at output side of cabinet limit?
NO
Replace cabinet limit.
YES
(11)
Is there 24 VAC to the input side of the stove limit?
NO
Correct wiring between stove limit and cabinet limit.
YES

TMB2307S-a

47. Unit Will Not Heat – Gas (continued)

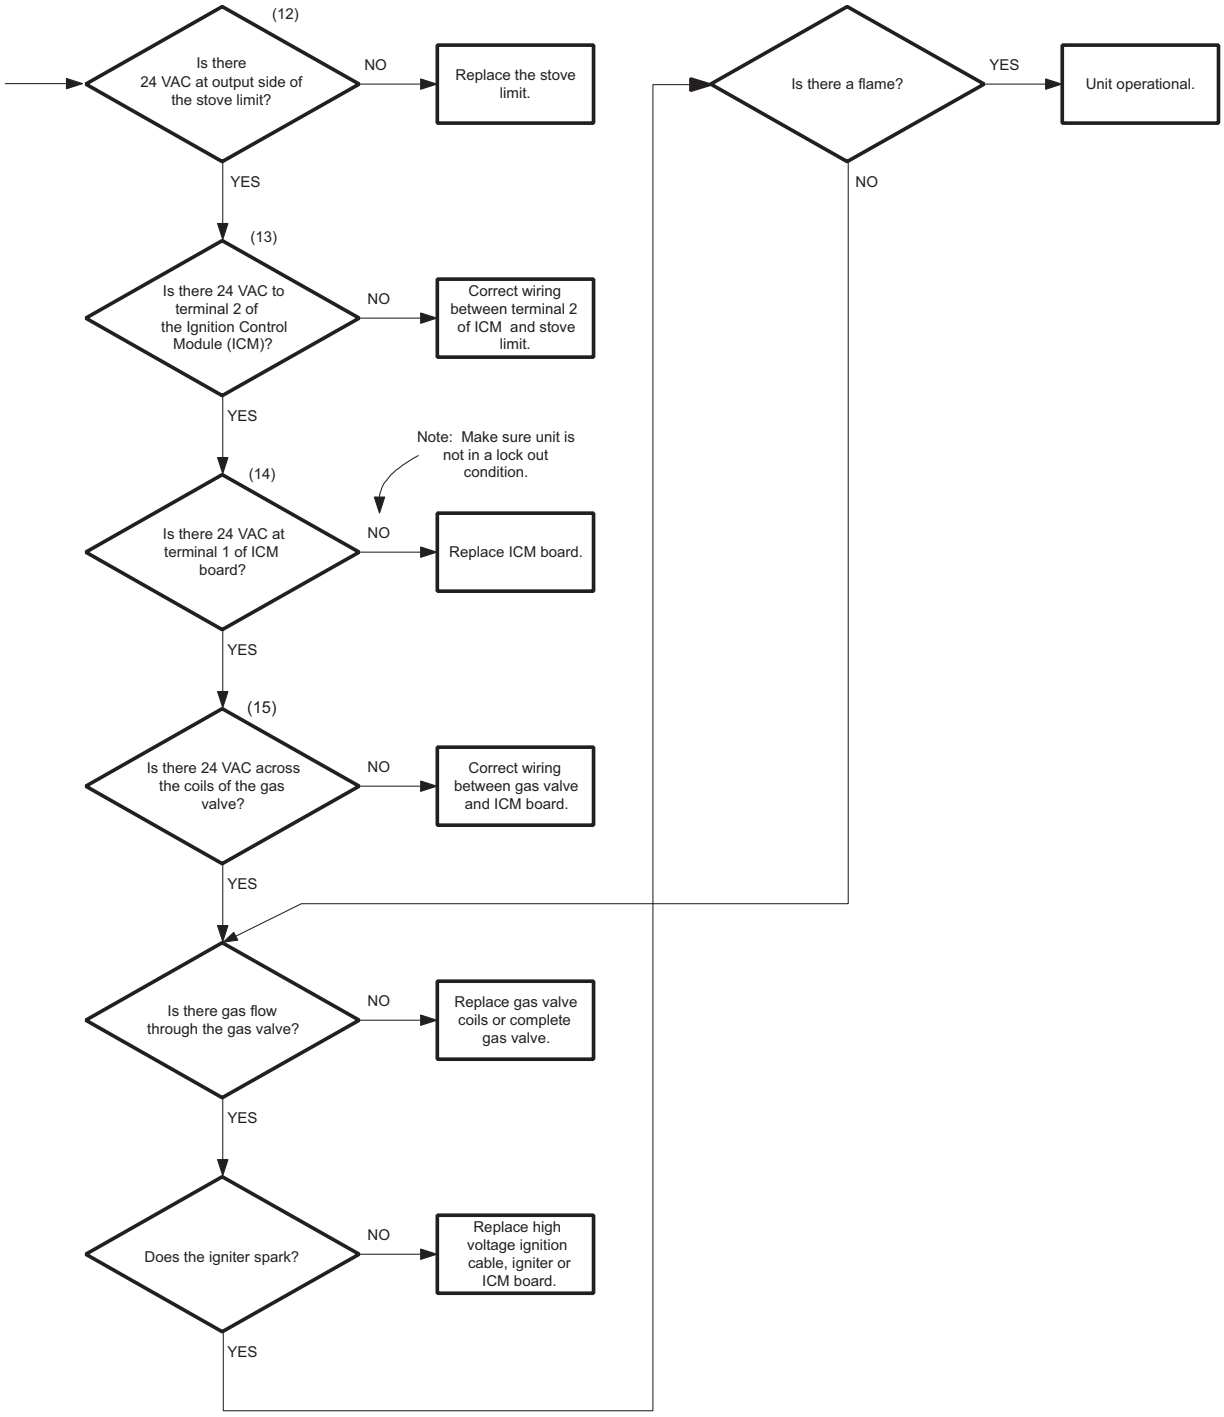
(12)
Is there 24 VAC at output side of the stove limit?
NO
Replace the stove limit.
YES
(13)
Is there 24 VAC to terminal 2 of the Ignition Control Module (ICM)?
NO
Correct wiring between terminal 2 of ICM and stove limit.
YES
Note: Make sure unit is not in a lock out condition.
(14)
Is there 24 VAC at terminal 1 of ICM board?
NO
Replace ICM board.
YES
(15)
Is there 24 VAC across the coils of the gas valve?
NO
Correct wiring between gas valve and ICM board.
YES
Is there gas flow through the gas valve?
NO
Replace gas valve coils or complete gas valve.
YES
Does the igniter spark?
NO
Replace high voltage ignition cable, igniter or ICM board.
YES
Is there a flame?
YES
Unit operational.
NO
TMB2307S-b

Please see following page for wiring diagram information.

Unit Will Not Heat – Gas

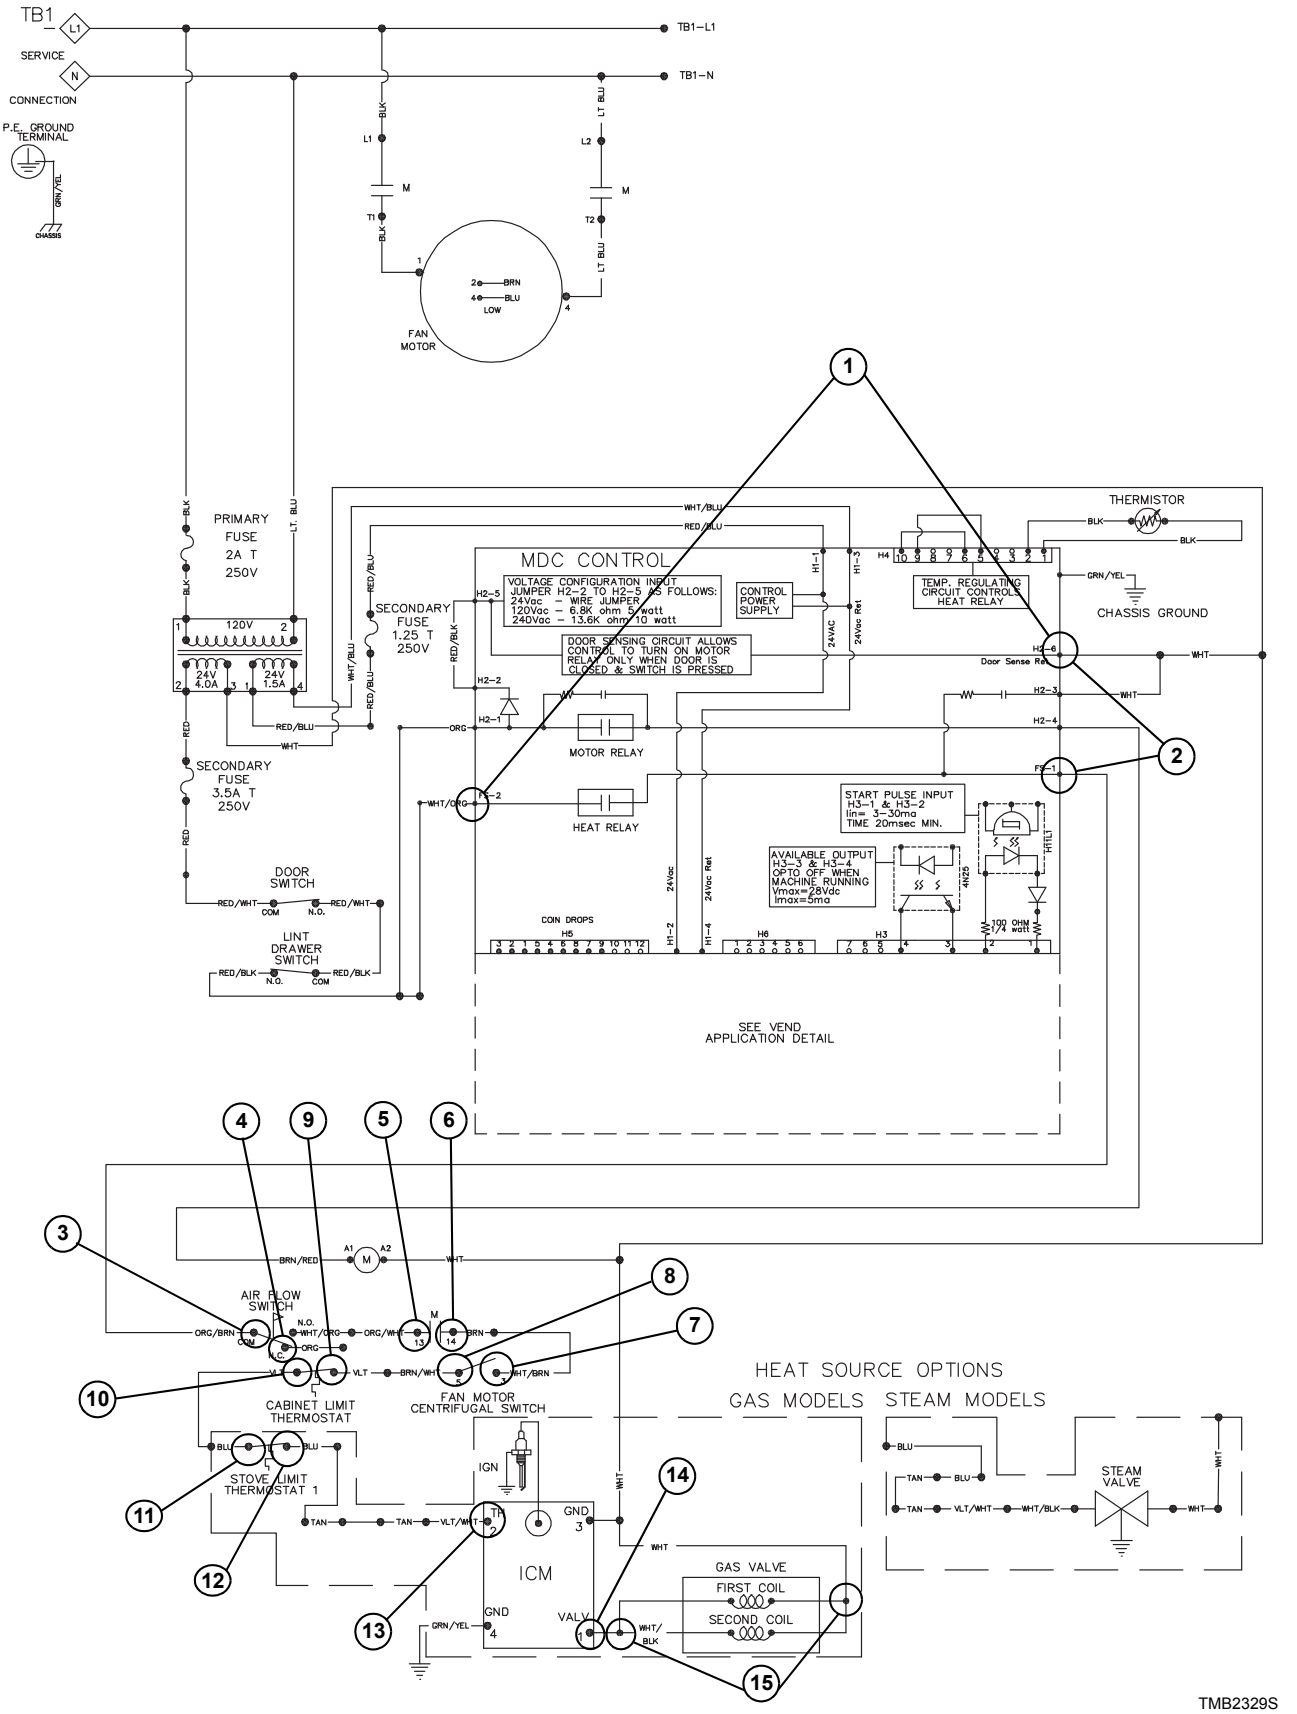

TMB2329S

48. Unit Will Not Heat – Steam

Note: Tests are conducted with unit running and calling for heat.

All voltage checks are referenced to transformer neutral.

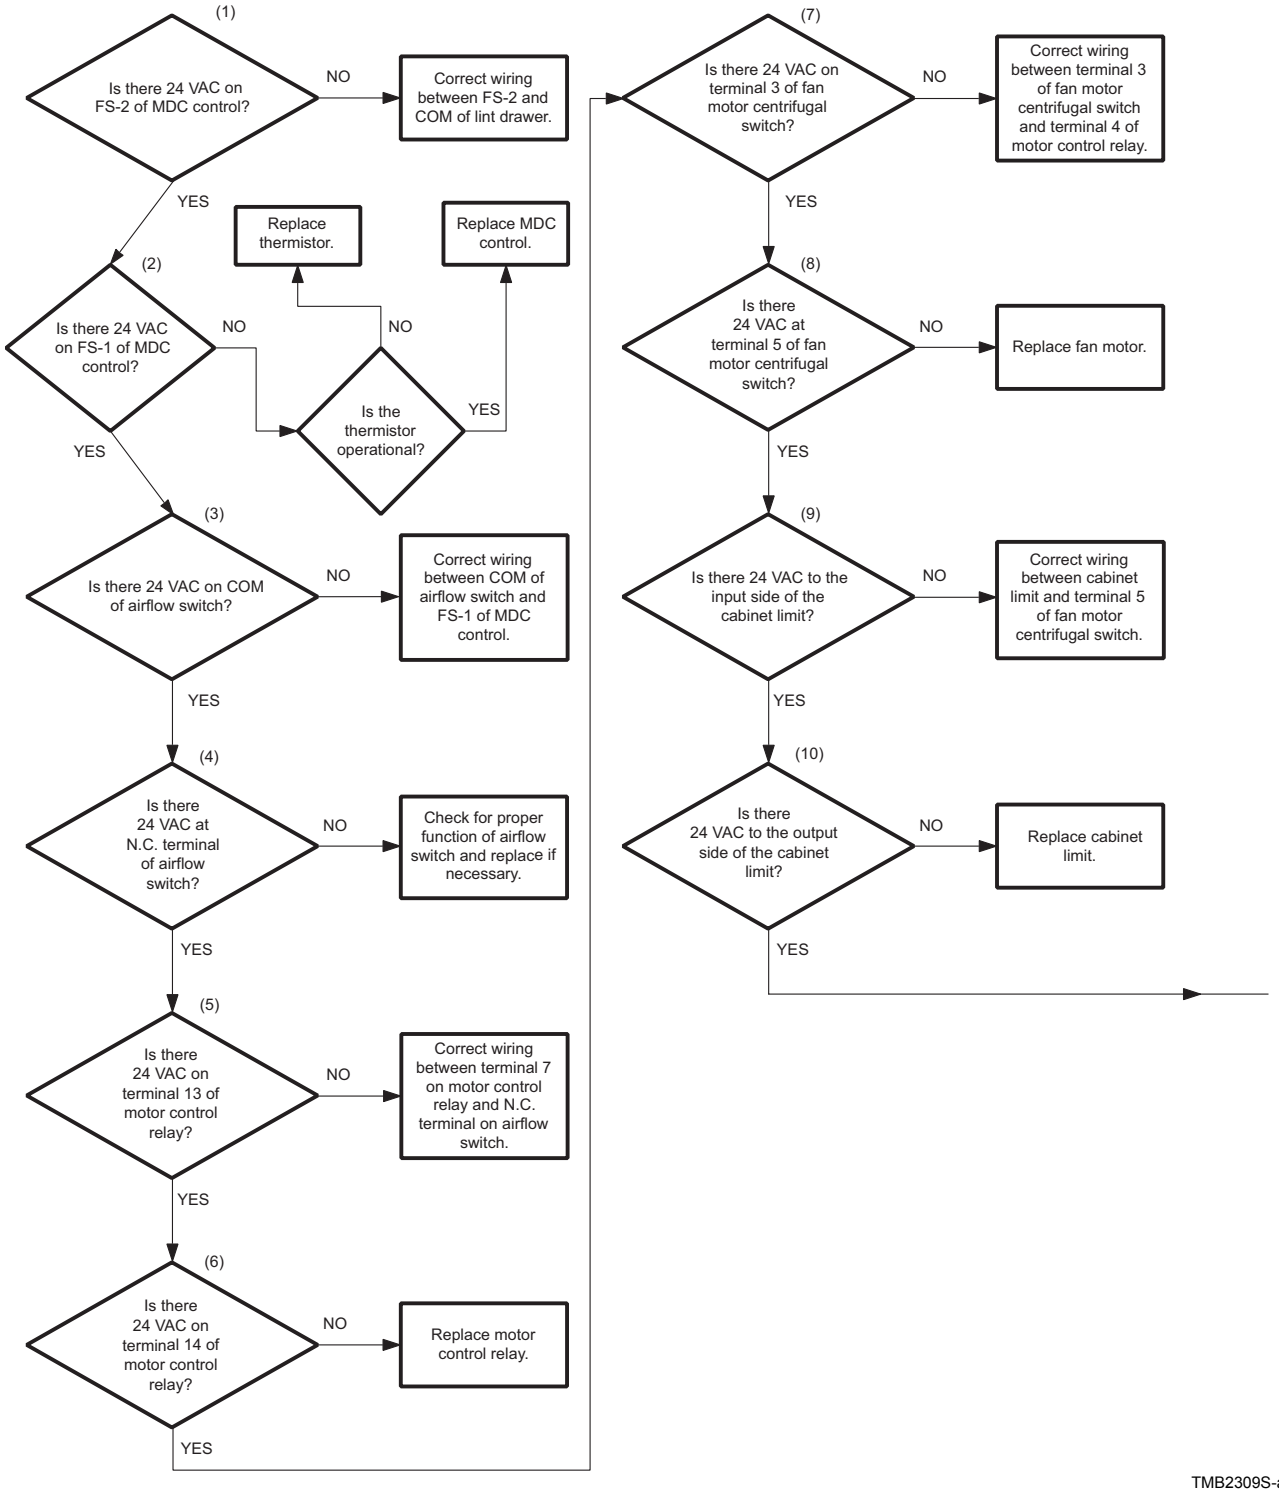
(1)
Is there 24 VAC on FS-2 of MDC control?
NO
Correct wiring between FS-2 and COM of lint drawer.
YES
(2)
Is there 24 VAC on FS-1 of MDC control?
NO
Replace thermistor.
NO
Is the thermistor operational?
YES
Replace MDC control.
YES
(3)
Is there 24 VAC on COM of airflow switch?
NO
Correct wiring between COM of airflow switch and FS-1 of MDC control.
YES
(4)
Is there 24 VAC at N.C. terminal of airflow switch?
NO
Check for proper function of airflow switch and replace if necessary.
YES
(5)
Is there 24 VAC on terminal 13 of motor control relay?
NO
Correct wiring between terminal 7 on motor control relay and N.C. terminal on airflow switch.
YES
(6)
Is there 24 VAC on terminal 14 of motor control relay?
NO
Replace motor control relay.
YES
(7)
Is there 24 VAC on terminal 3 of fan motor centrifugal switch?
NO
Correct wiring between terminal 3 of fan motor centrifugal switch and terminal 4 of motor control relay.
YES
(8)
Is there 24 VAC at terminal 5 of fan motor centrifugal switch?
NO
Replace fan motor.
YES
(9)
Is there 24 VAC to the input side of the cabinet limit?
NO
Correct wiring between cabinet limit and terminal 5 of fan motor centrifugal switch.
YES
(10)
Is there 24 VAC to the output side of the cabinet limit?
NO
Replace cabinet limit.
YES

TMB2309S-a

48. Unit Will Not Heat – Steam (continued)

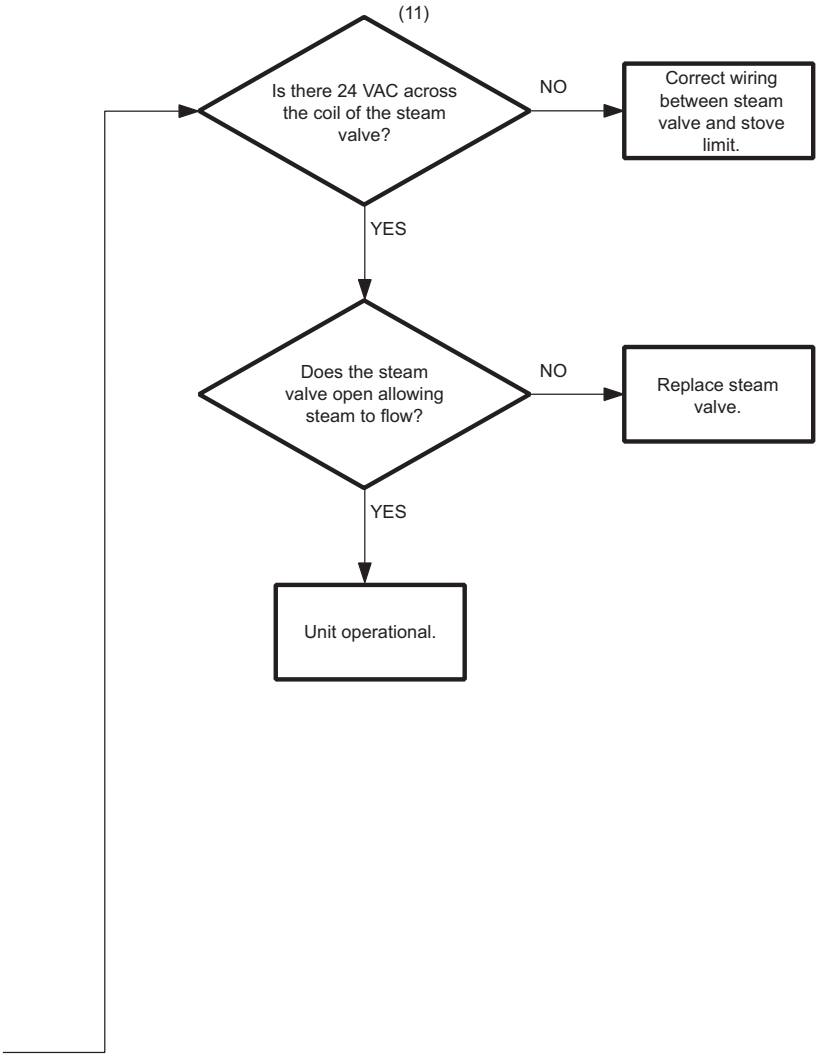

TMB2309S-b

Please see following page for wiring diagram information.

Unit Will Not Heat – Steam

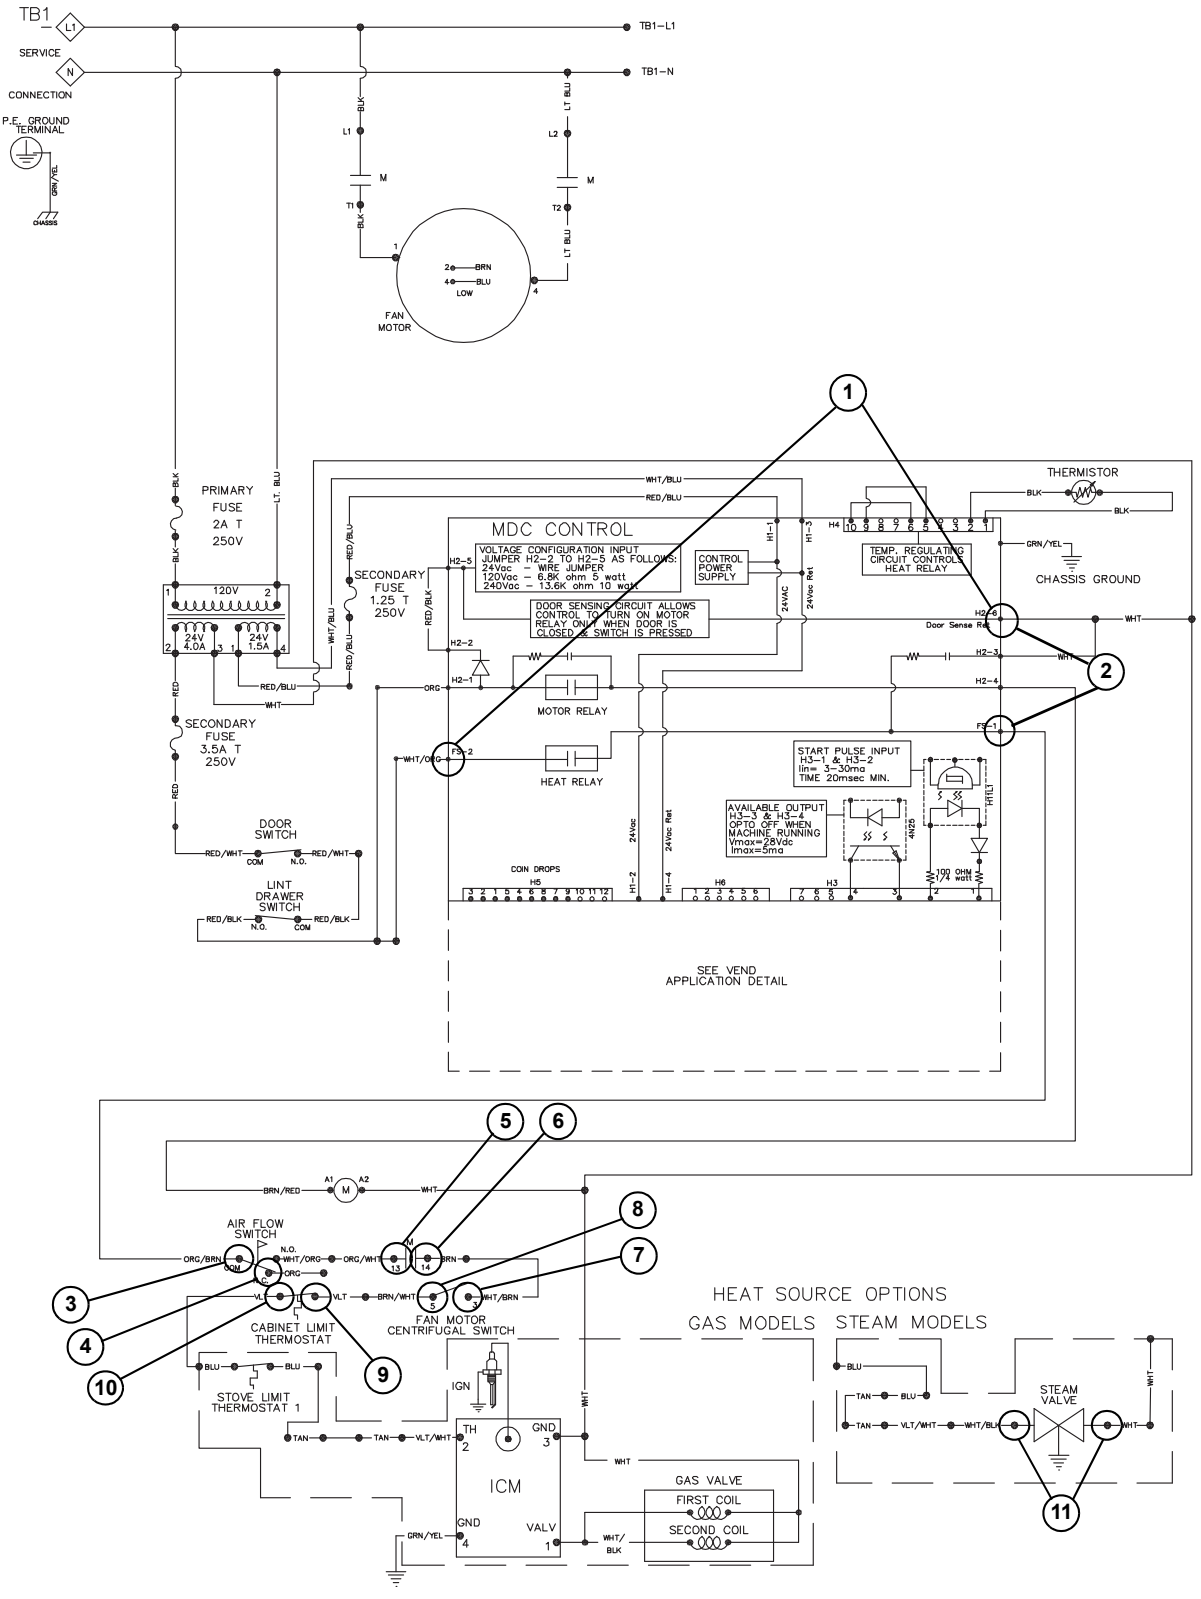

TMB2329S

49. Unit Will Not Heat – Electric

Note: Tests are conducted with unit running and calling for heat.

All voltage checks are referenced to transformer neutral.

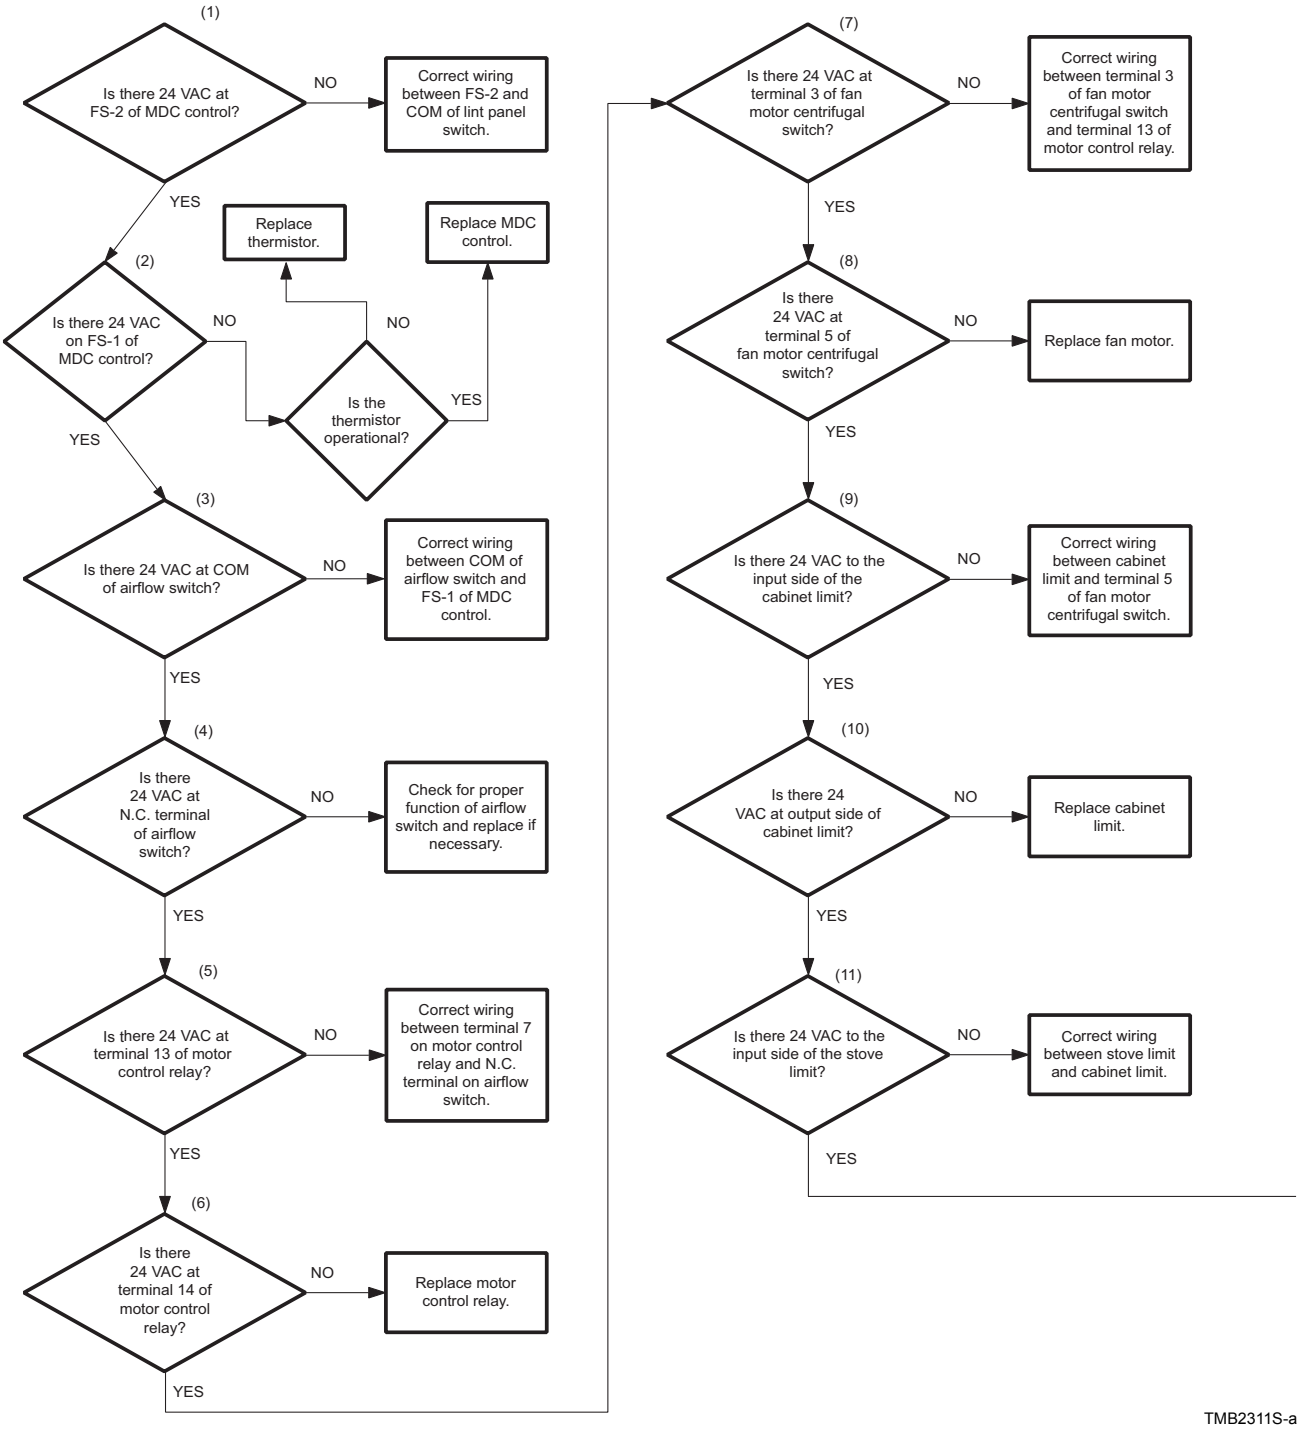
(1)
Is there 24 VAC at FS-2 of MDC control?
NO
Correct wiring between FS-2 and COM of lint panel switch.
YES
Replace thermistor.
Replace MDC control.
(2)
Is there 24 VAC on FS-1 of MDC control?
NO
NO
Is the thermistor operational?
YES
YES
(3)
Is there 24 VAC at COM of airflow switch?
NO
Correct wiring between COM of airflow switch and FS-1 of MDC control.
YES
(4)
Is there 24 VAC at N.C. terminal of airflow switch?
NO
Check for proper function of airflow switch and replace if necessary.
YES
(5)
Is there 24 VAC at terminal 13 of motor control relay?
NO
Correct wiring between terminal 7 on motor control relay and N.C. terminal on airflow switch.
YES
(6)
Is there 24 VAC at terminal 14 of motor control relay?
NO
Replace motor control relay.
YES
(7)
Is there 24 VAC at terminal 3 of fan motor centrifugal switch?
NO
Correct wiring between terminal 3 of fan motor centrifugal switch and terminal 13 of motor control relay.
YES
(8)
Is there 24 VAC at terminal 5 of fan motor centrifugal switch?
NO
Replace fan motor.
YES
(9)
Is there 24 VAC to the input side of the cabinet limit?
NO
Correct wiring between cabinet limit and terminal 5 of fan motor centrifugal switch.
YES
(10)
Is there 24 VAC at output side of cabinet limit?
NO
Replace cabinet limit.
YES
(11)
Is there 24 VAC to the input side of the stove limit?
NO
Correct wiring between stove limit and cabinet limit.
YES

TMB2311S-a

49. Unit Will Not Heat – Electric (continued)

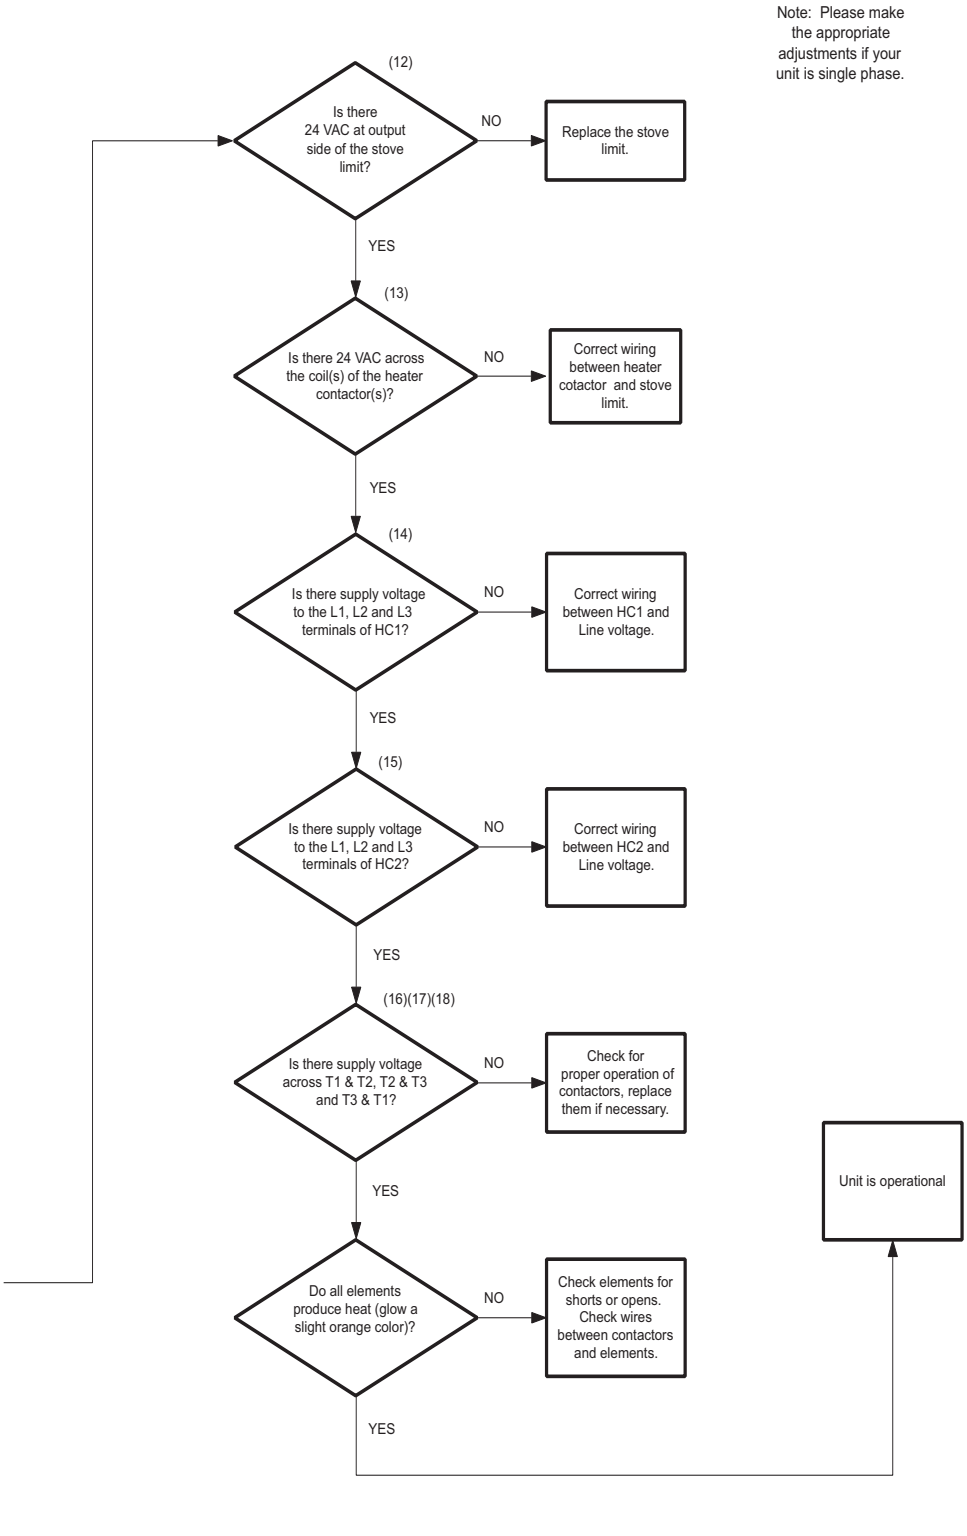
Note: Please make the appropriate adjustments if your unit is single phase.
(12)
Is there 24 VAC at output side of the stove limit?
NO
Replace the stove limit.
YES
(13)
Is there 24 VAC across the coil(s) of the heater contactor(s)?
NO
Correct wiring between heater cotactor and stove limit.
YES
(14)
Is there supply voltage to the L1, L2 and L3 terminals of HC1?
NO
Correct wiring between HC1 and Line voltage.
YES
(15)
Is there supply voltage to the L1, L2 and L3 terminals of HC2?
NO
Correct wiring between HC2 and Line voltage.
YES
(16)(17)(18)
Is there supply voltage across T1 & T2, T2 & T3 and T3 & T1?
NO
Check for proper operation of contactors, replace them if necessary.
YES
Do all elements produce heat (glow a slight orange color)?
NO
Check elements for shorts or opens. Check wires between contactors and elements.
YES
Unit is operational
TMB2311S-b

Please see following page for wiring diagram information.

Unit Will Not Heat – Electric

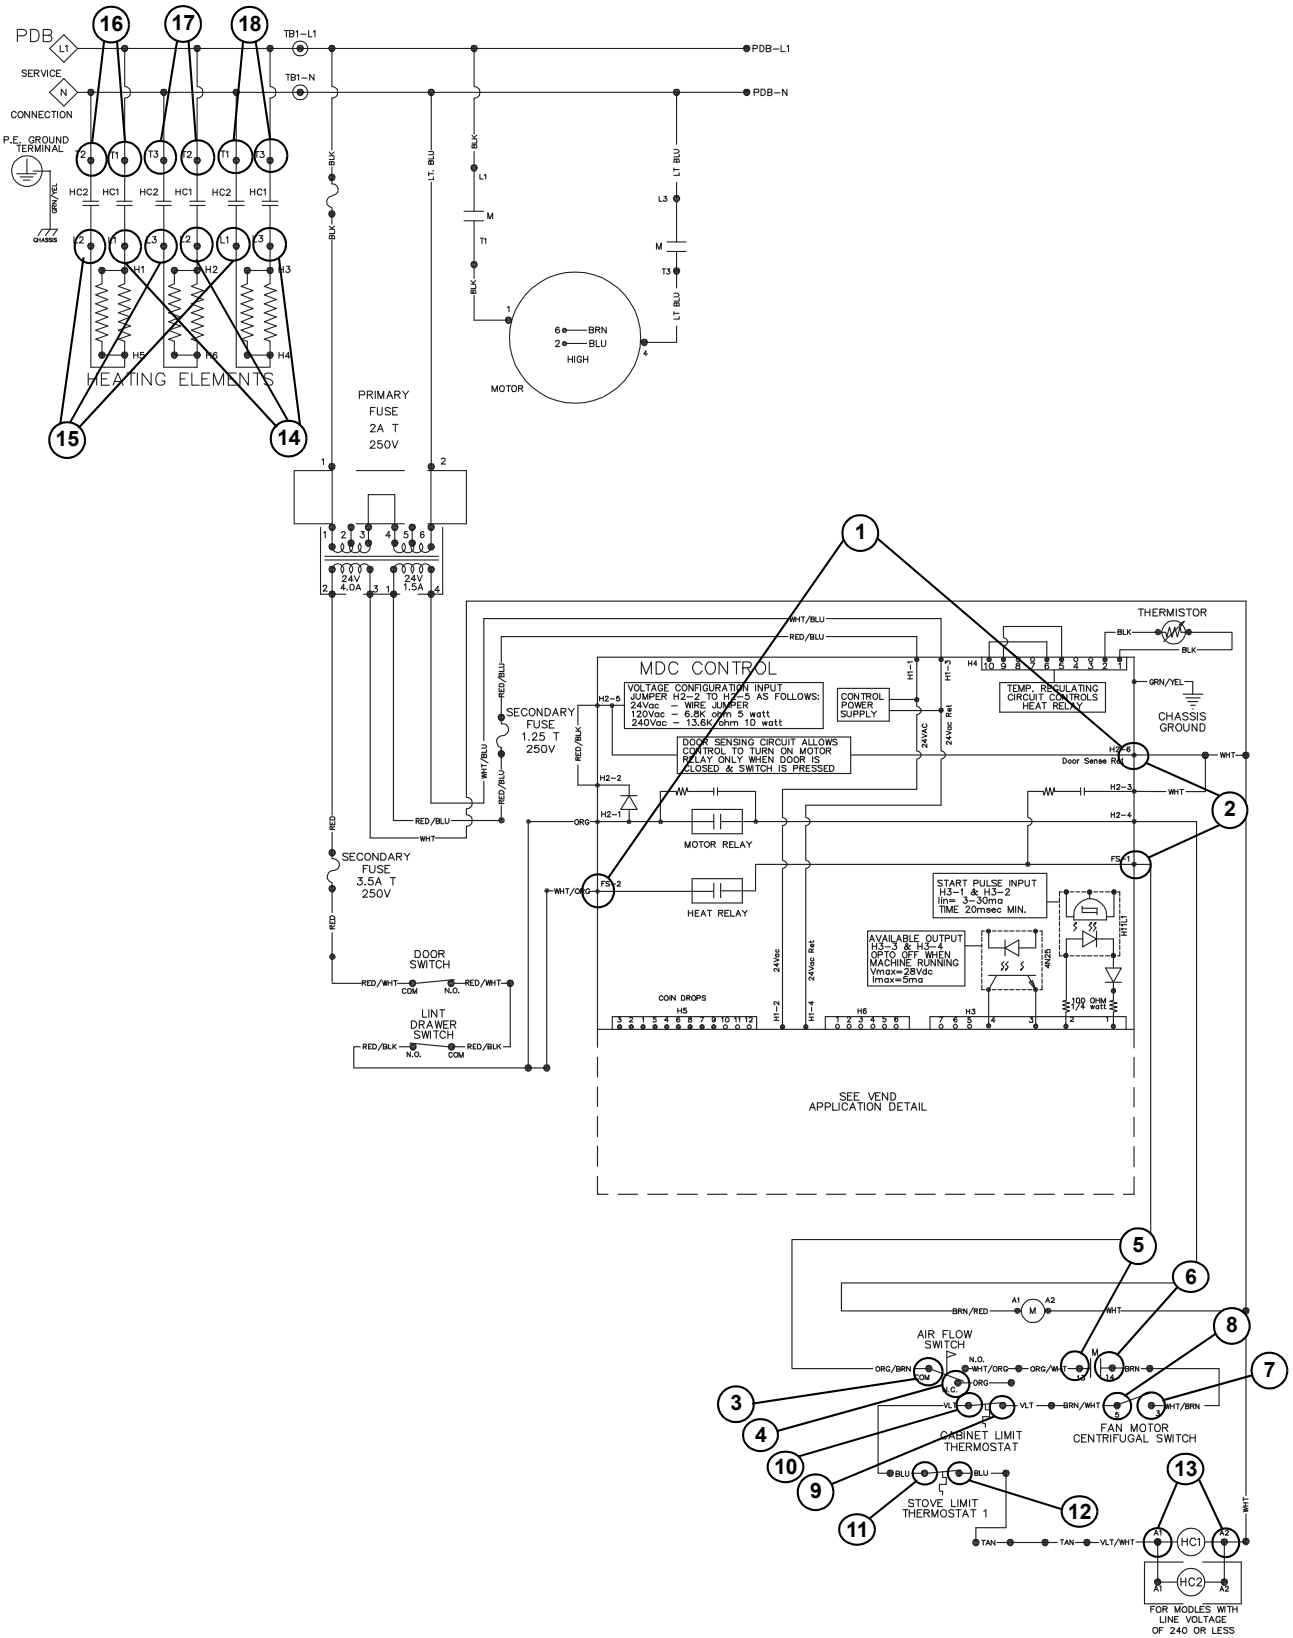

TMB2330S

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:
- **Disconnect electric power to the dryer(s) before servicing.**
- **Close gas shut-off valve to gas dryer(s) before servicing.**
- **Never start the dryer(s) with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the dryer is properly grounded.**

W001R1

50. Error Codes

OP - Indicates physical "open" in the thermistor circuit. Possible causes are: 1) thermistor, 2) wiring between control and thermistor, 3) control.
SH - Indicates a "short" in the thermistor circuit. Possible causes are: 1) shorted thermistor, 2) a short in the wiring between control and thermistor, 3) control.

Card Reader Machines: (In addition to the above errors)

EC:19 - Indicates no card reader communication. The control and the reader cannot communicate. Check reader, control and harness.

NOTE: For all other card reader errors, consult the card reader manual provided by the manufacturer.

Display	Definition	Corrective Action
OP	Indicates an open circuit in the thermistor.	• Check thermistor. Replace if inoperative. • Check wiring between control and thermistor. Refer to wiring diagram for proper wiring. • Check control. Replace if inoperative.
SH	Indicates a short circuit in the thermistor.	• Check thermistor. Replace if inoperative. • Check wiring between control and thermistor. Refer to wiring diagram for proper wiring. • Check control. Replace if inoperative.
EC:19 *Card Reader models only	Indicates no communication between control and card reader.	• Check card reader. Replace if inoperative. • Check wire harness connecting card reader and control. Replace if inoperative. • Check control. Replace if inoperative.

Section 7
NetMaster Troubleshooting – KT075 Models Only

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:
- **Disconnect electric power to the tumbler before servicing.**
- **Close gas shut-off valve to gas tumbler before servicing.**
- **Close steam valve to steam tumbler before servicing.**
- **Never start the tumbler with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the tumbler is properly grounded.**

W002

51. No Infrared Communication

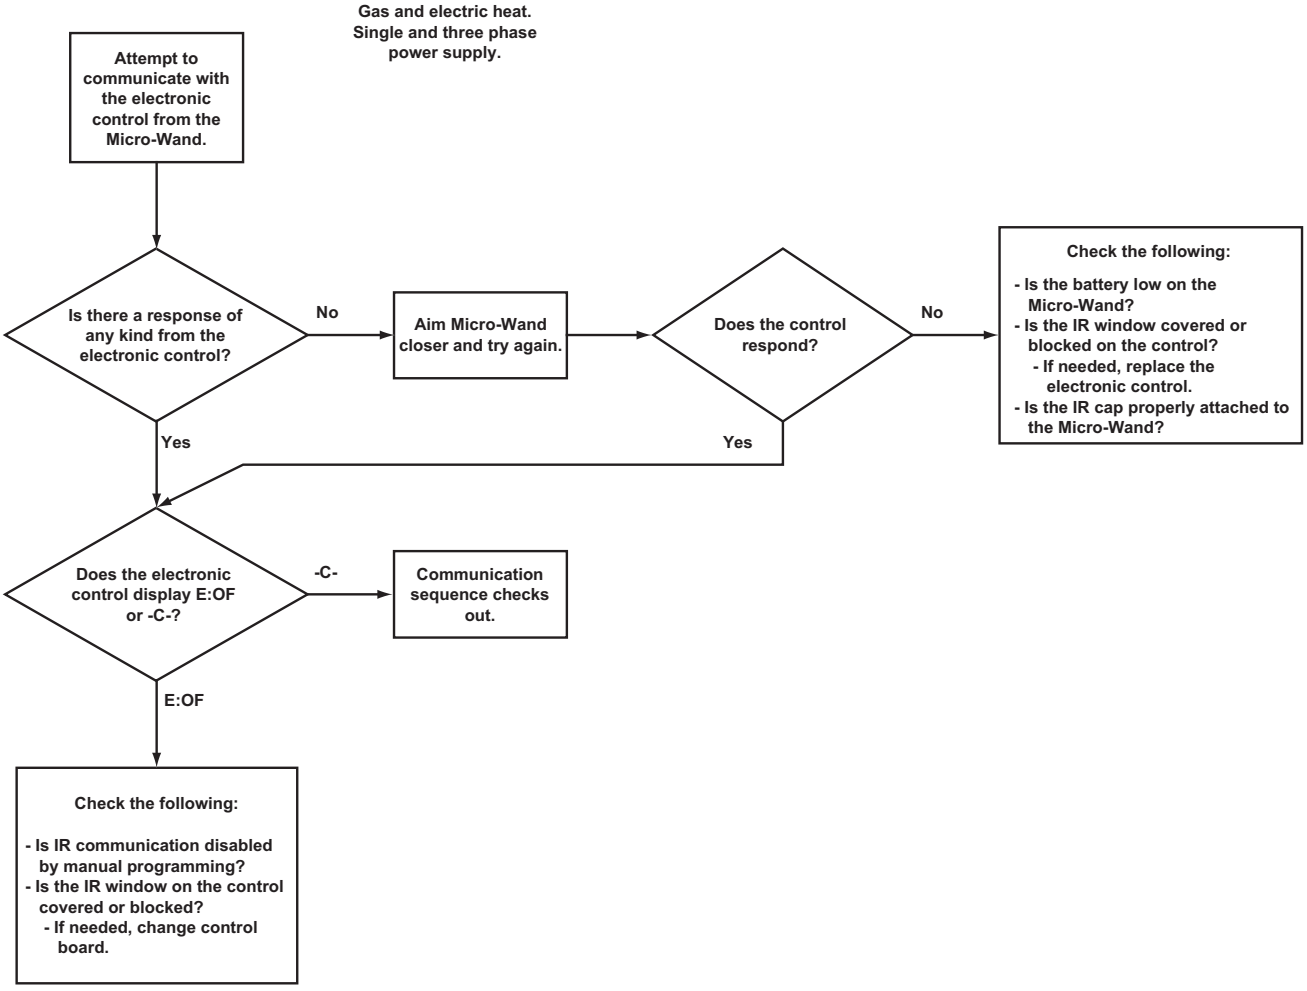
Gas and electric heat.
Single and three phase
power supply.
Attempt to communicate with the electronic control from the Micro-Wand.
Is there a response of any kind from the electronic control?
No
Aim Micro-Wand closer and try again.
Does the control respond?
No
Check the following:
- Is the battery low on the Micro-Wand?
- Is the IR window covered or blocked on the control?
- If needed, replace the electronic control.
- Is the IR cap properly attached to the Micro-Wand?
Yes
Yes
Does the electronic control display E:OF or -C-?
-C-
Communication sequence checks out.
E:OF
Check the following:
- Is IR communication disabled by manual programming?
- Is the IR window on the control covered or blocked?
- If needed, change control board.

TMB1793S

52. Coins Ignored When Entered

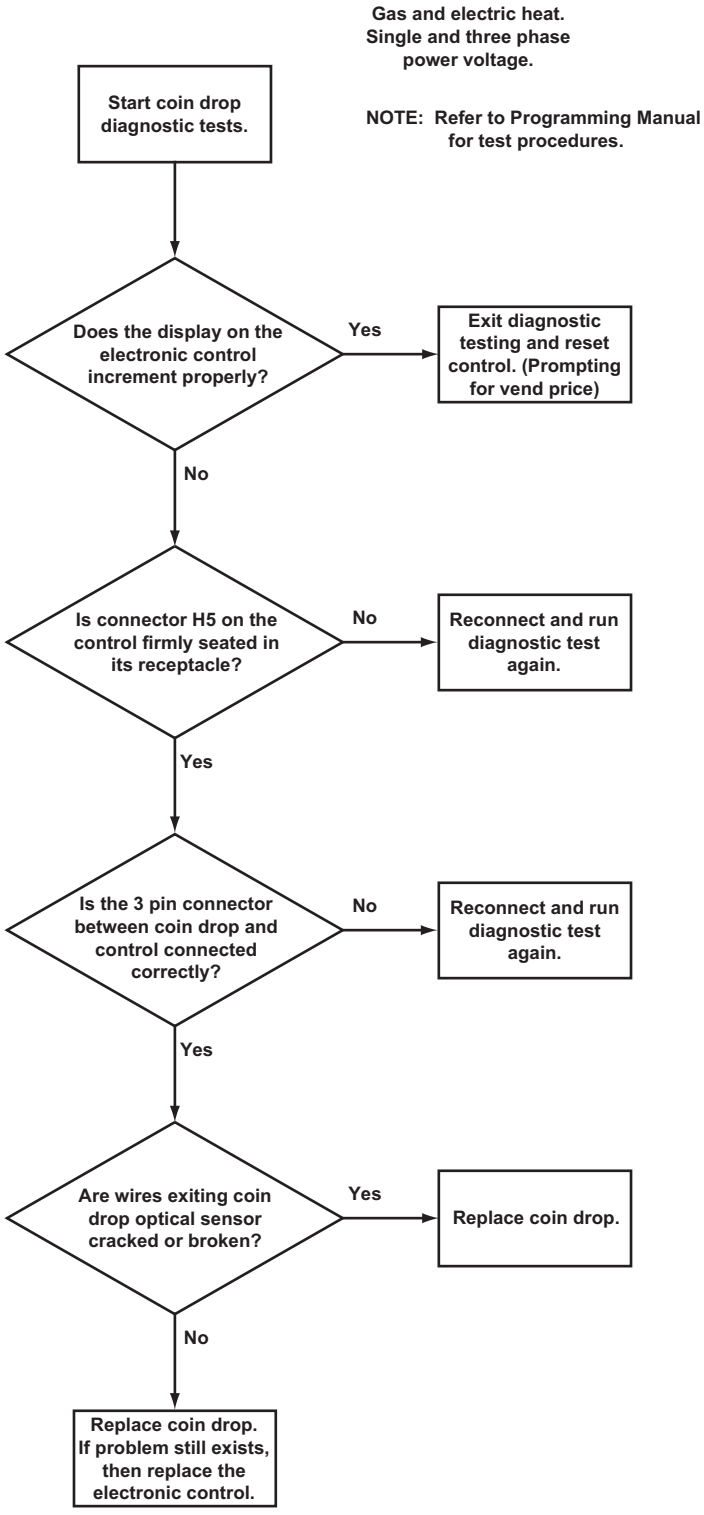
Gas and electric heat.
Single and three phase
power voltage.
NOTE: Refer to Programming Manual
for test procedures.
Start coin drop diagnostic tests.
Does the display on the electronic control increment properly?
Yes
Exit diagnostic testing and reset control. (Prompting for vend price)
No
Is connector H5 on the control firmly seated in its receptacle?
No
Reconnect and run diagnostic test again.
Yes
Is the 3 pin connector between coin drop and control connected correctly?
No
Reconnect and run diagnostic test again.
Yes
Are wires exiting coin drop optical sensor cracked or broken?
Yes
Replace coin drop.
No
Replace coin drop. If problem still exists, then replace the electronic control.

TMB1794S

53. No Display

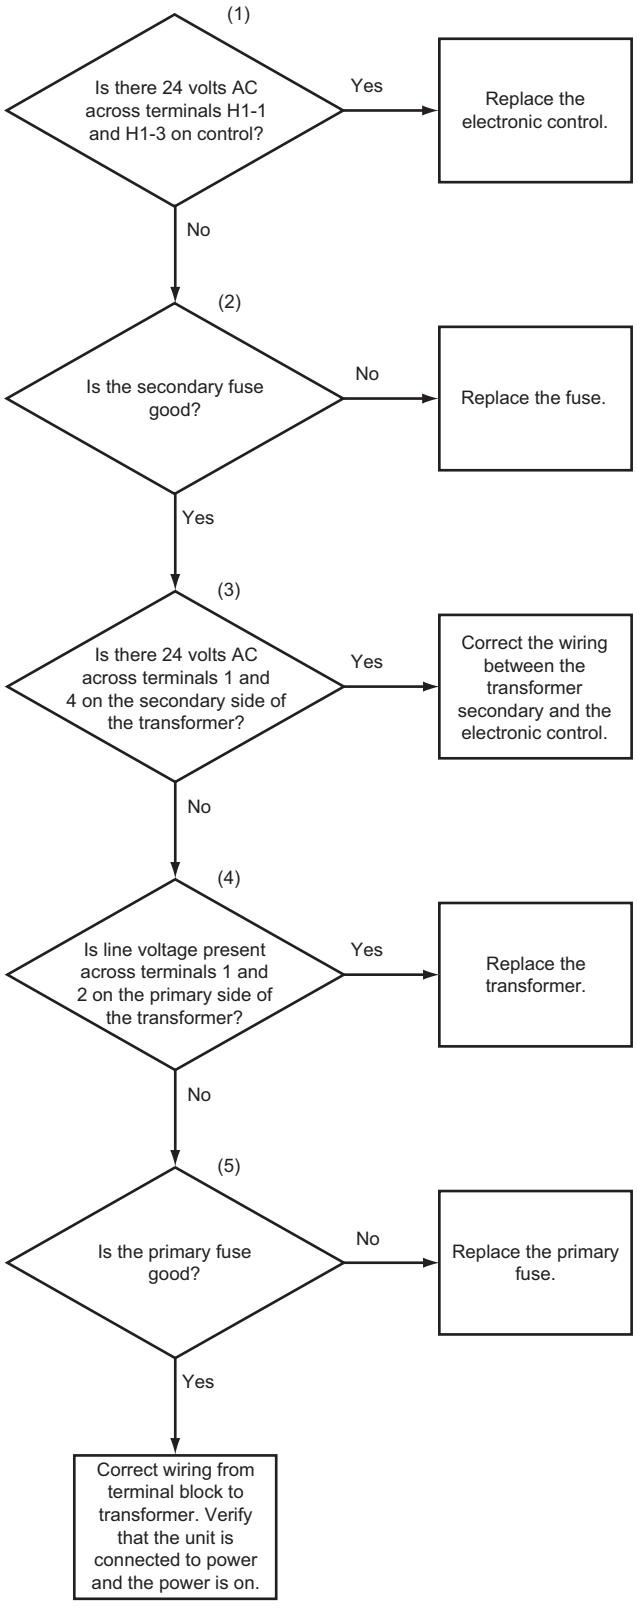
(1)
Is there 24 volts AC across terminals H1-1 and H1-3 on control?
Yes
Replace the electronic control.
No
(2)
Is the secondary fuse good?
No
Replace the fuse.
Yes
(3)
Is there 24 volts AC across terminals 1 and 4 on the secondary side of the transformer?
Yes
Correct the wiring between the transformer secondary and the electronic control.
No
(4)
Is line voltage present across terminals 1 and 2 on the primary side of the transformer?
Yes
Replace the transformer.
No
(5)
Is the primary fuse good?
No
Replace the primary fuse.
Yes
Correct wiring from terminal block to transformer. Verify that the unit is connected to power and the power is on.

TMB1795S

No Display

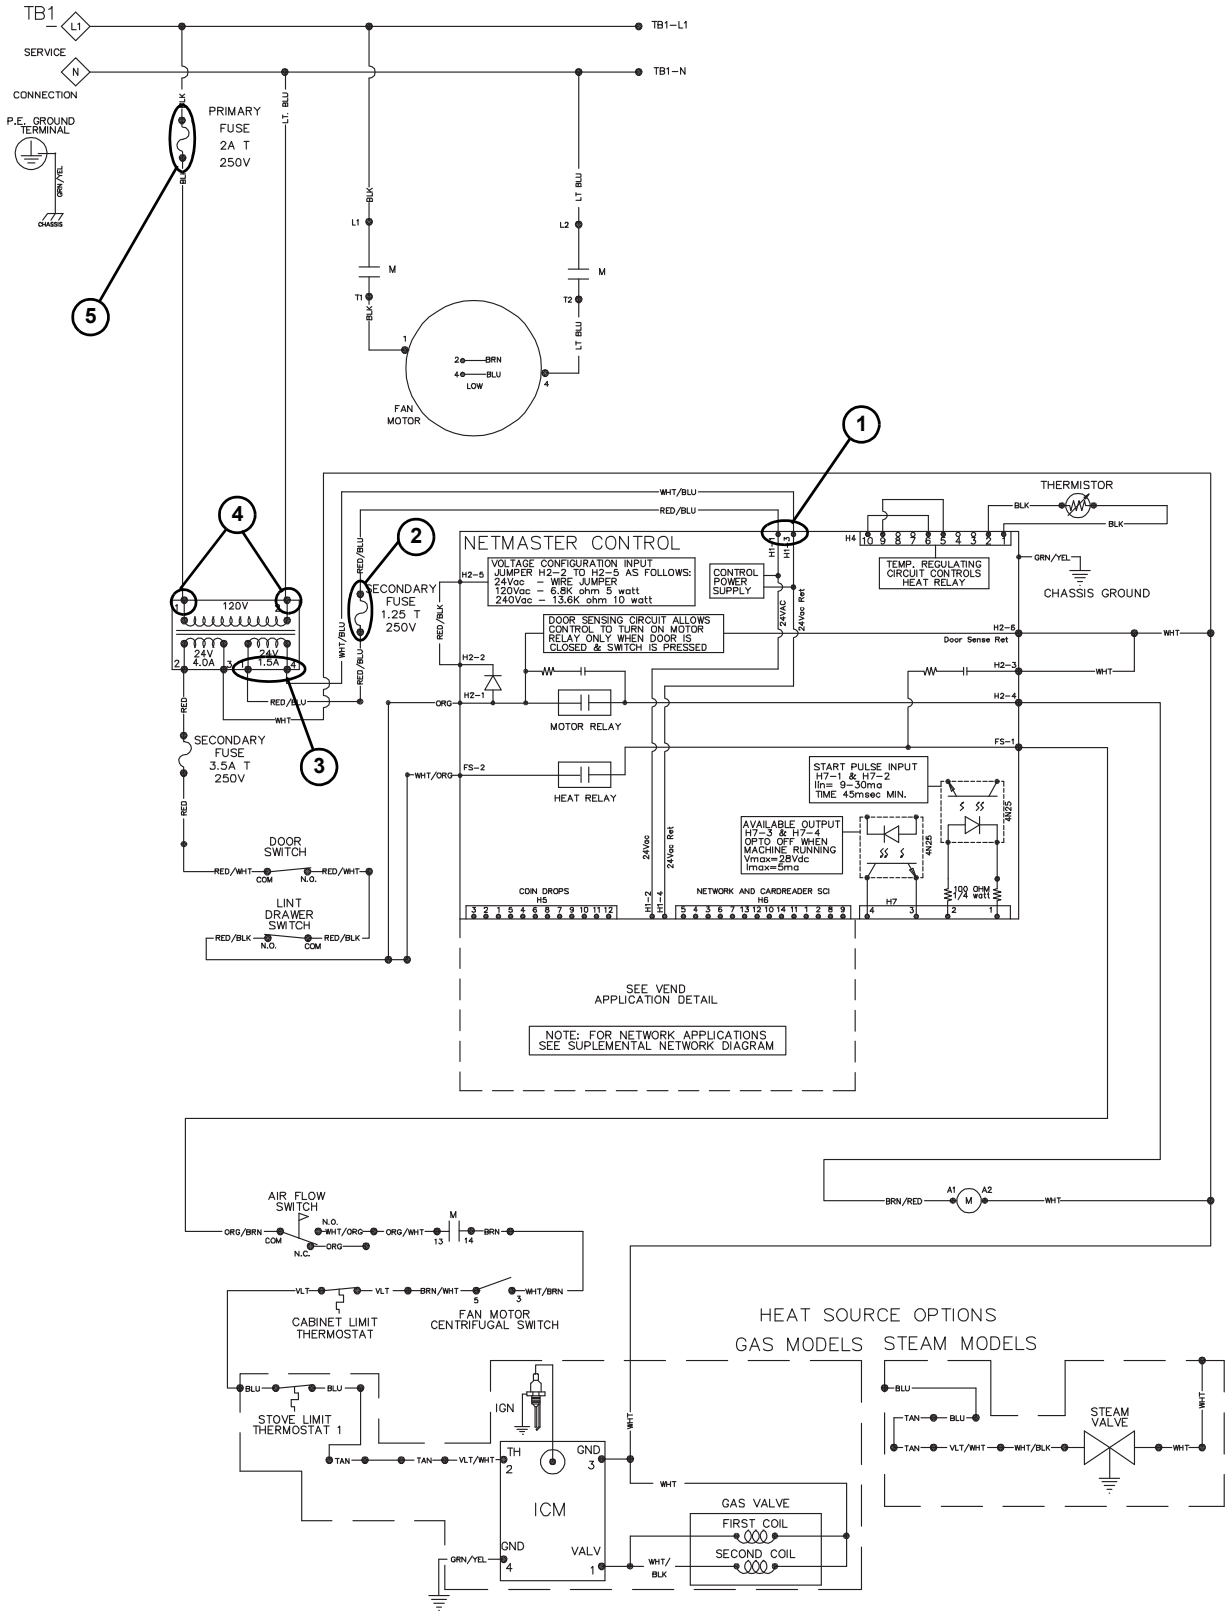

TMB2331S

54. “Door Open” Indicator

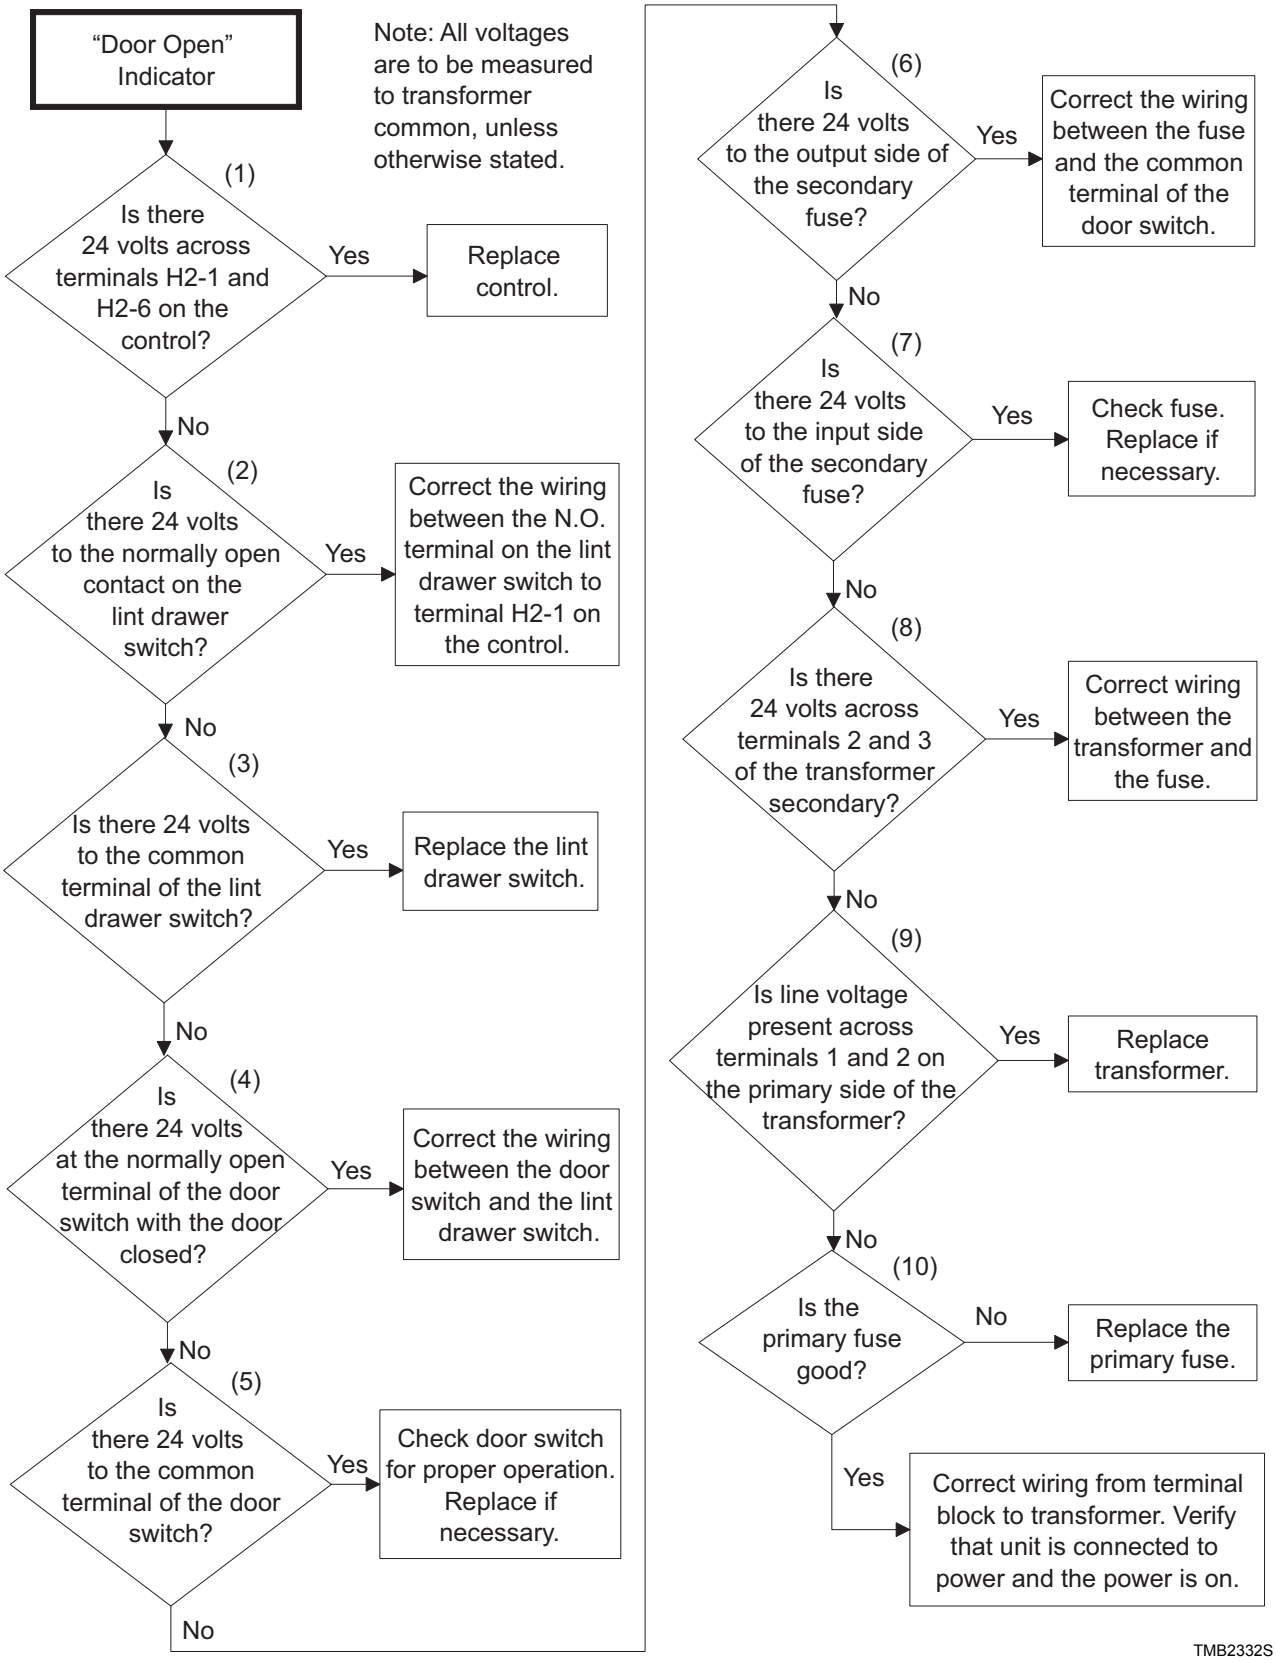
“Door Open” Indicator
Note: All voltages are to be measured to transformer common, unless otherwise stated.
(1)
Is there 24 volts across terminals H2-1 and H2-6 on the control?
Yes
Replace control.
No
(2)
Is there 24 volts to the normally open contact on the lint drawer switch?
Yes
Correct the wiring between the N.O. terminal on the lint drawer switch to terminal H2-1 on the control.
No
(3)
Is there 24 volts to the common terminal of the lint drawer switch?
Yes
Replace the lint drawer switch.
No
(4)
Is there 24 volts at the normally open terminal of the door switch with the door closed?
Yes
Correct the wiring between the door switch and the lint drawer switch.
No
(5)
Is there 24 volts to the common terminal of the door switch?
Yes
Check door switch for proper operation. Replace if necessary.
No
(6)
Is there 24 volts to the output side of the secondary fuse?
Yes
Correct the wiring between the fuse and the common terminal of the door switch.
No
(7)
Is there 24 volts to the input side of the secondary fuse?
Yes
Check fuse. Replace if necessary.
No
(8)
Is there 24 volts across terminals 2 and 3 of the transformer secondary?
Yes
Correct wiring between the transformer and the fuse.
No
(9)
Is line voltage present across terminals 1 and 2 on the primary side of the transformer?
Yes
Replace transformer.
No
(10)
Is the primary fuse good?
No
Replace the primary fuse.
Yes
Correct wiring from terminal block to transformer. Verify that unit is connected to power and the power is on.
TMB2332S

"Door Open" Indicator

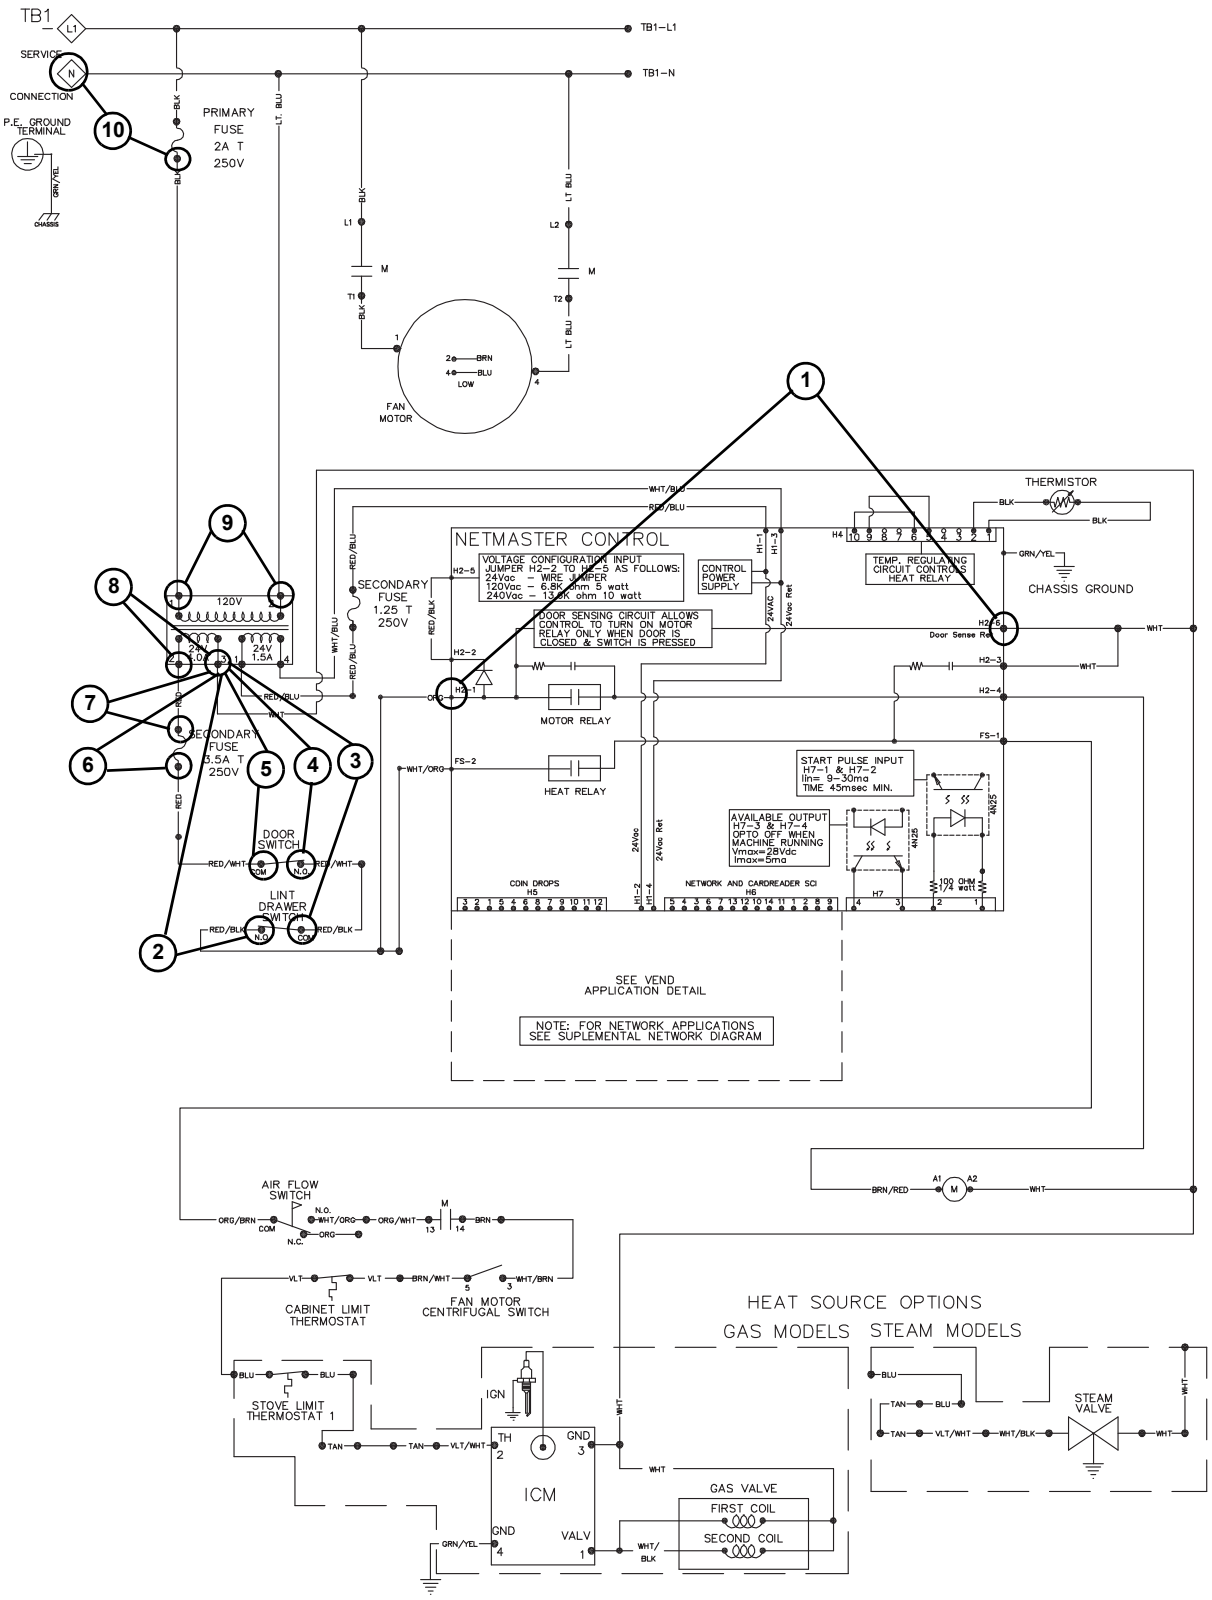

TMB2331S

55. No Start/Run

***Note: For steps 2 and 3. For 208/240 1 phase, both lines to the motor are controlled by contacts. Please check second set of contacts. For 3 phase units, the three legs supplied to the moter will be controlled by N.O. contacts. Please check all three legs.**

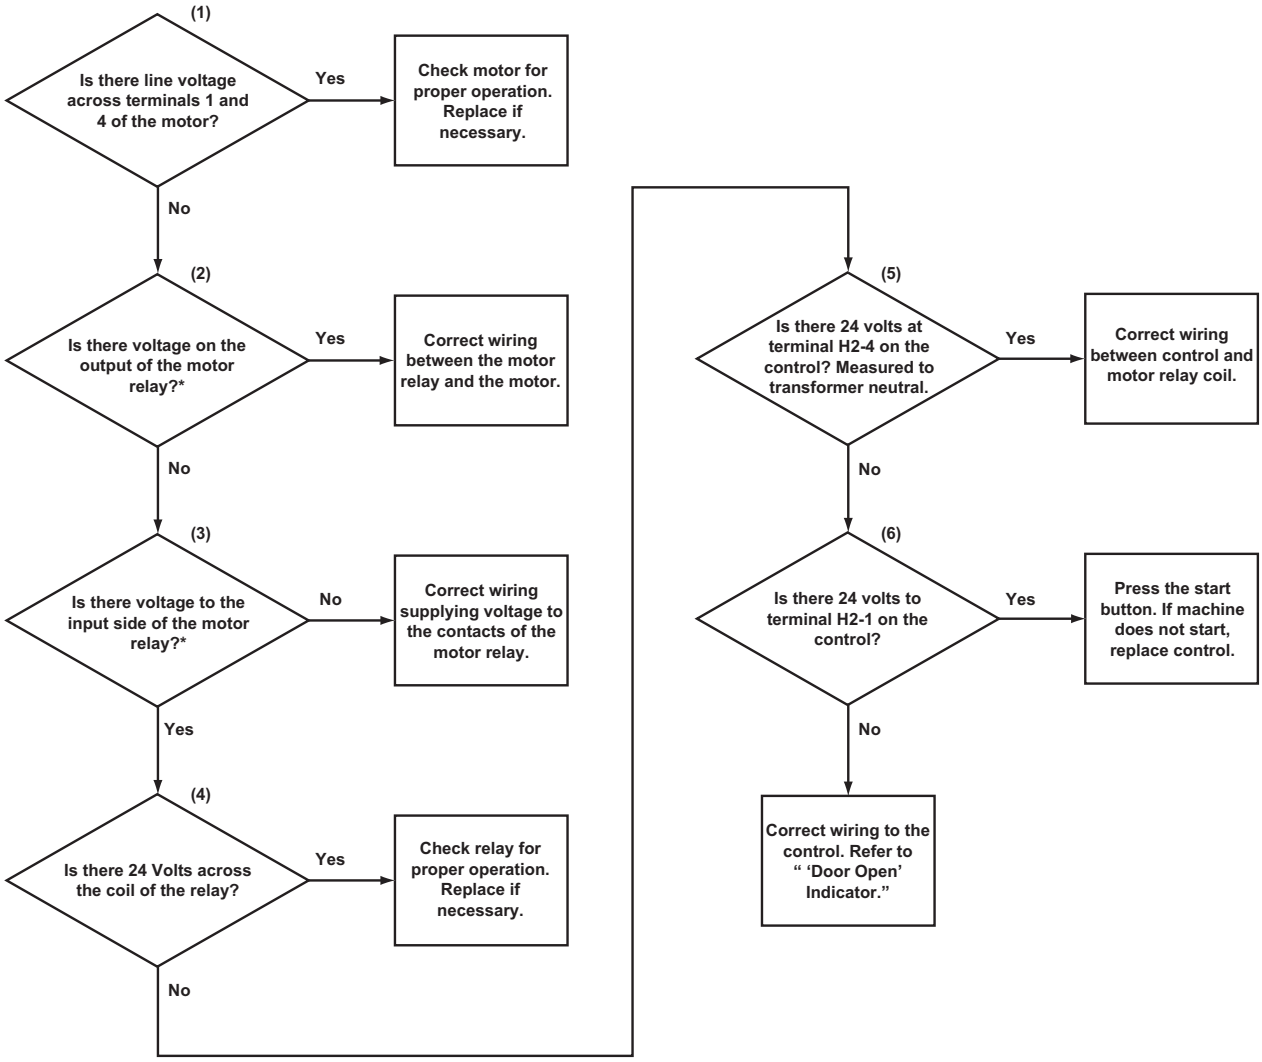
(1)
Is there line voltage across terminals 1 and 4 of the motor?
Yes
Check motor for proper operation. Replace if necessary.
No
(2)
Is there voltage on the output of the motor relay?*
Yes
Correct wiring between the motor relay and the motor.
No
(3)
Is there voltage to the input side of the motor relay?*
No
Correct wiring supplying voltage to the contacts of the motor relay.
Yes
(4)
Is there 24 Volts across the coil of the relay?
Yes
Check relay for proper operation. Replace if necessary.
No
(5)
Is there 24 volts at terminal H2-4 on the control? Measured to transformer neutral.
Yes
Correct wiring between control and motor relay coil.
No
(6)
Is there 24 volts to terminal H2-1 on the control?
Yes
Press the start button. If machine does not start, replace control.
No
Correct wiring to the control. Refer to " 'Door Open' Indicator."

TMB1799S

No Start/Run

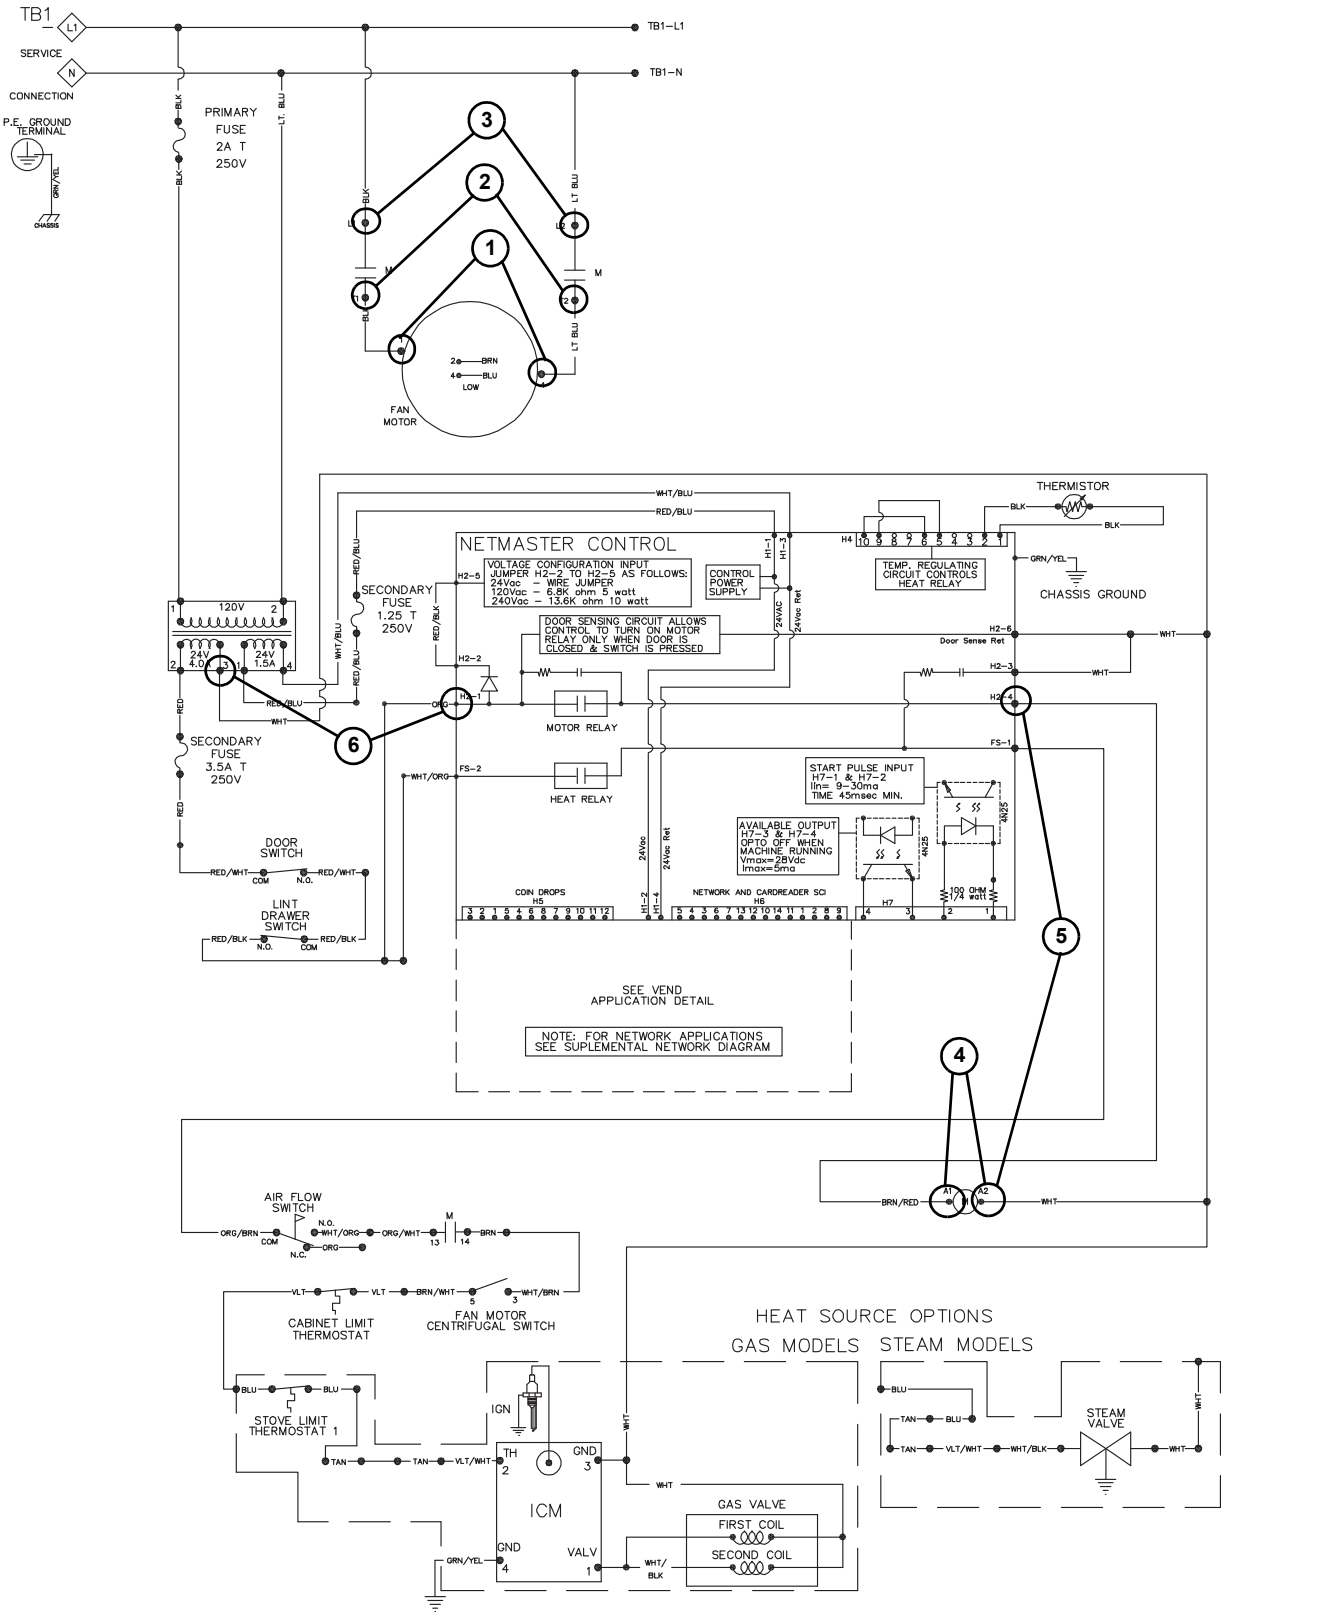

TMB2331S

56. Unit Will Not Heat – Gas

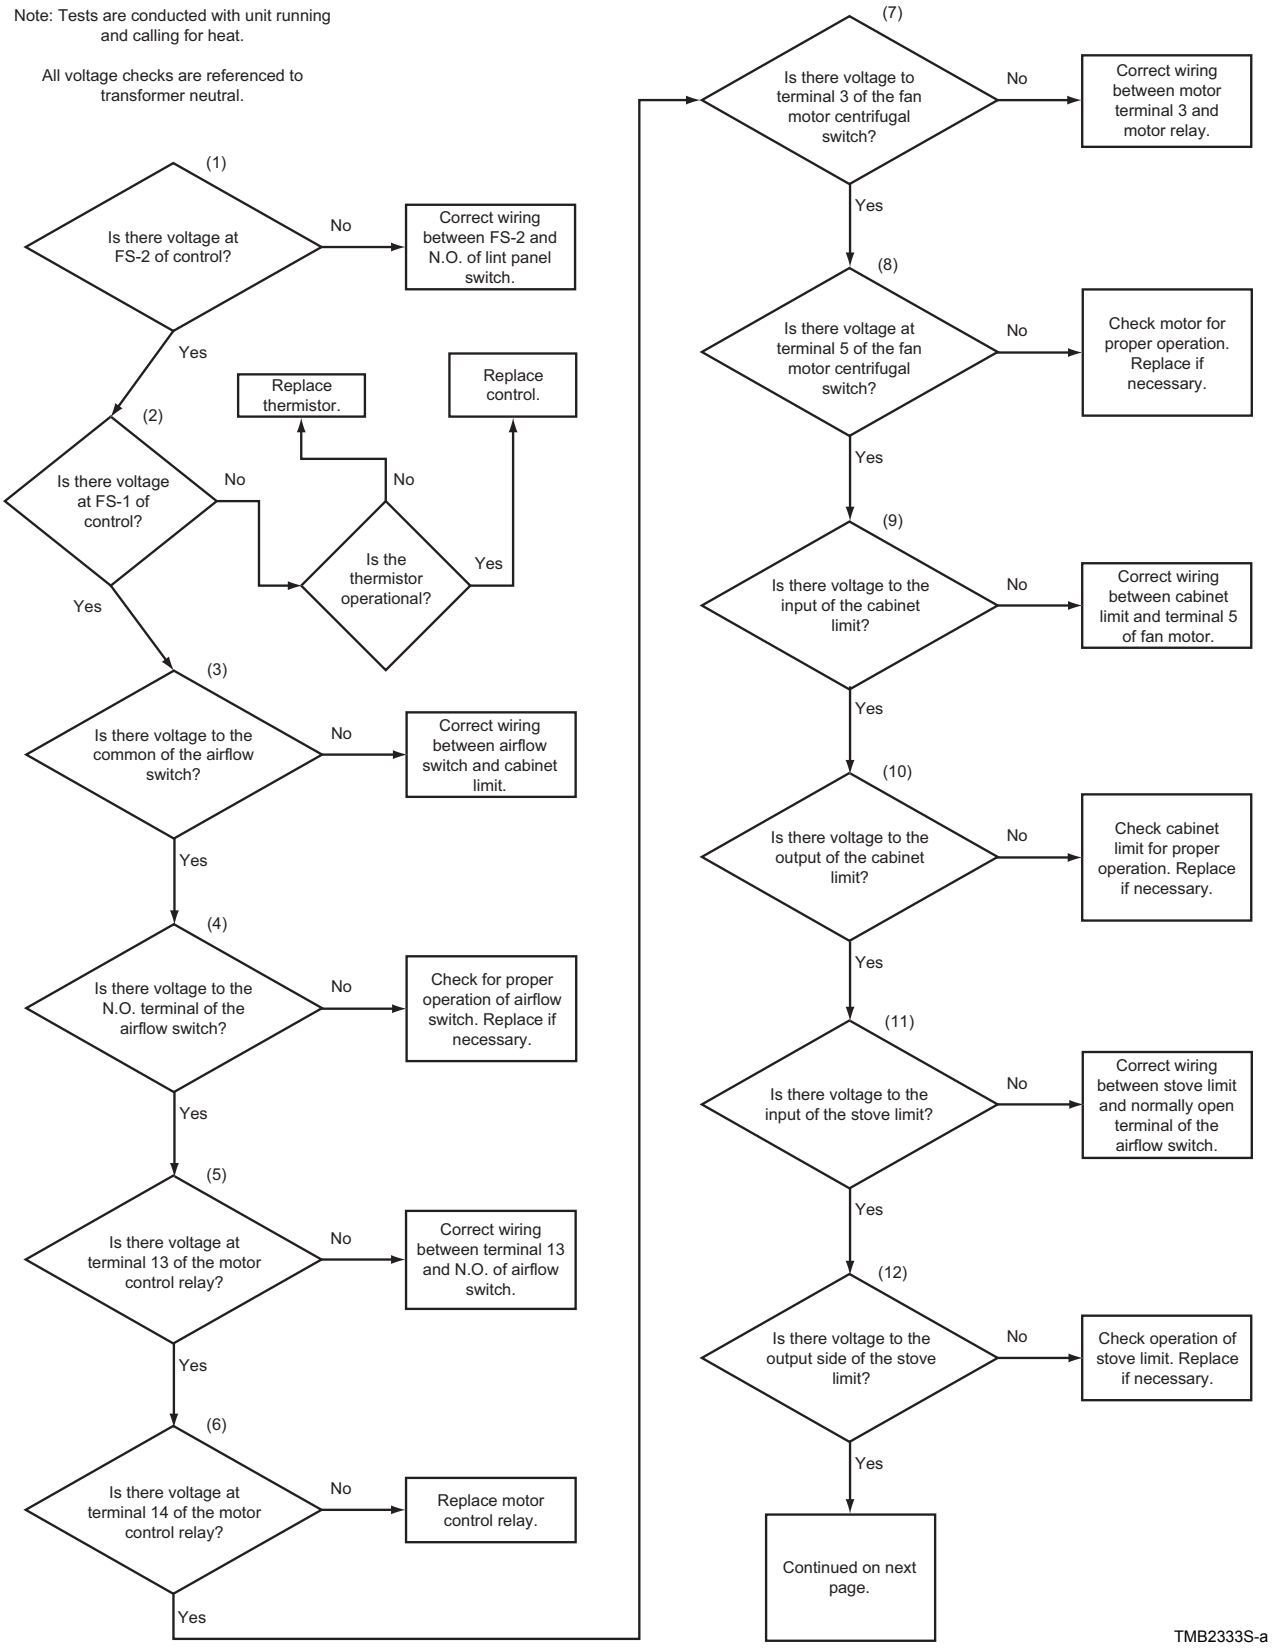
Note: Tests are conducted with unit running and calling for heat.
All voltage checks are referenced to transformer neutral.
(1)
Is there voltage at FS-2 of control?
No
Correct wiring between FS-2 and N.O. of lint panel switch.
Yes
(2)
Is there voltage at FS-1 of control?
No
Is the thermistor operational?
No
Replace thermistor.
Yes
Replace control.
Yes
(3)
Is there voltage to the common of the airflow switch?
No
Correct wiring between airflow switch and cabinet limit.
Yes
(4)
Is there voltage to the N.O. terminal of the airflow switch?
No
Check for proper operation of airflow switch. Replace if necessary.
Yes
(5)
Is there voltage at terminal 13 of the motor control relay?
No
Correct wiring between terminal 13 and N.O. of airflow switch.
Yes
(6)
Is there voltage at terminal 14 of the motor control relay?
No
Replace motor control relay.
Yes
(7)
Is there voltage to terminal 3 of the fan motor centrifugal switch?
No
Correct wiring between motor terminal 3 and motor relay.
Yes
(8)
Is there voltage at terminal 5 of the fan motor centrifugal switch?
No
Check motor for proper operation. Replace if necessary.
Yes
(9)
Is there voltage to the input of the cabinet limit?
No
Correct wiring between cabinet limit and terminal 5 of fan motor.
Yes
(10)
Is there voltage to the output of the cabinet limit?
No
Check cabinet limit for proper operation. Replace if necessary.
Yes
(11)
Is there voltage to the input of the stove limit?
No
Correct wiring between stove limit and normally open terminal of the airflow switch.
Yes
(12)
Is there voltage to the output side of the stove limit?
No
Check operation of stove limit. Replace if necessary.
Yes
Continued on next page.
TMB2333S-a

56. Unit Will Not Heat – Gas (continued)

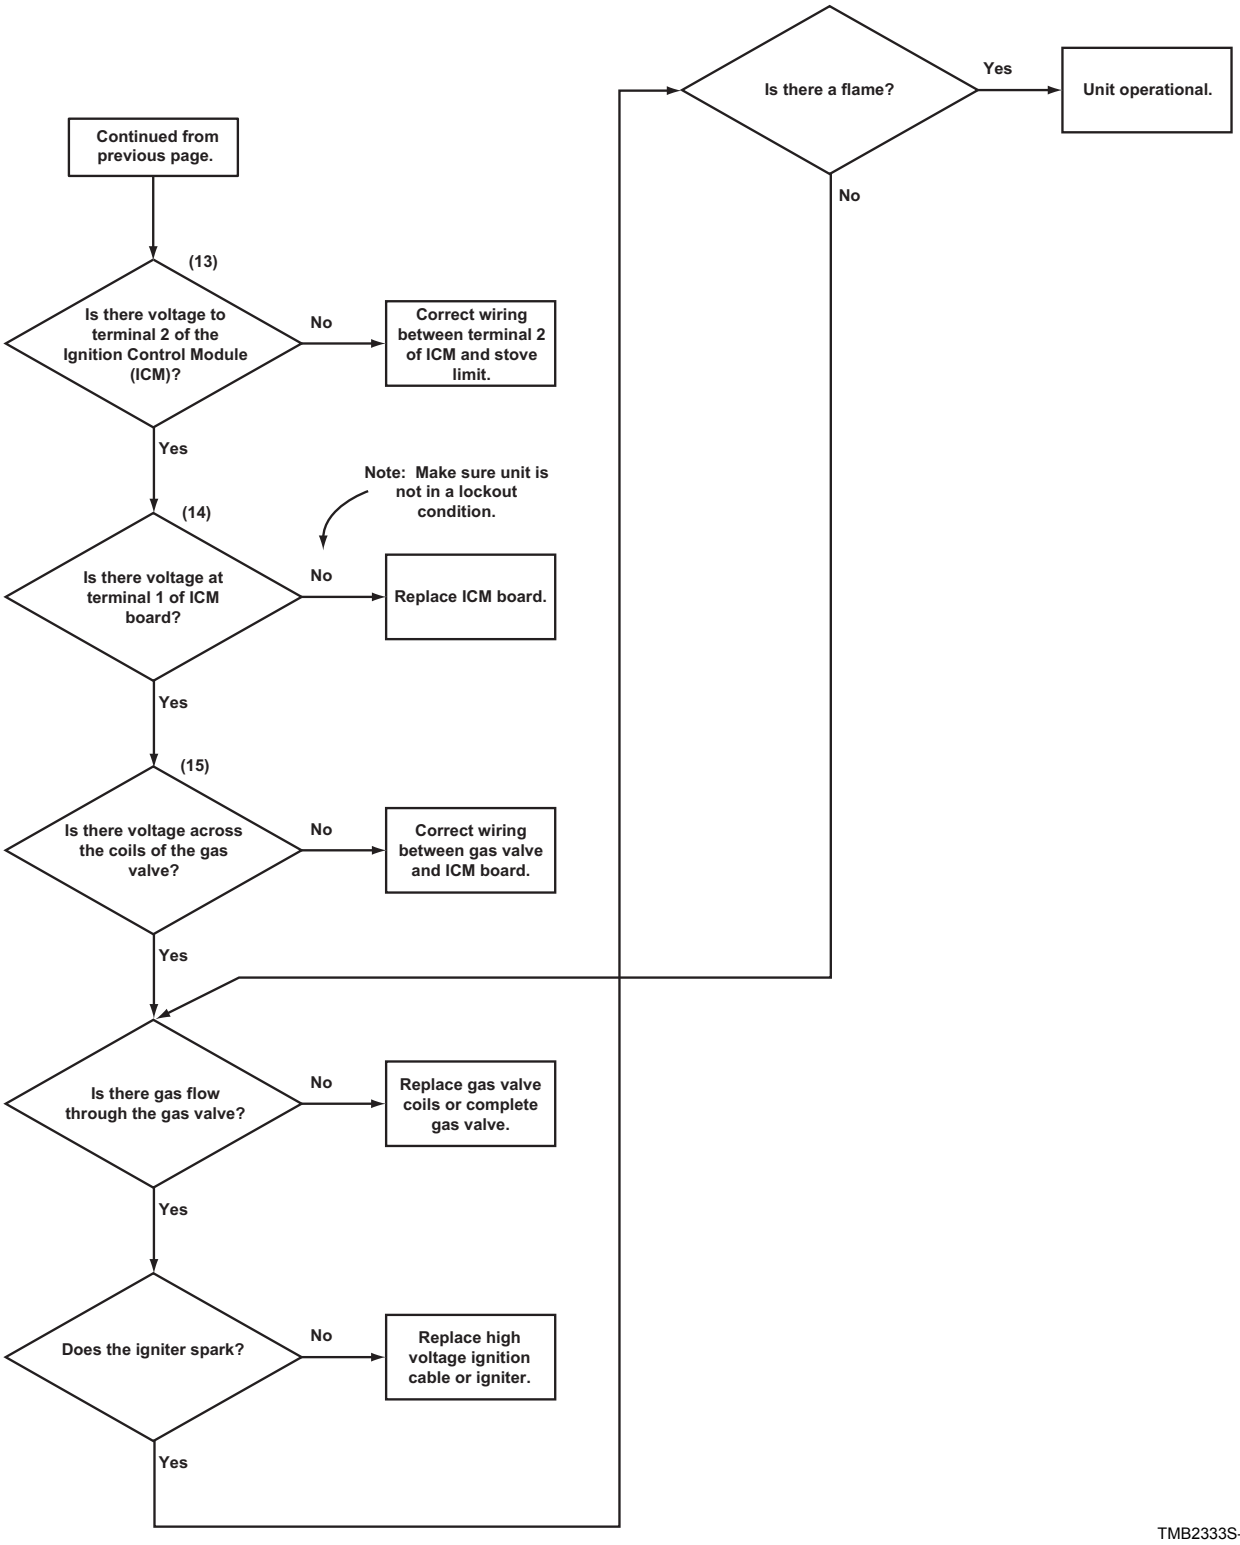

Please see following page for wiring diagram information.

Unit Will Not Heat – Gas

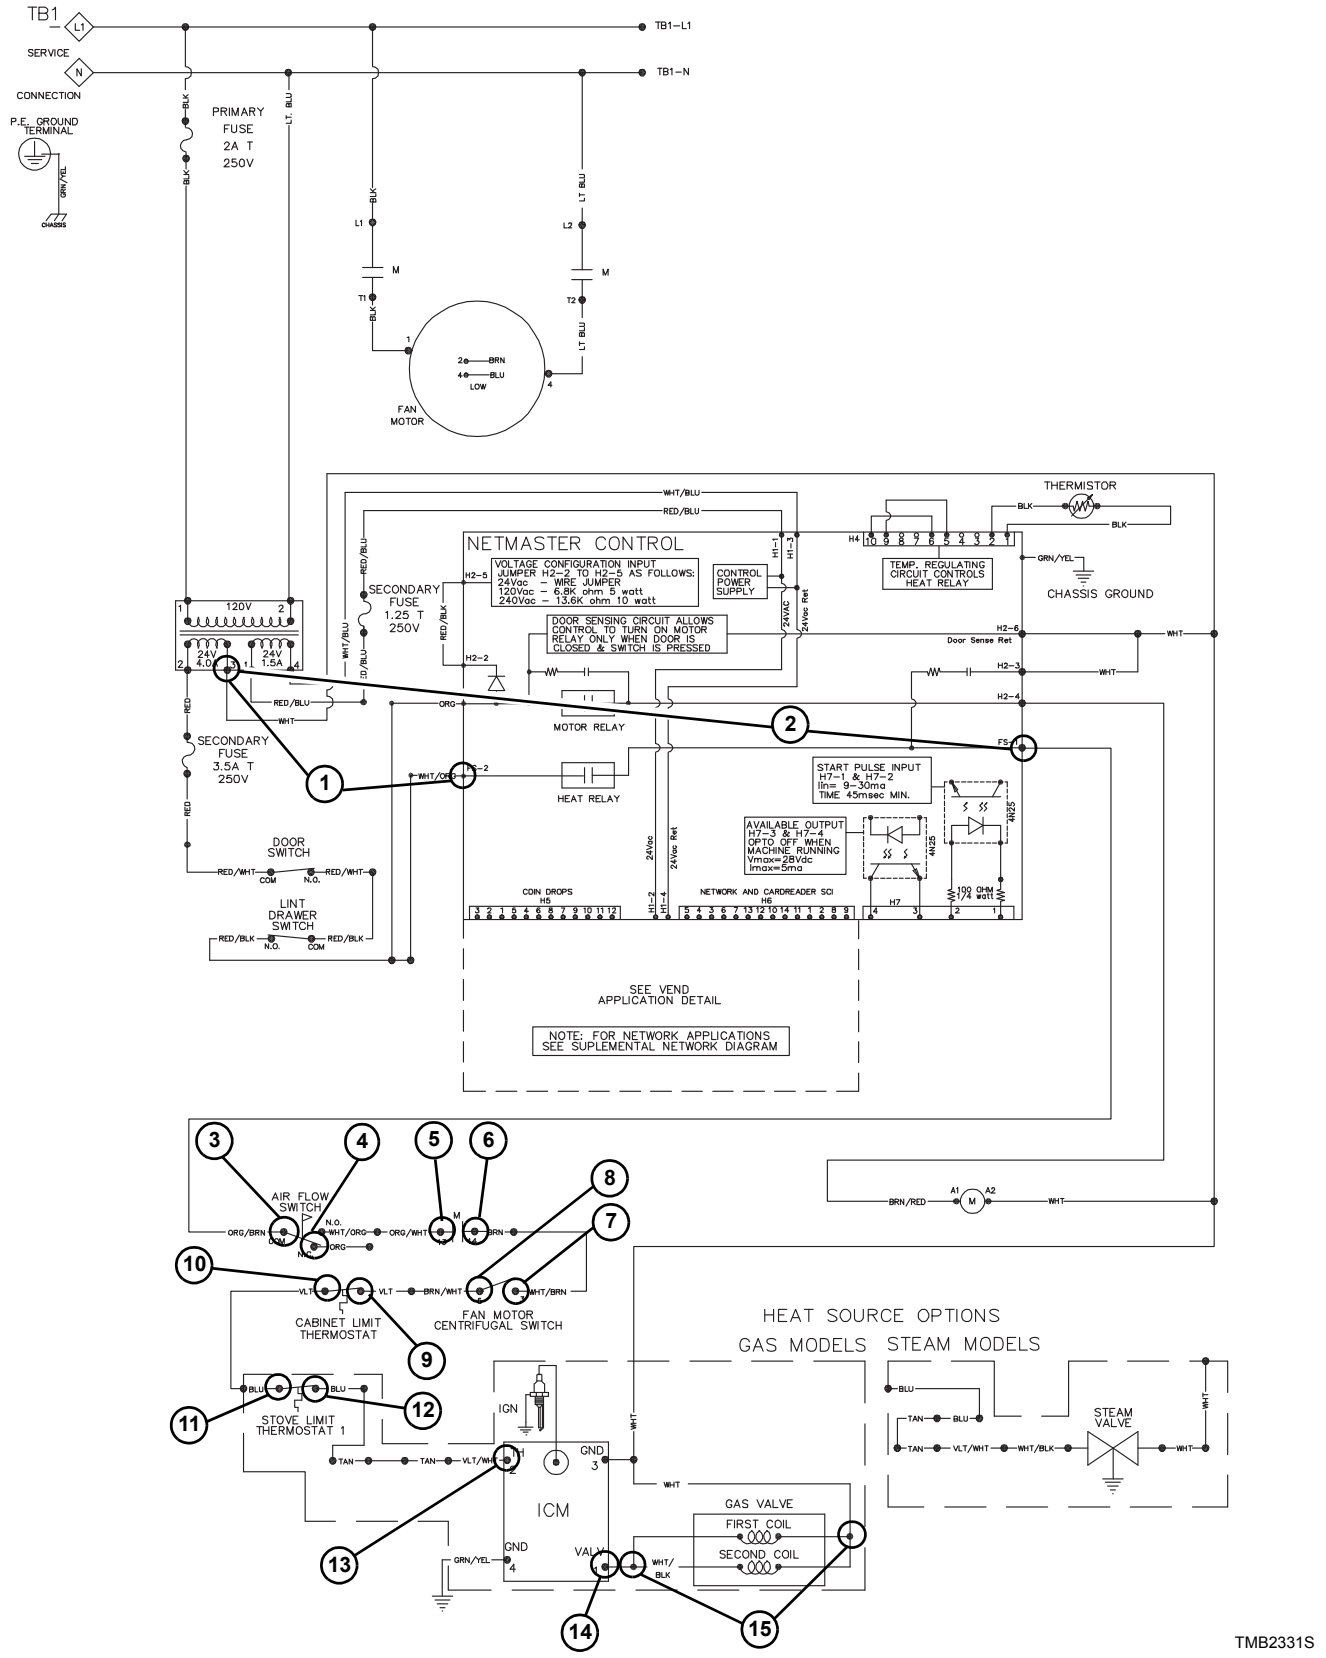

TMB2331S

57. Unit Will Not Heat – Steam

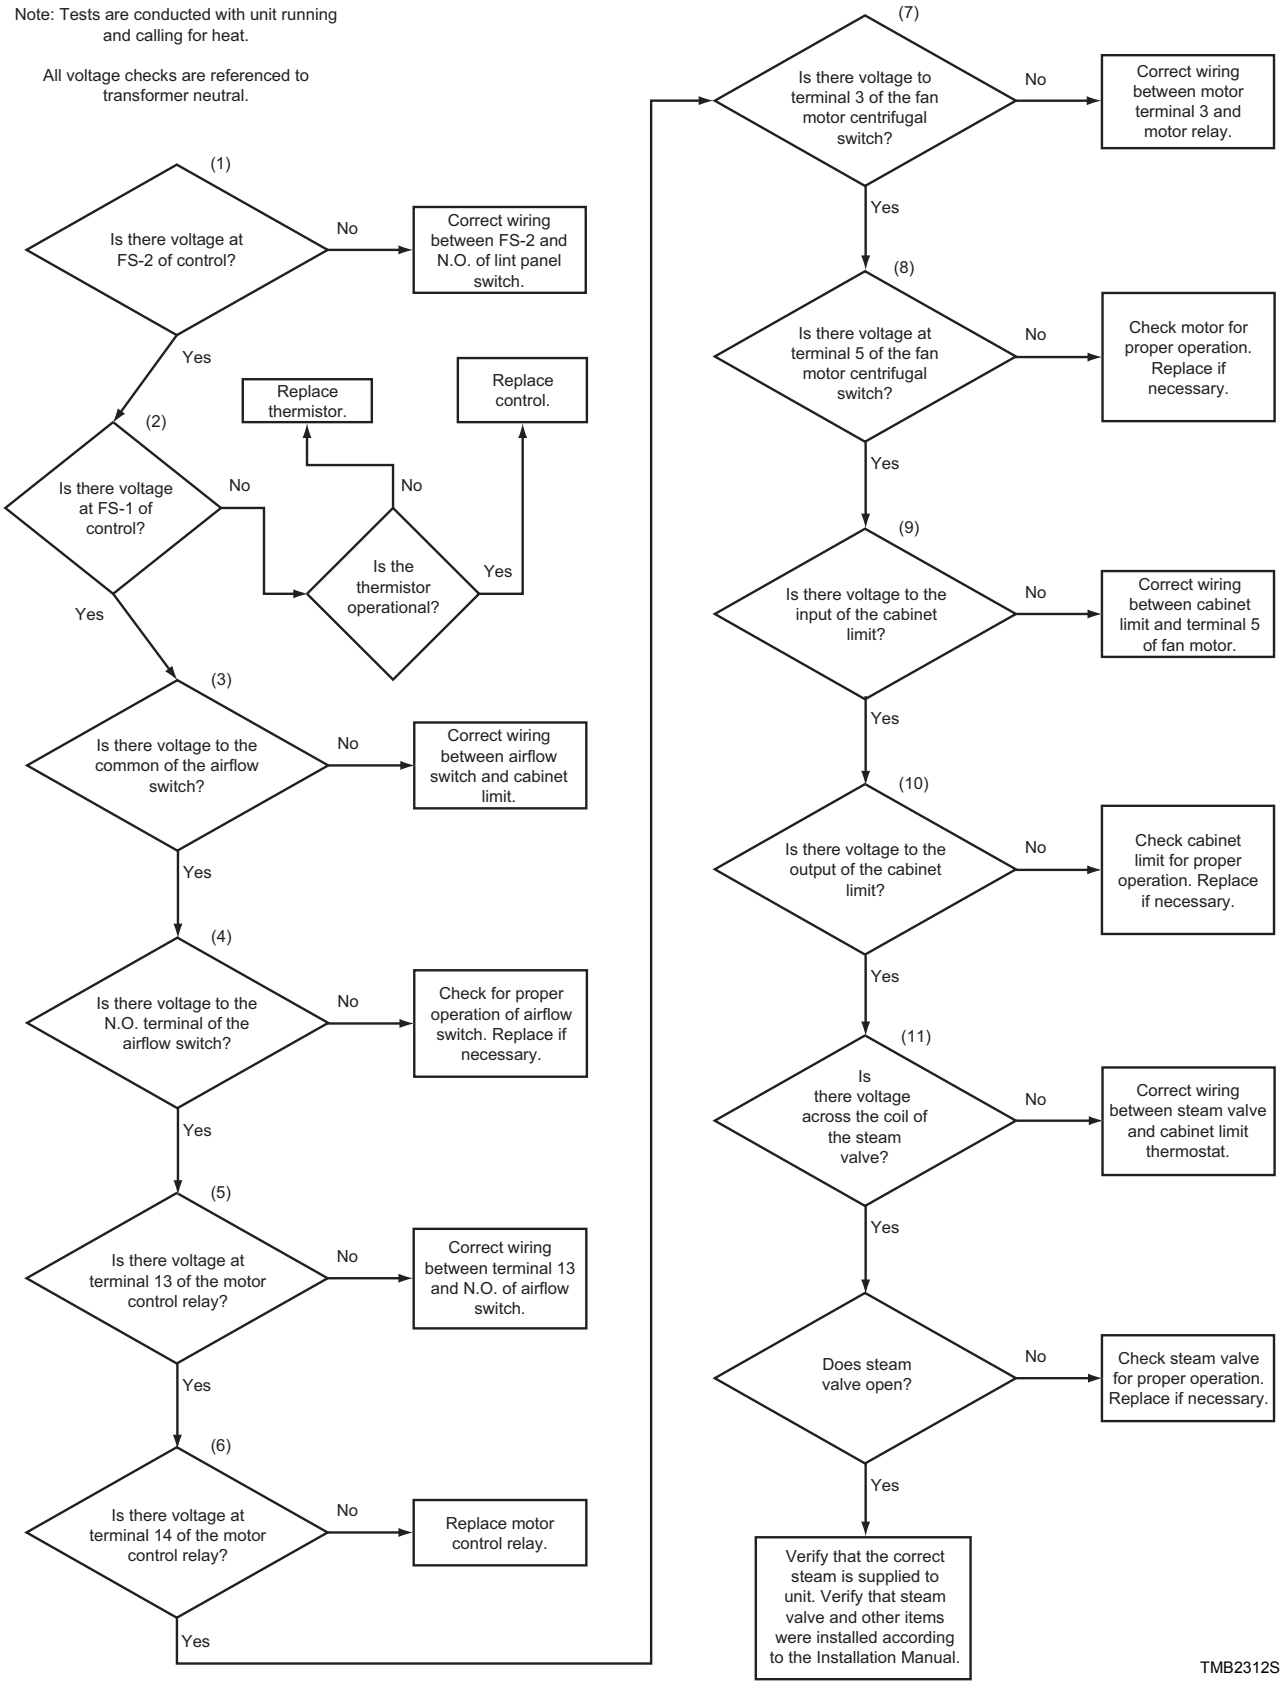
Note: Tests are conducted with unit running and calling for heat.
All voltage checks are referenced to transformer neutral.
(1)
Is there voltage at FS-2 of control?
No
Correct wiring between FS-2 and N.O. of lint panel switch.
Yes
(2)
Is there voltage at FS-1 of control?
No
Is the thermistor operational?
No
Replace thermistor.
Yes
Replace control.
Yes
(3)
Is there voltage to the common of the airflow switch?
No
Correct wiring between airflow switch and cabinet limit.
Yes
(4)
Is there voltage to the N.O. terminal of the airflow switch?
No
Check for proper operation of airflow switch. Replace if necessary.
Yes
(5)
Is there voltage at terminal 13 of the motor control relay?
No
Correct wiring between terminal 13 and N.O. of airflow switch.
Yes
(6)
Is there voltage at terminal 14 of the motor control relay?
No
Replace motor control relay.
Yes
(7)
Is there voltage to terminal 3 of the fan motor centrifugal switch?
No
Correct wiring between motor terminal 3 and motor relay.
Yes
(8)
Is there voltage at terminal 5 of the fan motor centrifugal switch?
No
Check motor for proper operation. Replace if necessary.
Yes
(9)
Is there voltage to the input of the cabinet limit?
No
Correct wiring between cabinet limit and terminal 5 of fan motor.
Yes
(10)
Is there voltage to the output of the cabinet limit?
No
Check cabinet limit for proper operation. Replace if necessary.
Yes
(11)
Is there voltage across the coil of the steam valve?
No
Correct wiring between steam valve and cabinet limit thermostat.
Yes
Does steam valve open?
No
Check steam valve for proper operation. Replace if necessary.
Yes
Verify that the correct steam is supplied to unit. Verify that steam valve and other items were installed according to the Installation Manual.
TMB2312S

Unit Will Not Heat – Steam

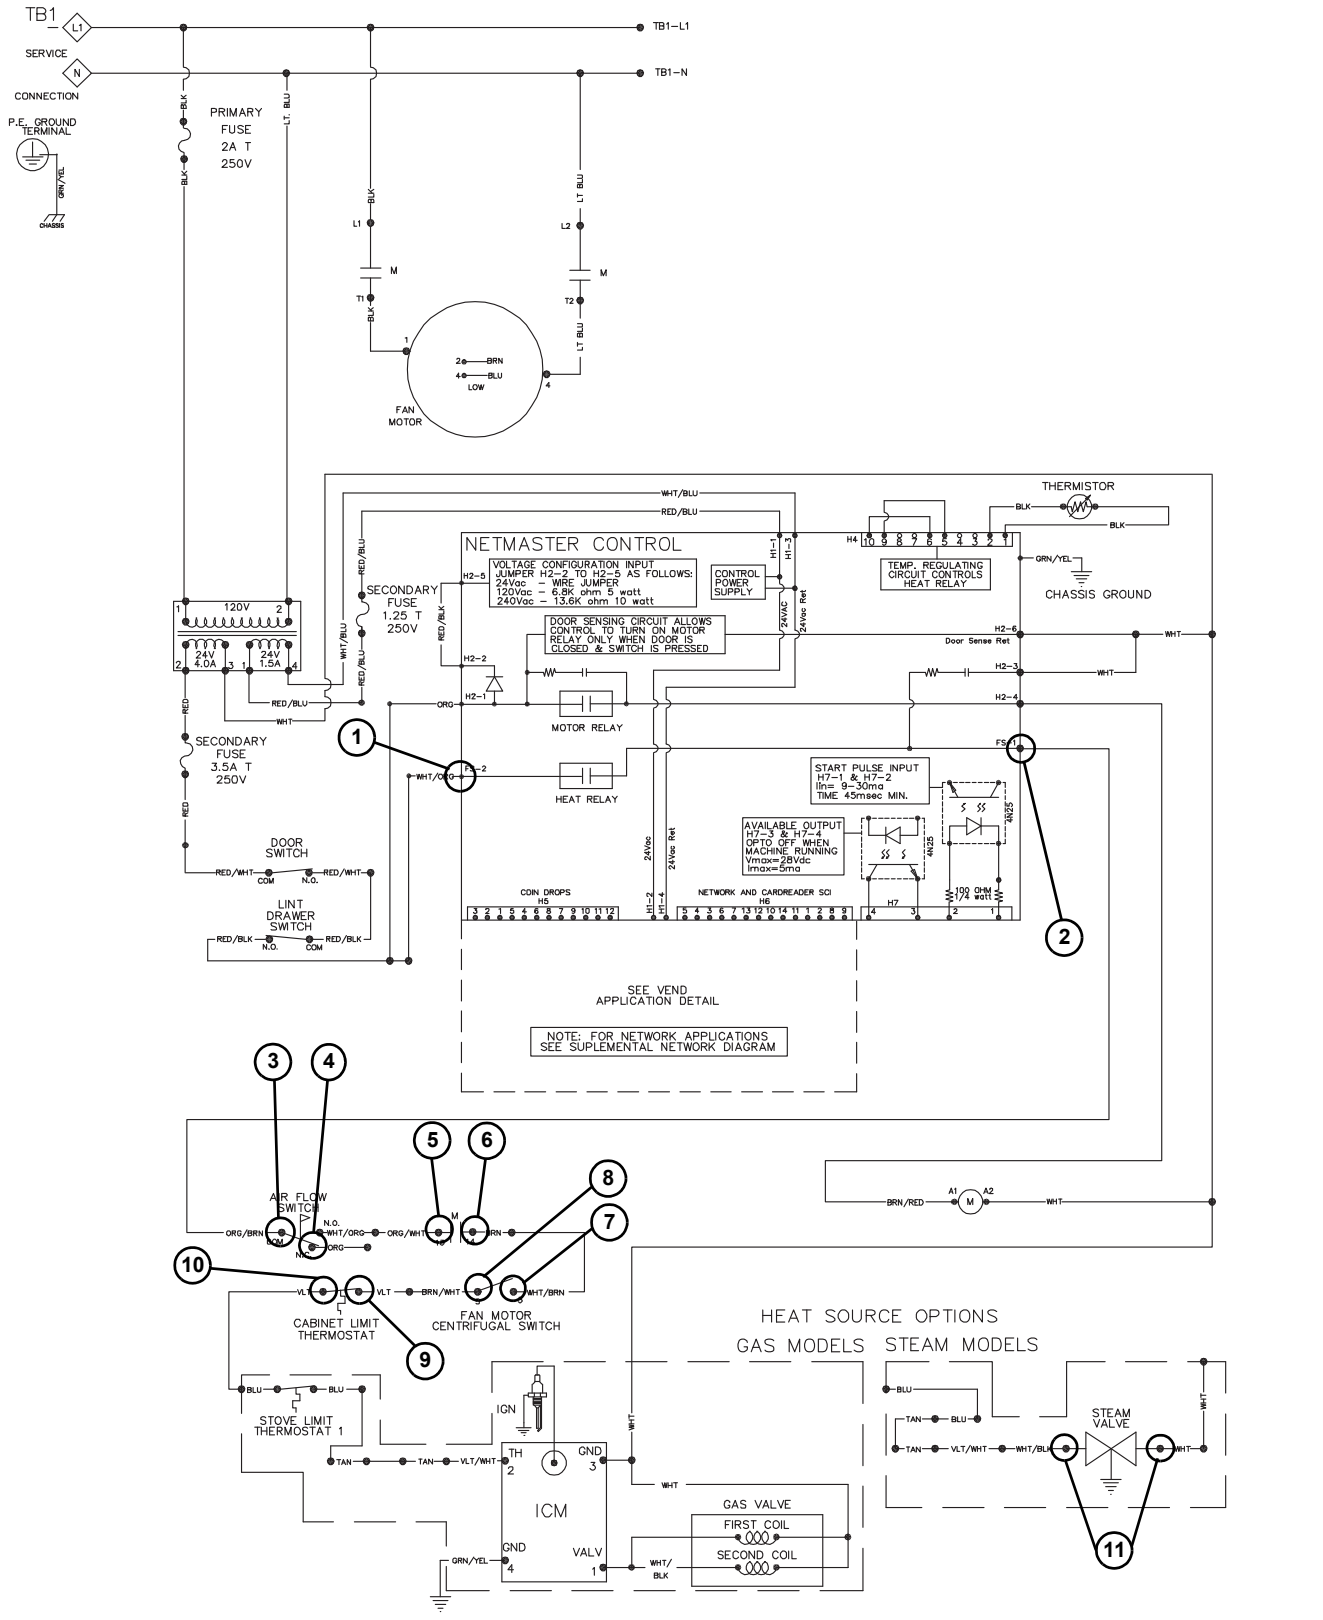

TMB2331S

58. Unit Will Not Heat – Electric

Note: Tests are conducted with unit running and calling for heat.

All voltage checks are referenced to transformer neutral.

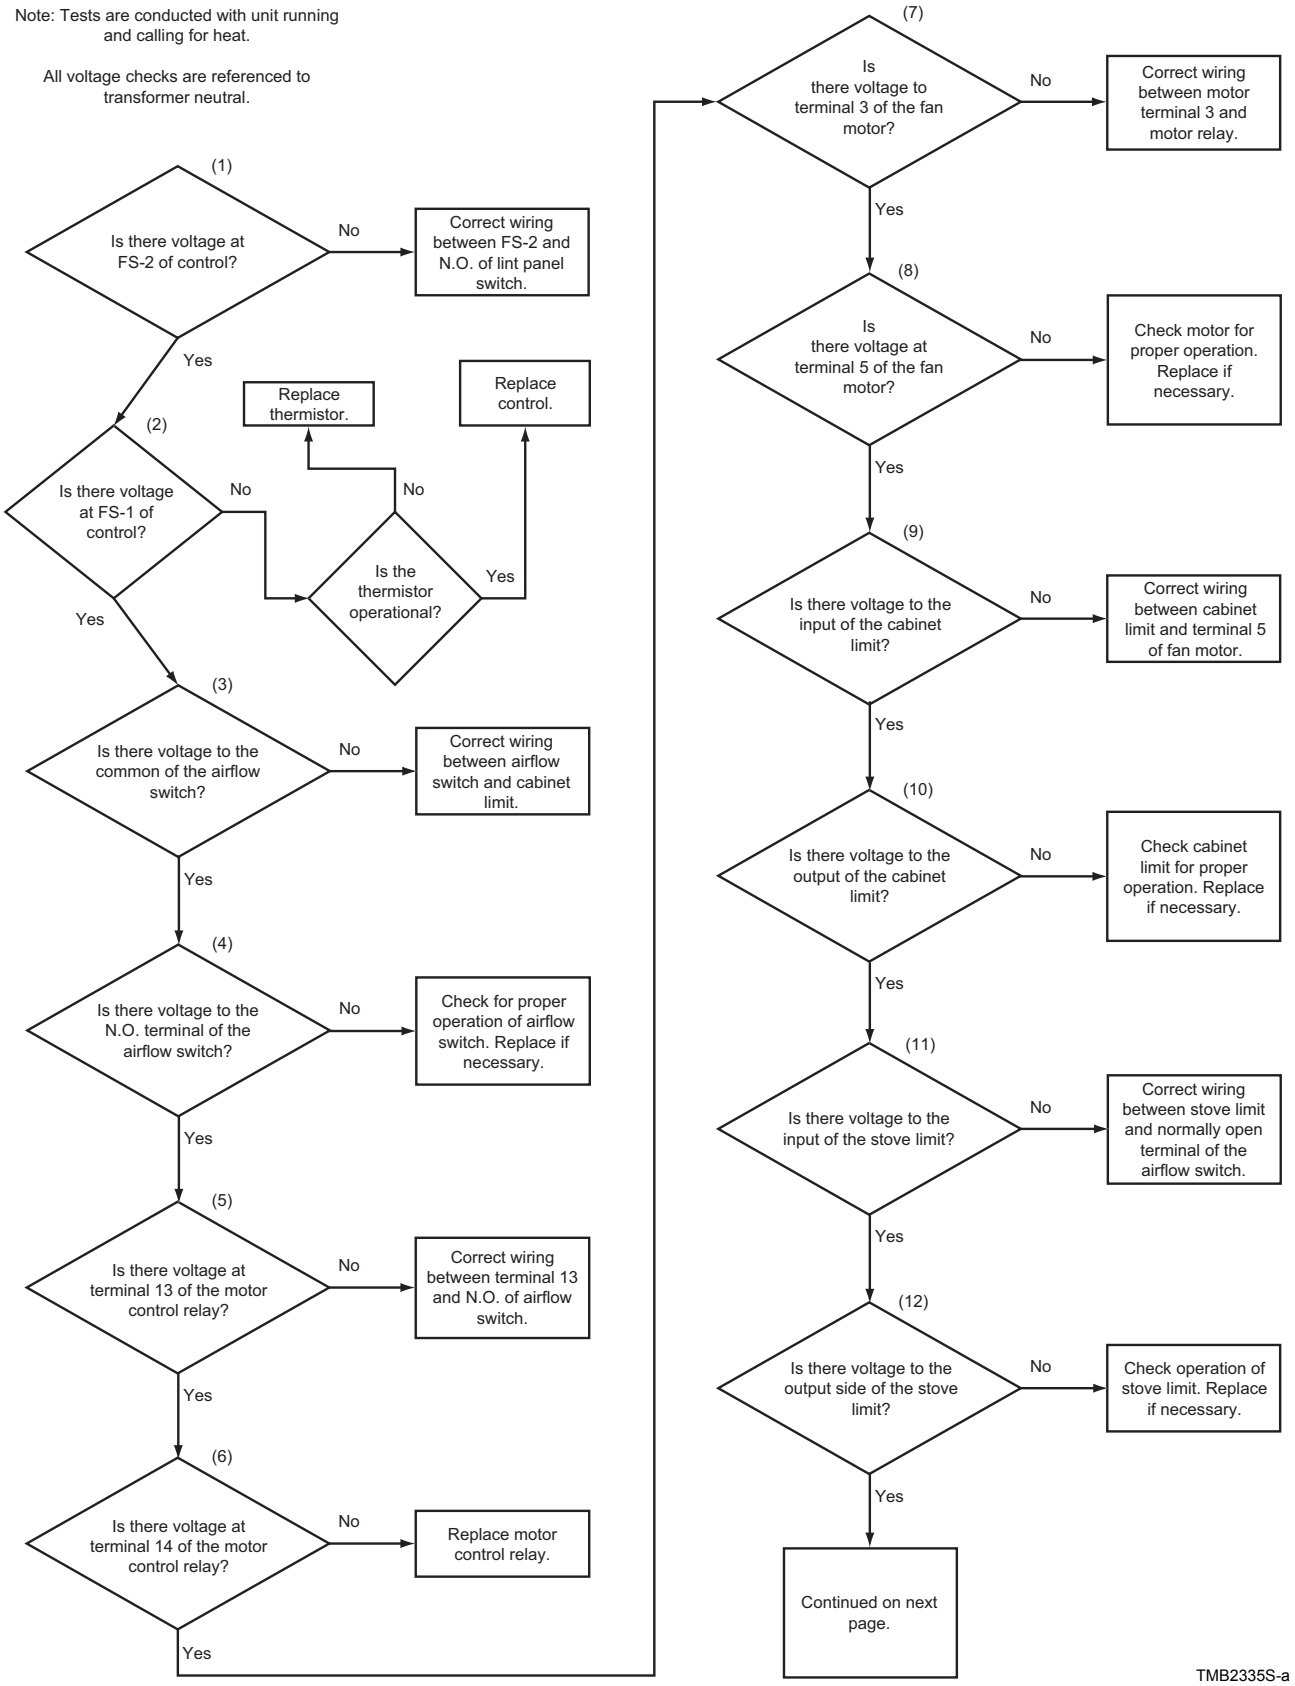
(1)
Is there voltage at FS-2 of control?
No
Correct wiring between FS-2 and N.O. of lint panel switch.
Yes
(2)
Is there voltage at FS-1 of control?
No
Replace thermistor.
No
Is the thermistor operational?
Yes
Replace control.
Yes
(3)
Is there voltage to the common of the airflow switch?
No
Correct wiring between airflow switch and cabinet limit.
Yes
(4)
Is there voltage to the N.O. terminal of the airflow switch?
No
Check for proper operation of airflow switch. Replace if necessary.
Yes
(5)
Is there voltage at terminal 13 of the motor control relay?
No
Correct wiring between terminal 13 and N.O. of airflow switch.
Yes
(6)
Is there voltage at terminal 14 of the motor control relay?
No
Replace motor control relay.
Yes
(7)
Is there voltage to terminal 3 of the fan motor?
No
Correct wiring between motor terminal 3 and motor relay.
Yes
(8)
Is there voltage at terminal 5 of the fan motor?
No
Check motor for proper operation. Replace if necessary.
Yes
(9)
Is there voltage to the input of the cabinet limit?
No
Correct wiring between cabinet limit and terminal 5 of fan motor.
Yes
(10)
Is there voltage to the output of the cabinet limit?
No
Check cabinet limit for proper operation. Replace if necessary.
Yes
(11)
Is there voltage to the input of the stove limit?
No
Correct wiring between stove limit and normally open terminal of the airflow switch.
Yes
(12)
Is there voltage to the output side of the stove limit?
No
Check operation of stove limit. Replace if necessary.
Yes
Continued on next page.

TMB2335S-a

58. Unit Will Not Heat – Electric (continued)

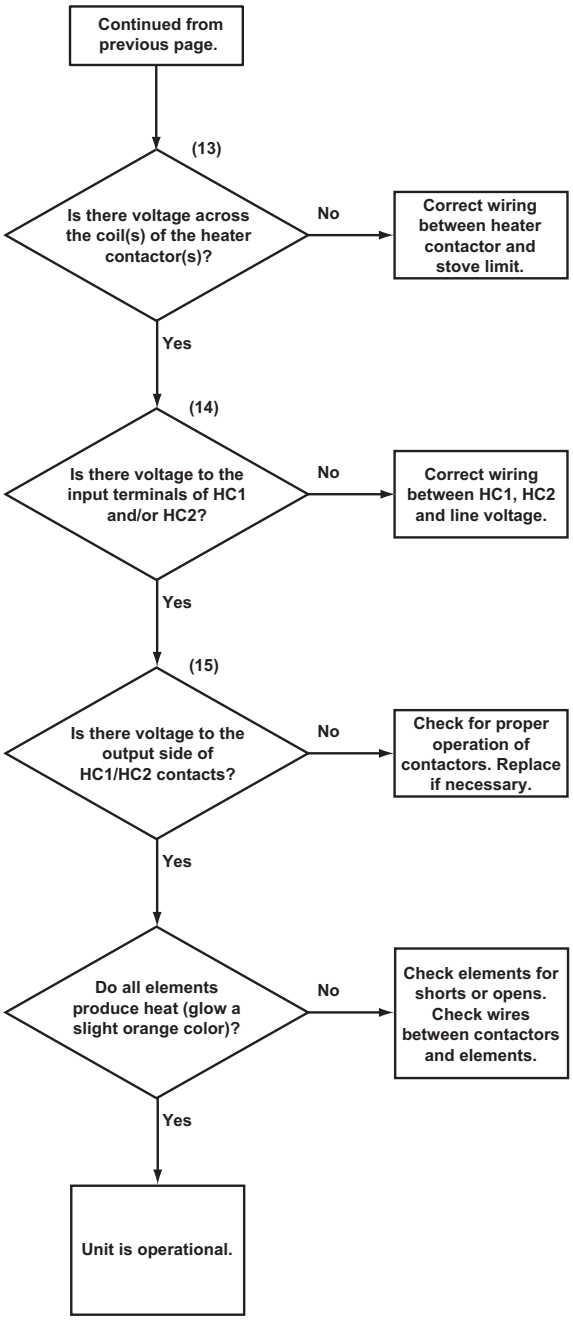
Continued from previous page.
(13)
Is there voltage across the coil(s) of the heater contactor(s)?
No
Correct wiring between heater contactor and stove limit.
Yes
(14)
Is there voltage to the input terminals of HC1 and/or HC2?
No
Correct wiring between HC1, HC2 and line voltage.
Yes
(15)
Is there voltage to the output side of HC1/HC2 contacts?
No
Check for proper operation of contactors. Replace if necessary.
Yes
Do all elements produce heat (glow a slight orange color)?
No
Check elements for shorts or opens. Check wires between contactors and elements.
Yes
Unit is operational.

TMB2335S-b

Please see following page for wiring diagram information.

Unit Will Not Heat – Electric

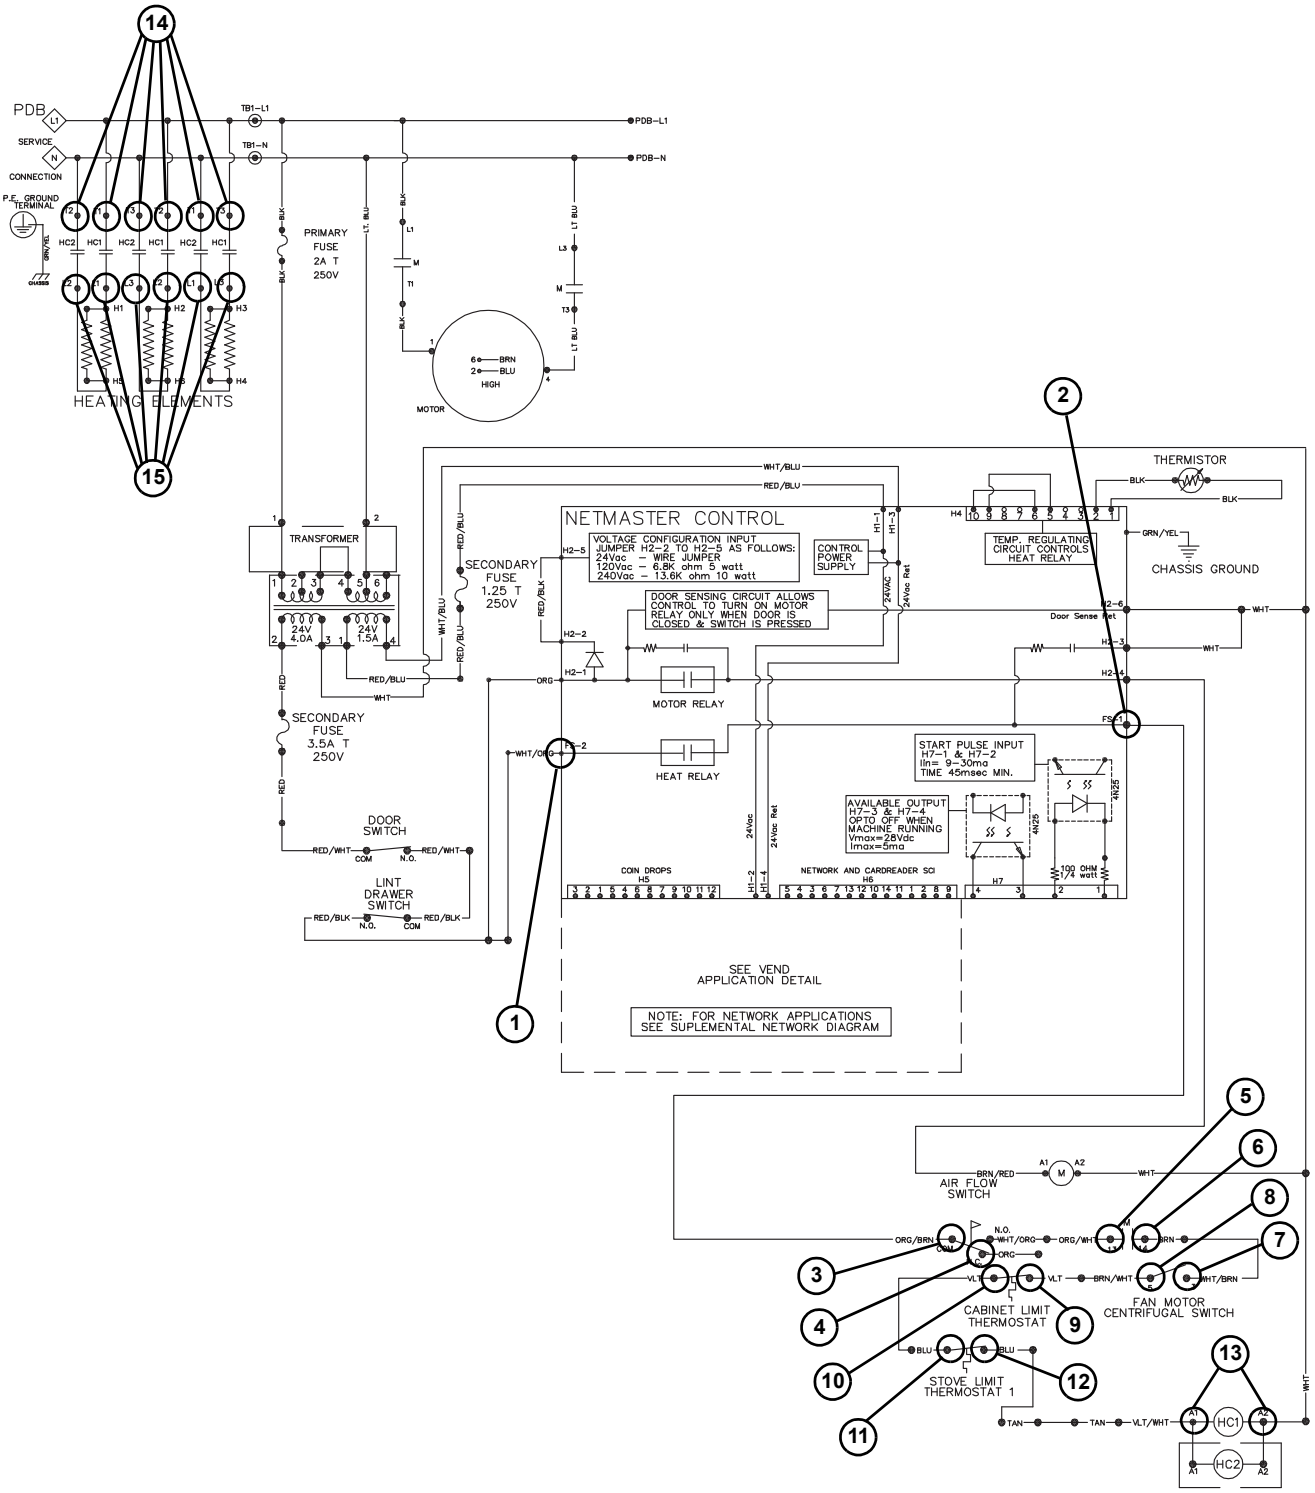

TMB2334S

59. CE Models No Display

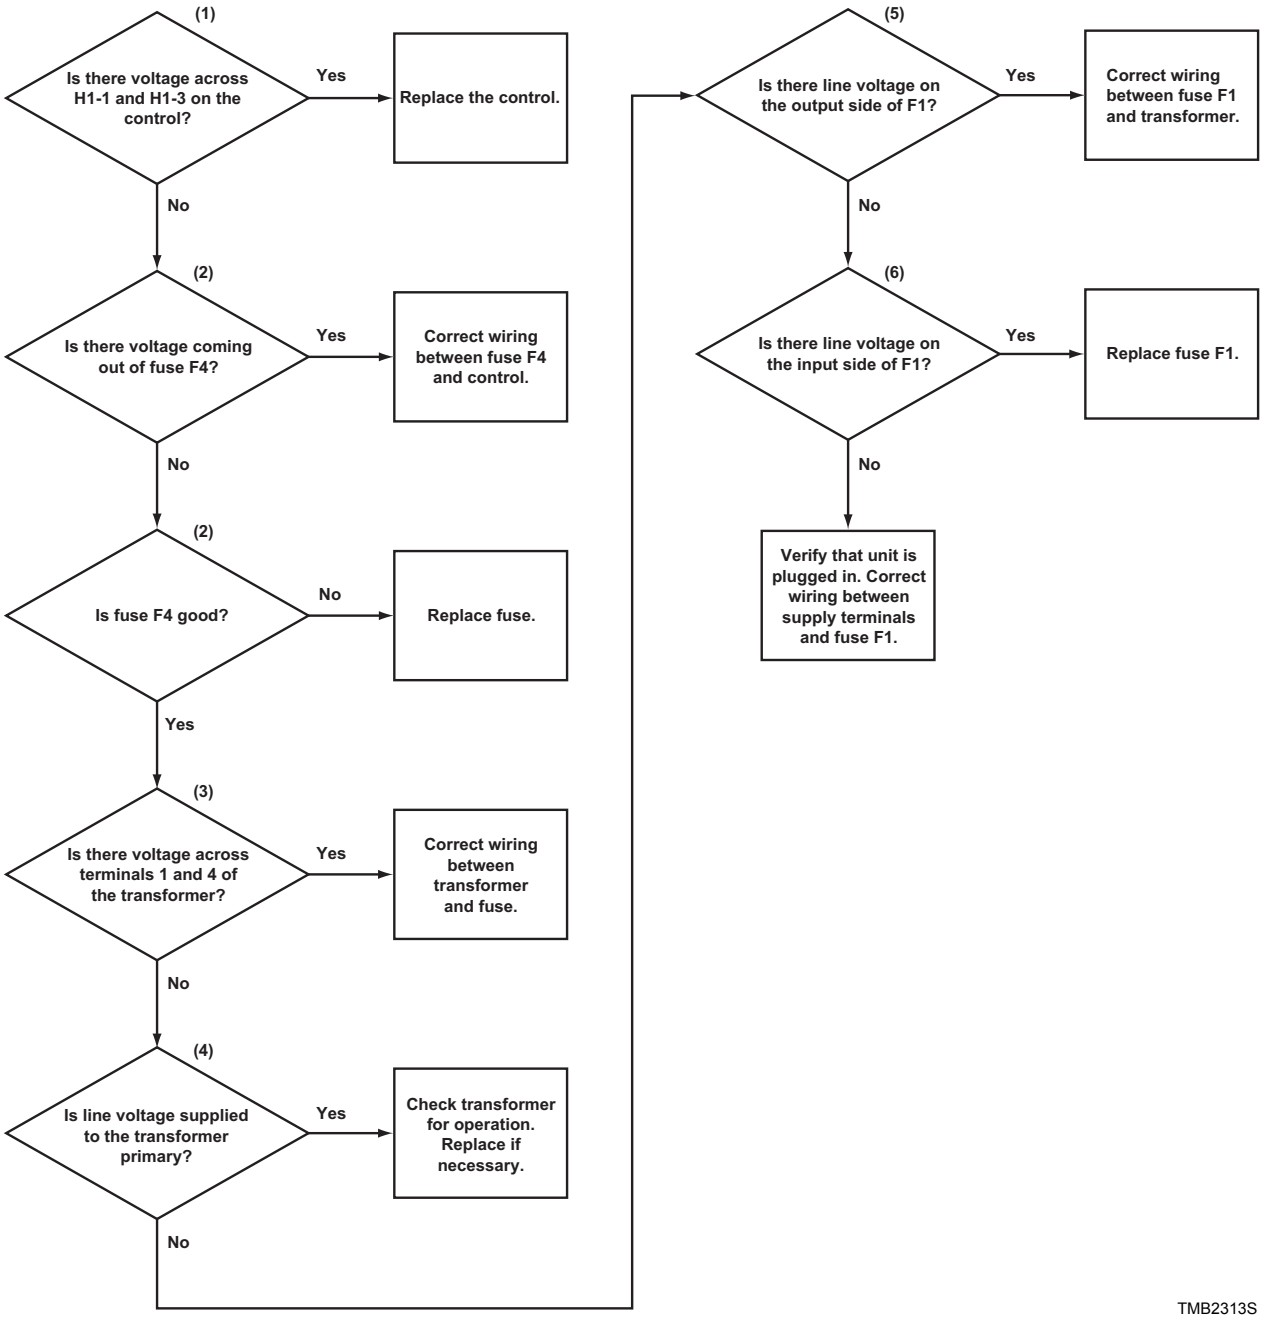

TMB2313S

CE Models No Display

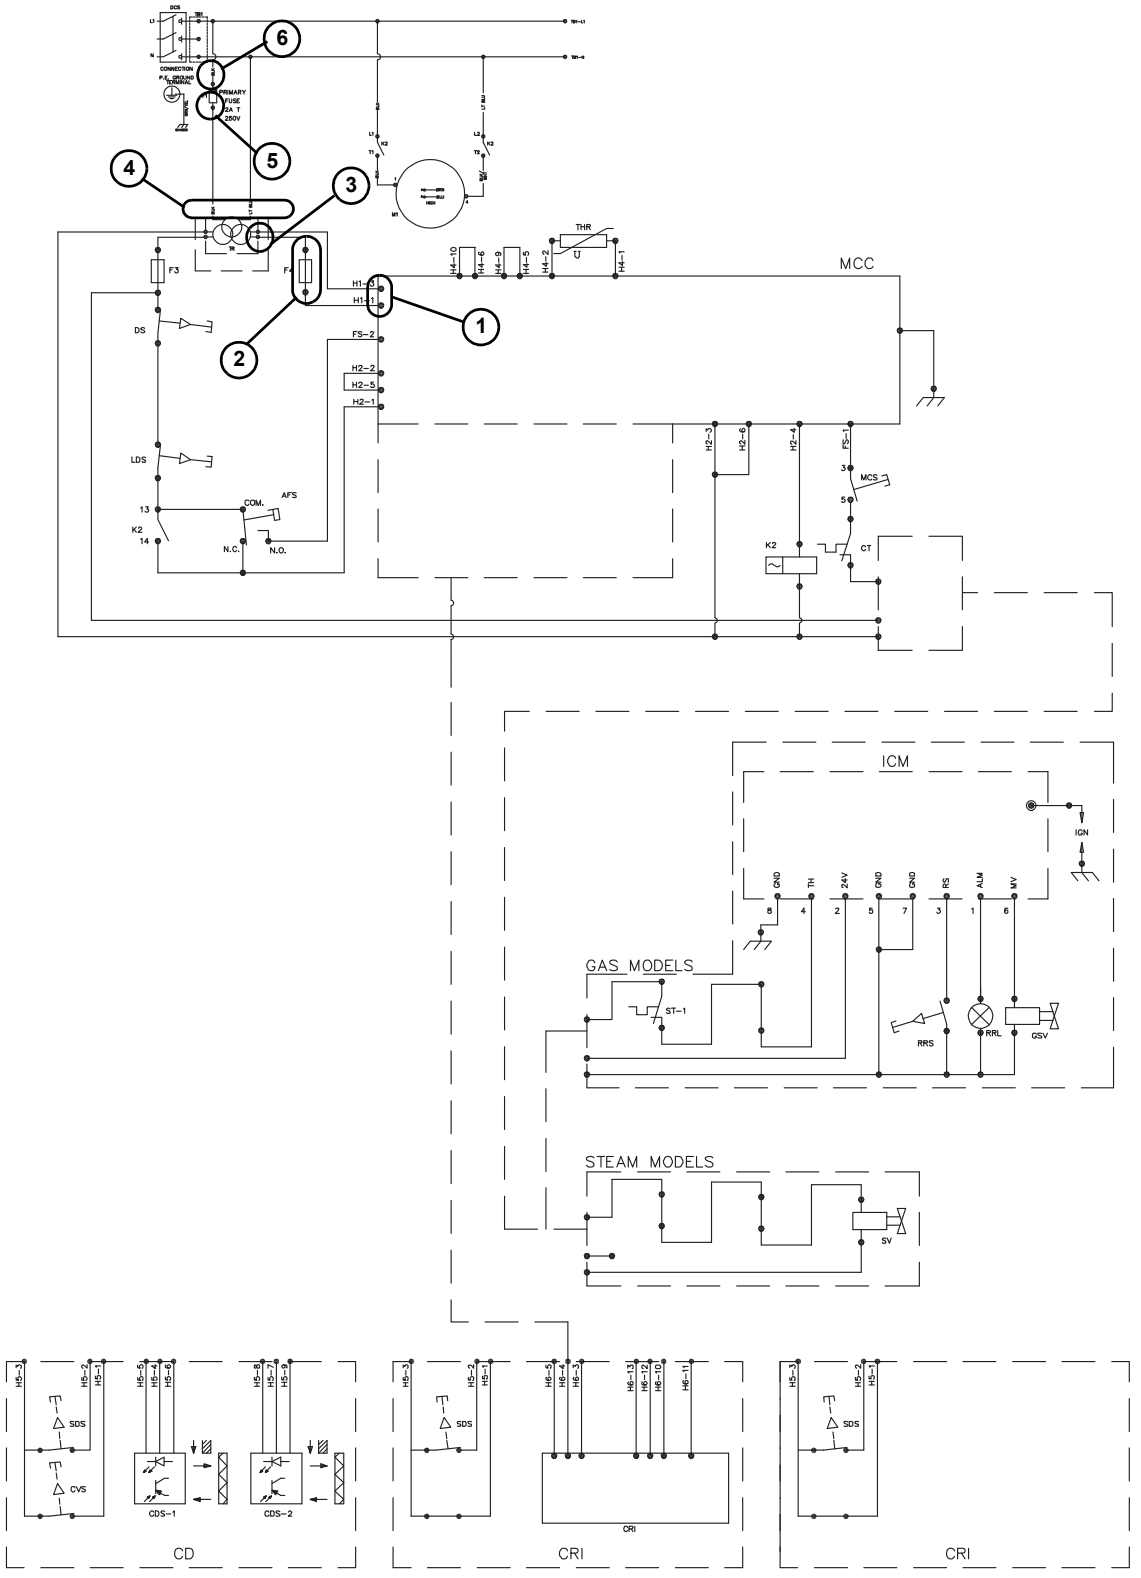

TMB2336S

60. CE Models “Door Open” Indicator

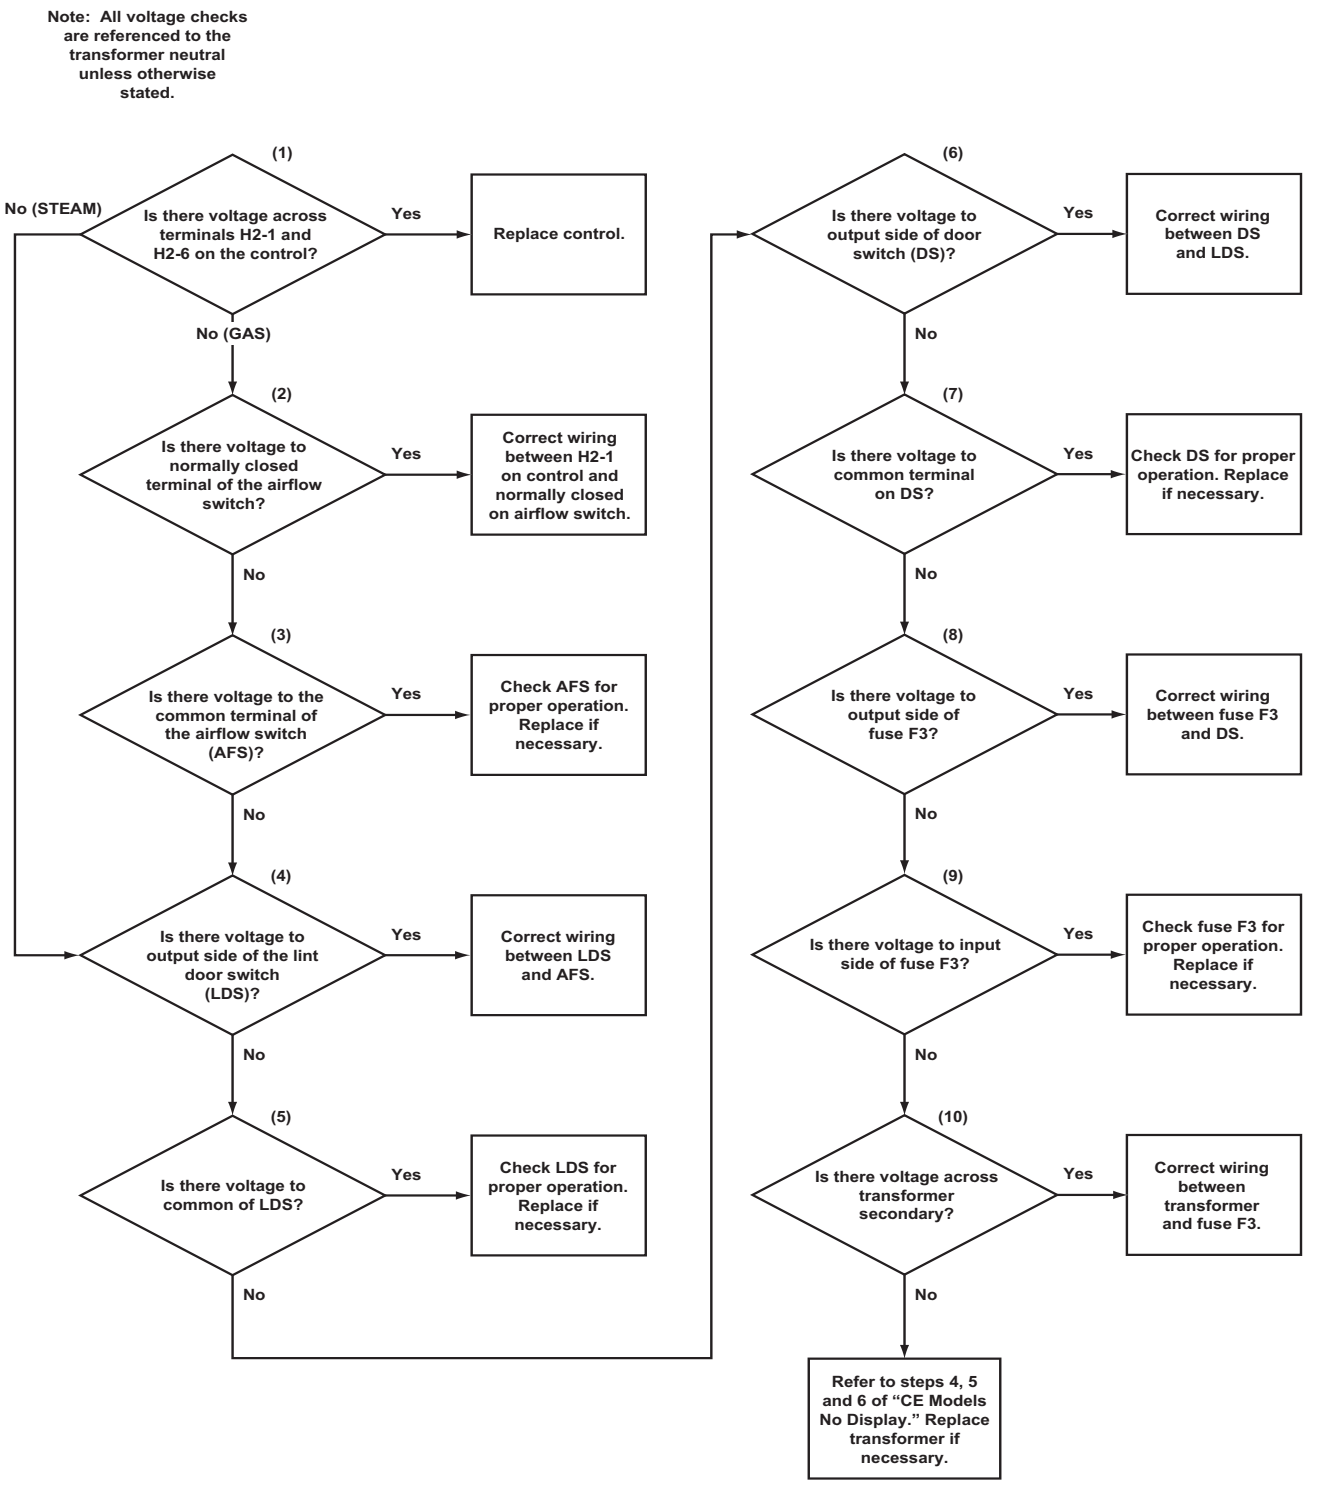
Note: All voltage checks are referenced to the transformer neutral unless otherwise stated.
(1)
Is there voltage across terminals H2-1 and H2-6 on the control?
No (STEAM)
Yes
Replace control.
No (GAS)
(2)
Is there voltage to normally closed terminal of the airflow switch?
Yes
Correct wiring between H2-1 on control and normally closed on airflow switch.
No
(3)
Is there voltage to the common terminal of the airflow switch (AFS)?
Yes
Check AFS for proper operation. Replace if necessary.
No
(4)
Is there voltage to output side of the lint door switch (LDS)?
Yes
Correct wiring between LDS and AFS.
No
(5)
Is there voltage to common of LDS?
Yes
Check LDS for proper operation. Replace if necessary.
No
(6)
Is there voltage to output side of door switch (DS)?
Yes
Correct wiring between DS and LDS.
No
(7)
Is there voltage to common terminal on DS?
Yes
Check DS for proper operation. Replace if necessary.
No
(8)
Is there voltage to output side of fuse F3?
Yes
Correct wiring between fuse F3 and DS.
No
(9)
Is there voltage to input side of fuse F3?
Yes
Check fuse F3 for proper operation. Replace if necessary.
No
(10)
Is there voltage across transformer secondary?
Yes
Correct wiring between transformer and fuse F3.
No
Refer to steps 4, 5 and 6 of “CE Models No Display.” Replace transformer if necessary.

TMB2314S

CE Models “Door Open” Indicator

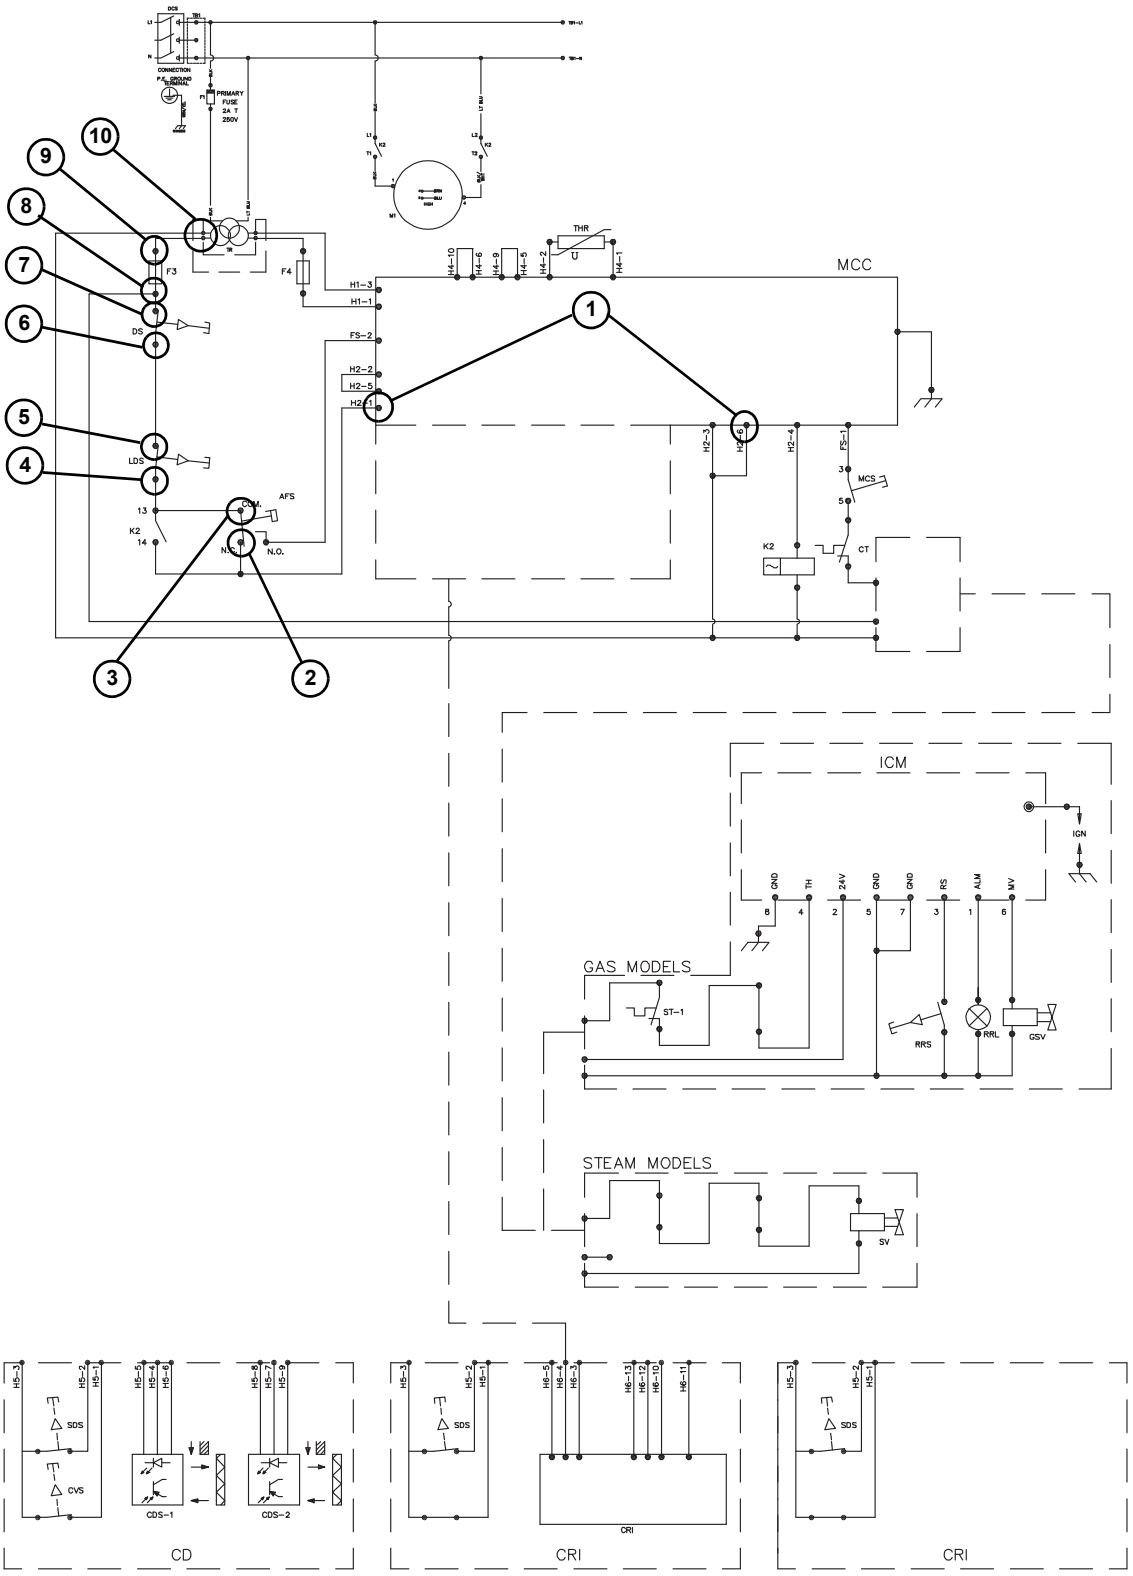

TMB2336S

61. CE Models No Start/Run

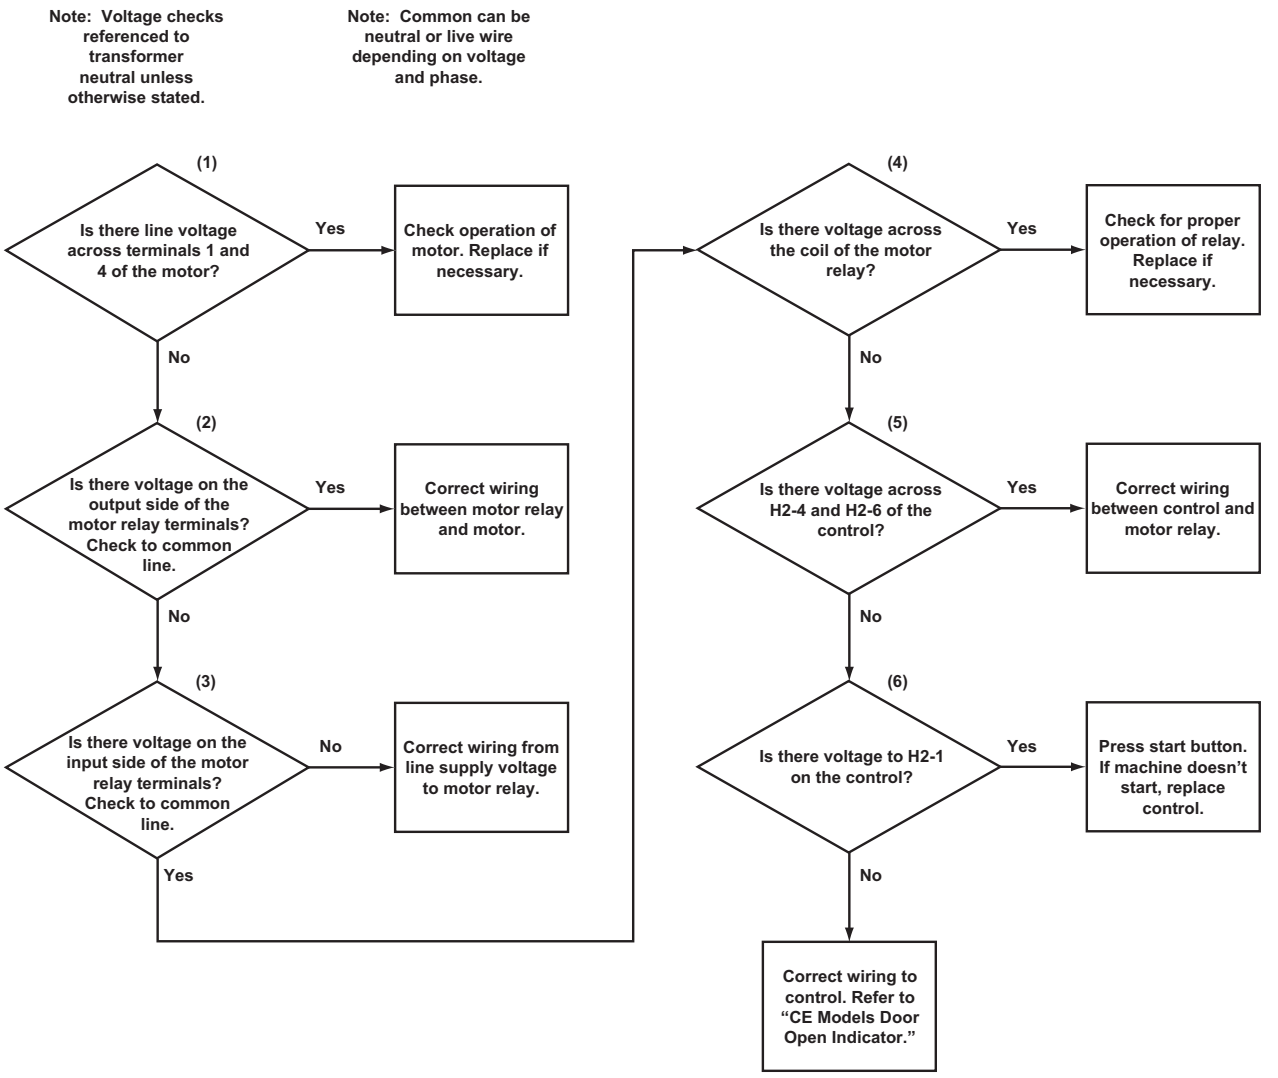
Note: Voltage checks referenced to transformer neutral unless otherwise stated.
Note: Common can be neutral or live wire depending on voltage and phase.
(1)
Is there line voltage across terminals 1 and 4 of the motor?
Yes
Check operation of motor. Replace if necessary.
No
(2)
Is there voltage on the output side of the motor relay terminals? Check to common line.
Yes
Correct wiring between motor relay and motor.
No
(3)
Is there voltage on the input side of the motor relay terminals? Check to common line.
No
Correct wiring from line supply voltage to motor relay.
Yes
(4)
Is there voltage across the coil of the motor relay?
Yes
Check for proper operation of relay. Replace if necessary.
No
(5)
Is there voltage across H2-4 and H2-6 of the control?
Yes
Correct wiring between control and motor relay.
No
(6)
Is there voltage to H2-1 on the control?
Yes
Press start button. If machine doesn't start, replace control.
No
Correct wiring to control. Refer to "CE Models Door Open Indicator."

TMB2315S

CE Models No Start/Run

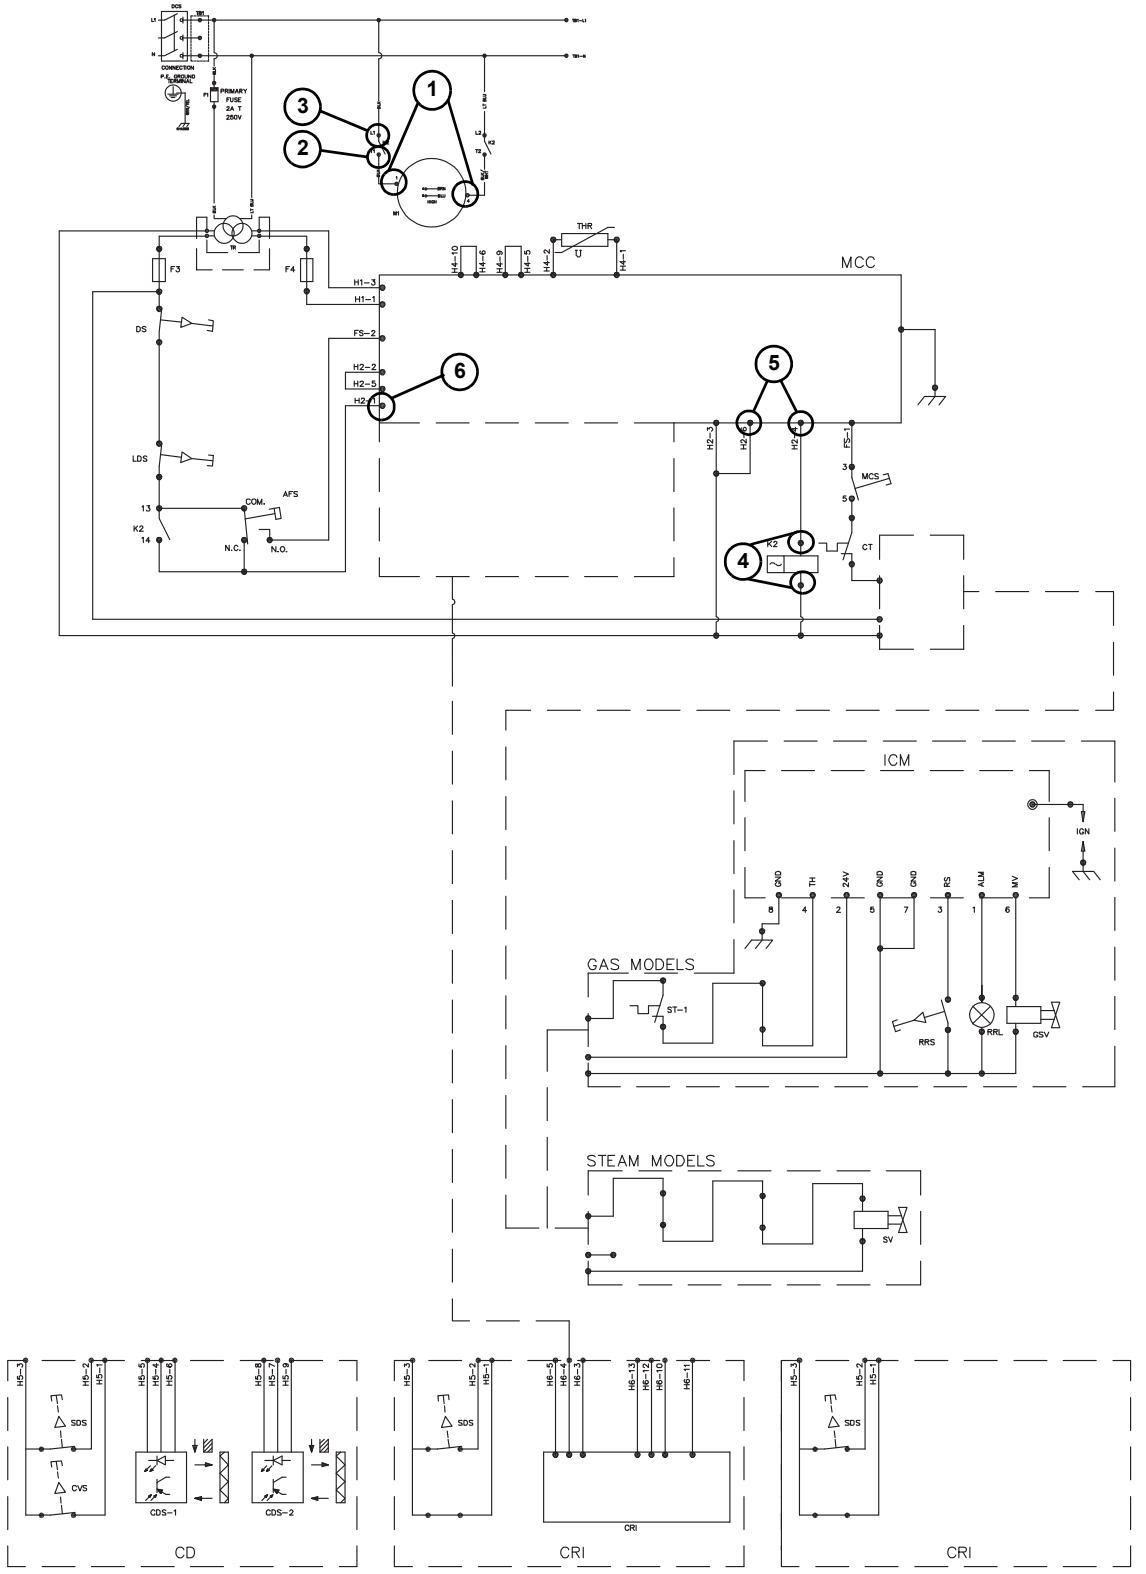

62. CE Models Will Not Heat – Gas

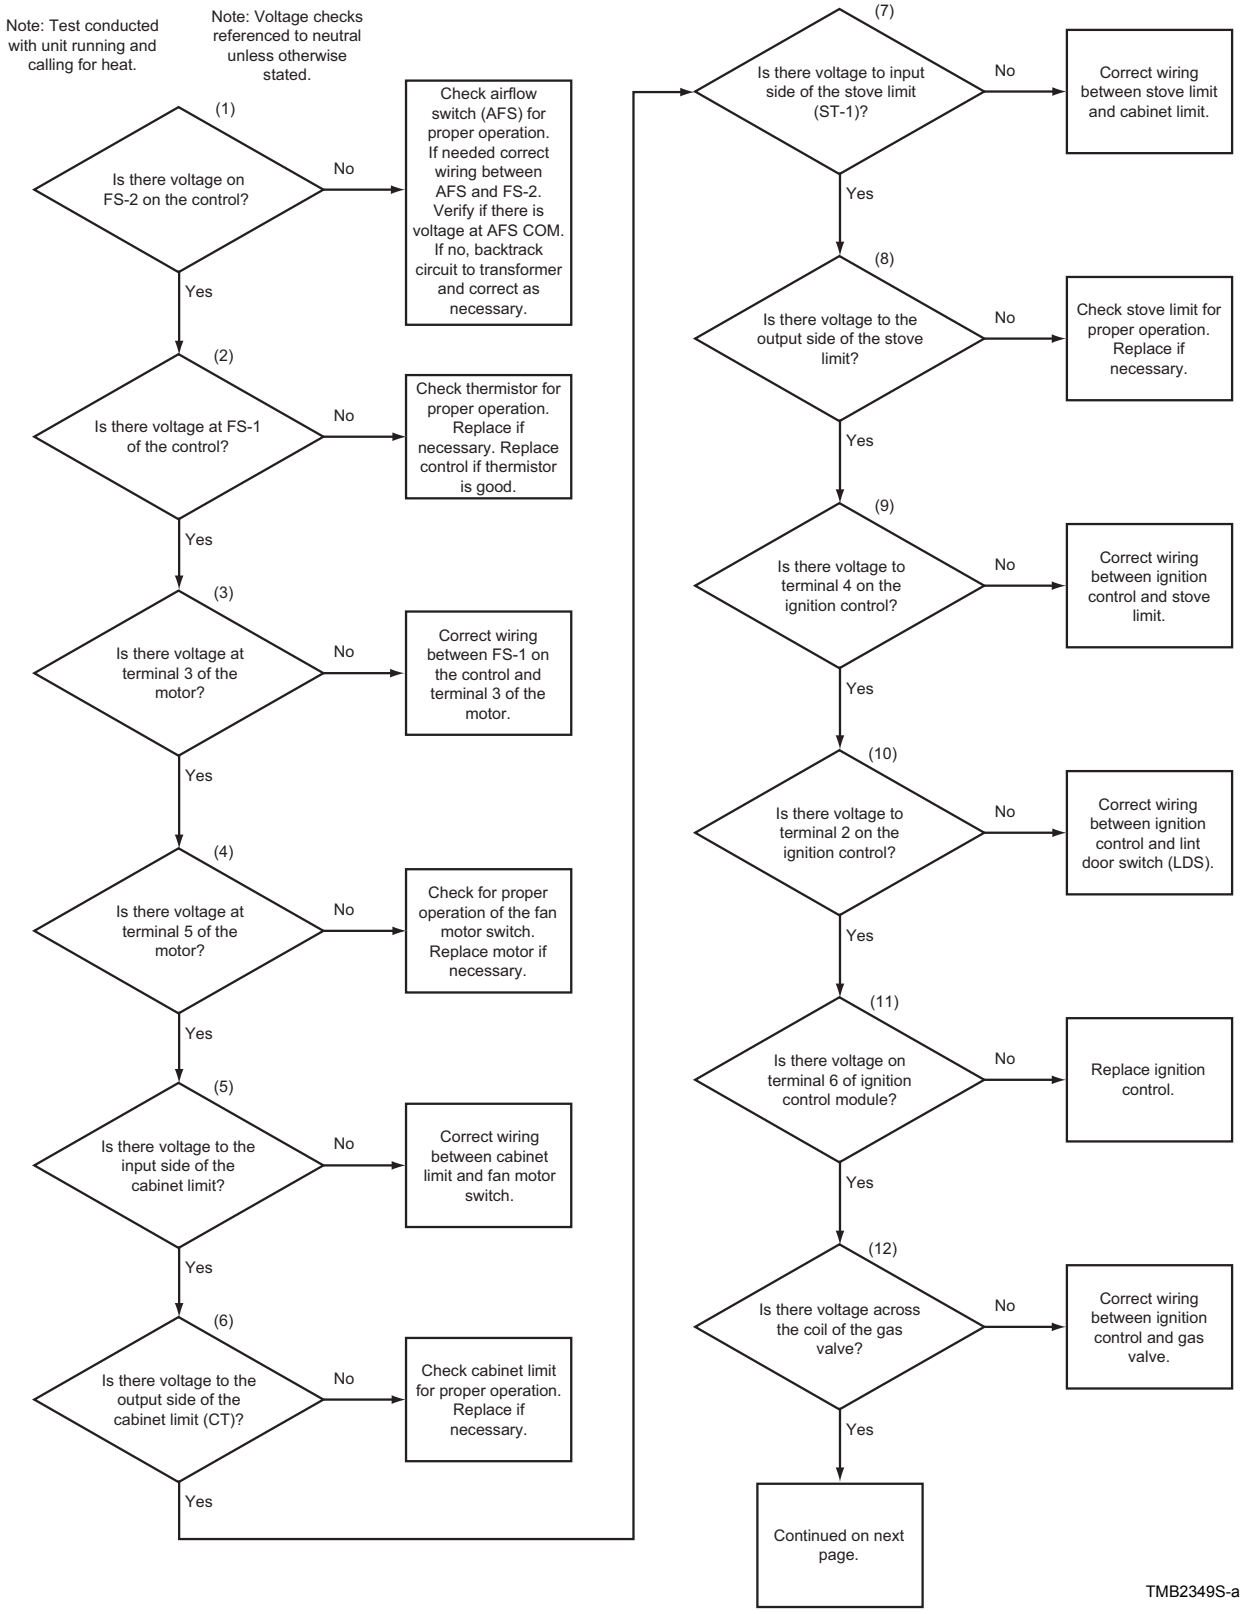
Note: Test conducted with unit running and calling for heat.
Note: Voltage checks referenced to neutral unless otherwise stated.
(1)
Is there voltage on FS-2 on the control?
No
Check airflow switch (AFS) for proper operation. If needed correct wiring between AFS and FS-2. Verify if there is voltage at AFS COM. If no, backtrack circuit to transformer and correct as necessary.
Yes
(2)
Is there voltage at FS-1 of the control?
No
Check thermistor for proper operation. Replace if necessary. Replace control if thermistor is good.
Yes
(3)
Is there voltage at terminal 3 of the motor?
No
Correct wiring between FS-1 on the control and terminal 3 of the motor.
Yes
(4)
Is there voltage at terminal 5 of the motor?
No
Check for proper operation of the fan motor switch. Replace motor if necessary.
Yes
(5)
Is there voltage to the input side of the cabinet limit?
No
Correct wiring between cabinet limit and fan motor switch.
Yes
(6)
Is there voltage to the output side of the cabinet limit (CT)?
No
Check cabinet limit for proper operation. Replace if necessary.
Yes
(7)
Is there voltage to input side of the stove limit (ST-1)?
No
Correct wiring between stove limit and cabinet limit.
Yes
(8)
Is there voltage to the output side of the stove limit?
No
Check stove limit for proper operation. Replace if necessary.
Yes
(9)
Is there voltage to terminal 4 on the ignition control?
No
Correct wiring between ignition control and stove limit.
Yes
(10)
Is there voltage to terminal 2 on the ignition control?
No
Correct wiring between ignition control and lint door switch (LDS).
Yes
(11)
Is there voltage on terminal 6 of ignition control module?
No
Replace ignition control.
Yes
(12)
Is there voltage across the coil of the gas valve?
No
Correct wiring between ignition control and gas valve.
Yes
Continued on next page.
TMB2349S-a

62. CE Models Will Not Heat – Gas (continued)

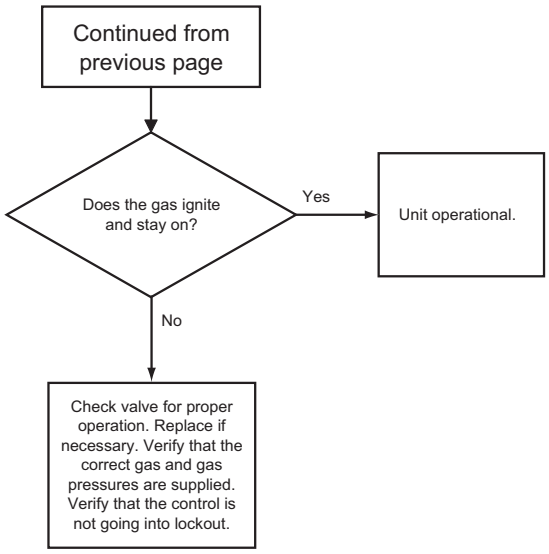
Continued from previous page
Does the gas ignite and stay on?
Yes
Unit operational.
No
Check valve for proper operation. Replace if necessary. Verify that the correct gas and gas pressures are supplied. Verify that the control is not going into lockout.

TMB2349S-b

Please see following page for wiring diagram information.

CE Models Will Not Heat – Gas

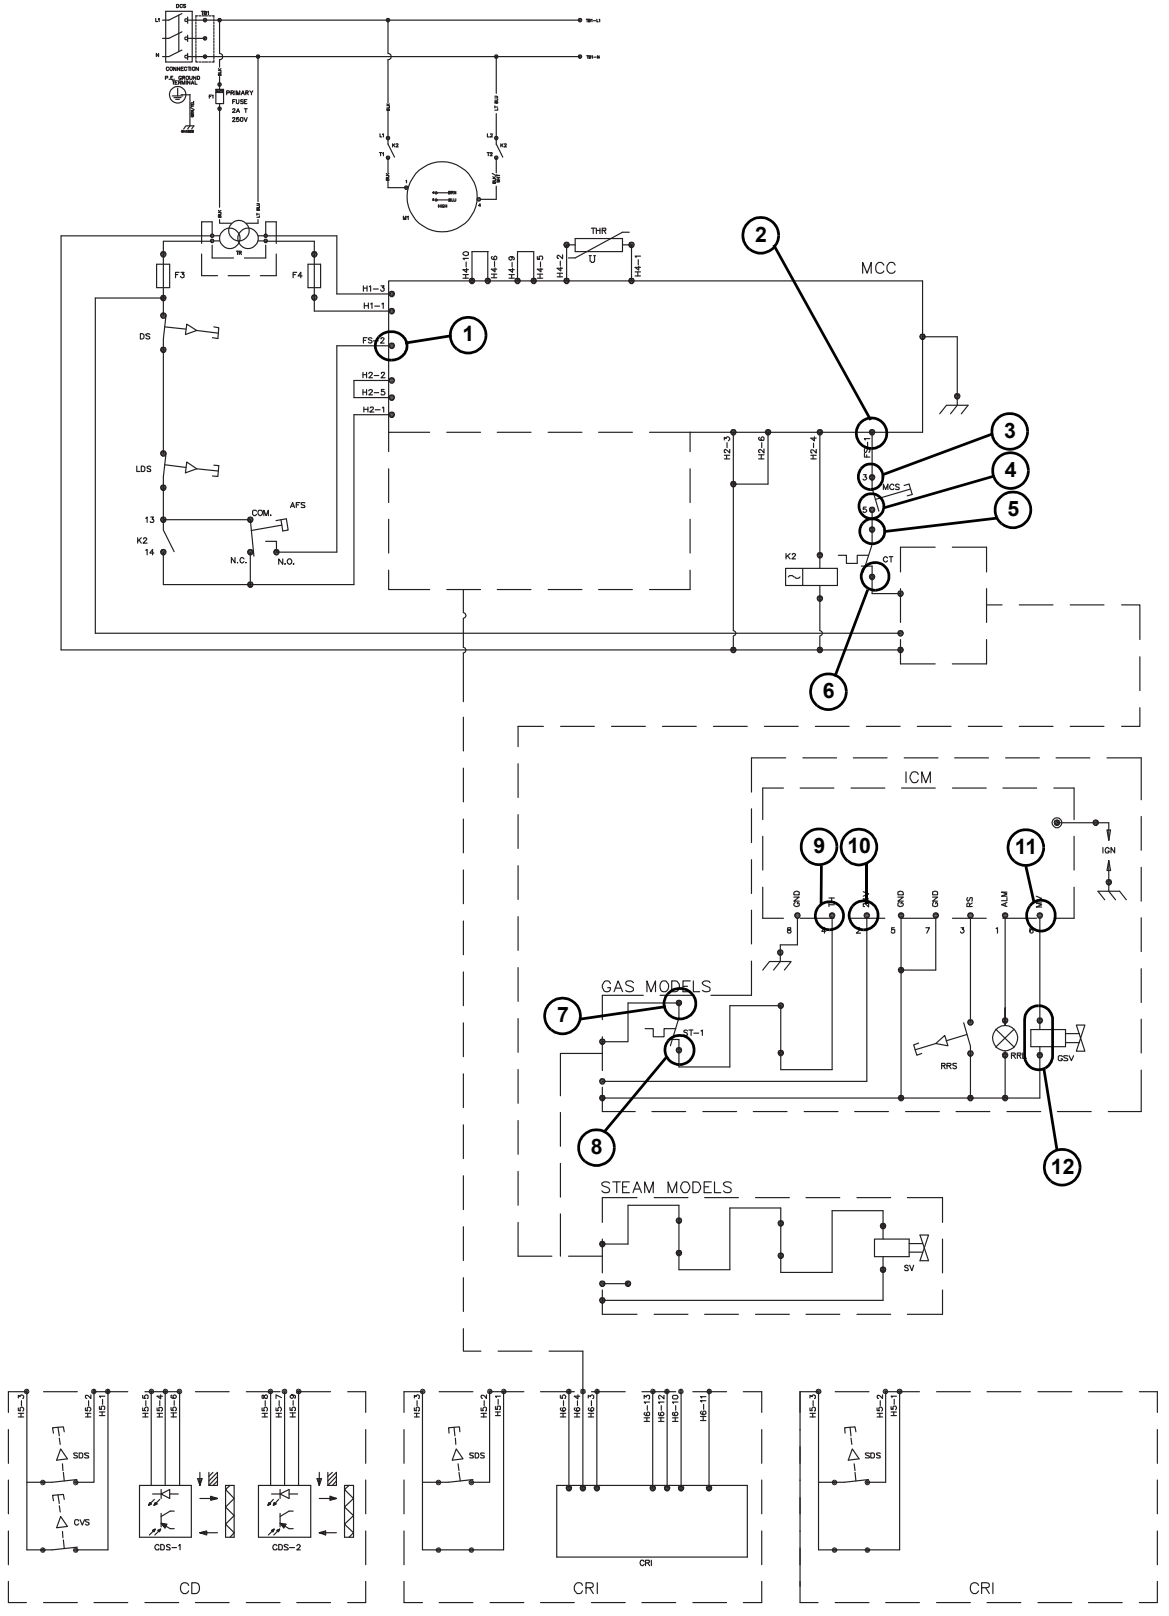

TMB2336S

63. CE Models Will Not Heat – Steam

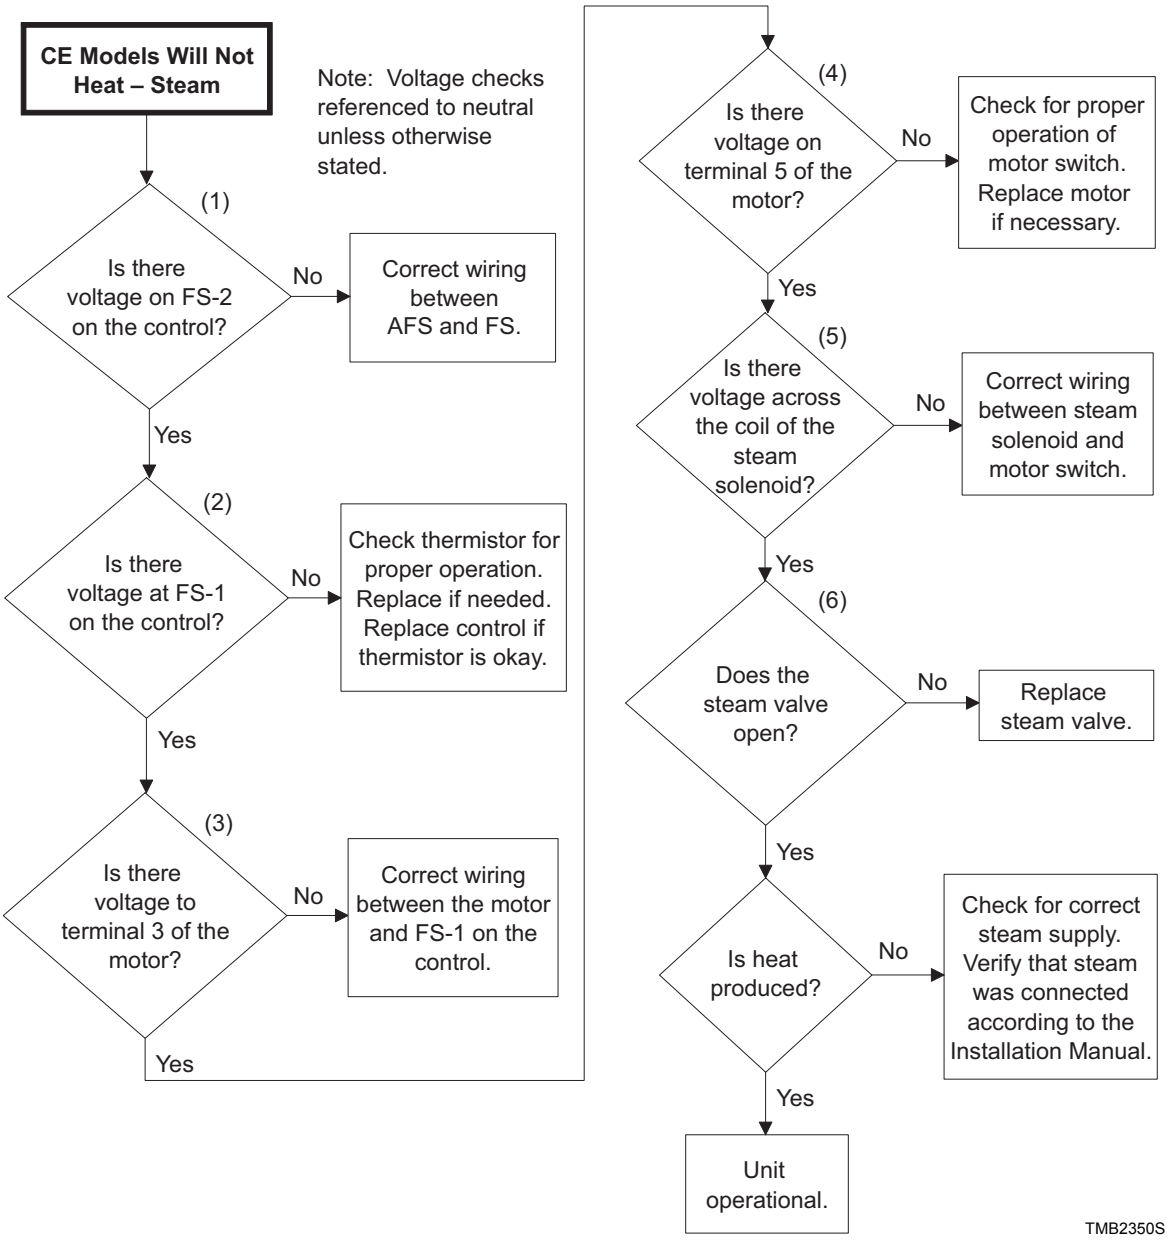
CE Models Will Not Heat – Steam
Note: Voltage checks referenced to neutral unless otherwise stated.
(1)
Is there voltage on FS-2 on the control?
No
Correct wiring between AFS and FS.
Yes
(2)
Is there voltage at FS-1 on the control?
No
Check thermistor for proper operation. Replace if needed. Replace control if thermistor is okay.
Yes
(3)
Is there voltage to terminal 3 of the motor?
No
Correct wiring between the motor and FS-1 on the control.
Yes
(4)
Is there voltage on terminal 5 of the motor?
No
Check for proper operation of motor switch. Replace motor if necessary.
Yes
(5)
Is there voltage across the coil of the steam solenoid?
No
Correct wiring between steam solenoid and motor switch.
Yes
(6)
Does the steam valve open?
No
Replace steam valve.
Yes
Is heat produced?
No
Check for correct steam supply. Verify that steam was connected according to the Installation Manual.
Yes
Unit operational.
TMB2350S

CE Models Will Not Heat – Steam

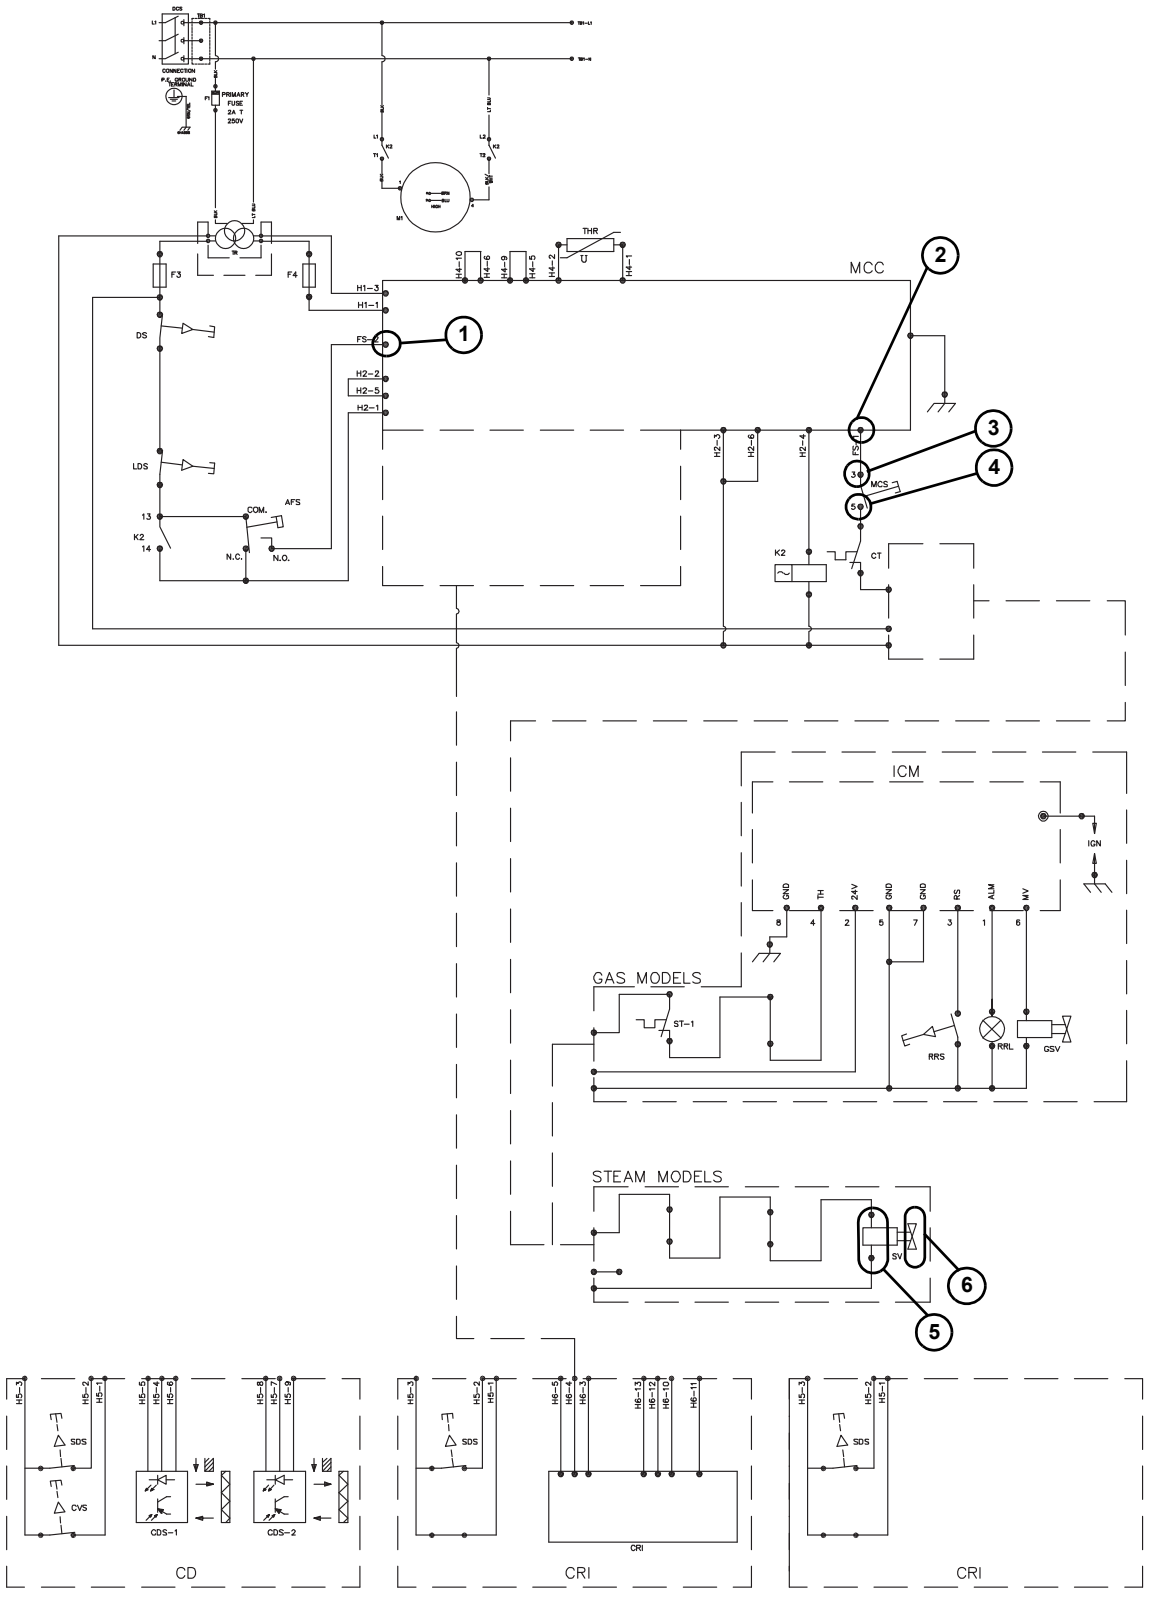

TMB2336S

64. CE Models Will Not Heat – Electric

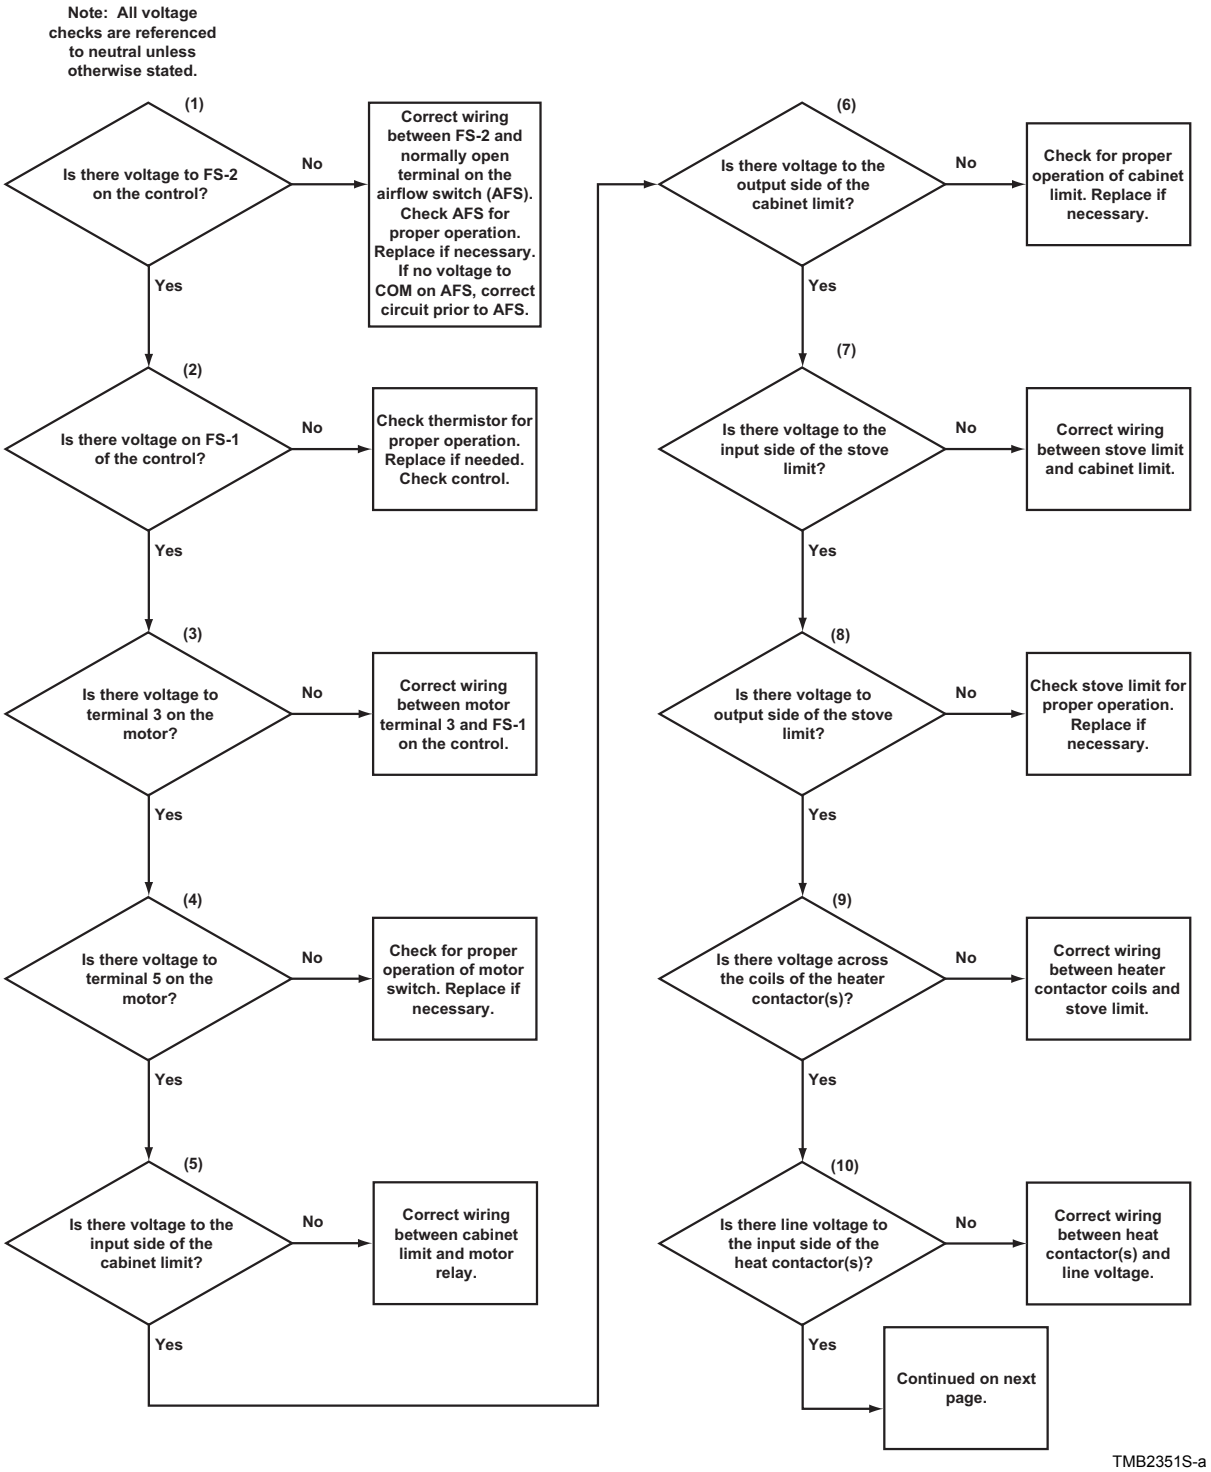
Note: All voltage checks are referenced to neutral unless otherwise stated.
(1)
Is there voltage to FS-2 on the control?
No
Correct wiring between FS-2 and normally open terminal on the airflow switch (AFS). Check AFS for proper operation. Replace if necessary. If no voltage to COM on AFS, correct circuit prior to AFS.
Yes
(2)
Is there voltage on FS-1 of the control?
No
Check thermistor for proper operation. Replace if needed. Check control.
Yes
(3)
Is there voltage to terminal 3 on the motor?
No
Correct wiring between motor terminal 3 and FS-1 on the control.
Yes
(4)
Is there voltage to terminal 5 on the motor?
No
Check for proper operation of motor switch. Replace if necessary.
Yes
(5)
Is there voltage to the input side of the cabinet limit?
No
Correct wiring between cabinet limit and motor relay.
Yes
(6)
Is there voltage to the output side of the cabinet limit?
No
Check for proper operation of cabinet limit. Replace if necessary.
Yes
(7)
Is there voltage to the input side of the stove limit?
No
Correct wiring between stove limit and cabinet limit.
Yes
(8)
Is there voltage to output side of the stove limit?
No
Check stove limit for proper operation. Replace if necessary.
Yes
(9)
Is there voltage across the coils of the heater contactor(s)?
No
Correct wiring between heater contactor coils and stove limit.
Yes
(10)
Is there line voltage to the input side of the heat contactor(s)?
No
Correct wiring between heat contactor(s) and line voltage.
Yes
Continued on next page.

TMB2351S-a

64. CE Models Will Not Heat – Electric (continued)

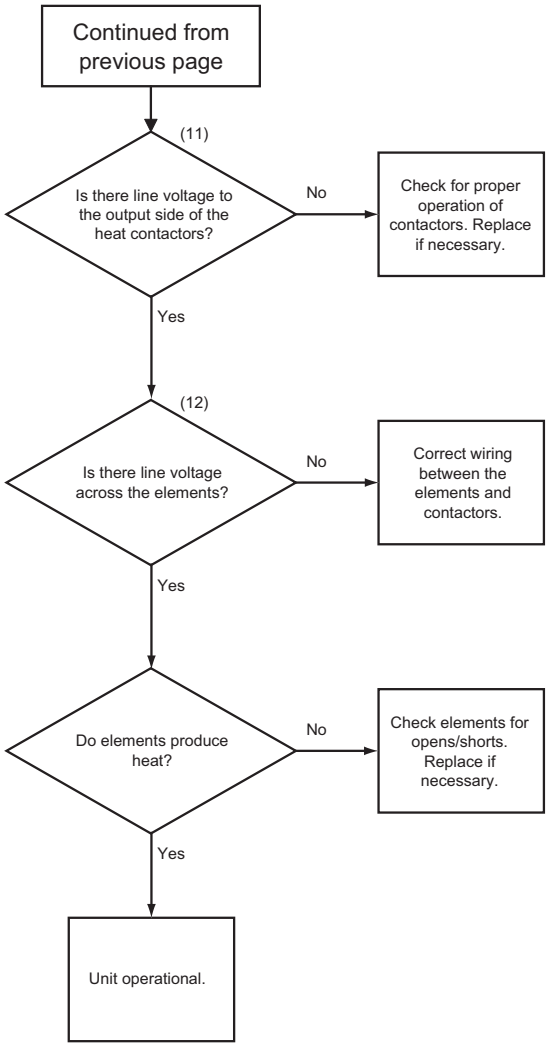

TMB2351S-b

CE Models Will Not Heat – Electric

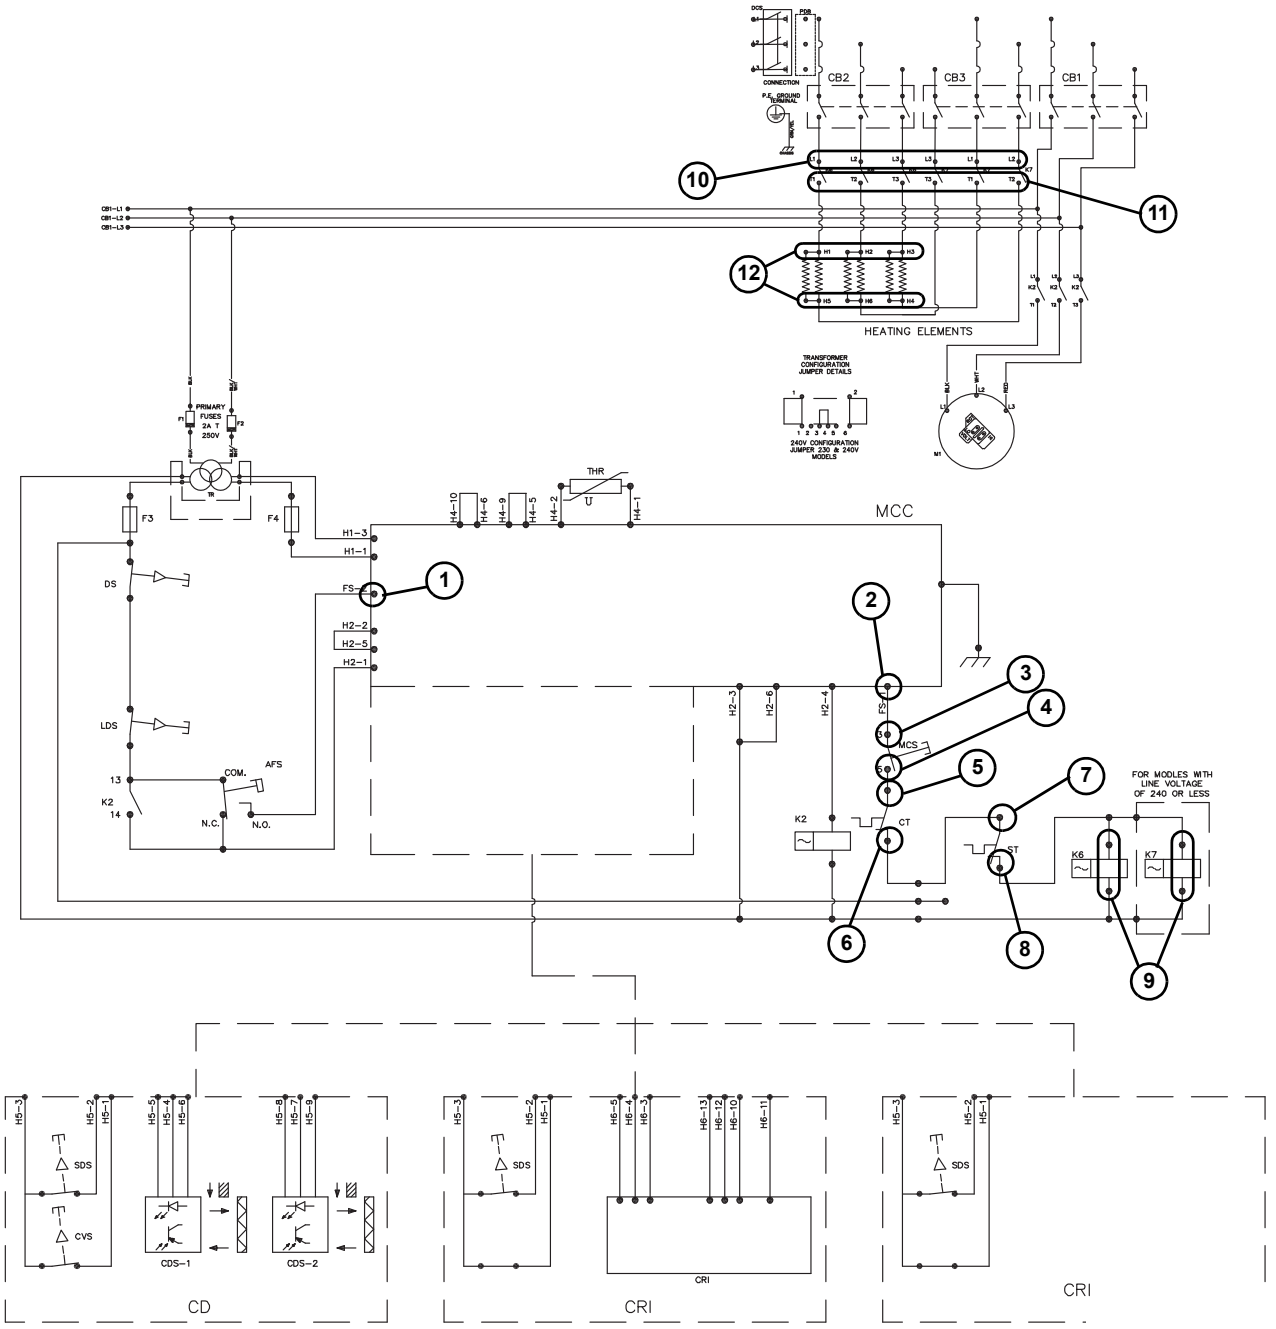

TMB2337S

Section 8
On Premise Micro Control (OM) Troubleshooting

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:
- **Disconnect electric power to the tumbler before servicing.**
- **Close gas shut-off valve to gas tumbler before servicing.**
- **Close steam valve to steam tumbler before servicing.**
- **Never start the tumbler with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the tumbler is properly grounded.**

W002

65. Control Has No Display

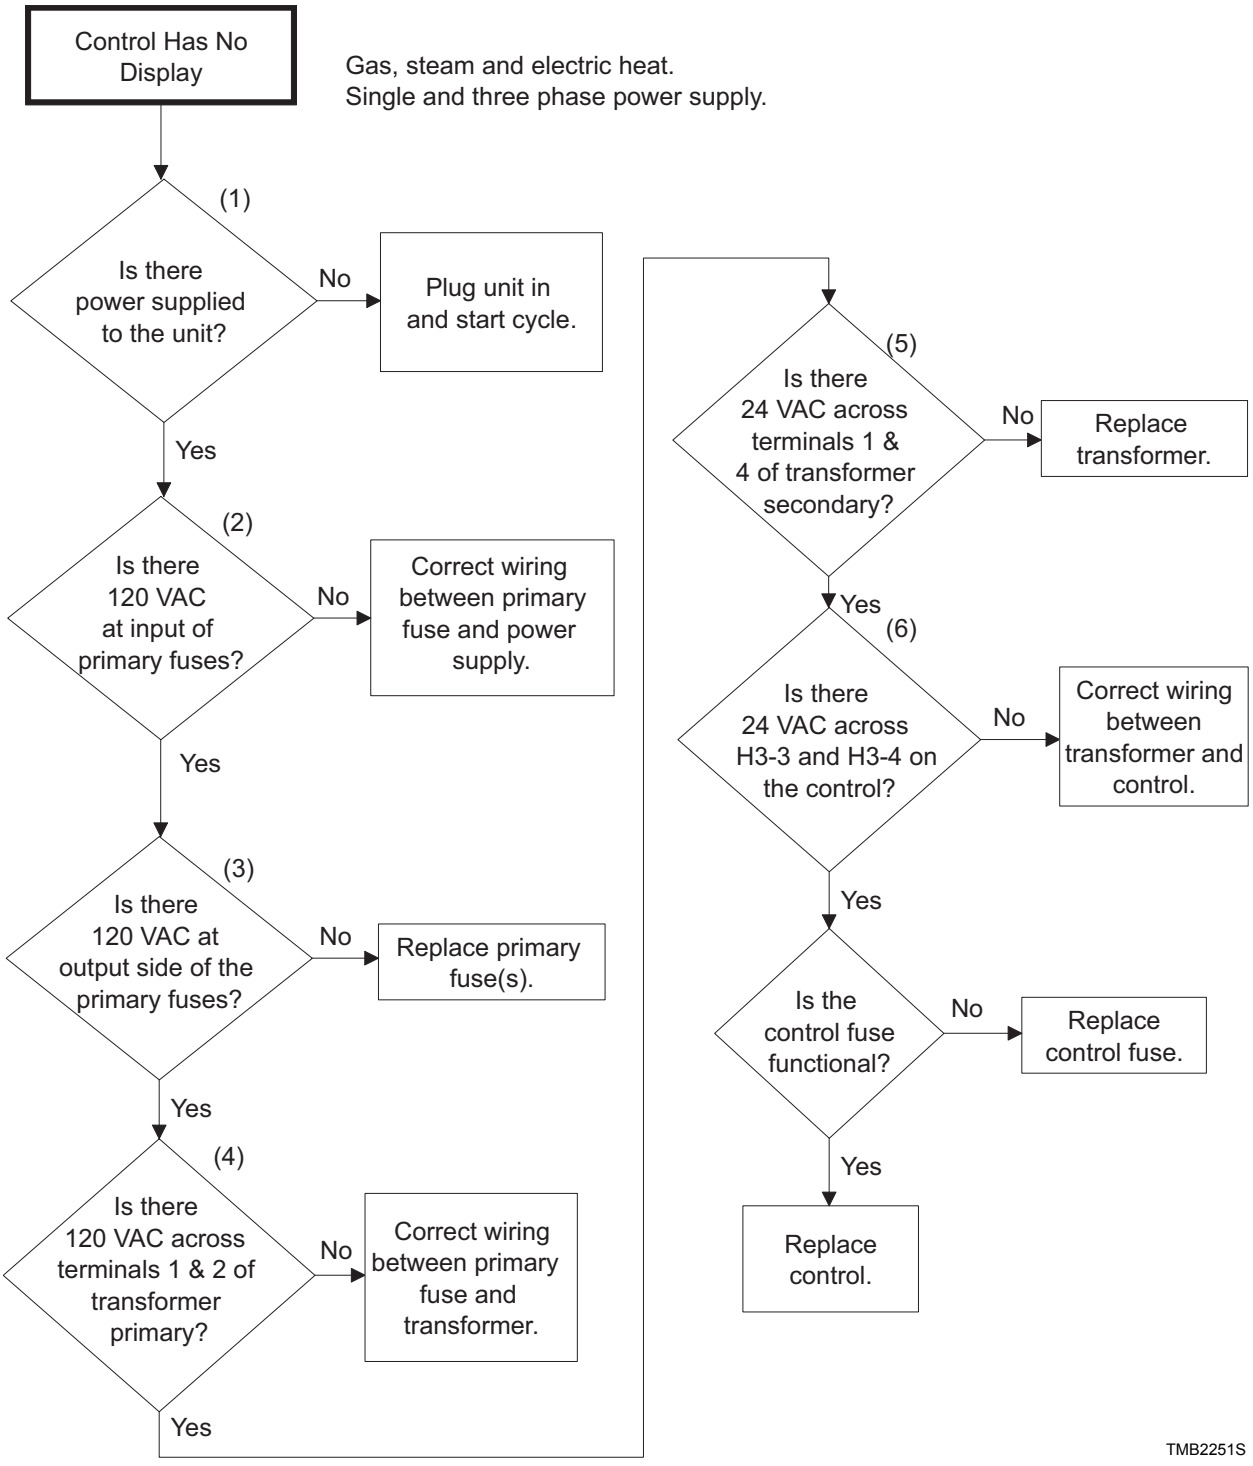

Control Has No Display

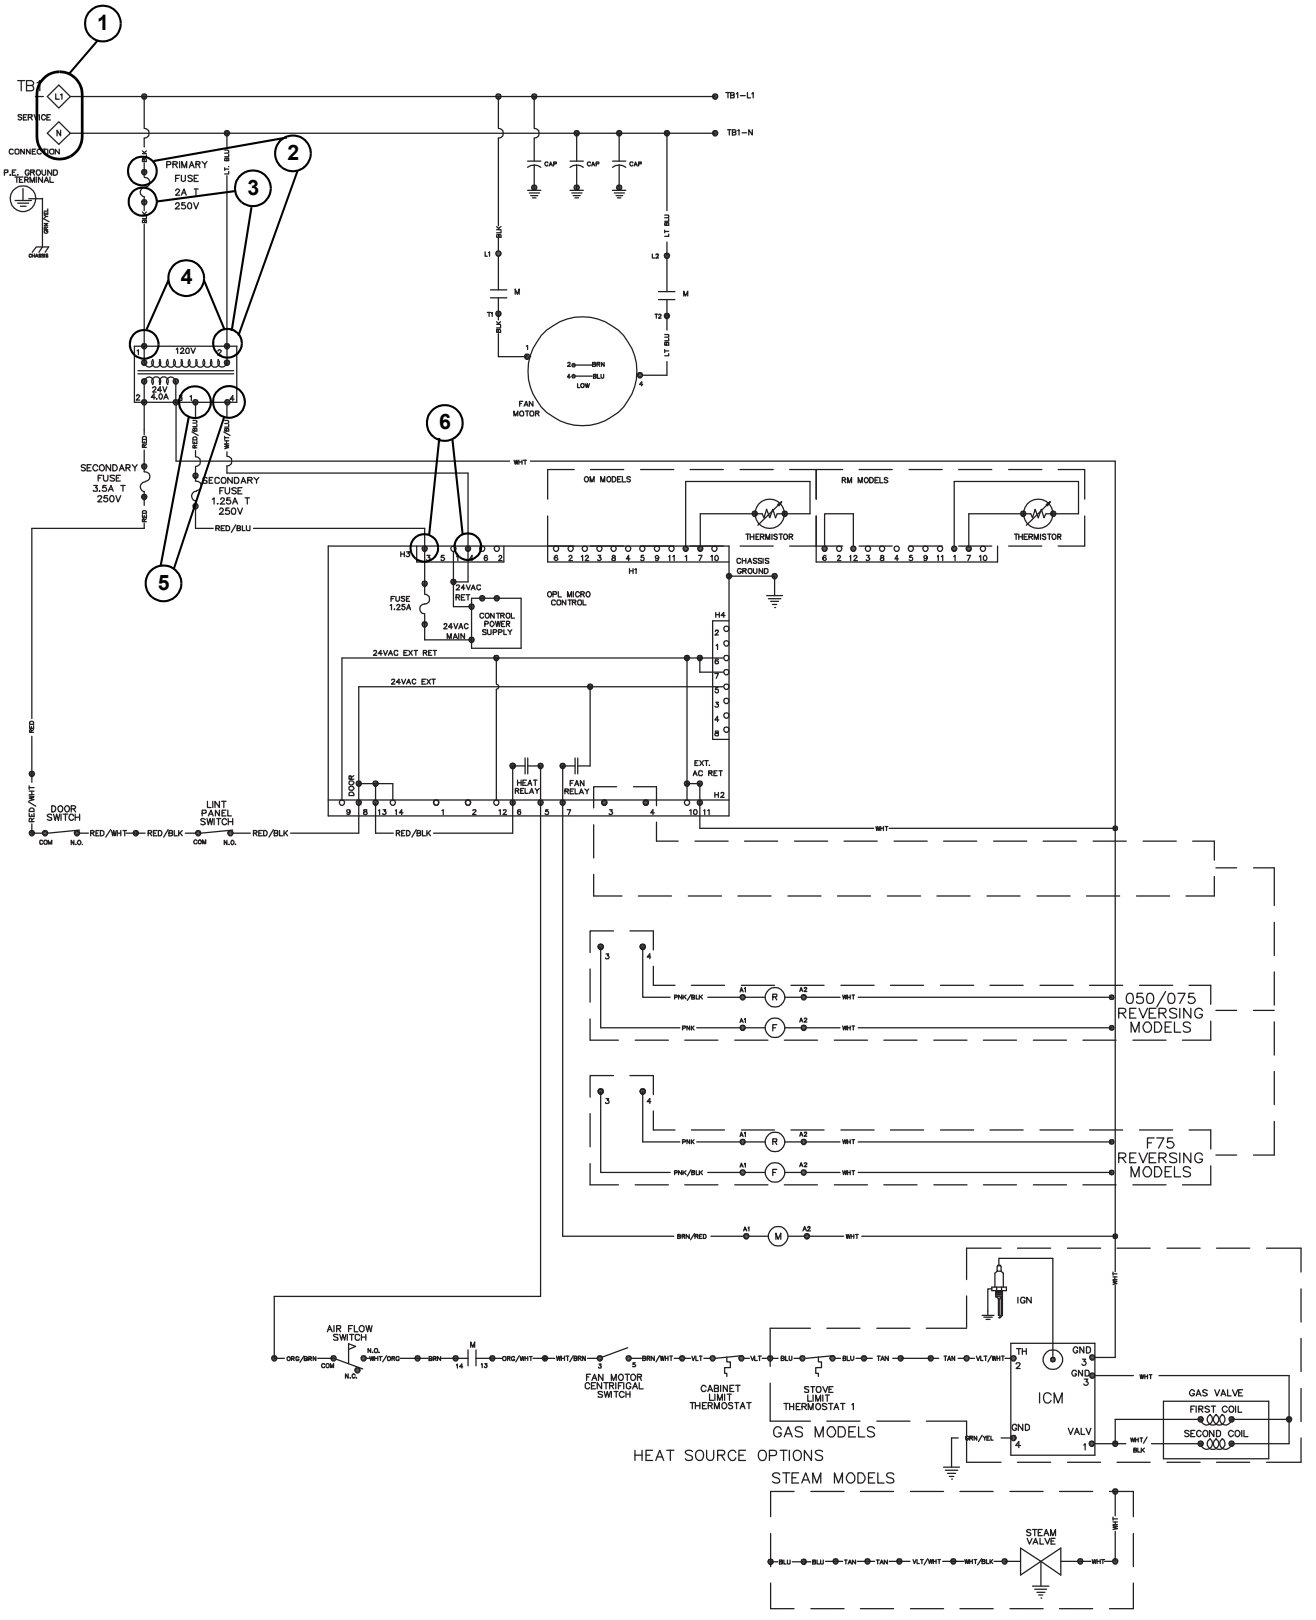

TMB2338S

66. Door Open Indicator

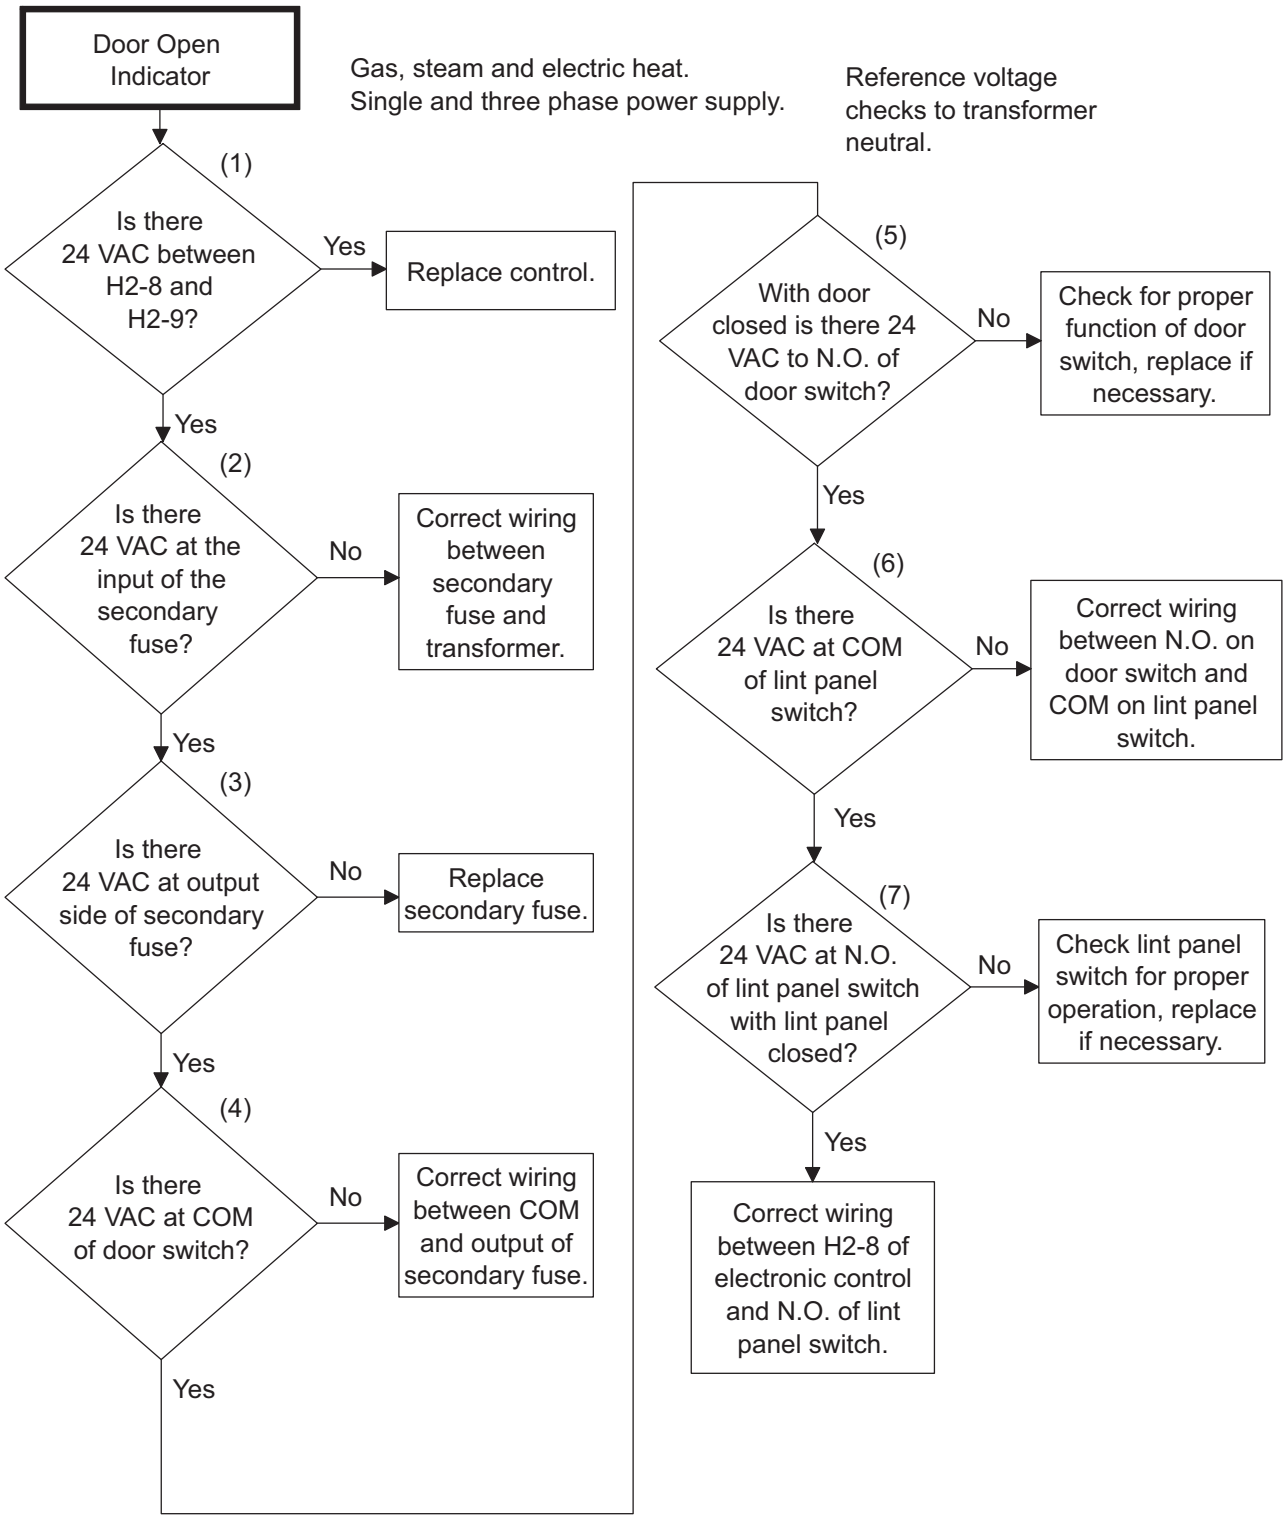
Door Open Indicator
Gas, steam and electric heat.
Single and three phase power supply.
Reference voltage checks to transformer neutral.
(1)
Is there 24 VAC between H2-8 and H2-9?
Yes
Replace control.
Yes
(2)
Is there 24 VAC at the input of the secondary fuse?
No
Correct wiring between secondary fuse and transformer.
Yes
(3)
Is there 24 VAC at output side of secondary fuse?
No
Replace secondary fuse.
Yes
(4)
Is there 24 VAC at COM of door switch?
No
Correct wiring between COM and output of secondary fuse.
Yes
(5)
With door closed is there 24 VAC to N.O. of door switch?
No
Check for proper function of door switch, replace if necessary.
Yes
(6)
Is there 24 VAC at COM of lint panel switch?
No
Correct wiring between N.O. on door switch and COM on lint panel switch.
Yes
(7)
Is there 24 VAC at N.O. of lint panel switch with lint panel closed?
No
Check lint panel switch for proper operation, replace if necessary.
Yes
Correct wiring between H2-8 of electronic control and N.O. of lint panel switch.

TMB2252S

Door Open Indicator

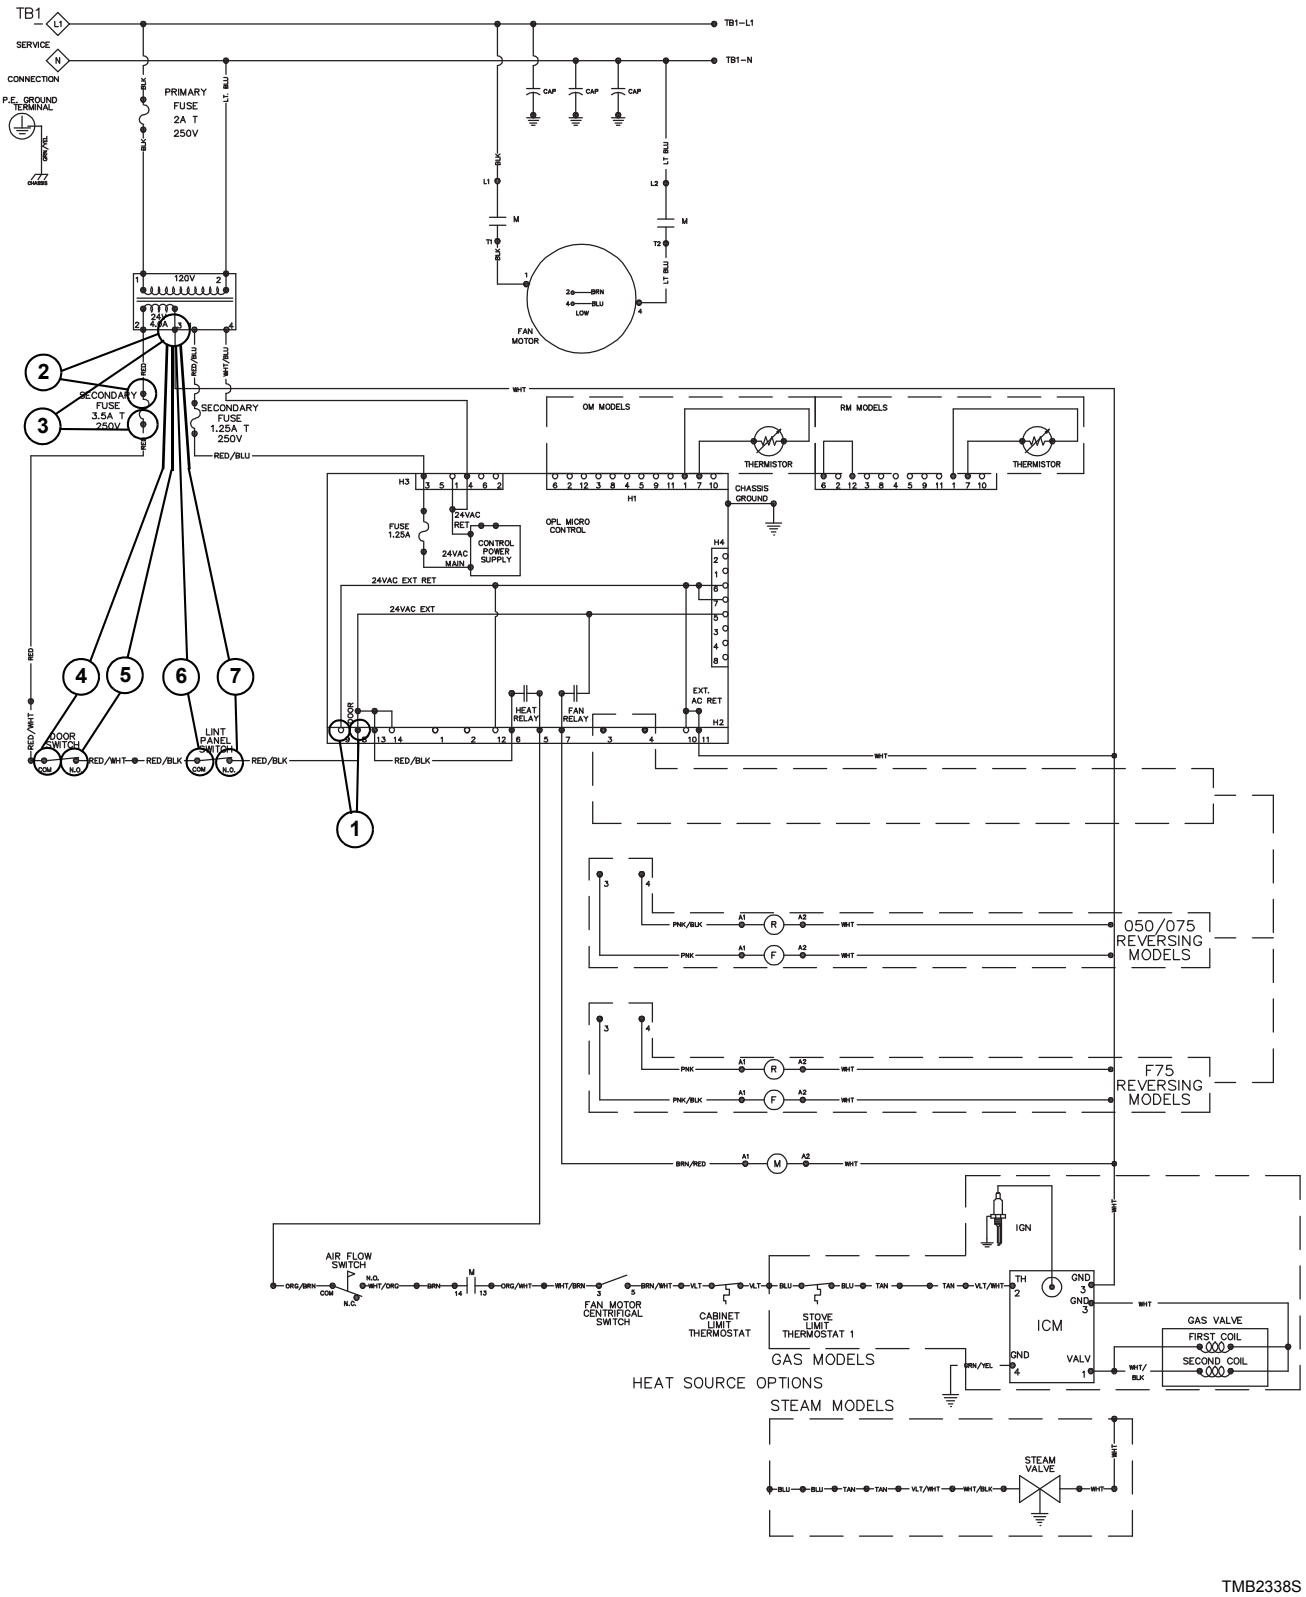

TMB2338S

67. Motor Will Not Start/Run

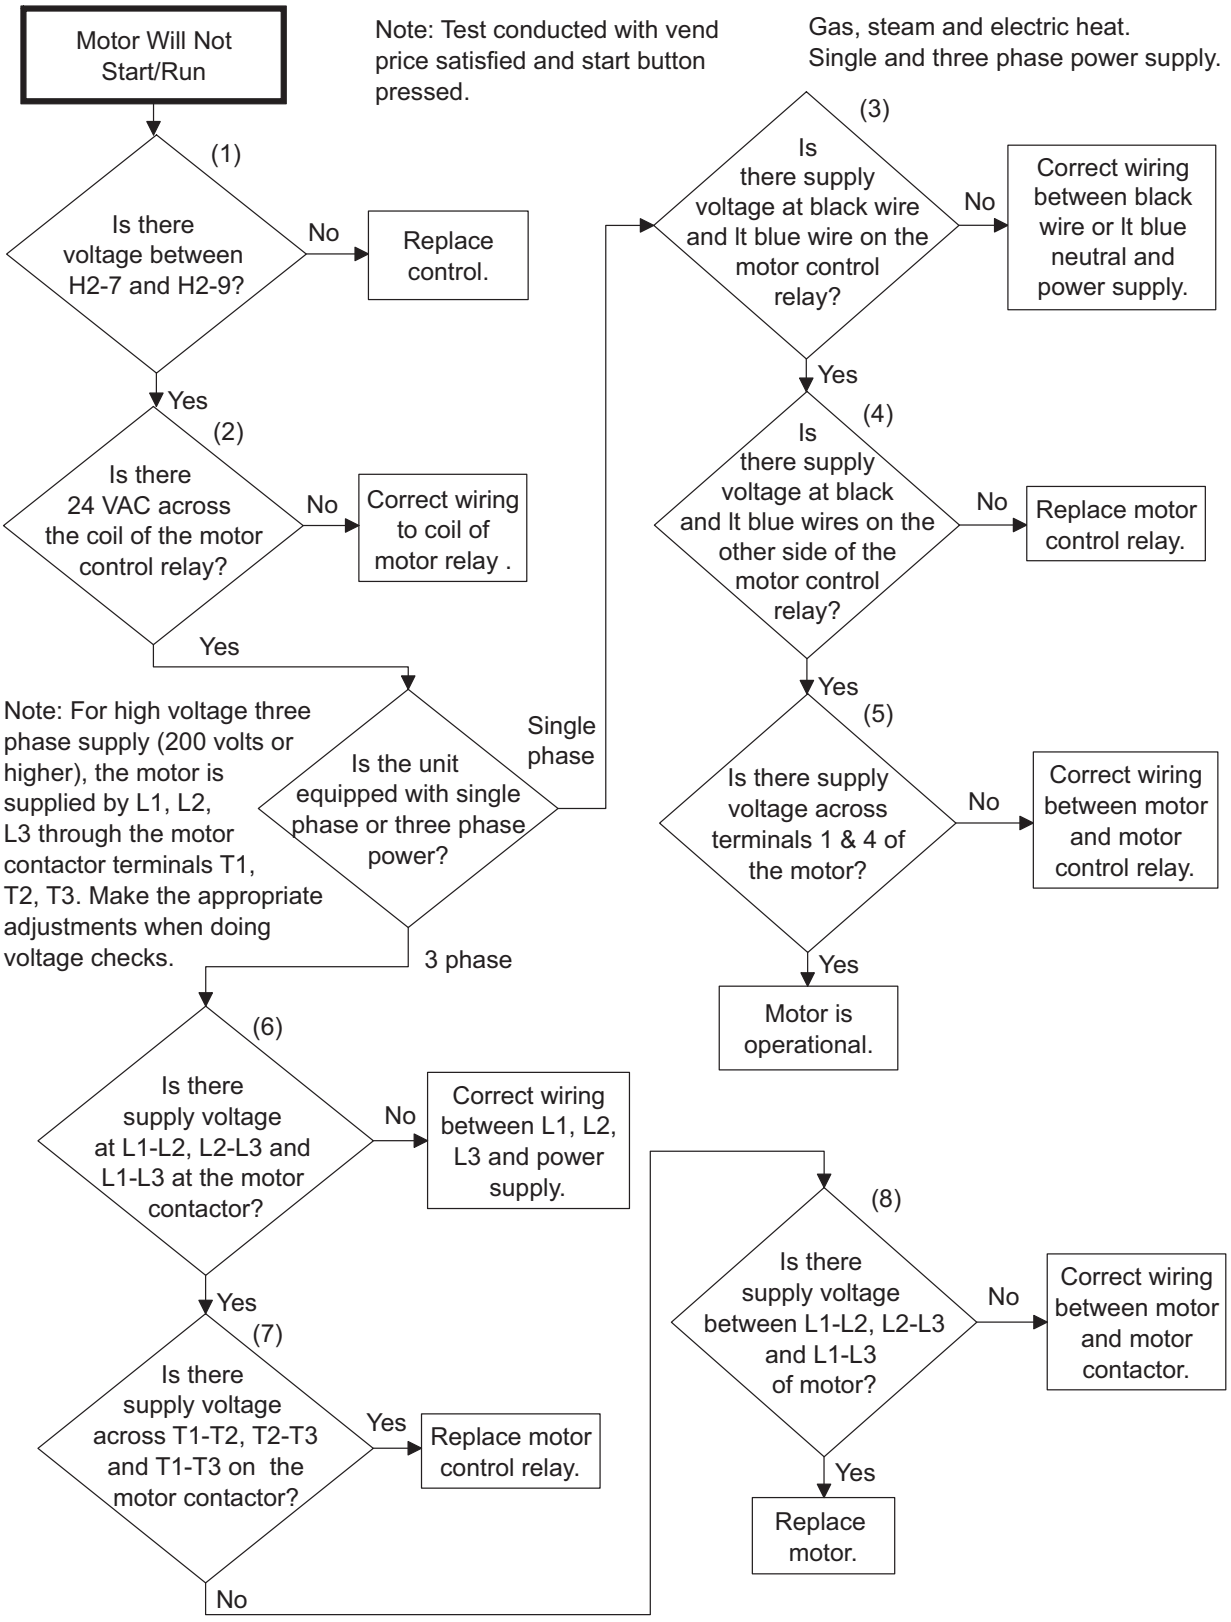
Motor Will Not Start/Run
Note: Test conducted with vend price satisfied and start button pressed.
Gas, steam and electric heat. Single and three phase power supply.
(1)
Is there voltage between H2-7 and H2-9?
No
Replace control.
Yes
(2)
Is there 24 VAC across the coil of the motor control relay?
No
Correct wiring to coil of motor relay .
Yes
Note: For high voltage three phase supply (200 volts or higher), the motor is supplied by L1, L2, L3 through the motor contactor terminals T1, T2, T3. Make the appropriate adjustments when doing voltage checks.
Is the unit equipped with single phase or three phase power?
Single phase
3 phase
(3)
Is there supply voltage at black wire and lt blue wire on the motor control relay?
No
Correct wiring between black wire or lt blue neutral and power supply.
Yes
(4)
Is there supply voltage at black and lt blue wires on the other side of the motor control relay?
No
Replace motor control relay.
Yes
(5)
Is there supply voltage across terminals 1 & 4 of the motor?
No
Correct wiring between motor and motor control relay.
Yes
Motor is operational.
(6)
Is there supply voltage at L1-L2, L2-L3 and L1-L3 at the motor contactor?
No
Correct wiring between L1, L2, L3 and power supply.
Yes
(7)
Is there supply voltage across T1-T2, T2-T3 and T1-T3 on the motor contactor?
Yes
Replace motor control relay.
No
(8)
Is there supply voltage between L1-L2, L2-L3 and L1-L3 of motor?
No
Correct wiring between motor and motor contactor.
Yes
Replace motor.

TMB2352S

Motor Will Not Start/Run – Single Phase

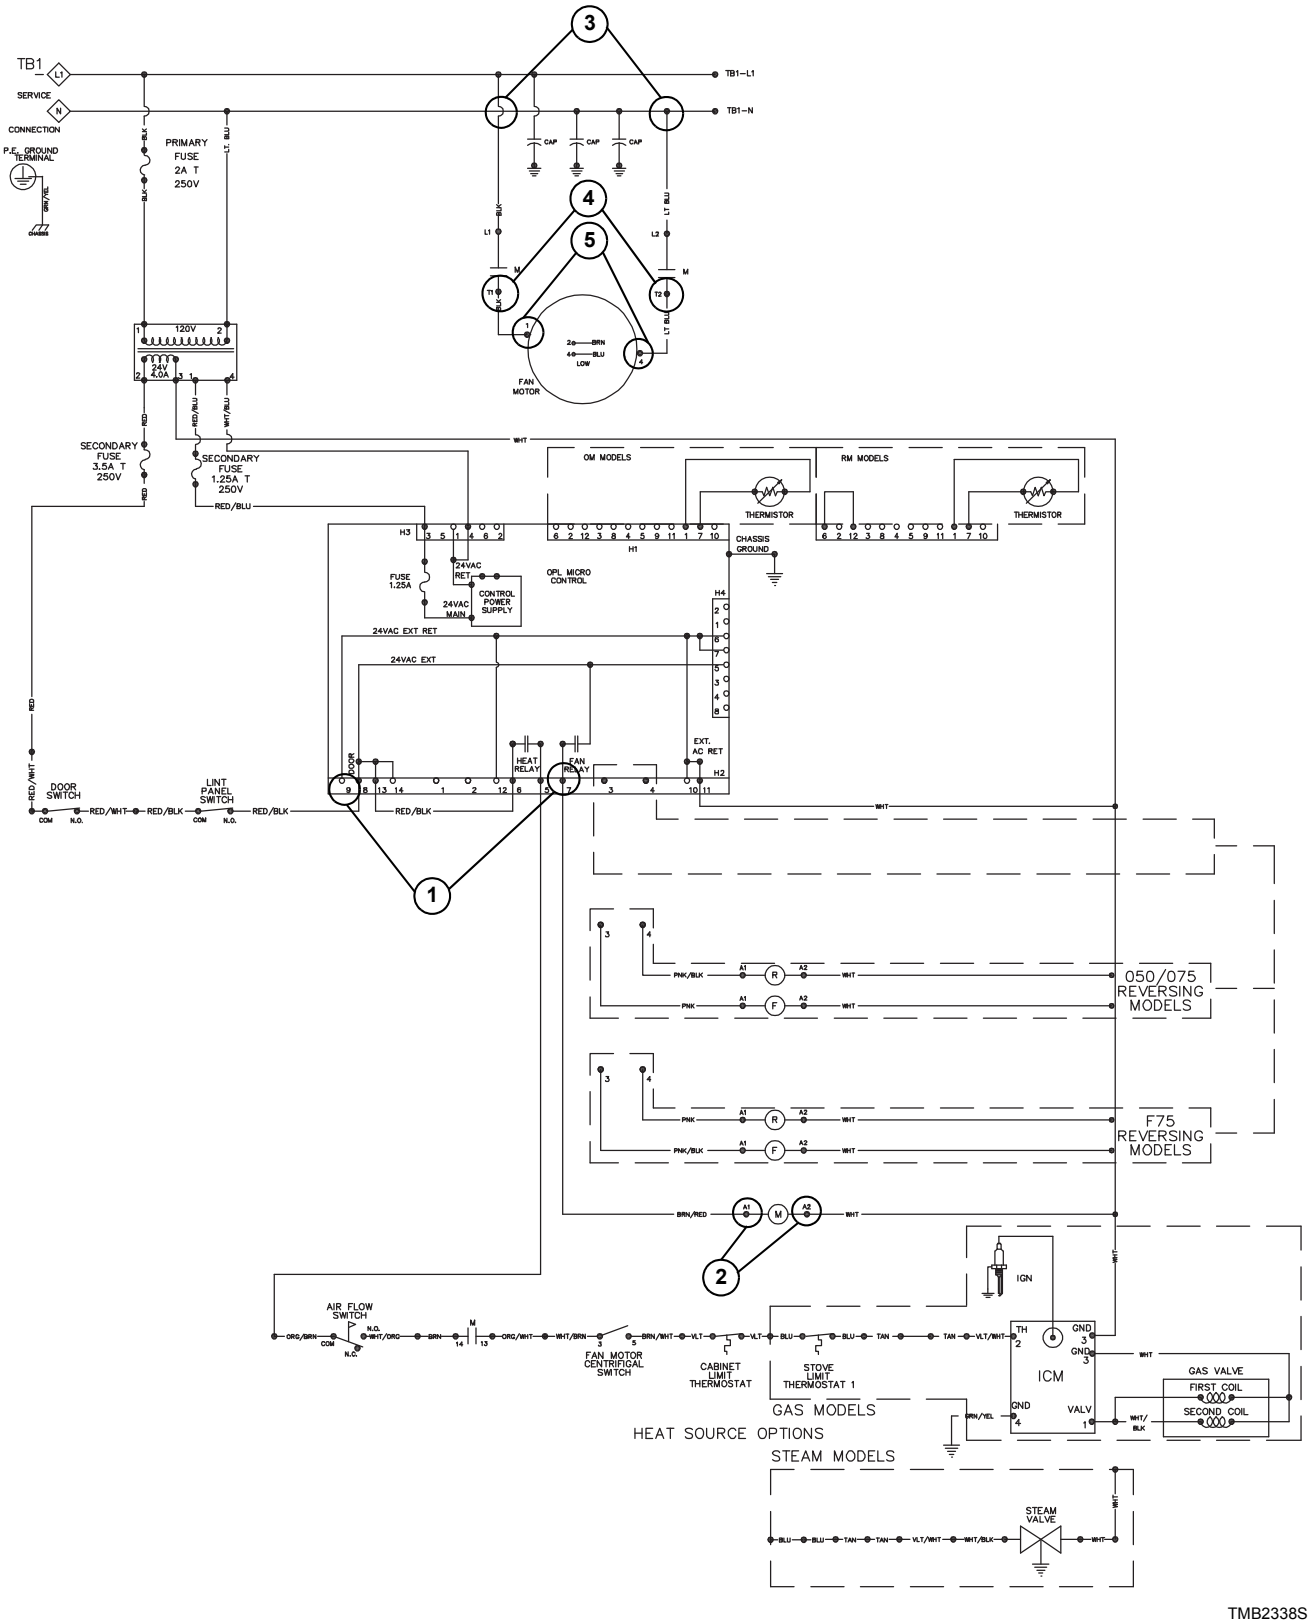

TMB2338S

Motor Will Not Start/Run – 3 Phase

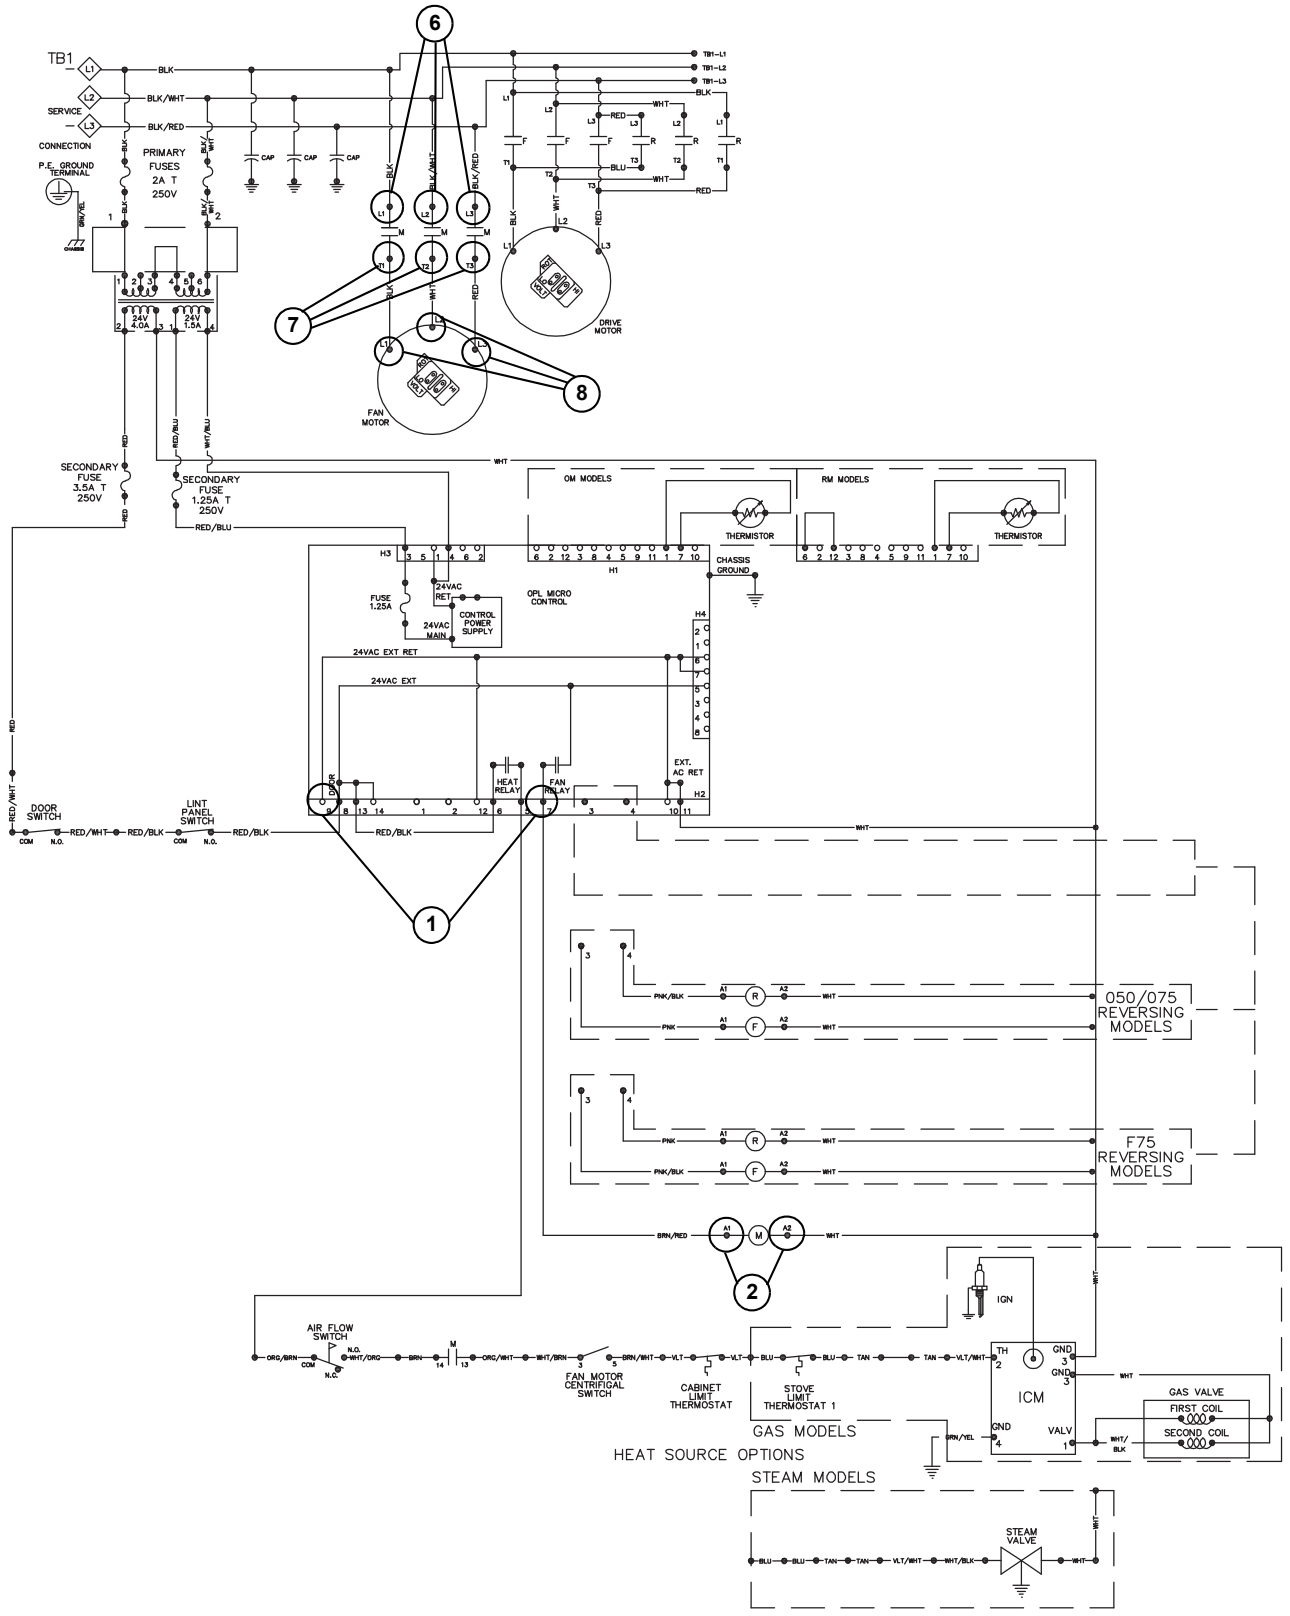

TMB2339S

68. Unit Will Not Heat – Gas

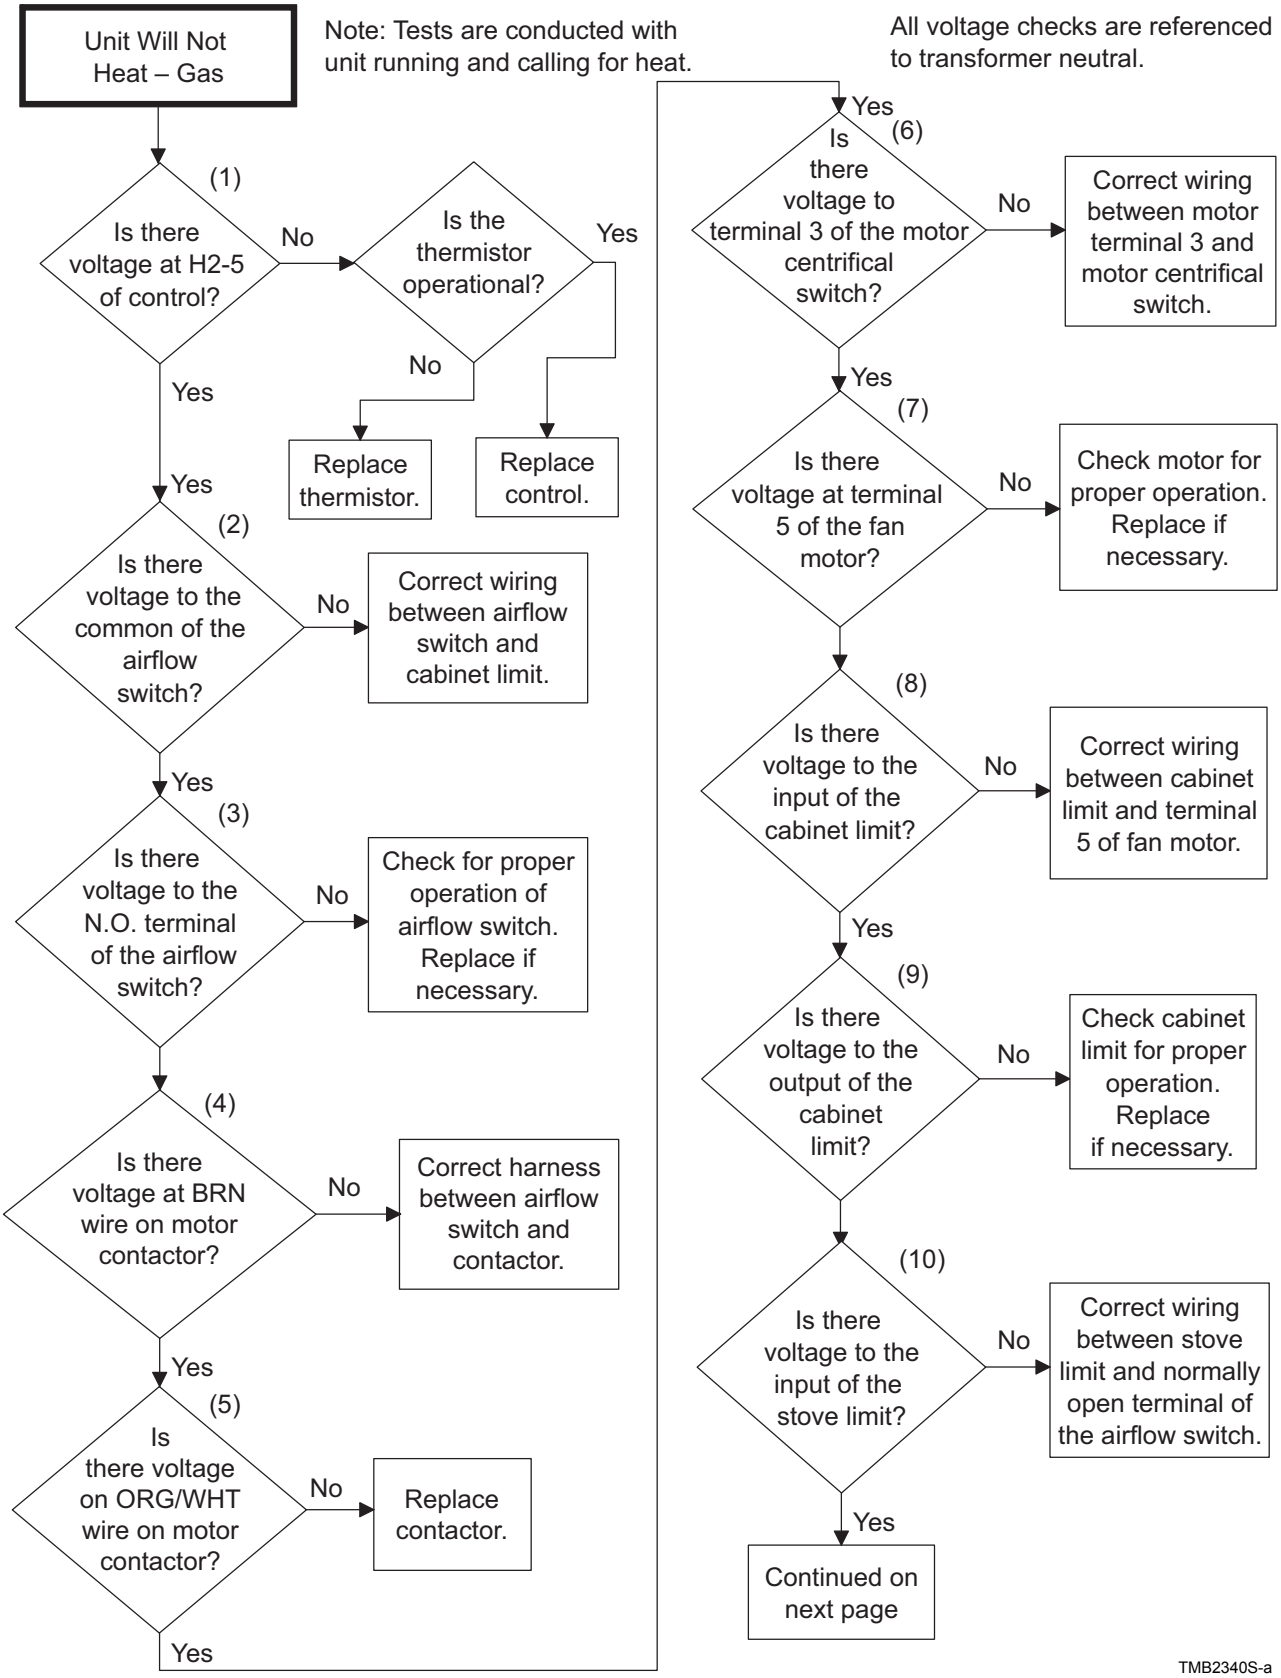
Unit Will Not Heat – Gas
Note: Tests are conducted with unit running and calling for heat.
All voltage checks are referenced to transformer neutral.
(1)
Is there voltage at H2-5 of control?
No
Is the thermistor operational?
Yes
No
Replace thermistor.
Replace control.
Yes
(2)
Is there voltage to the common of the airflow switch?
No
Correct wiring between airflow switch and cabinet limit.
Yes
(3)
Is there voltage to the N.O. terminal of the airflow switch?
No
Check for proper operation of airflow switch. Replace if necessary.
(4)
Is there voltage at BRN wire on motor contactor?
No
Correct harness between airflow switch and contactor.
Yes
(5)
Is there voltage on ORG/WHT wire on motor contactor?
No
Replace contactor.
Yes
Yes
(6)
Is there voltage to terminal 3 of the motor centrifical switch?
No
Correct wiring between motor terminal 3 and motor centrifical switch.
Yes
(7)
Is there voltage at terminal 5 of the fan motor?
No
Check motor for proper operation. Replace if necessary.
(8)
Is there voltage to the input of the cabinet limit?
No
Correct wiring between cabinet limit and terminal 5 of fan motor.
Yes
(9)
Is there voltage to the output of the cabinet limit?
No
Check cabinet limit for proper operation. Replace if necessary.
(10)
Is there voltage to the input of the stove limit?
No
Correct wiring between stove limit and normally open terminal of the airflow switch.
Yes
Continued on next page
TMB2340S-a

68. Unit Will Not Heat – Gas (continued)

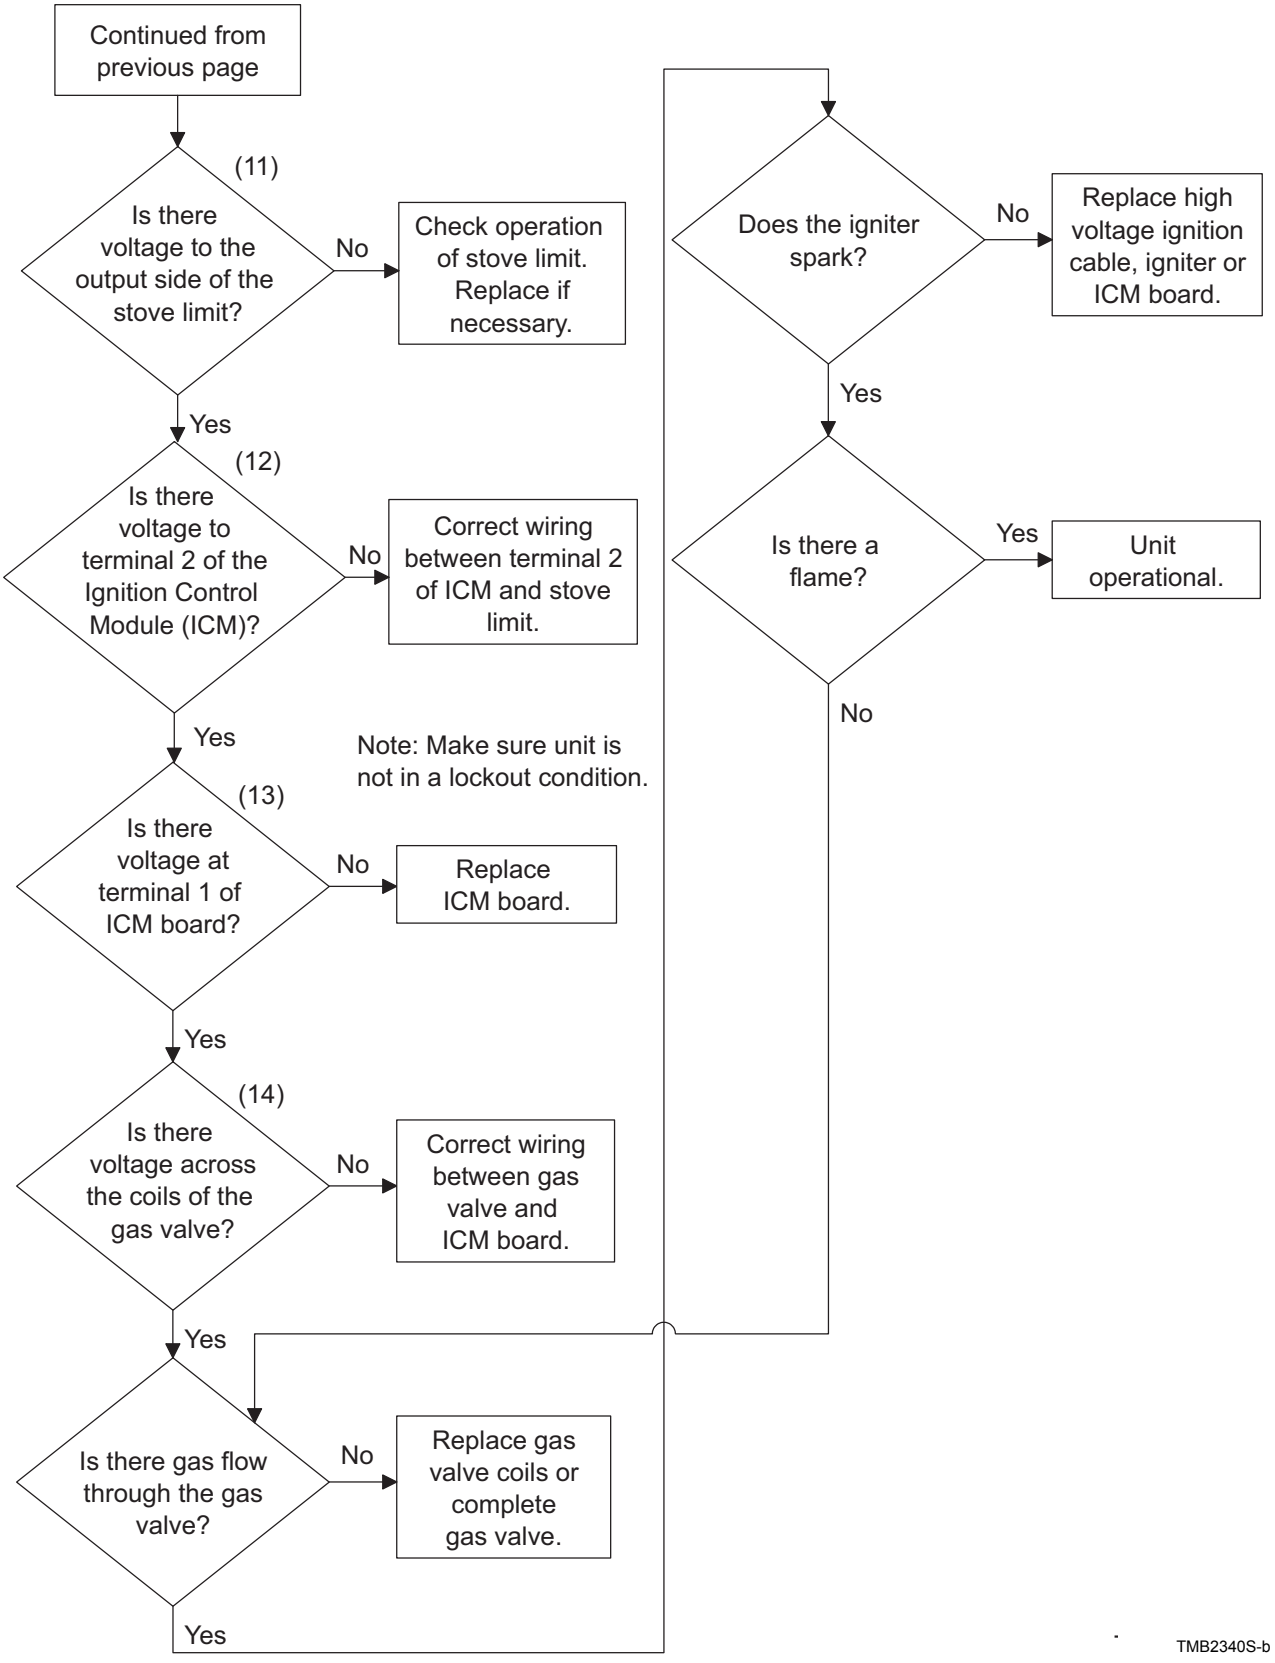
Continued from previous page
(11)
Is there voltage to the output side of the stove limit?
No
Check operation of stove limit. Replace if necessary.
Yes
(12)
Is there voltage to terminal 2 of the Ignition Control Module (ICM)?
No
Correct wiring between terminal 2 of ICM and stove limit.
Yes
Note: Make sure unit is not in a lockout condition.
(13)
Is there voltage at terminal 1 of ICM board?
No
Replace ICM board.
Yes
(14)
Is there voltage across the coils of the gas valve?
No
Correct wiring between gas valve and ICM board.
Yes
Is there gas flow through the gas valve?
No
Replace gas valve coils or complete gas valve.
Yes
Does the igniter spark?
No
Replace high voltage ignition cable, igniter or ICM board.
Yes
Is there a flame?
Yes
Unit operational.
No
TMB2340S-b

Please see following page for wiring diagram information.

Unit Will Not Heat – Gas

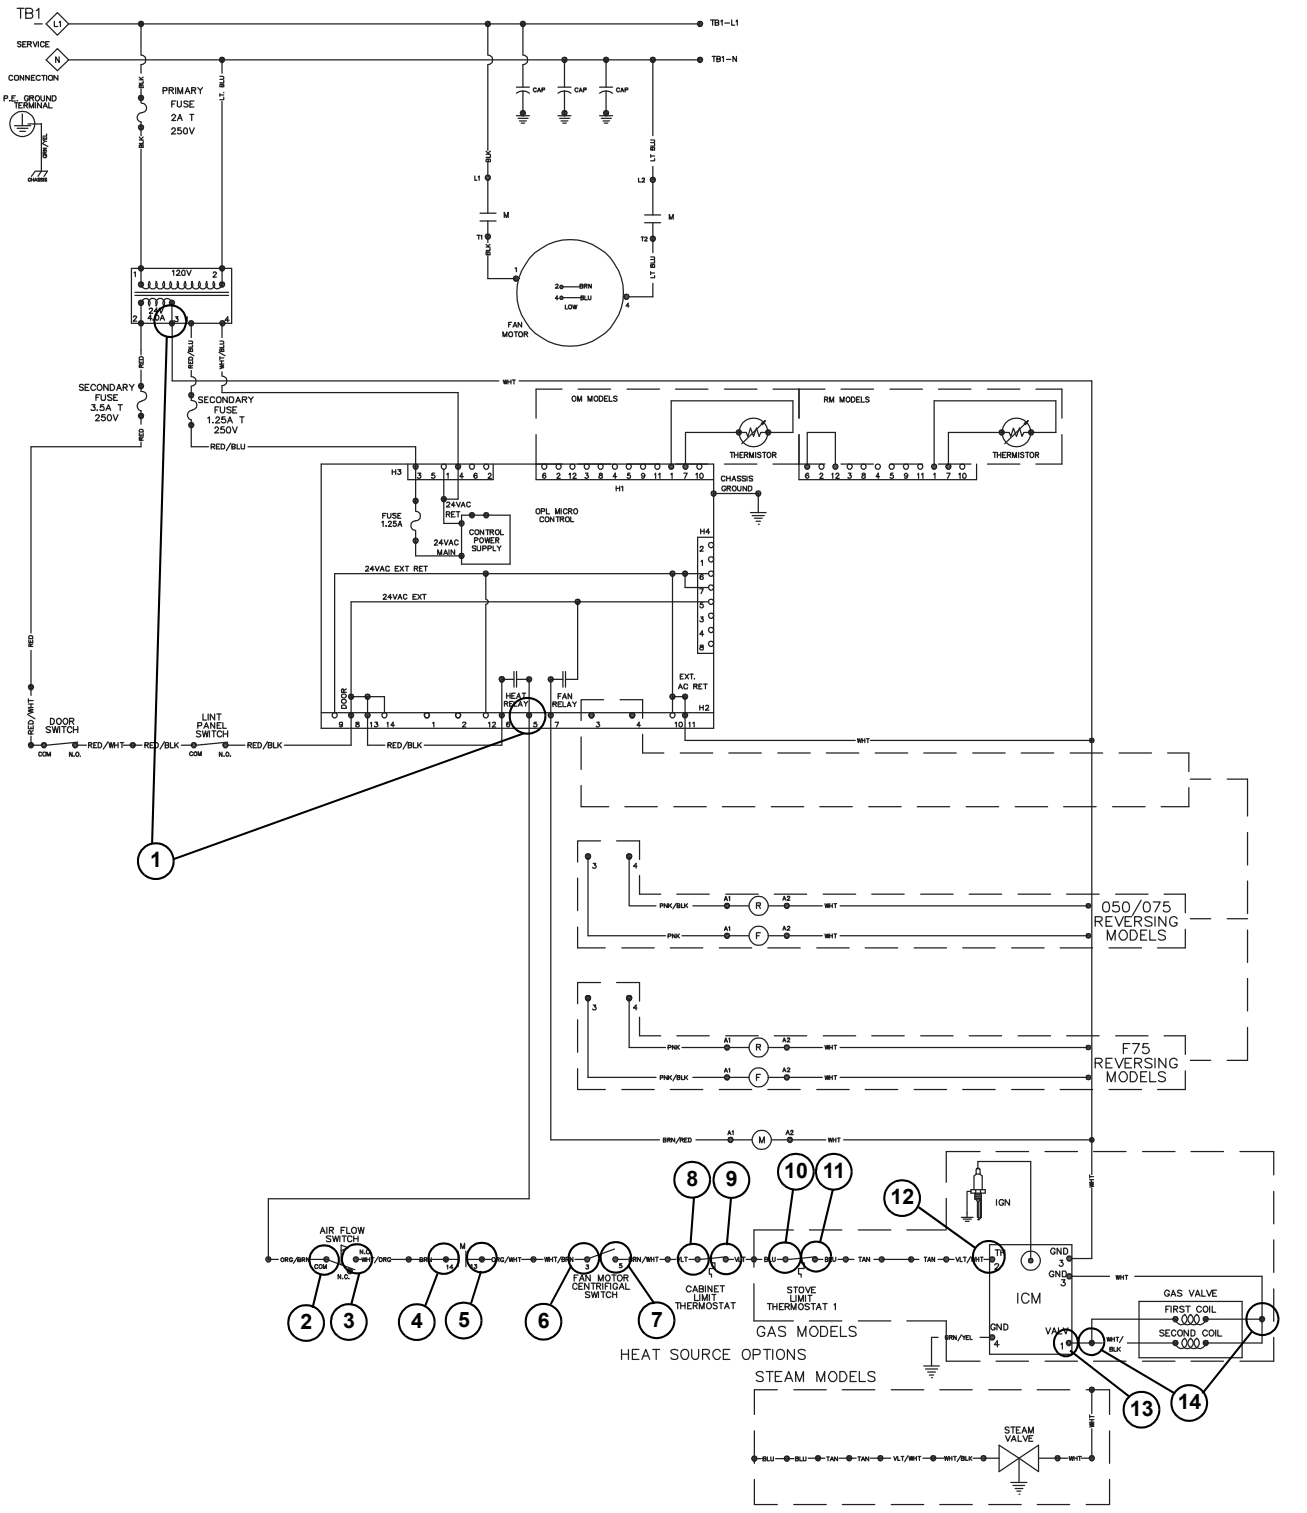

TMB2338S

69. Unit Will Not Heat – Steam

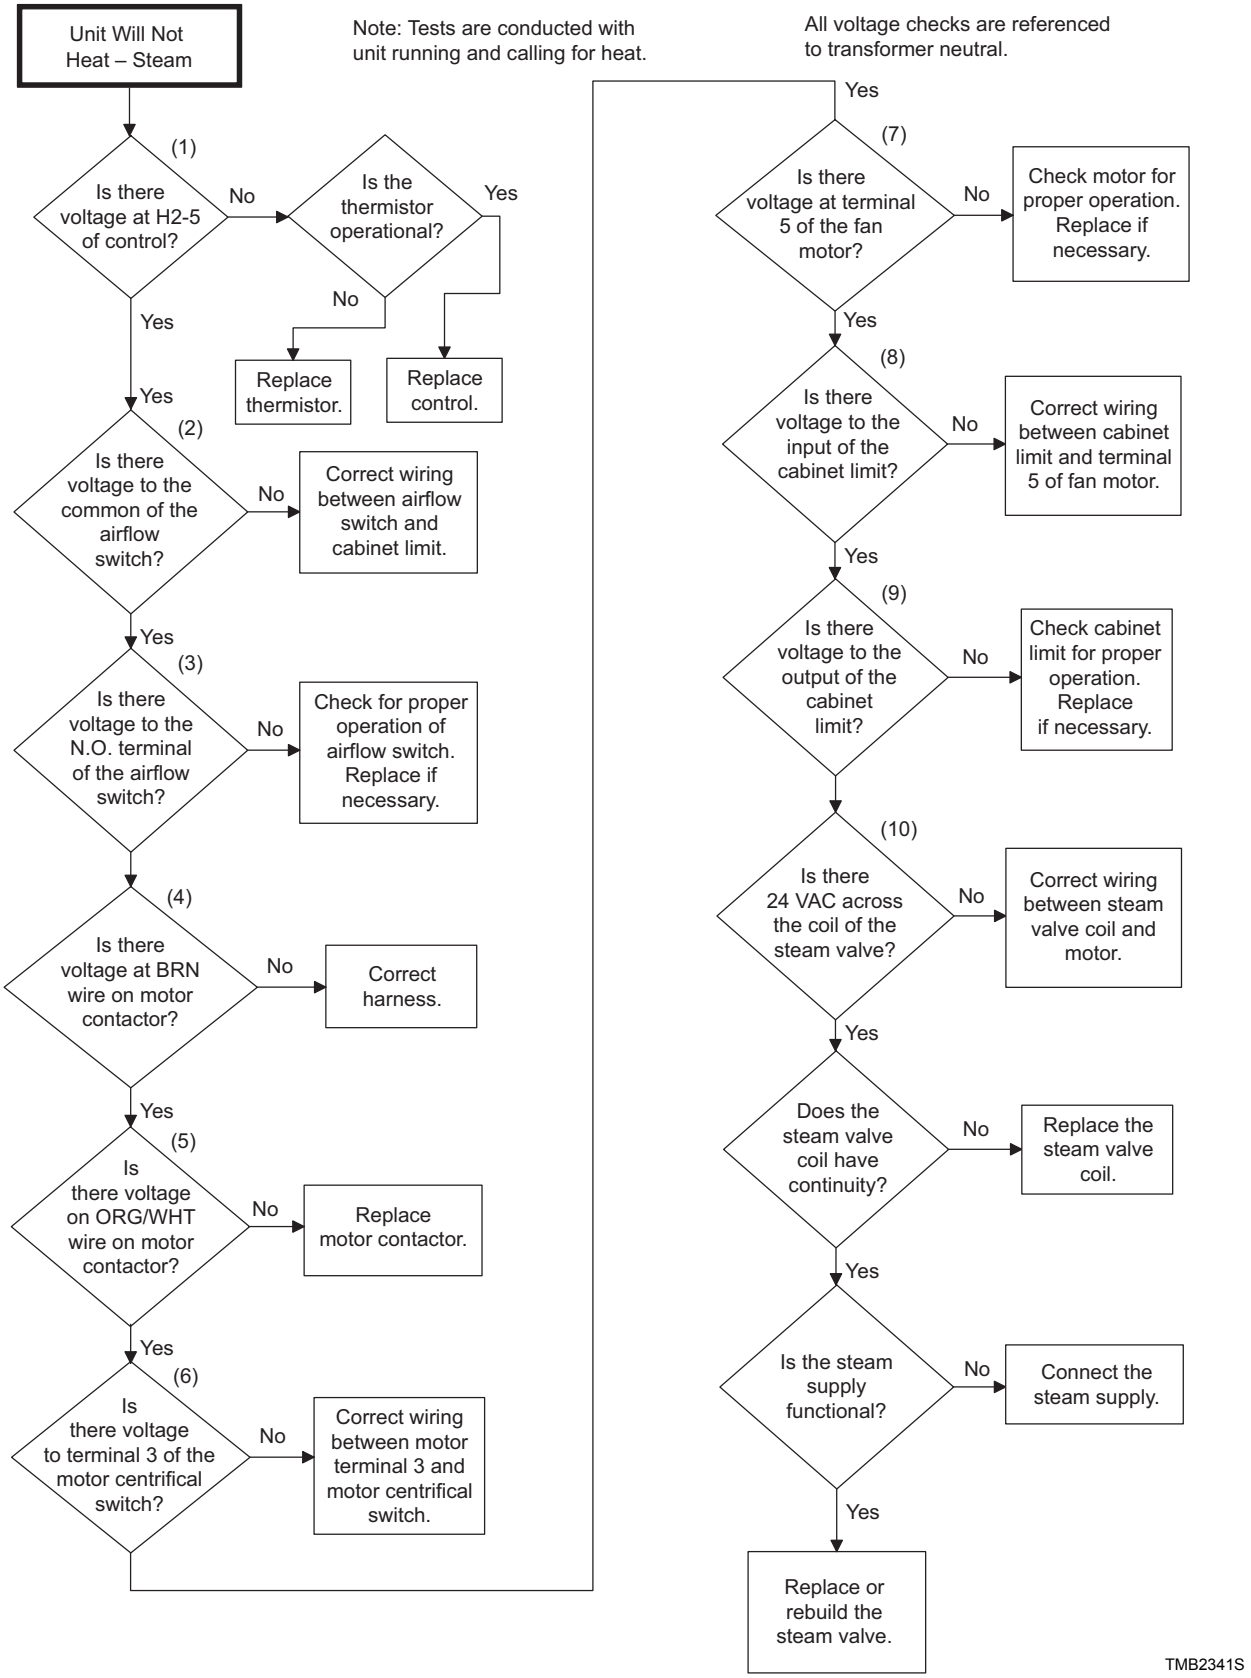
Unit Will Not Heat – Steam
Note: Tests are conducted with unit running and calling for heat.
All voltage checks are referenced to transformer neutral.
(1)
Is there voltage at H2-5 of control?
No
Is the thermistor operational?
Yes
No
Replace thermistor.
Replace control.
Yes
(2)
Is there voltage to the common of the airflow switch?
No
Correct wiring between airflow switch and cabinet limit.
Yes
(3)
Is there voltage to the N.O. terminal of the airflow switch?
No
Check for proper operation of airflow switch. Replace if necessary.
(4)
Is there voltage at BRN wire on motor contactor?
No
Correct harness.
Yes
(5)
Is there voltage on ORG/WHT wire on motor contactor?
No
Replace motor contactor.
Yes
(6)
Is there voltage to terminal 3 of the motor centrifical switch?
No
Correct wiring between motor terminal 3 and motor centrifical switch.
Yes
(7)
Is there voltage at terminal 5 of the fan motor?
No
Check motor for proper operation. Replace if necessary.
Yes
(8)
Is there voltage to the input of the cabinet limit?
No
Correct wiring between cabinet limit and terminal 5 of fan motor.
Yes
(9)
Is there voltage to the output of the cabinet limit?
No
Check cabinet limit for proper operation. Replace if necessary.
(10)
Is there 24 VAC across the coil of the steam valve?
No
Correct wiring between steam valve coil and motor.
Yes
Does the steam valve coil have continuity?
No
Replace the steam valve coil.
Yes
Is the steam supply functional?
No
Connect the steam supply.
Yes
Replace or rebuild the steam valve.
TMB2341S

Unit Will Not Heat – Steam

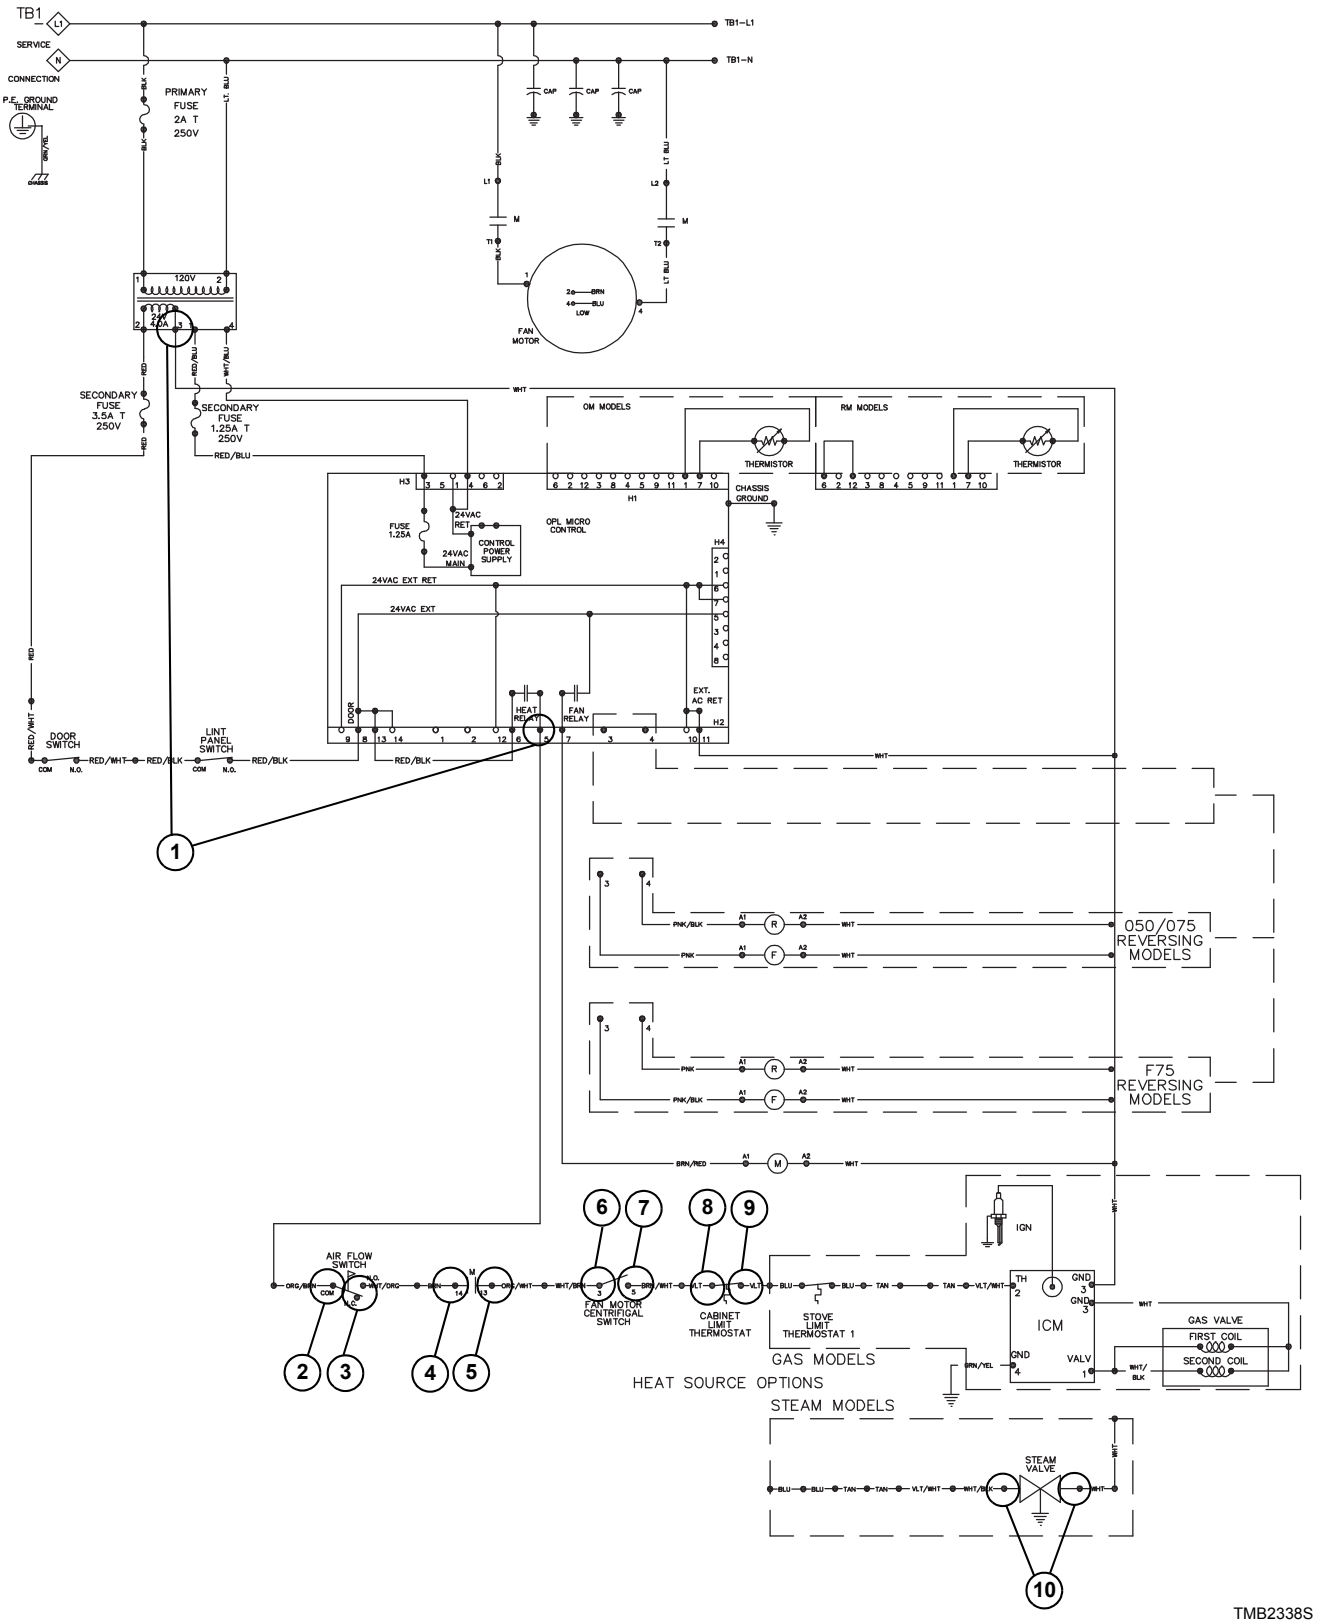

TMB2338S

70. Unit Will Not Heat – Electric

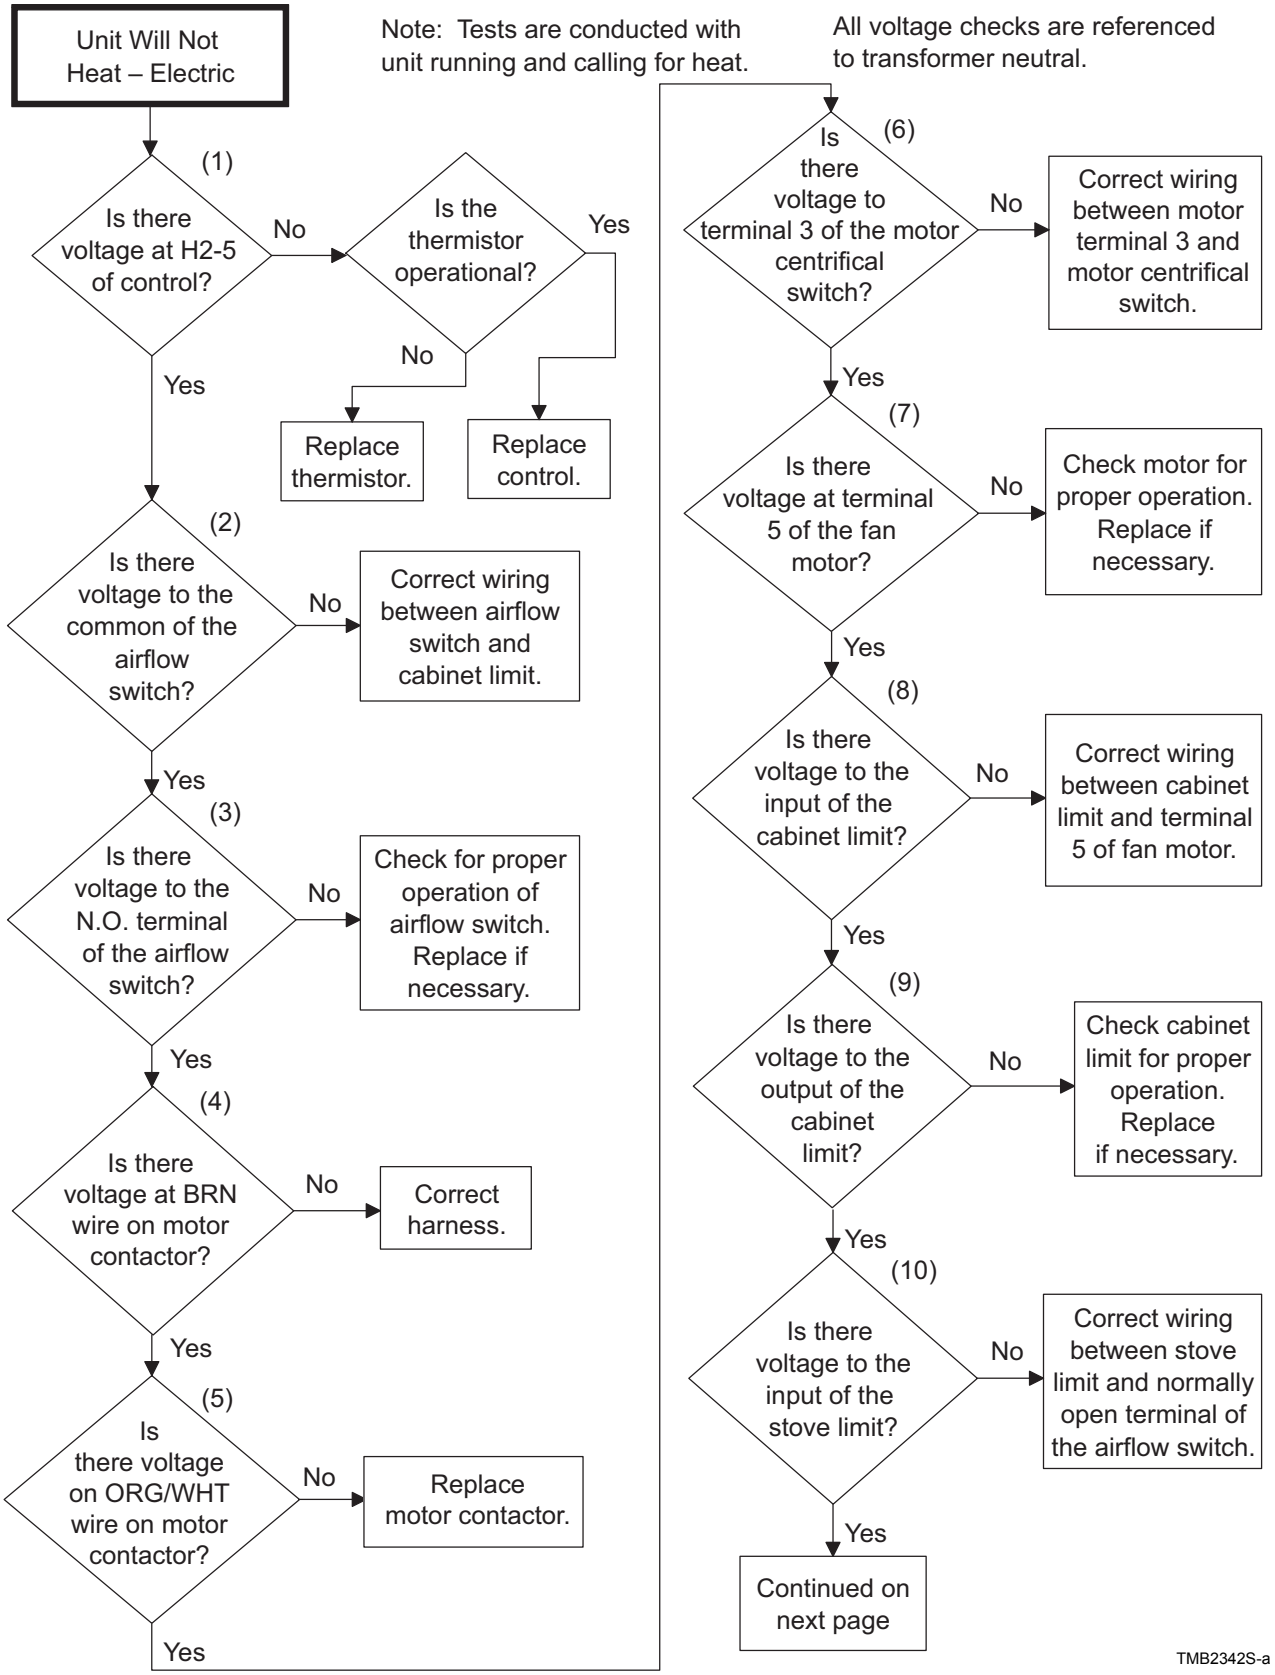
Unit Will Not Heat – Electric
Note: Tests are conducted with unit running and calling for heat.
All voltage checks are referenced to transformer neutral.
(1)
Is there voltage at H2-5 of control?
No
Is the thermistor operational?
Yes
No
Replace thermistor.
Replace control.
Yes
(2)
Is there voltage to the common of the airflow switch?
No
Correct wiring between airflow switch and cabinet limit.
Yes
(3)
Is there voltage to the N.O. terminal of the airflow switch?
No
Check for proper operation of airflow switch. Replace if necessary.
Yes
(4)
Is there voltage at BRN wire on motor contactor?
No
Correct harness.
Yes
(5)
Is there voltage on ORG/WHT wire on motor contactor?
No
Replace motor contactor.
Yes
(6)
Is there voltage to terminal 3 of the motor centrifical switch?
No
Correct wiring between motor terminal 3 and motor centrifical switch.
Yes
(7)
Is there voltage at terminal 5 of the fan motor?
No
Check motor for proper operation. Replace if necessary.
Yes
(8)
Is there voltage to the input of the cabinet limit?
No
Correct wiring between cabinet limit and terminal 5 of fan motor.
Yes
(9)
Is there voltage to the output of the cabinet limit?
No
Check cabinet limit for proper operation. Replace if necessary.
Yes
(10)
Is there voltage to the input of the stove limit?
No
Correct wiring between stove limit and normally open terminal of the airflow switch.
Yes
Continued on next page
TMB2342S-a

70. Unit Will Not Heat – Electric (continued)

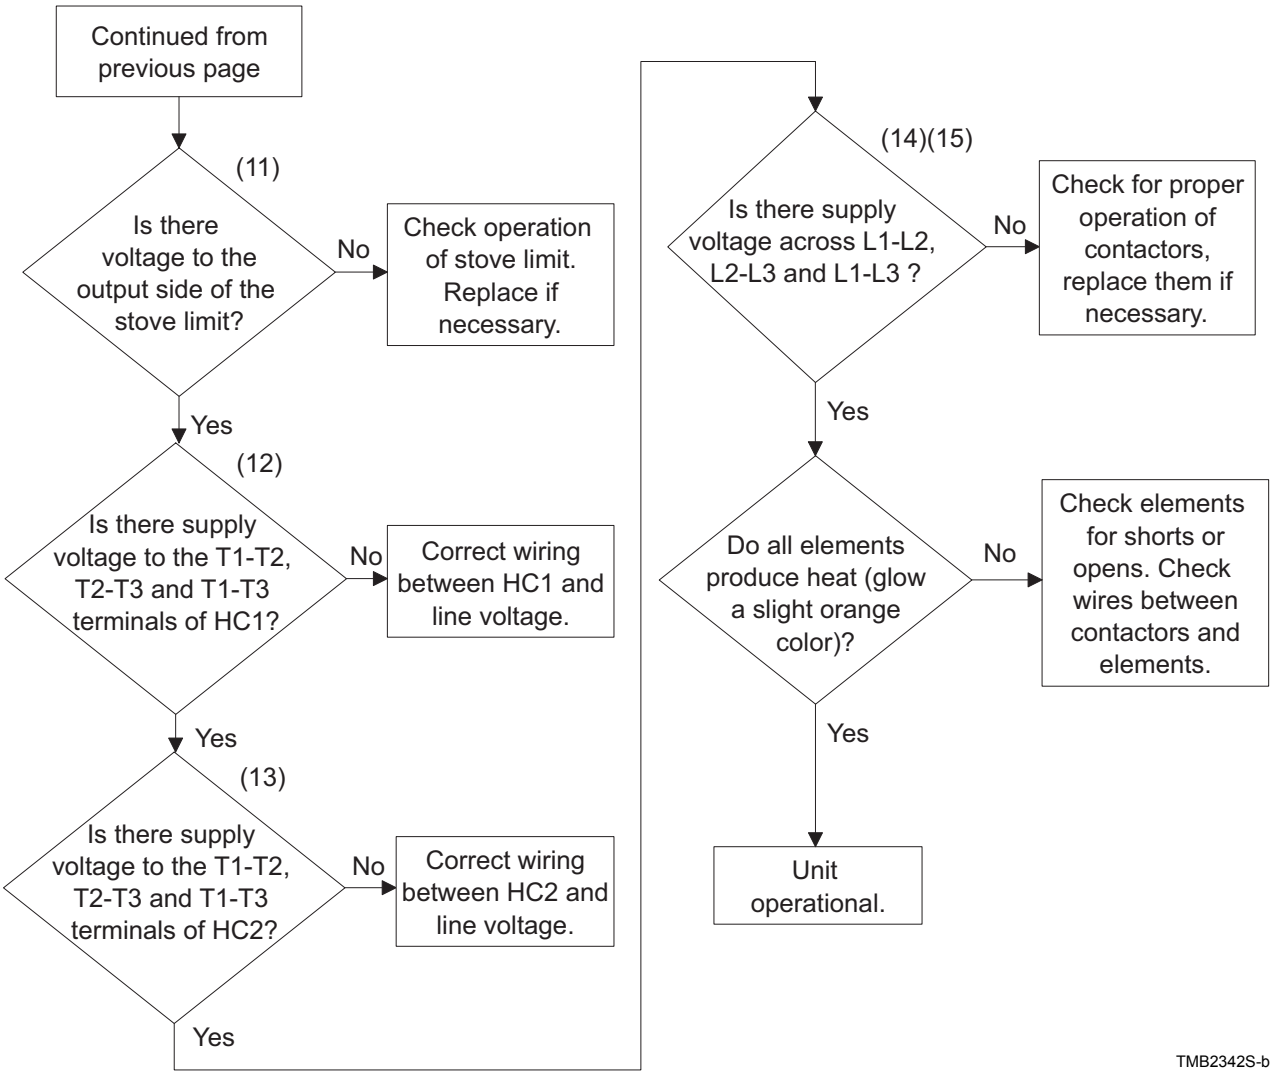
Continued from previous page
(11)
Is there voltage to the output side of the stove limit?
No
Check operation of stove limit. Replace if necessary.
Yes
(12)
Is there supply voltage to the T1-T2, T2-T3 and T1-T3 terminals of HC1?
No
Correct wiring between HC1 and line voltage.
Yes
(13)
Is there supply voltage to the T1-T2, T2-T3 and T1-T3 terminals of HC2?
No
Correct wiring between HC2 and line voltage.
Yes
(14)(15)
Is there supply voltage across L1-L2, L2-L3 and L1-L3 ?
No
Check for proper operation of contactors, replace them if necessary.
Yes
Do all elements produce heat (glow a slight orange color)?
No
Check elements for shorts or opens. Check wires between contactors and elements.
Yes
Unit operational.
TMB2342S-b

Please see following page for wiring diagram information.

Unit Will Not Heat – Electric

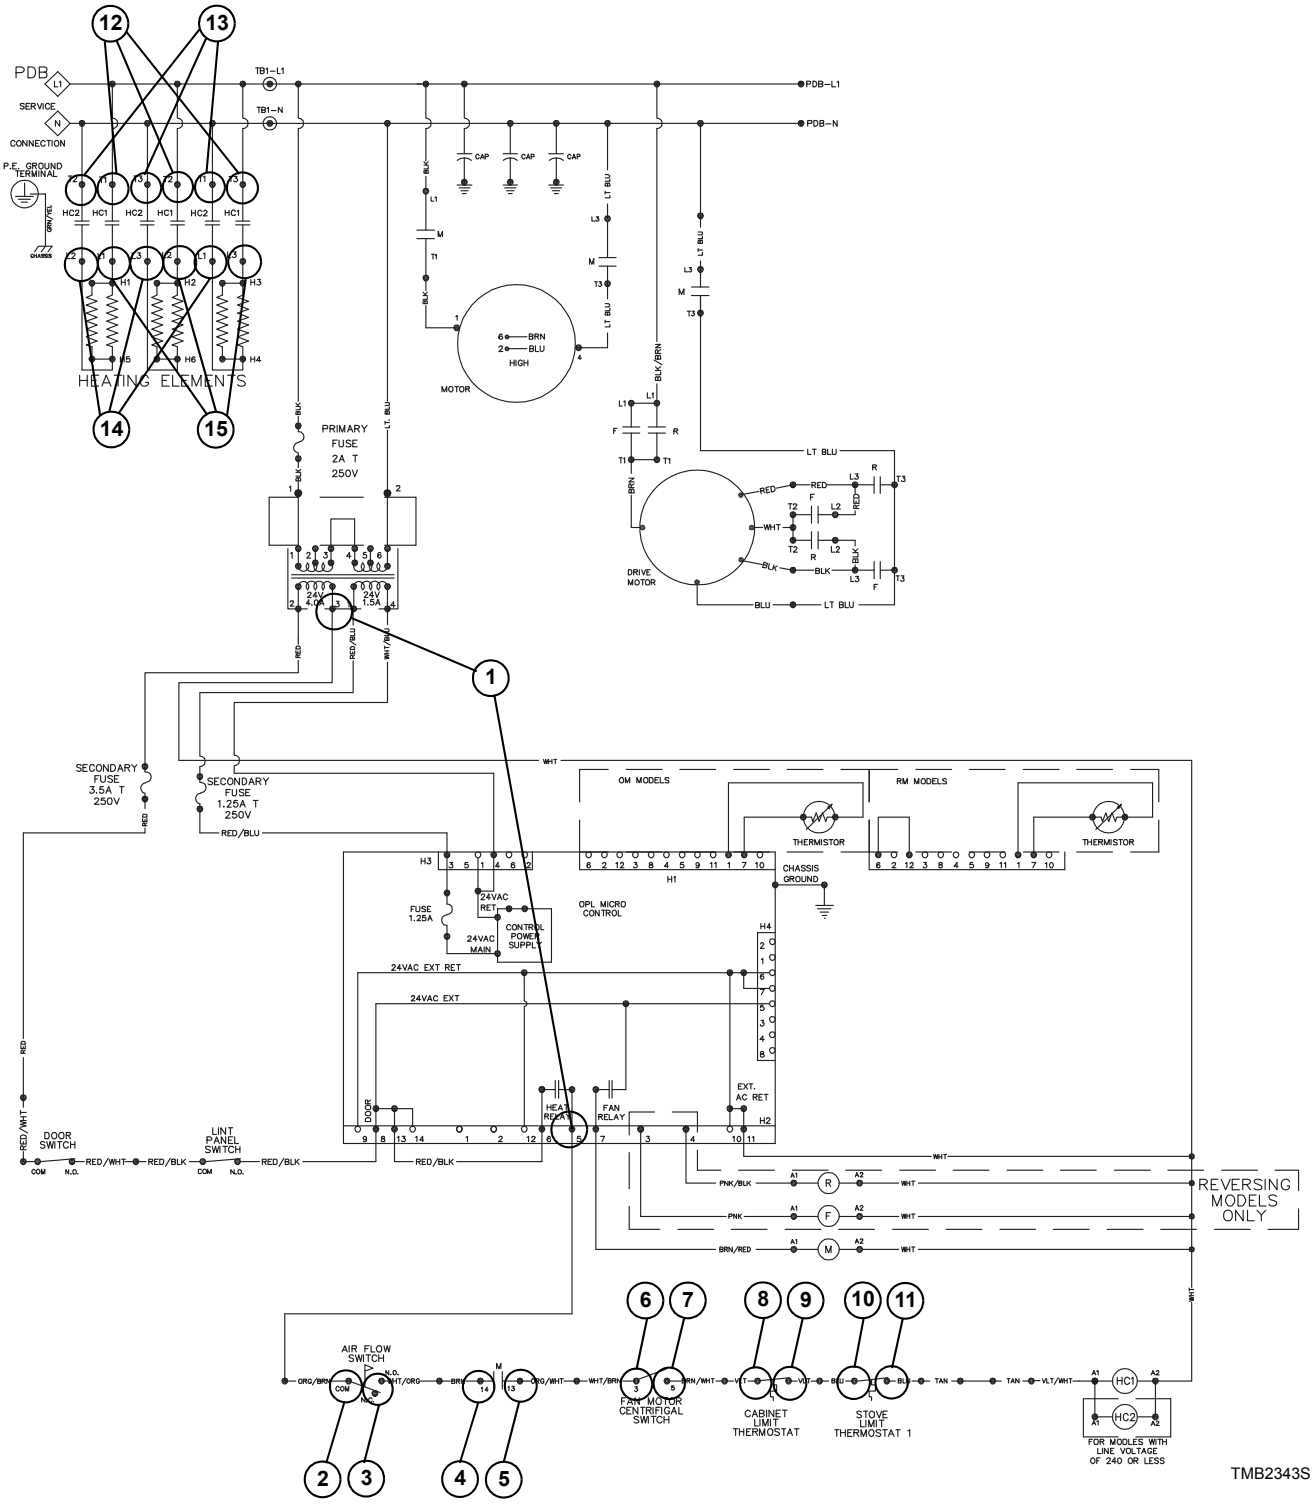

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:
- **Disconnect electric power to the dryer(s) before servicing.**
- **Close gas shut-off valve to gas dryer(s) before servicing.**
- **Never start the dryer(s) with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the dryer is properly grounded.**

W001R1

71. Error Codes

OP - Indicates physical “open” in the thermistor circuit. Possible causes are: 1) thermistor, 2) wiring between control and thermistor, 3) control.
SH - Indicates a “short” in the thermistor circuit. Possible causes are: 1) shorted thermistor, 2) a short in the wiring between control and thermistor, 3) control.

Display	Definition	Corrective Action
OP	Indicates an open circuit in the thermistor.	• Check thermistor. Replace if inoperative. • Check wiring between control and thermistor. Refer to wiring diagram for proper wiring. • Check control. Replace if inoperative.
SH	Indicates a short circuit in the thermistor.	• Check thermistor. Replace if inoperative. • Check wiring between control and thermistor. Refer to wiring diagram for proper wiring. • Check control. Replace if inoperative.

Section 9
Hybrid Timer Control Troubleshooting

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:
- **Disconnect electric power to the tumbler before servicing.**
- **Close gas shut-off valve to gas tumbler before servicing.**
- **Close steam valve to steam tumbler before servicing.**
- **Never start the tumbler with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the tumbler is properly grounded.**

W002

72. Coins Ignored When Entered

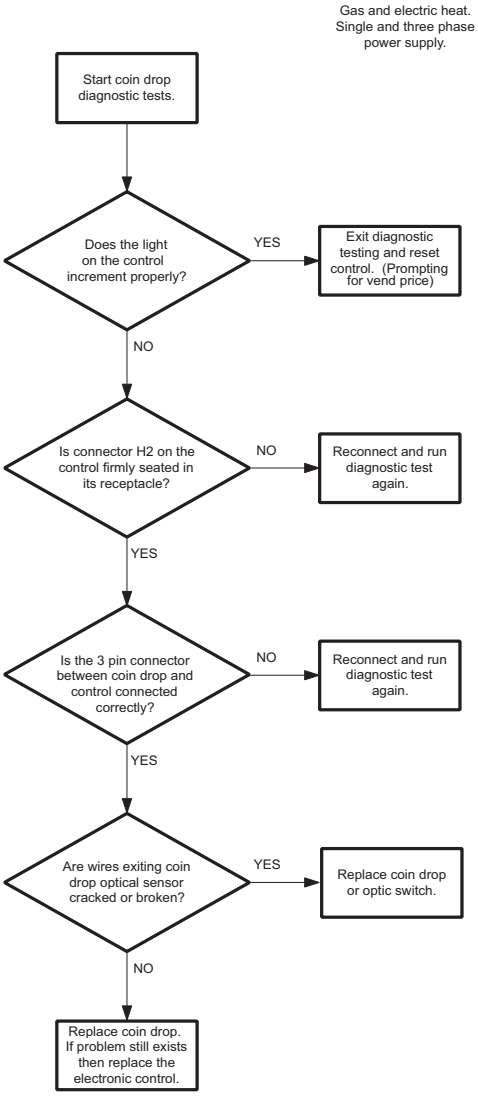
Gas and electric heat.
Single and three phase
power supply.
Start coin drop diagnostic tests.
Does the light on the control increment properly?
YES
Exit diagnostic testing and reset control. (Prompting for vend price)
NO
Is connector H2 on the control firmly seated in its receptacle?
NO
Reconnect and run diagnostic test again.
YES
Is the 3 pin connector between coin drop and control connected correctly?
NO
Reconnect and run diagnostic test again.
YES
Are wires exiting coin drop optical sensor cracked or broken?
YES
Replace coin drop or optic switch.
NO
Replace coin drop. If problem still exists then replace the electronic control.

TMB2051S

73. Control Has No Display – QT and RQ Control Suffixes

Control Has No Display – QT and RQ Control Suffixes

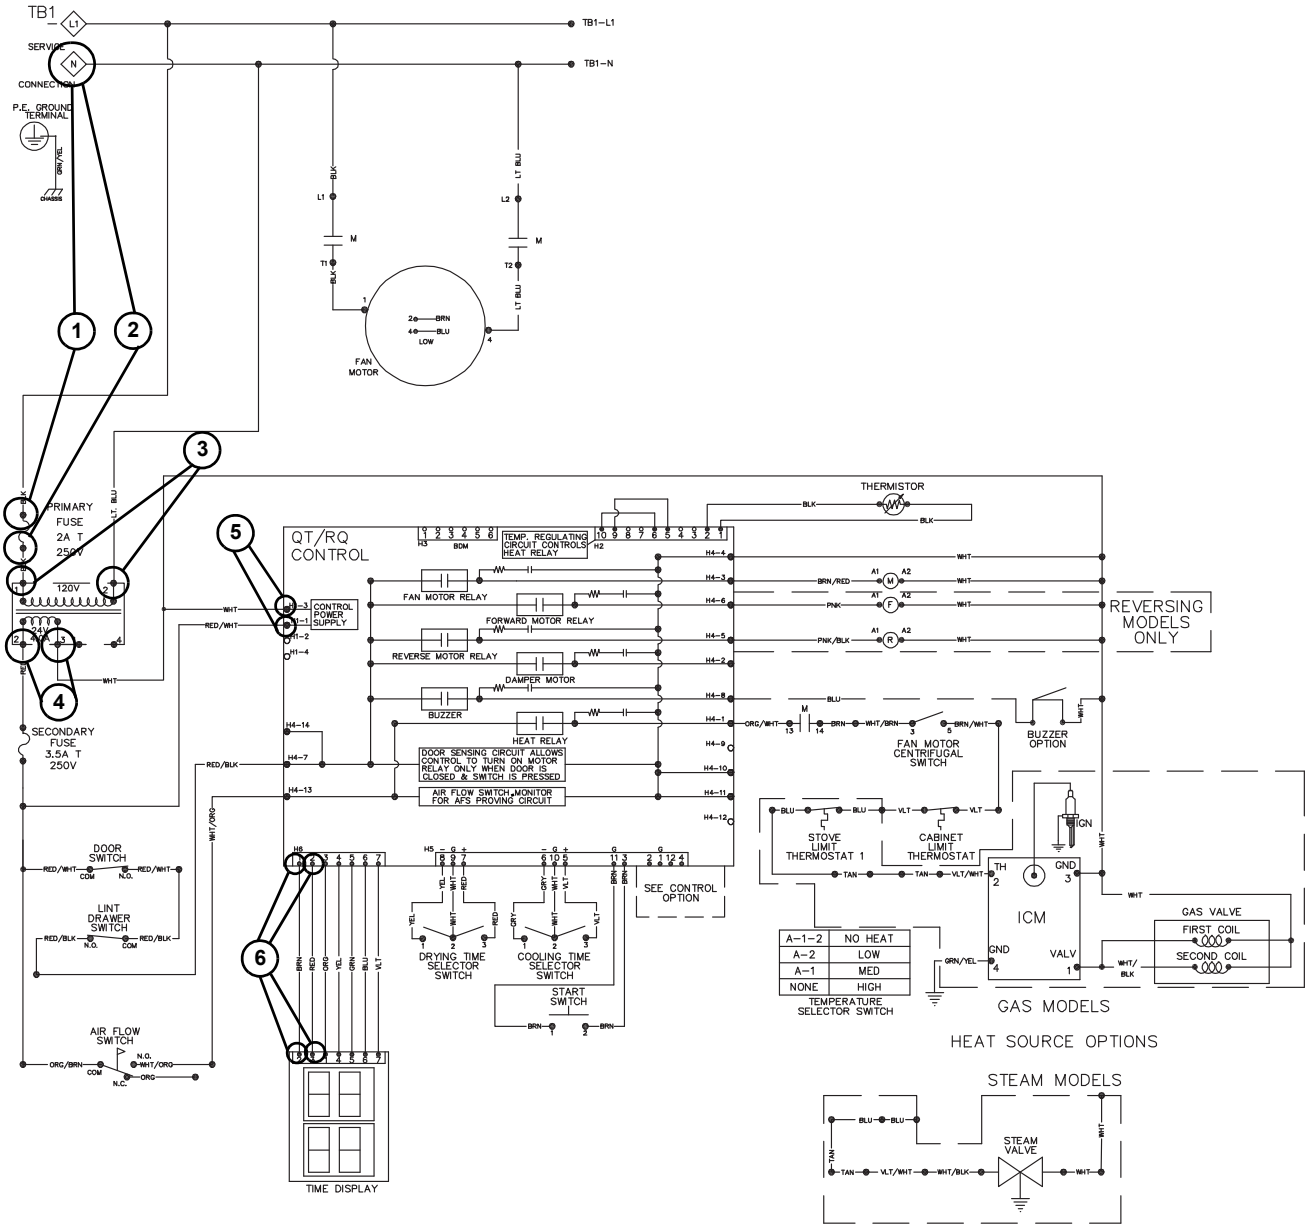

TMB2344S

74. Display Flashes “dr” With Door Closed – QT and RQ Control Suffixes

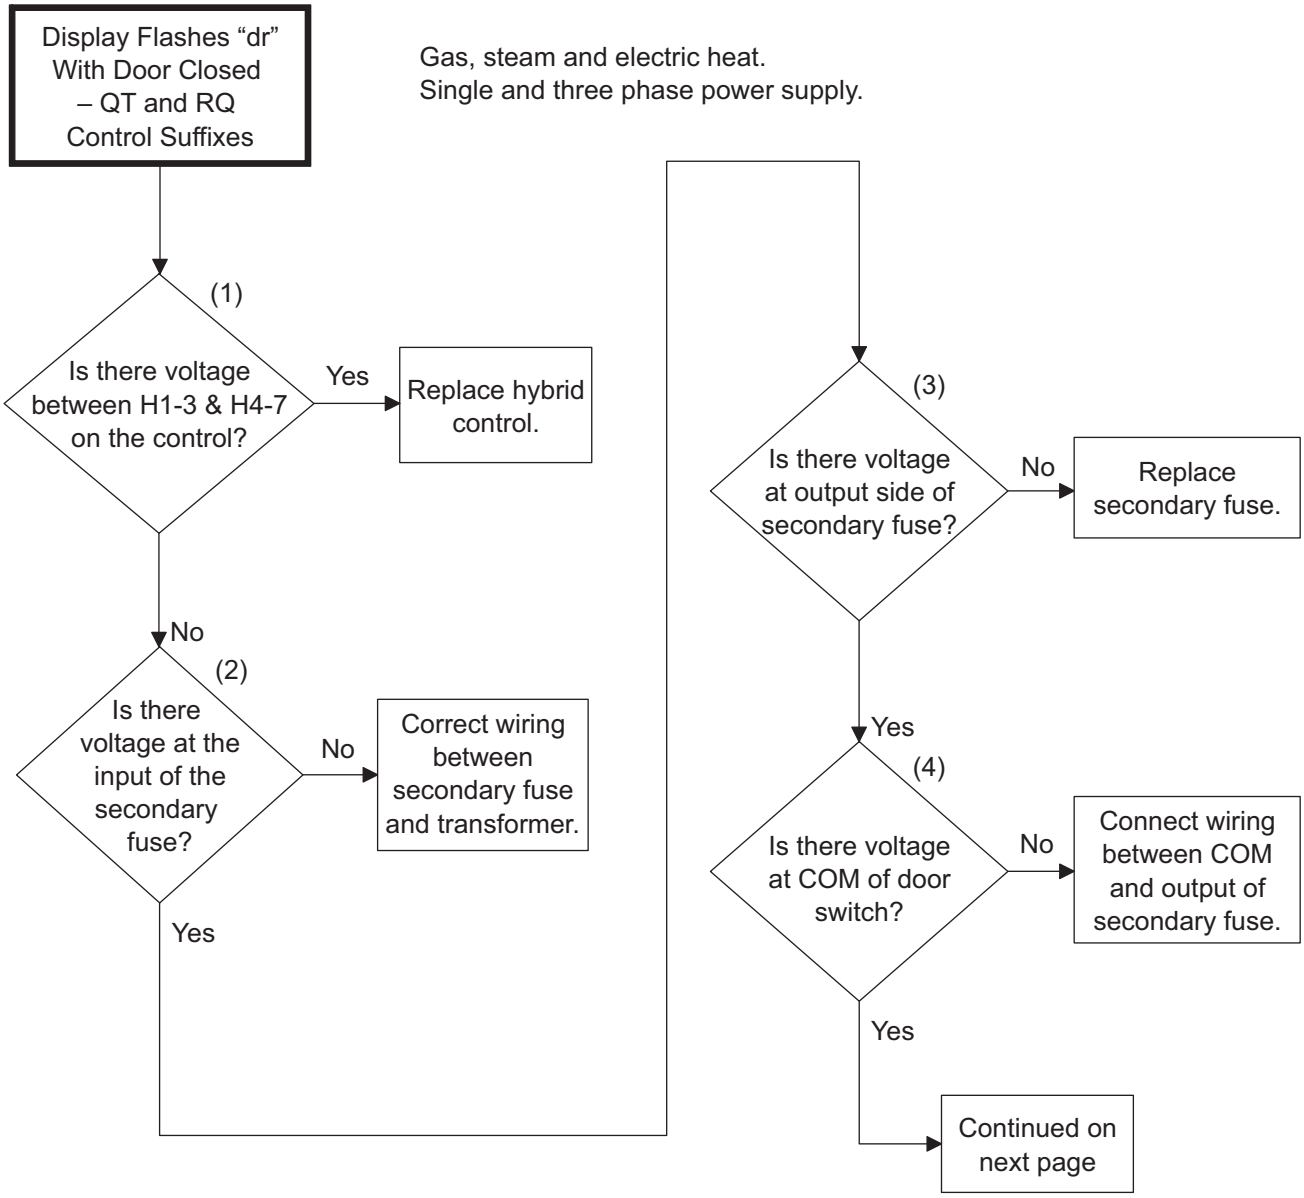
Display Flashes “dr” With Door Closed – QT and RQ Control Suffixes
Gas, steam and electric heat.
Single and three phase power supply.
(1)
Is there voltage between H1-3 & H4-7 on the control?
Yes
Replace hybrid control.
No
(2)
Is there voltage at the input of the secondary fuse?
No
Correct wiring between secondary fuse and transformer.
Yes
(3)
Is there voltage at output side of secondary fuse?
No
Replace secondary fuse.
Yes
(4)
Is there voltage at COM of door switch?
No
Connect wiring between COM and output of secondary fuse.
Yes
Continued on next page
TMB2406S

74. Display Flashes “dr” With Door Closed – QT and RQ Control Suffixes (continued)

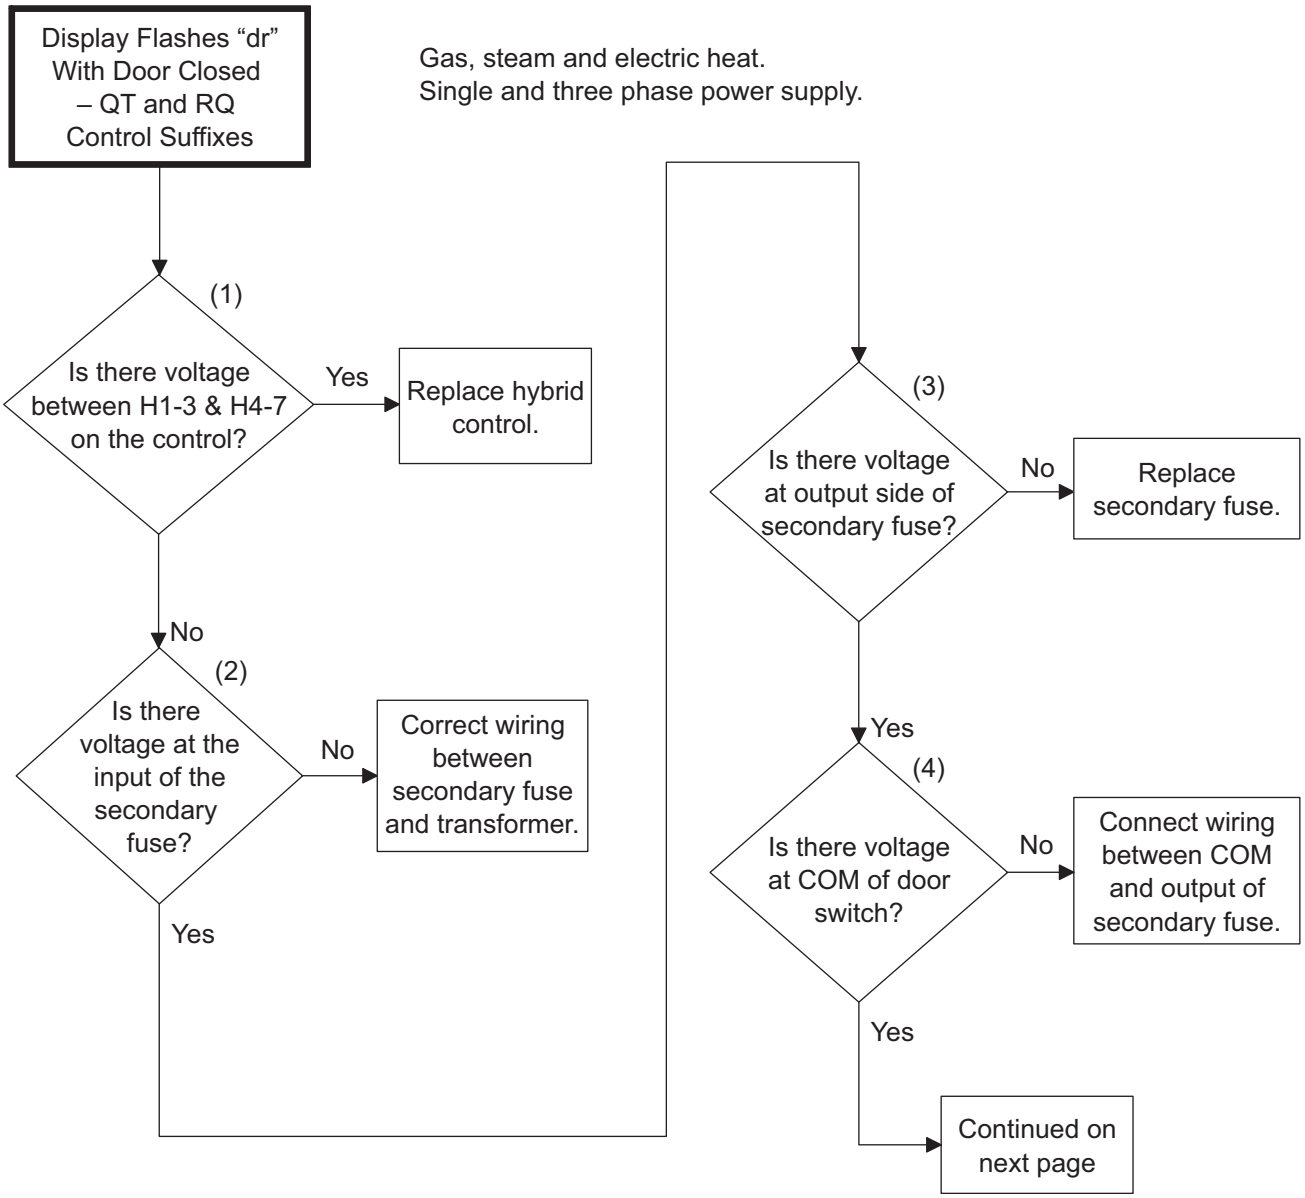
Display Flashes “dr” With Door Closed – QT and RQ Control Suffixes
Gas, steam and electric heat.
Single and three phase power supply.
(1)
Is there voltage between H1-3 & H4-7 on the control?
Yes
Replace hybrid control.
No
(2)
Is there voltage at the input of the secondary fuse?
No
Correct wiring between secondary fuse and transformer.
Yes
(3)
Is there voltage at output side of secondary fuse?
No
Replace secondary fuse.
Yes
(4)
Is there voltage at COM of door switch?
No
Connect wiring between COM and output of secondary fuse.
Yes
Continued on next page

TMB2406S

Display Flashes “dr” With Door Closed – QT and RQ Control Suffixes

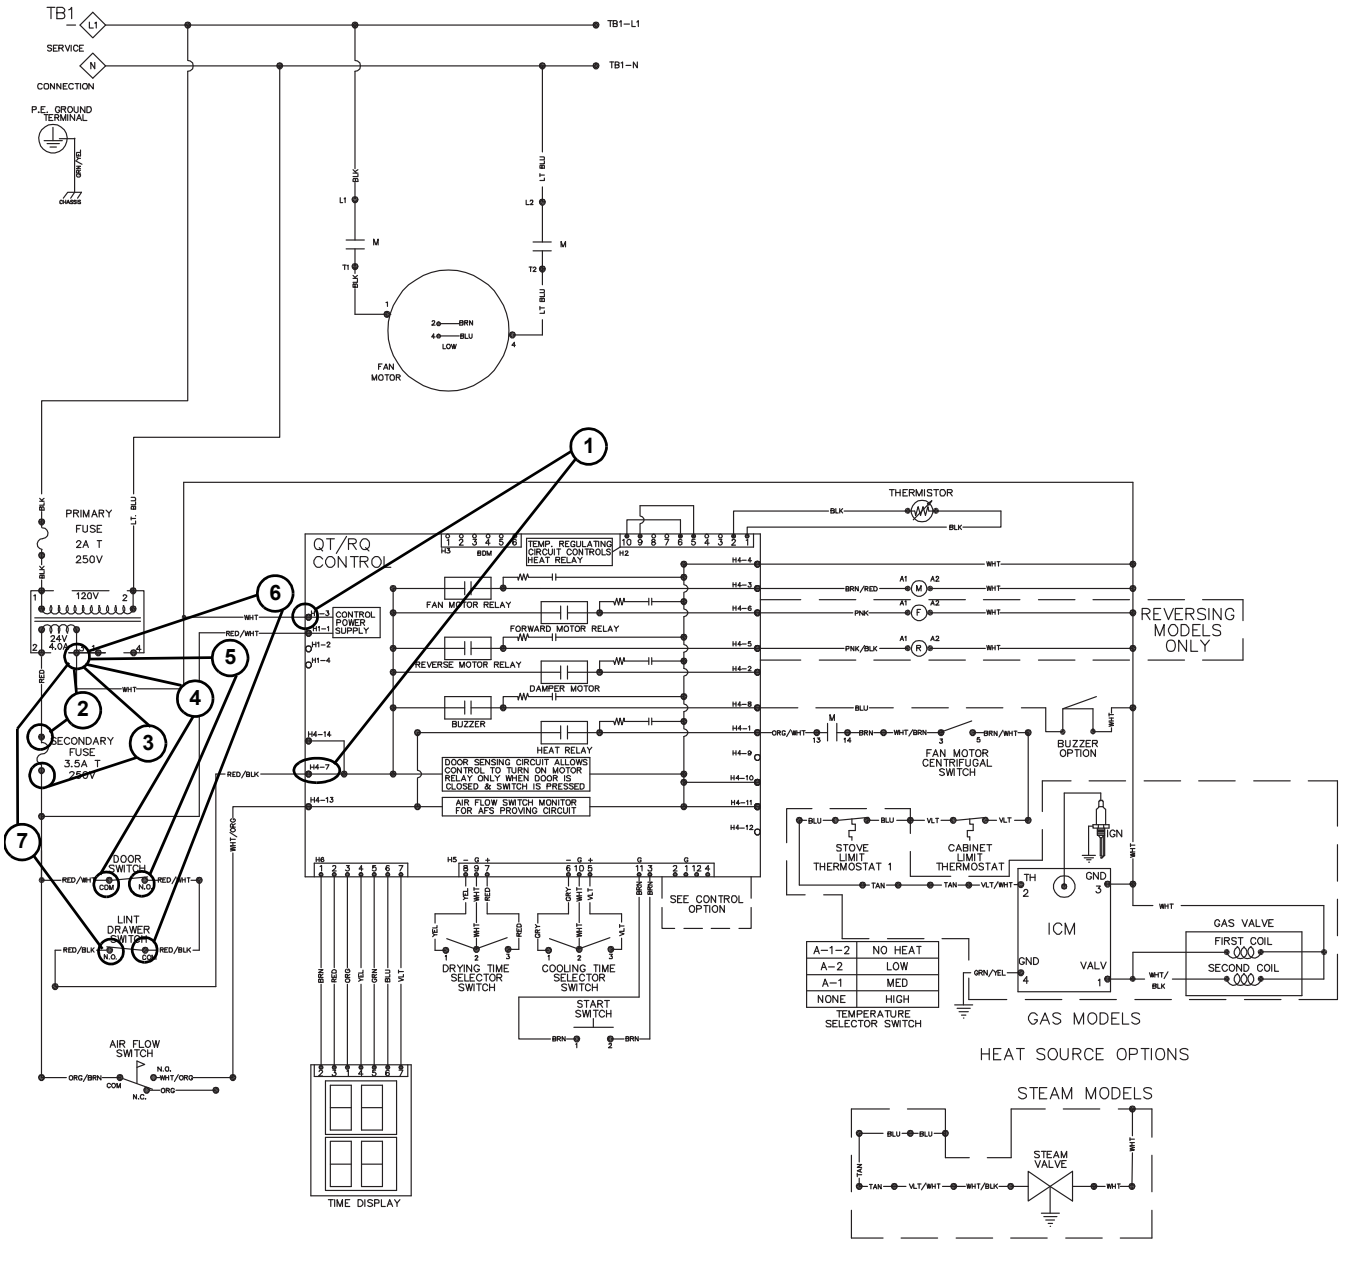

TMB2344S

75. Vend Satisfied, No In Use LED – SD and SX Control Suffixes

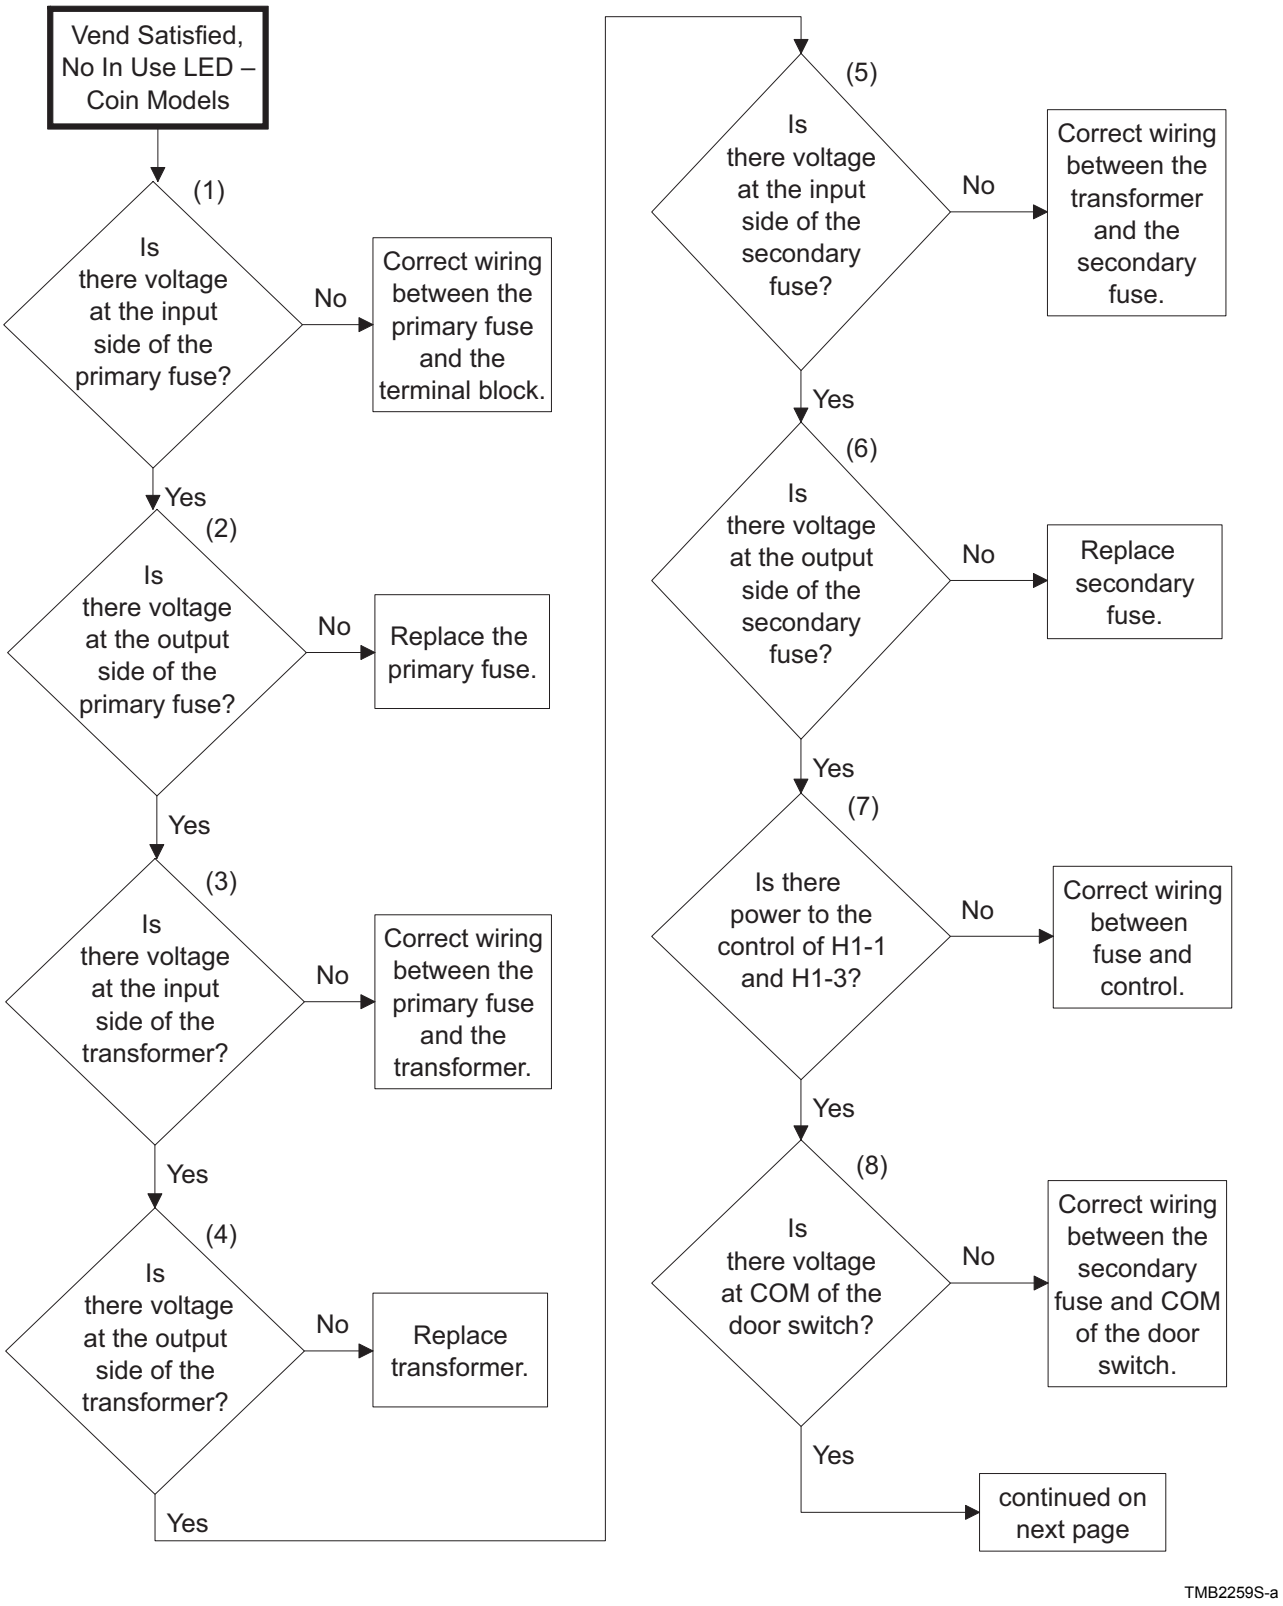
Vend Satisfied, No In Use LED – Coin Models
(1)
Is there voltage at the input side of the primary fuse?
No
Correct wiring between the primary fuse and the terminal block.
Yes
(2)
Is there voltage at the output side of the primary fuse?
No
Replace the primary fuse.
Yes
(3)
Is there voltage at the input side of the transformer?
No
Correct wiring between the primary fuse and the transformer.
Yes
(4)
Is there voltage at the output side of the transformer?
No
Replace transformer.
Yes
(5)
Is there voltage at the input side of the secondary fuse?
No
Correct wiring between the transformer and the secondary fuse.
Yes
(6)
Is there voltage at the output side of the secondary fuse?
No
Replace secondary fuse.
Yes
(7)
Is there power to the control of H1-1 and H1-3?
No
Correct wiring between fuse and control.
Yes
(8)
Is there voltage at COM of the door switch?
No
Correct wiring between the secondary fuse and COM of the door switch.
Yes
continued on next page

TMB2259S-a

75. Vend Satisfied, No In Use LED – SD and SX Control Suffixes (continued)

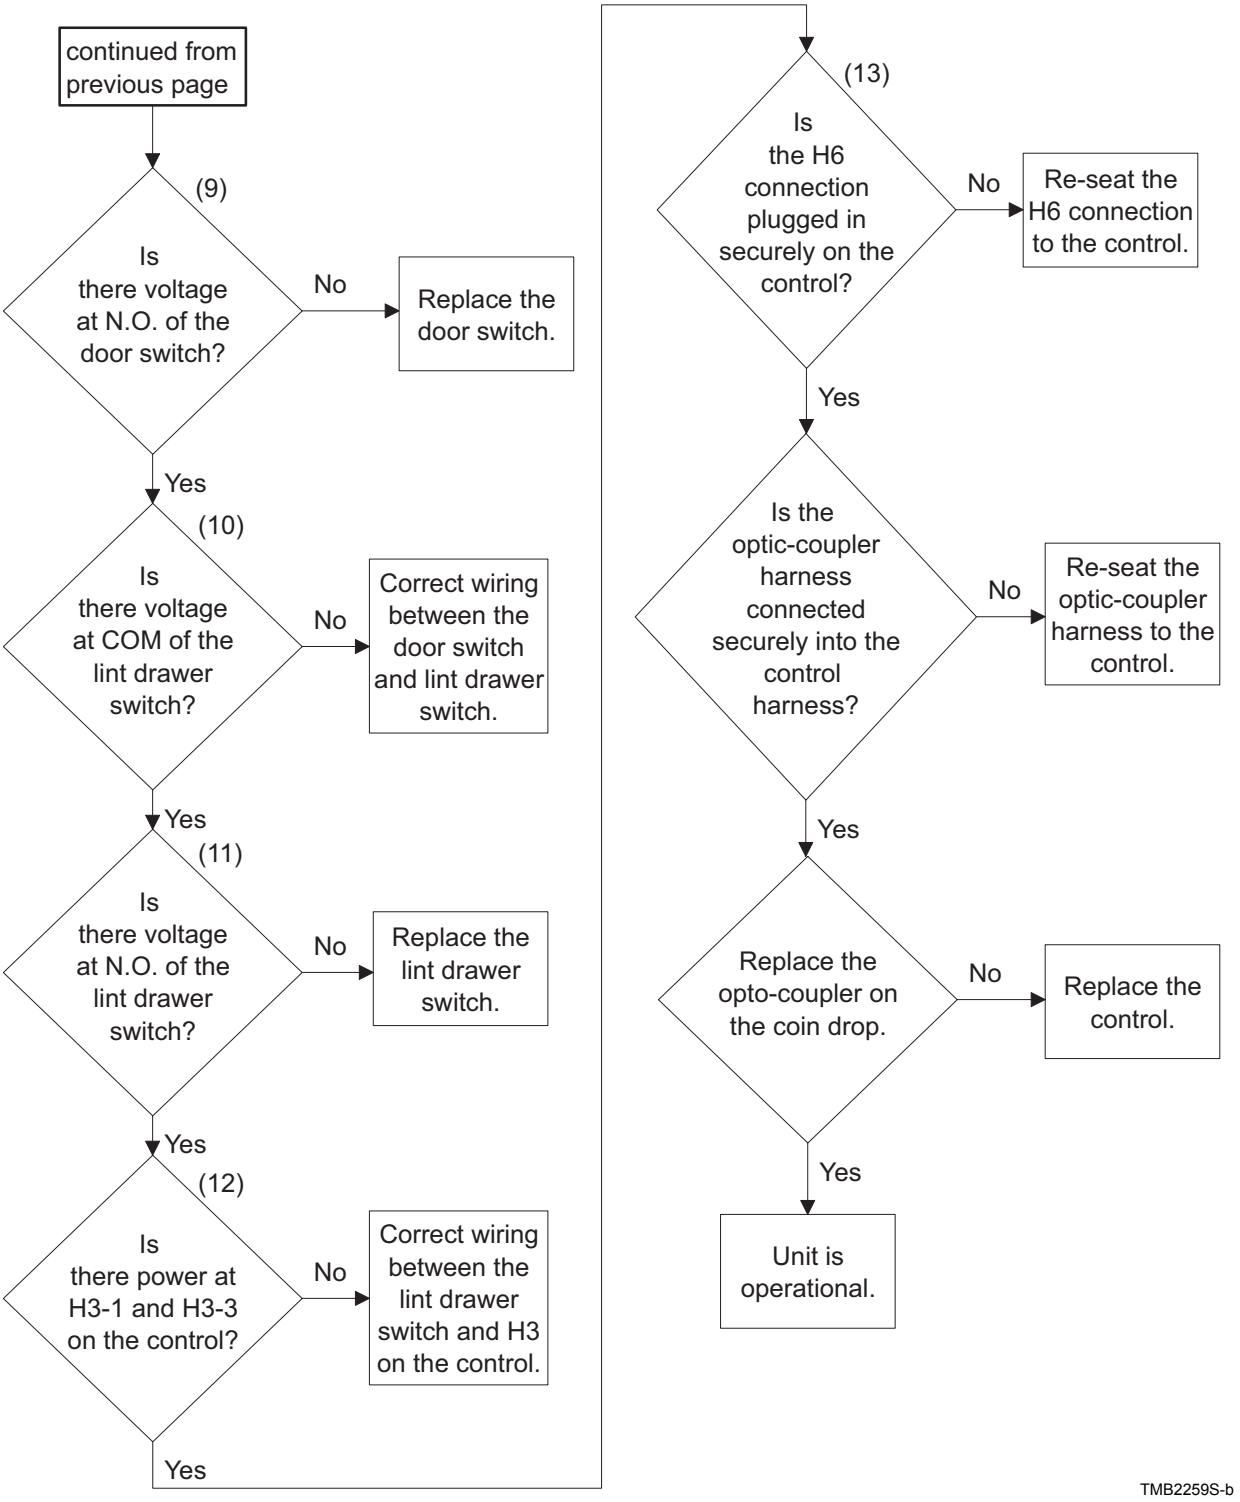

Vend Satisfied, No In Use LED – SD and SX Control Suffixes

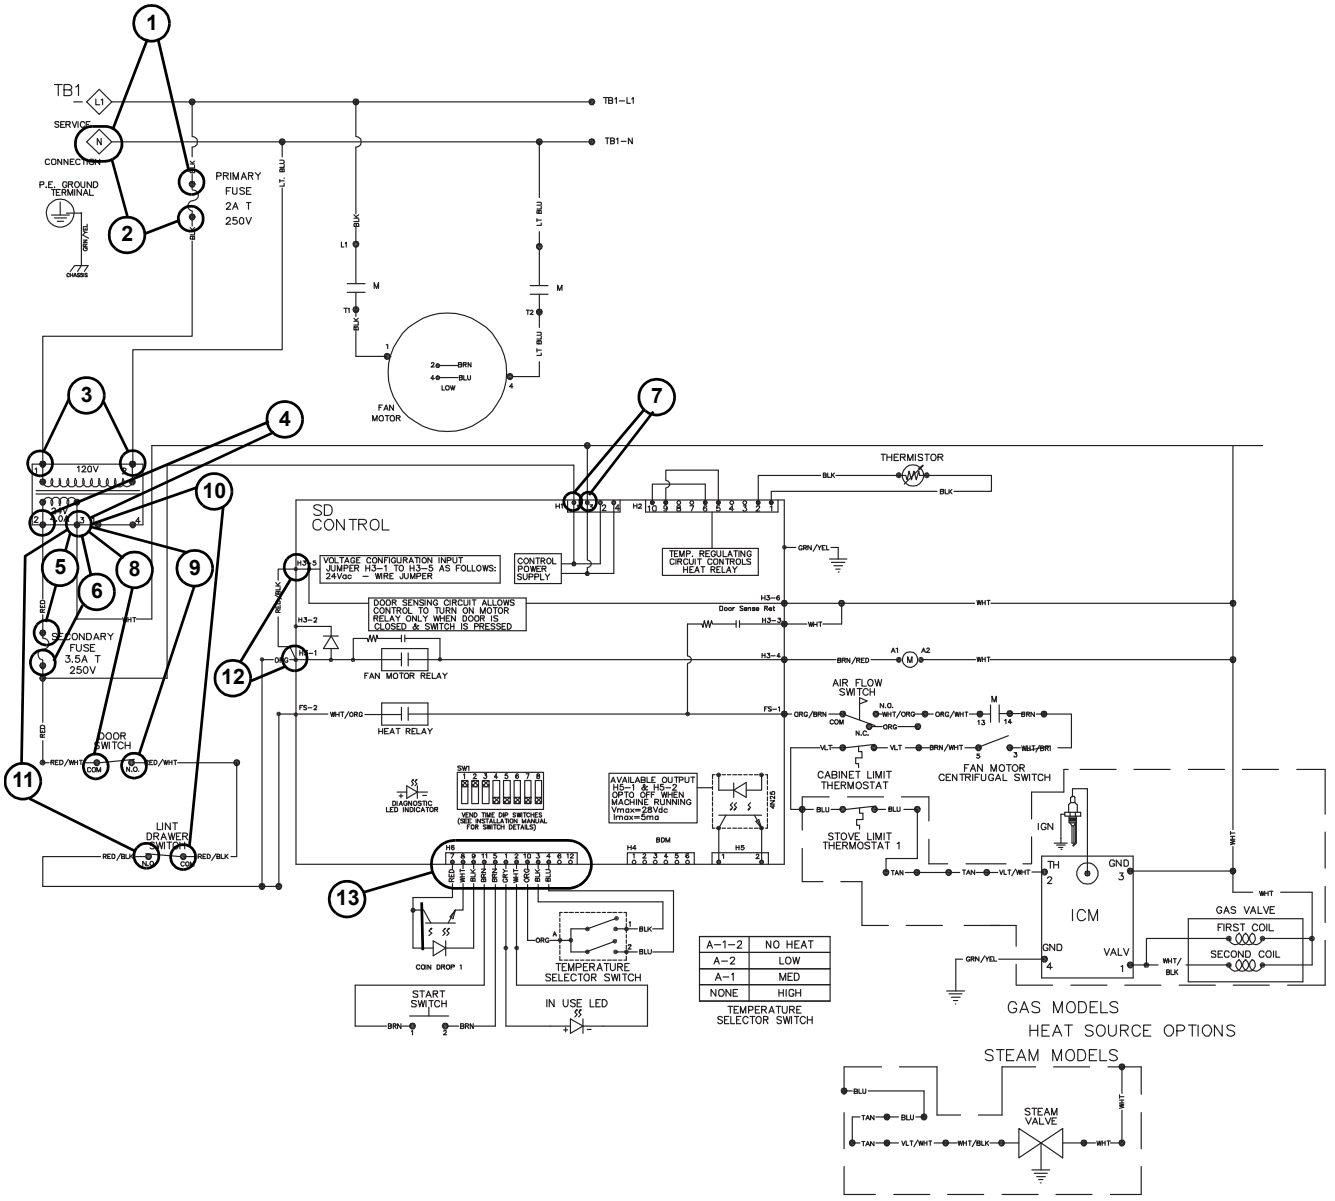

TMB2345S

76. In Use LED Lit, No Motor Run – SD and SX Control Suffixes

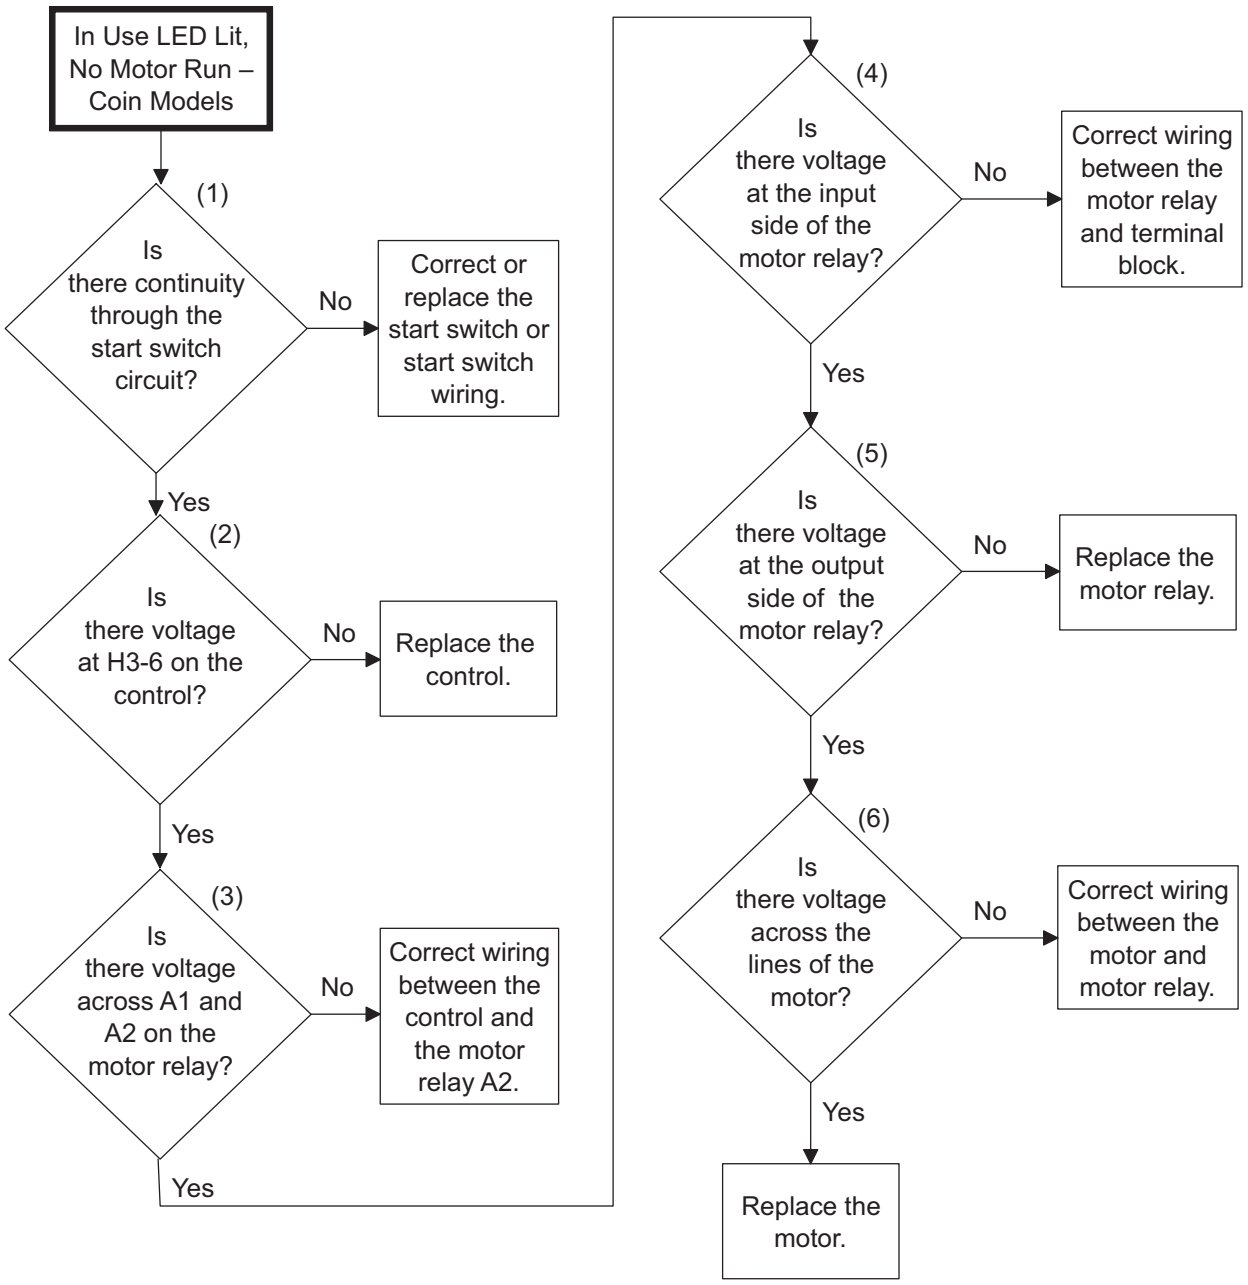
In Use LED Lit, No Motor Run – Coin Models
(1)
Is there continuity through the start switch circuit?
No
Correct or replace the start switch or start switch wiring.
Yes
(2)
Is there voltage at H3-6 on the control?
No
Replace the control.
Yes
(3)
Is there voltage across A1 and A2 on the motor relay?
No
Correct wiring between the control and the motor relay A2.
Yes
(4)
Is there voltage at the input side of the motor relay?
No
Correct wiring between the motor relay and terminal block.
Yes
(5)
Is there voltage at the output side of the motor relay?
No
Replace the motor relay.
Yes
(6)
Is there voltage across the lines of the motor?
No
Correct wiring between the motor and motor relay.
Yes
Replace the motor.
TMB2354S

In Use LED Lit, No Motor Run – SD and SX Control Suffixes

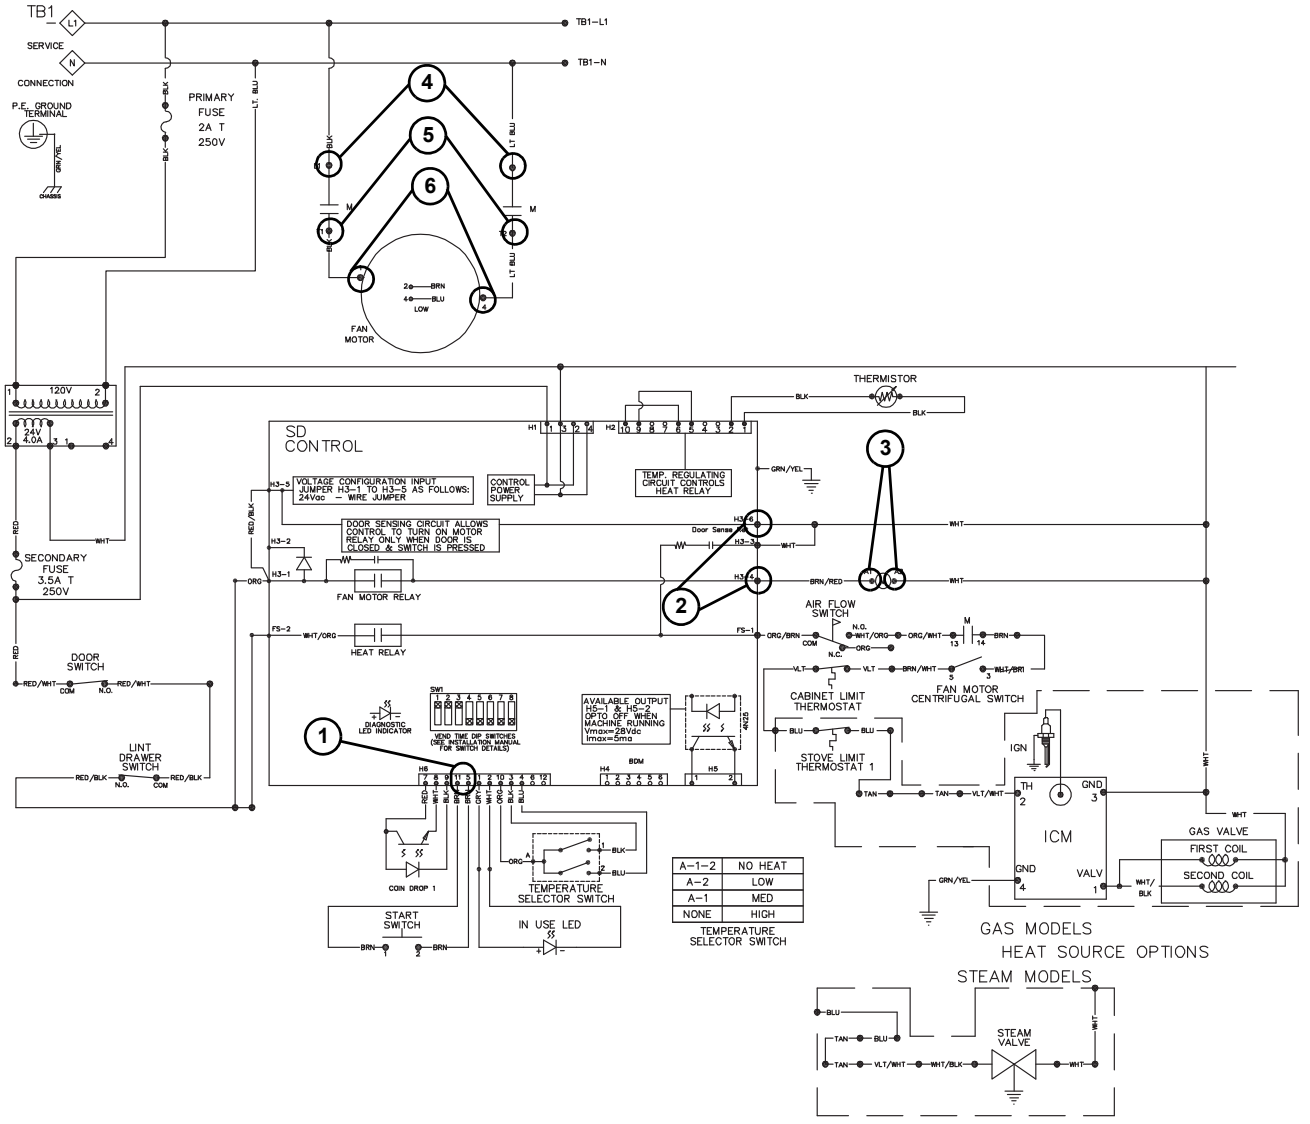

TMB2345S

77. Motor Will Not Start/Run – SD and SX Control Suffixes

Note: test conducted with vend (1) price satisfied and start button pressed.
Gas, electric and steam heat. Single and three phase power supply.
Is there voltage across H3-1 and H3-6 on the electronic control ?
NO
Refer to Vend Satisfied, No In Use LED - SD and SX Control Suffixes flowchart.
YES
(2)
Is there voltage across H3-4 and H3-6 on the electronic control?
NO
Replace control.
YES
(3)
Is there voltage across the coil of the motor control relay?
NO
Correct wiring to coil of motor relay .
YES
Is the unit equipped with single phase or three phase power?
Single phase
(4)
Is there voltage at terminal 5 of the motor control relay?
NO
Correct wiring between terminal 5 and power supply.
YES
(5)
Is there voltage at terminal 6 of motor control relay?
NO
Replace motor control relay.
YES
(6)
Is there voltage across terminals 1 & 4 of the fan motor?
NO
Correct wiring between fan motor and motor control relay.
YES
Does the cylinder motor run?
NO
Replace cylinder motor.
YES
Motors are operational.
TMB2077S

Please see following page for wiring diagram information.

Motor Will Not Start/Run – SD and SX Control Suffixes

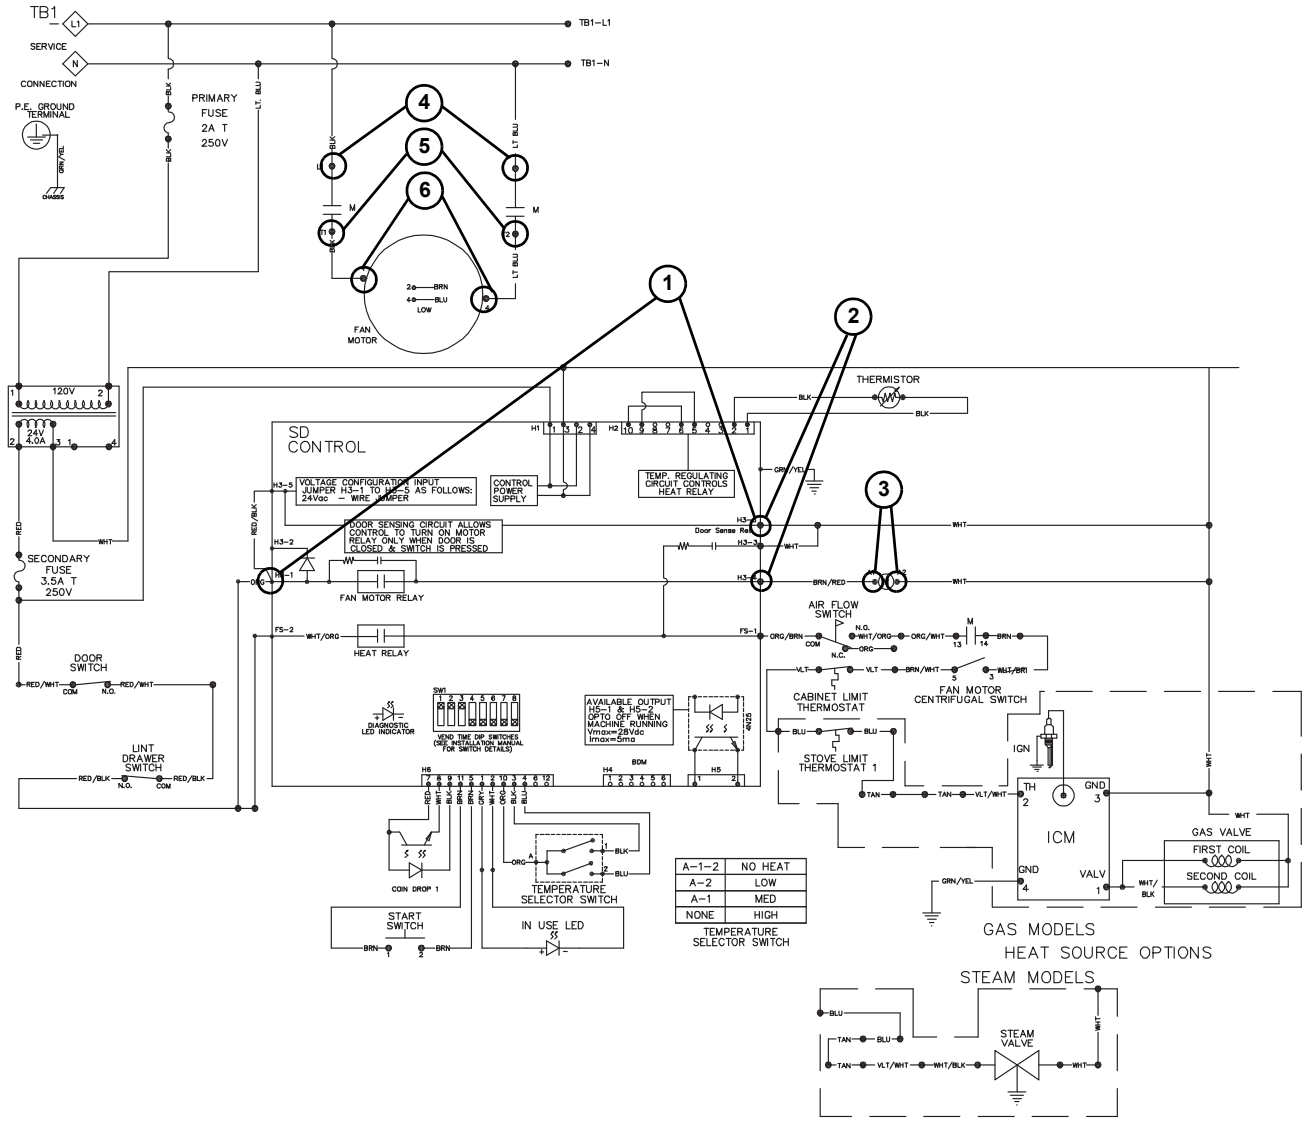

TMB2345S

78. Motor Will Not Start/Run – QT and RQ Control Suffixes

Note: test conducted with vend price satisfied and start button pressed.
(1)
Gas, electric and steam heat.
Single and three phase power supply.
Is there voltage across H4-7 and H4-4 on the electronic control ?
NO
Refer to Display Flashes "dr" With Door Closed - QT and RQ Control Suffixes flowchart.
YES
(2)
Is there voltage across H4-3 and H4-4 on the electronic control?
NO
Replace control.
YES
(3)
Is there voltage across the coil of the motor control relay?
NO
Correct wiring to coil of motor relay .
YES
Is the unit equipped with single phase or three phase power?
Single phase
(4)
Is there voltage at terminal 5 of the motor control relay?
NO
Correct wiring between terminal 5 and power supply.
YES
(5)
Is there voltage at terminal 6 of motor control relay?
NO
Replace motor control relay.
YES
(6)
Is there voltage across terminals 1 & 4 of the fan motor?
NO
Correct wiring between fan motor and motor control relay.
YES
Does the cylinder motor run?
NO
Replace cylinder motor.
YES
Motors are operational.
TMB2407S

Please see following page for wiring diagram information.

Motor Will Not Start/Run – QT and RQ Control Suffixes

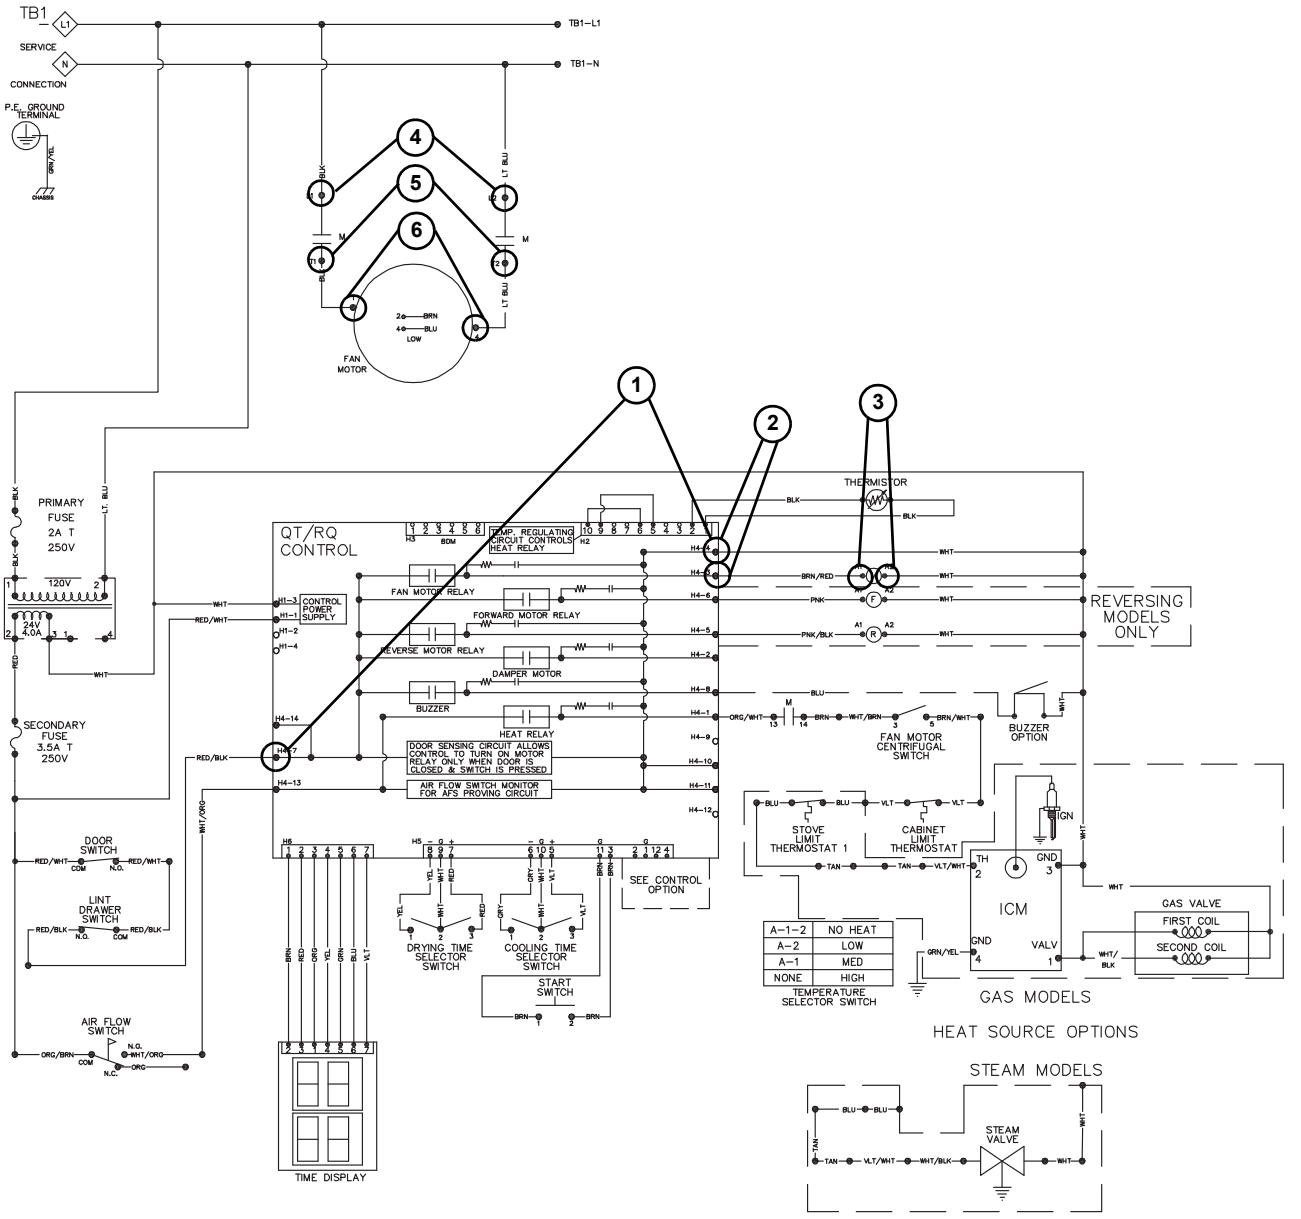

TMB2344S

79. Unit Will Not Heat – Gas – SD and SX Control Suffixes

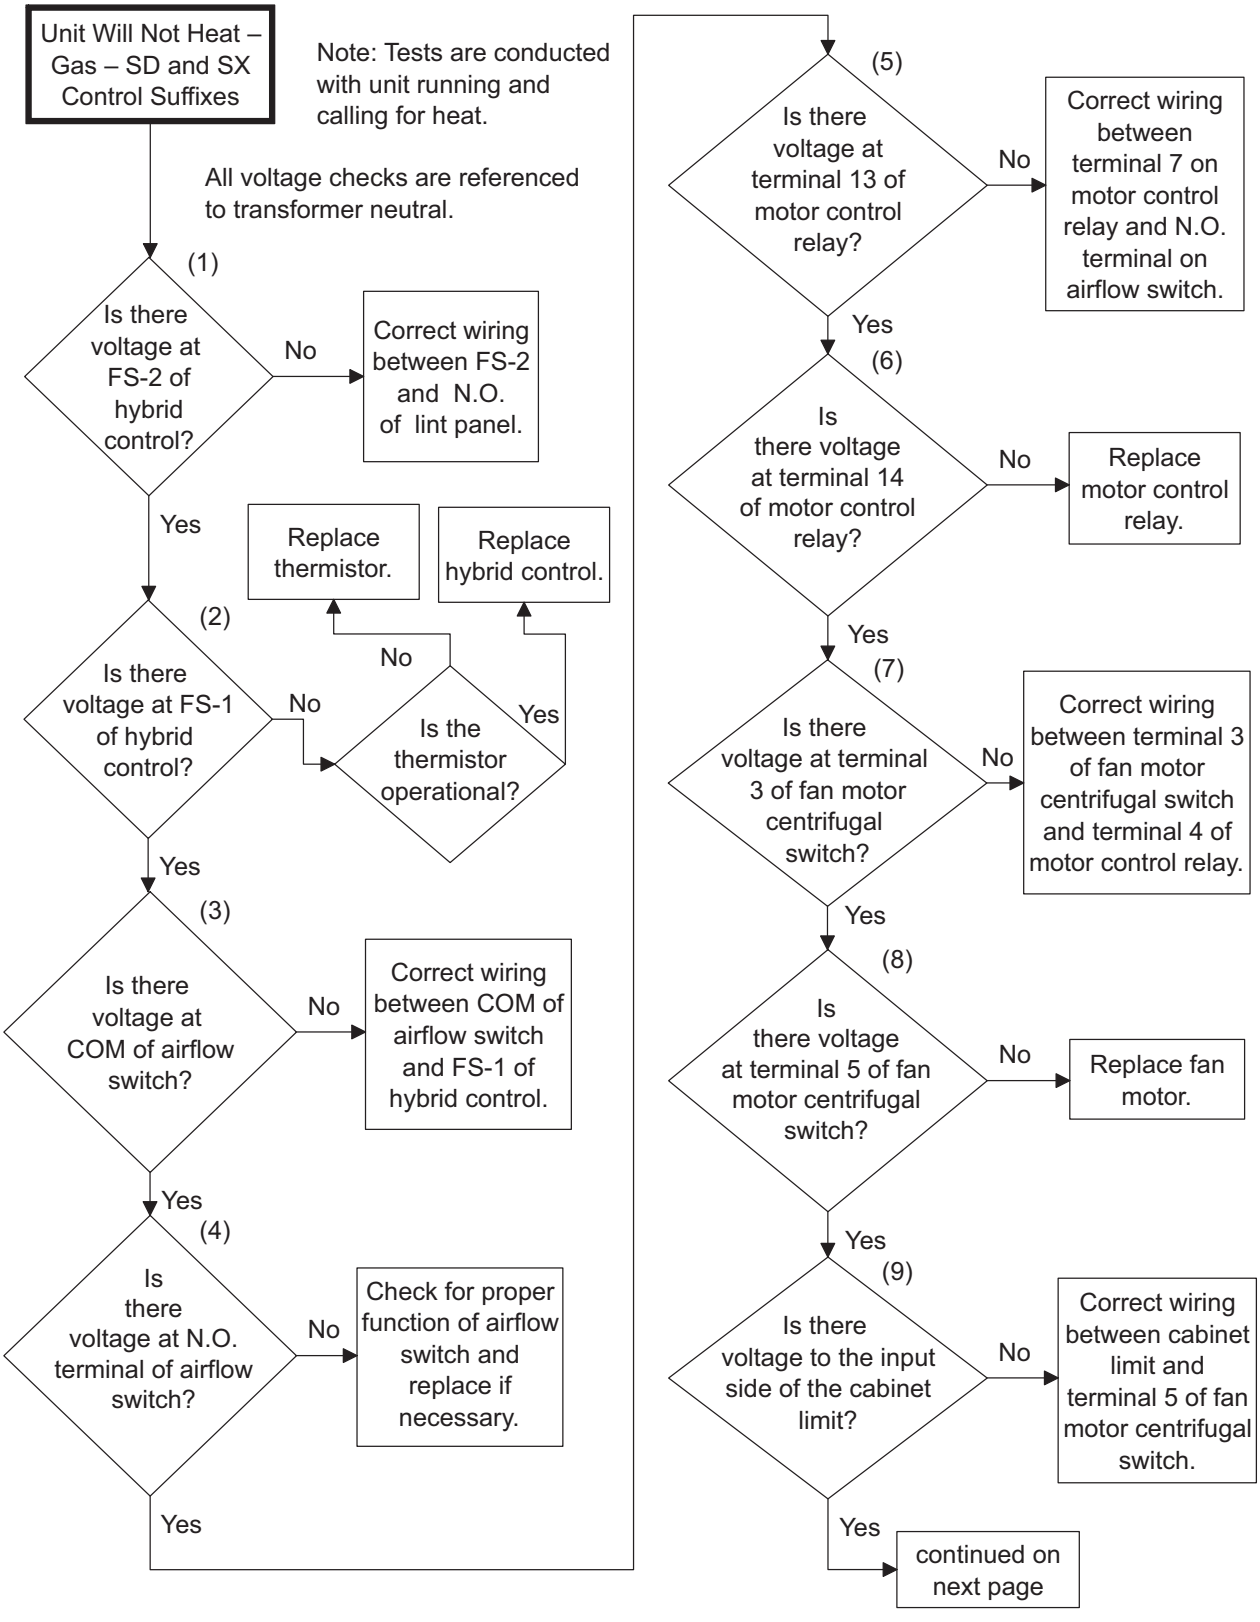
Unit Will Not Heat – Gas – SD and SX Control Suffixes
Note: Tests are conducted with unit running and calling for heat.
All voltage checks are referenced to transformer neutral.
(1)
Is there voltage at FS-2 of hybrid control?
No
Correct wiring between FS-2 and N.O. of lint panel.
Yes
(2)
Is there voltage at FS-1 of hybrid control?
No
Is the thermistor operational?
No
Replace thermistor.
Yes
Replace hybrid control.
Yes
(3)
Is there voltage at COM of airflow switch?
No
Correct wiring between COM of airflow switch and FS-1 of hybrid control.
Yes
(4)
Is there voltage at N.O. terminal of airflow switch?
No
Check for proper function of airflow switch and replace if necessary.
Yes
(5)
Is there voltage at terminal 13 of motor control relay?
No
Correct wiring between terminal 7 on motor control relay and N.O. terminal on airflow switch.
Yes
(6)
Is there voltage at terminal 14 of motor control relay?
No
Replace motor control relay.
Yes
(7)
Is there voltage at terminal 3 of fan motor centrifugal switch?
No
Correct wiring between terminal 3 of fan motor centrifugal switch and terminal 4 of motor control relay.
Yes
(8)
Is there voltage at terminal 5 of fan motor centrifugal switch?
No
Replace fan motor.
Yes
(9)
Is there voltage to the input side of the cabinet limit?
No
Correct wiring between cabinet limit and terminal 5 of fan motor centrifugal switch.
Yes
continued on next page

TMB2316S-a

79. Unit Will Not Heat – Gas – SD and SX Control Suffixes (continued)

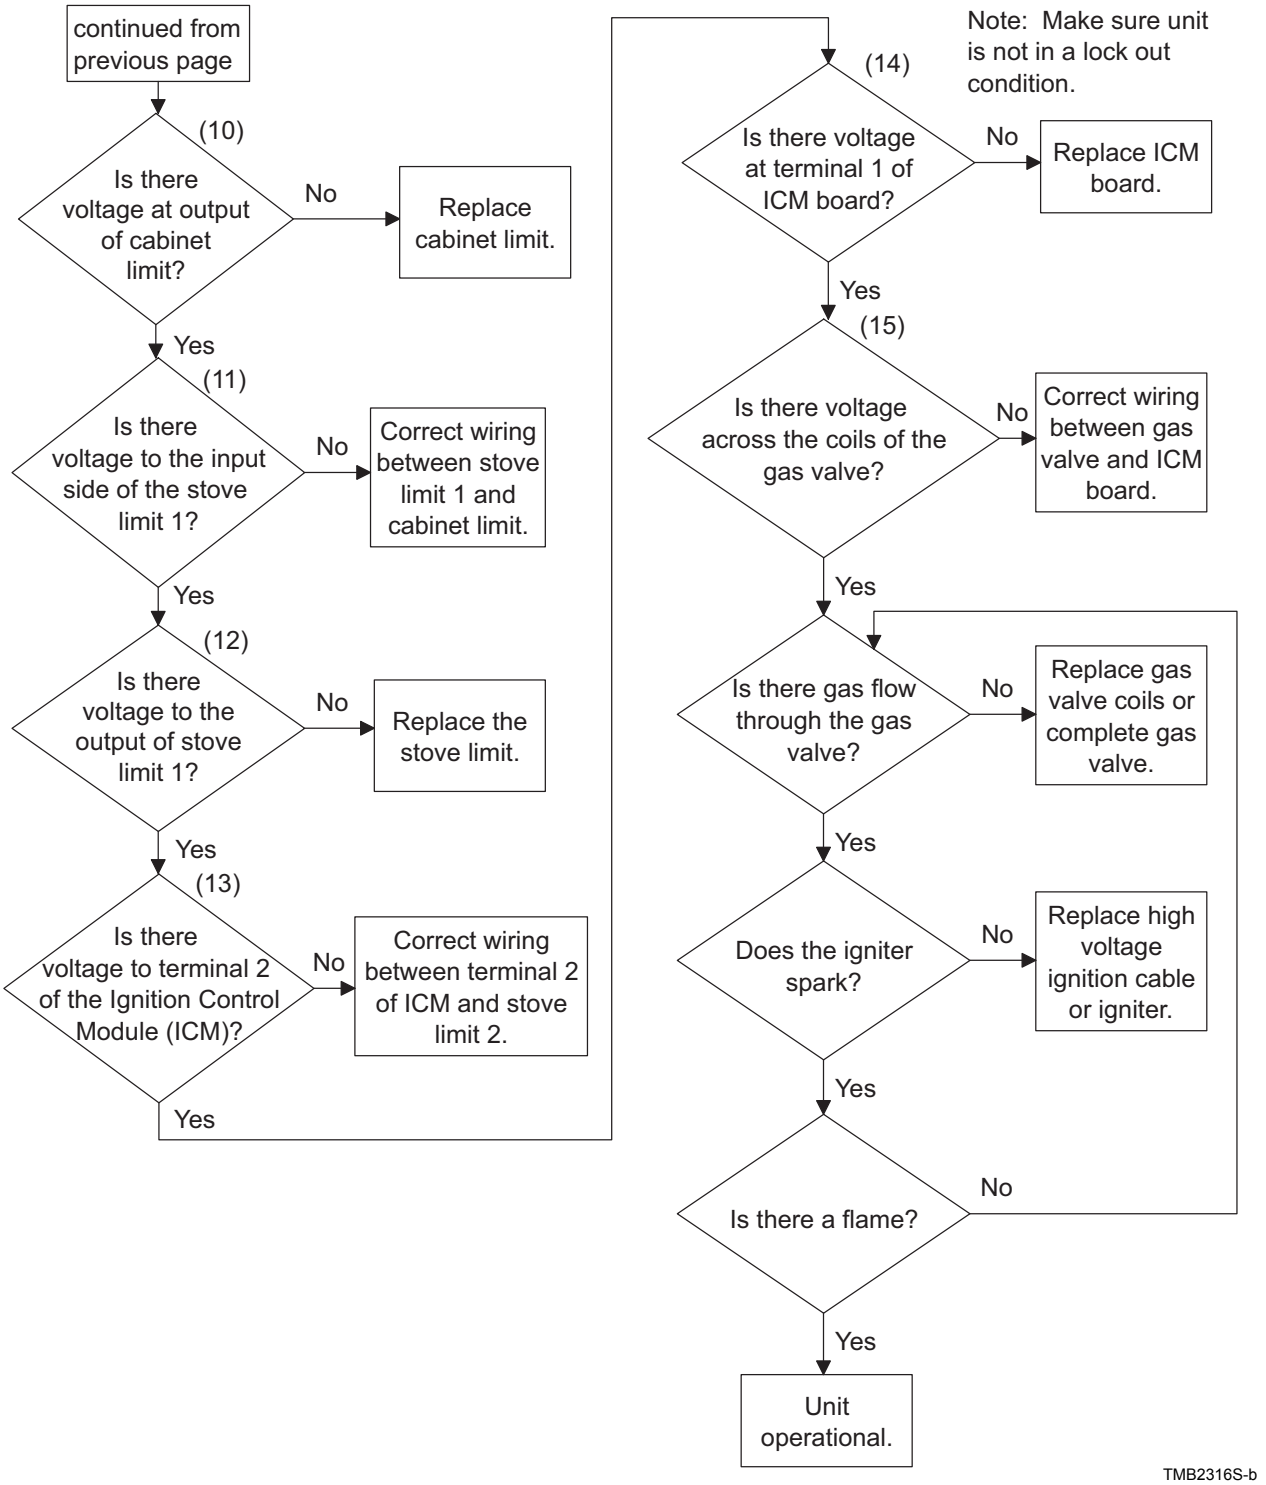

Unit Will Not Heat – Gas – SD and SX Control Suffixes

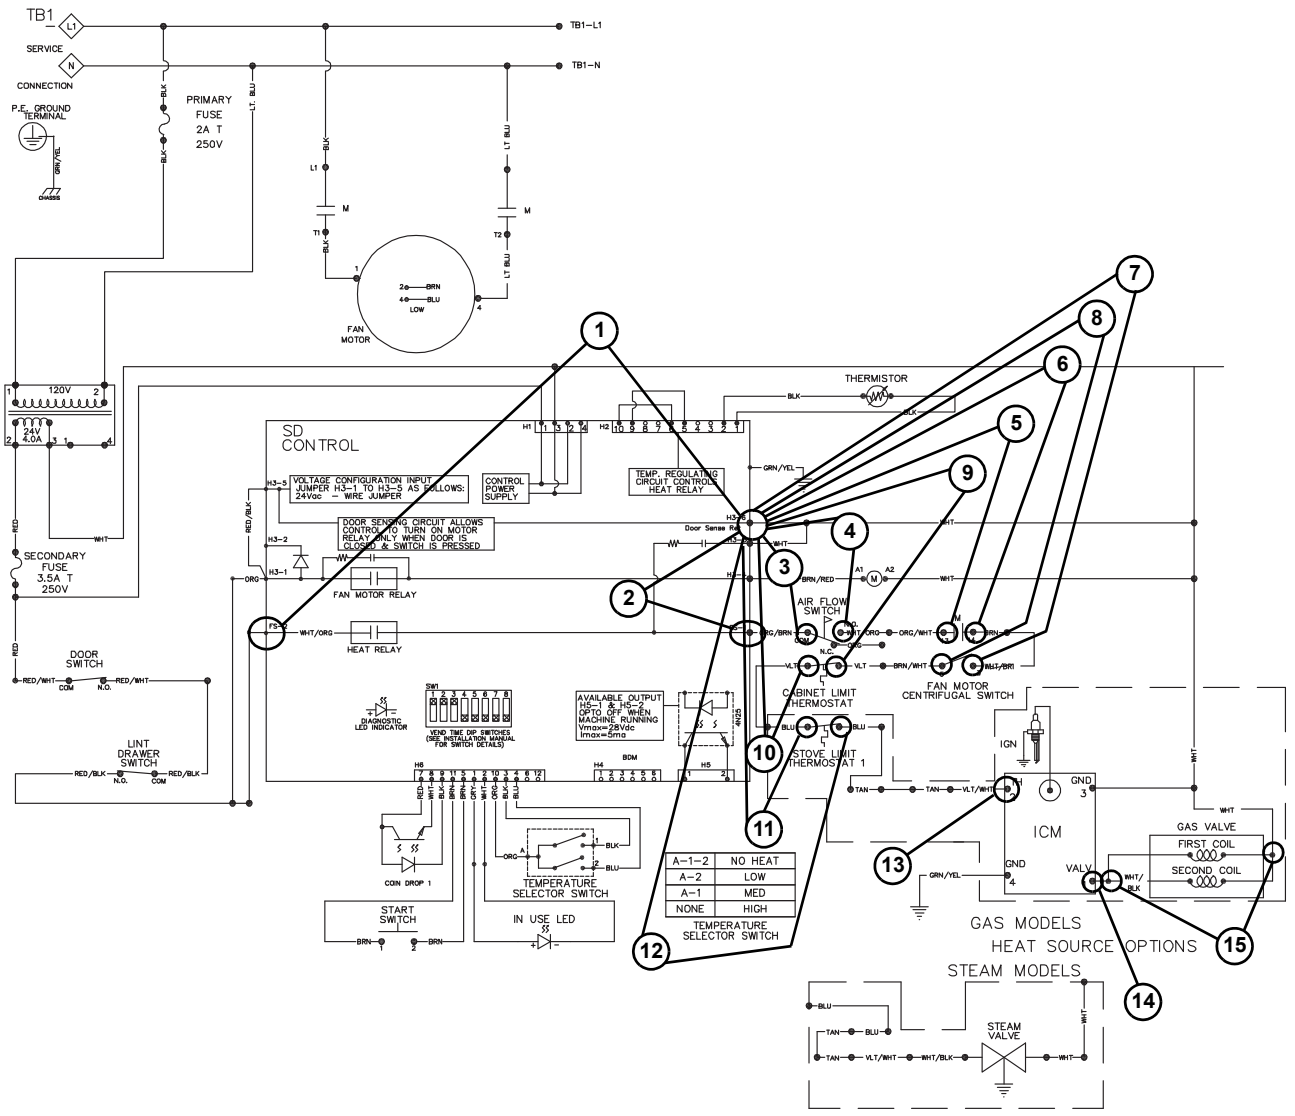

TMB2345S

80. Unit Will Not Heat – Gas – QT and RQ Control Suffixes

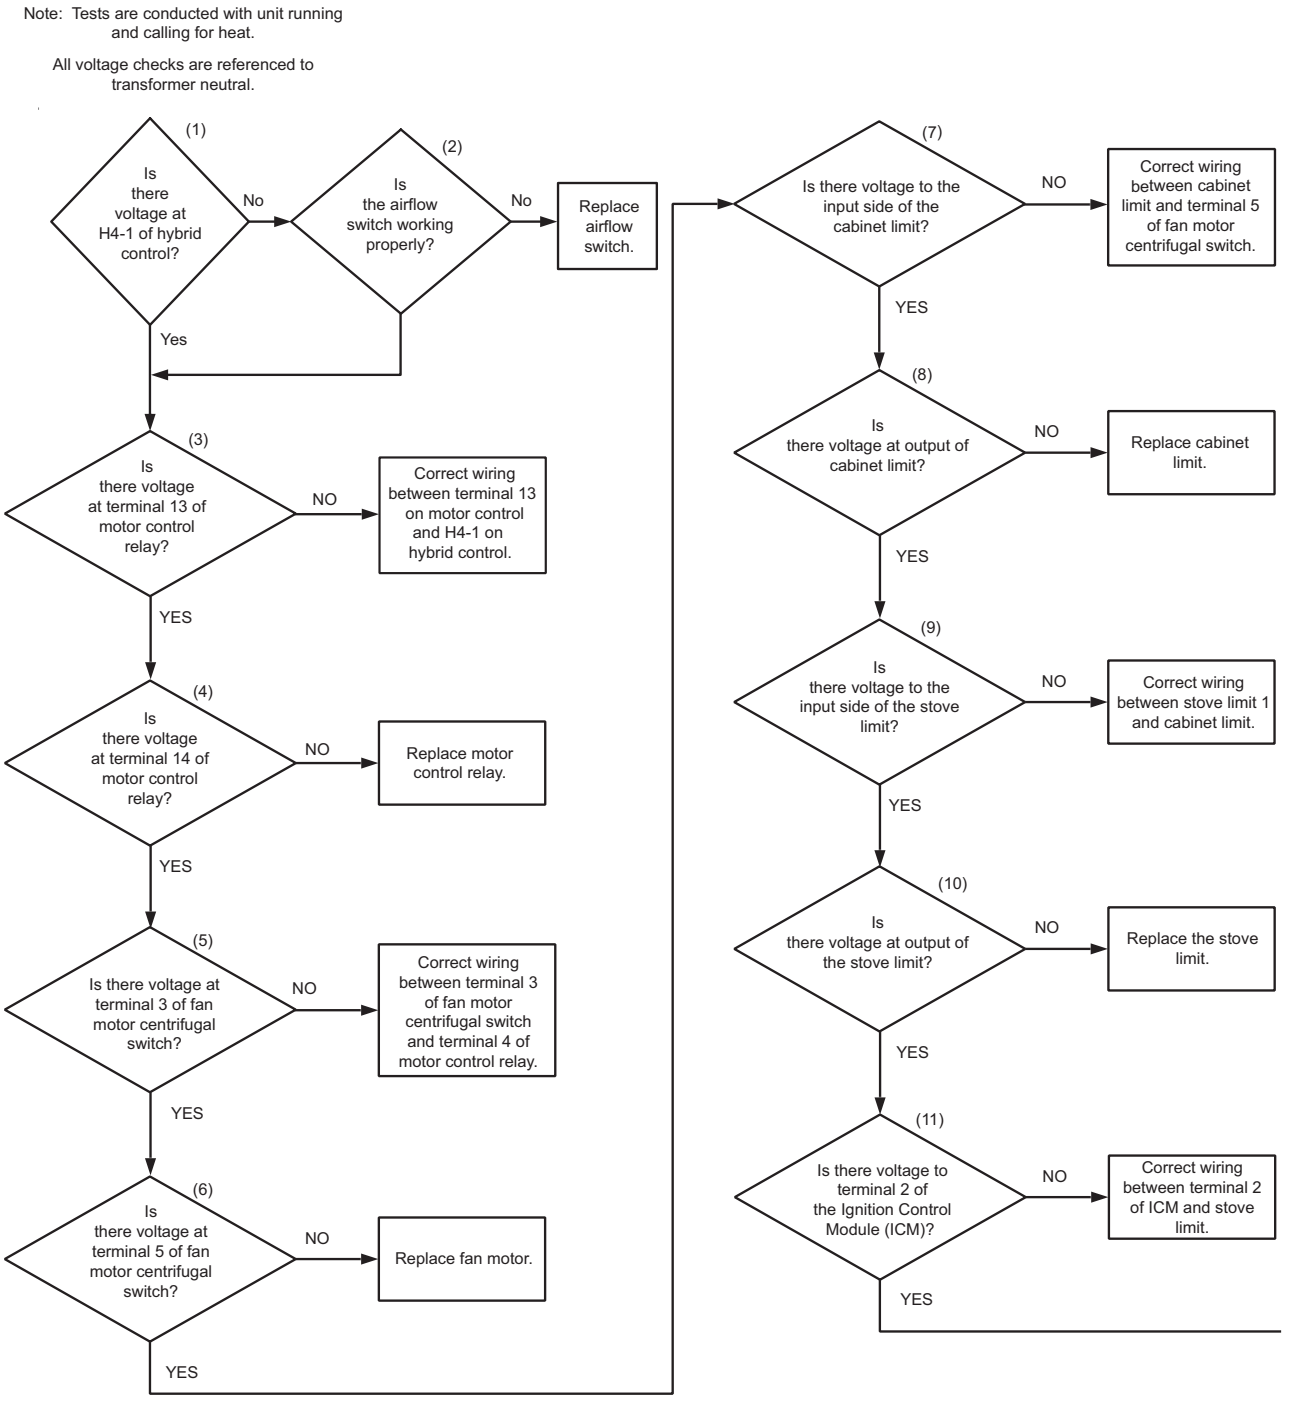
Note: Tests are conducted with unit running and calling for heat.
All voltage checks are referenced to transformer neutral.
(1)
Is there voltage at H4-1 of hybrid control?
No
(2)
Is the airflow switch working properly?
No
Replace airflow switch.
Yes
(3)
Is there voltage at terminal 13 of motor control relay?
NO
Correct wiring between terminal 13 on motor control and H4-1 on hybrid control.
YES
(4)
Is there voltage at terminal 14 of motor control relay?
NO
Replace motor control relay.
YES
(5)
Is there voltage at terminal 3 of fan motor centrifugal switch?
NO
Correct wiring between terminal 3 of fan motor centrifugal switch and terminal 4 of motor control relay.
YES
(6)
Is there voltage at terminal 5 of fan motor centrifugal switch?
NO
Replace fan motor.
YES
(7)
Is there voltage to the input side of the cabinet limit?
NO
Correct wiring between cabinet limit and terminal 5 of fan motor centrifugal switch.
YES
(8)
Is there voltage at output of cabinet limit?
NO
Replace cabinet limit.
YES
(9)
Is there voltage to the input side of the stove limit?
NO
Correct wiring between stove limit 1 and cabinet limit.
YES
(10)
Is there voltage at output of the stove limit?
NO
Replace the stove limit.
YES
(11)
Is there voltage to terminal 2 of the Ignition Control Module (ICM)?
NO
Correct wiring between terminal 2 of ICM and stove limit.
YES

TMB2317S-a

80. Unit Will Not Heat – Gas – QT and RQ Control Suffixes (continued)

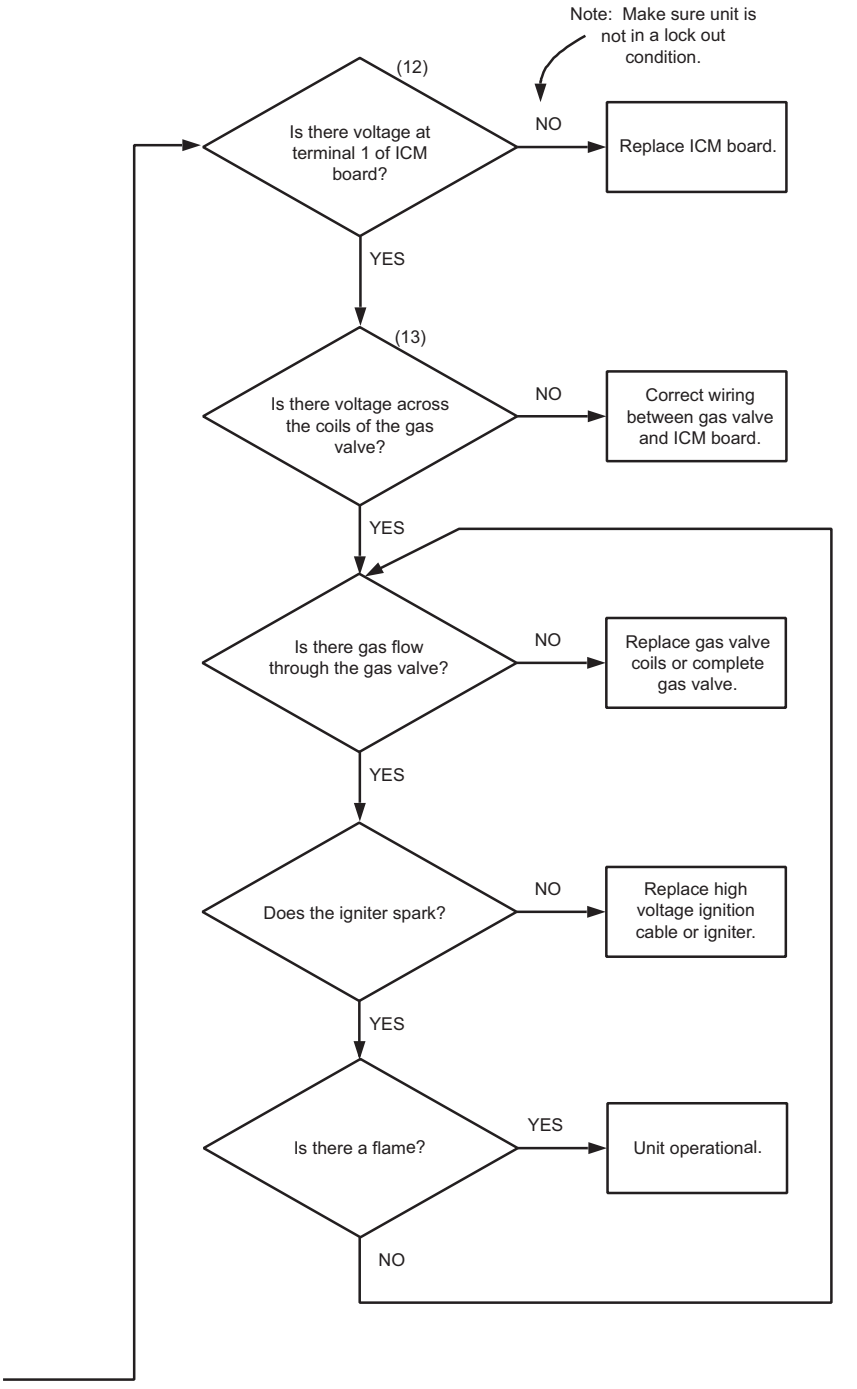

Please see following page for wiring diagram information.

Unit Will Not Heat – Gas – QT and RQ Control Suffixes

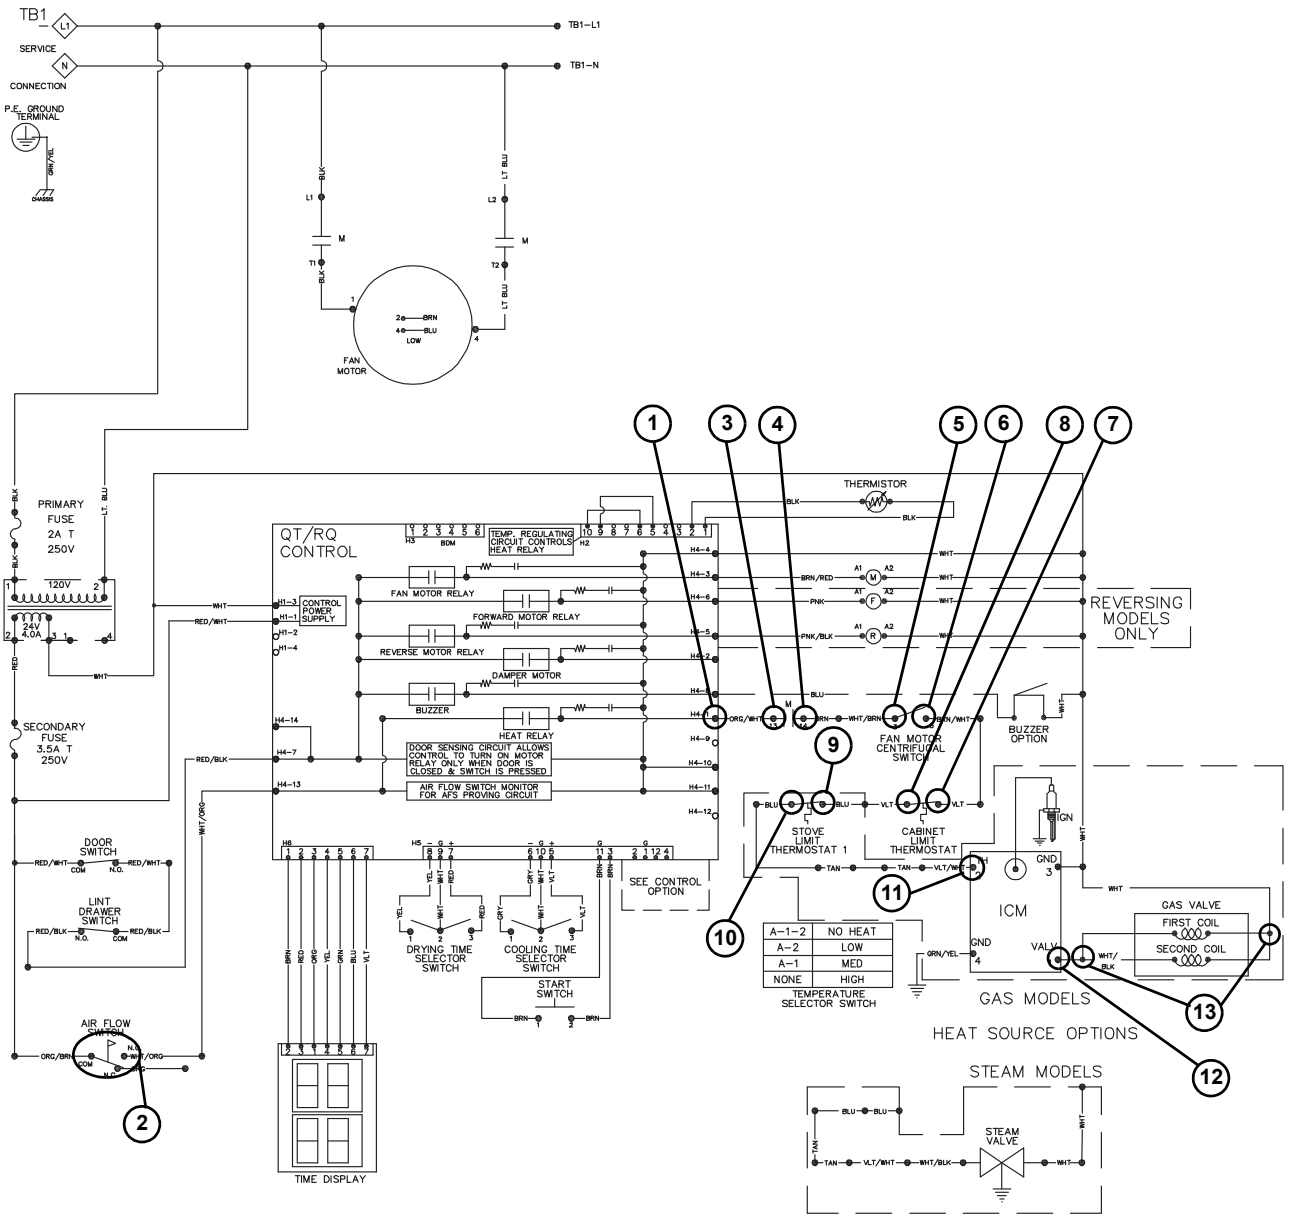

TMB2344S

81. Unit Will Not Heat – Electric – QT and RQ Control Suffixes

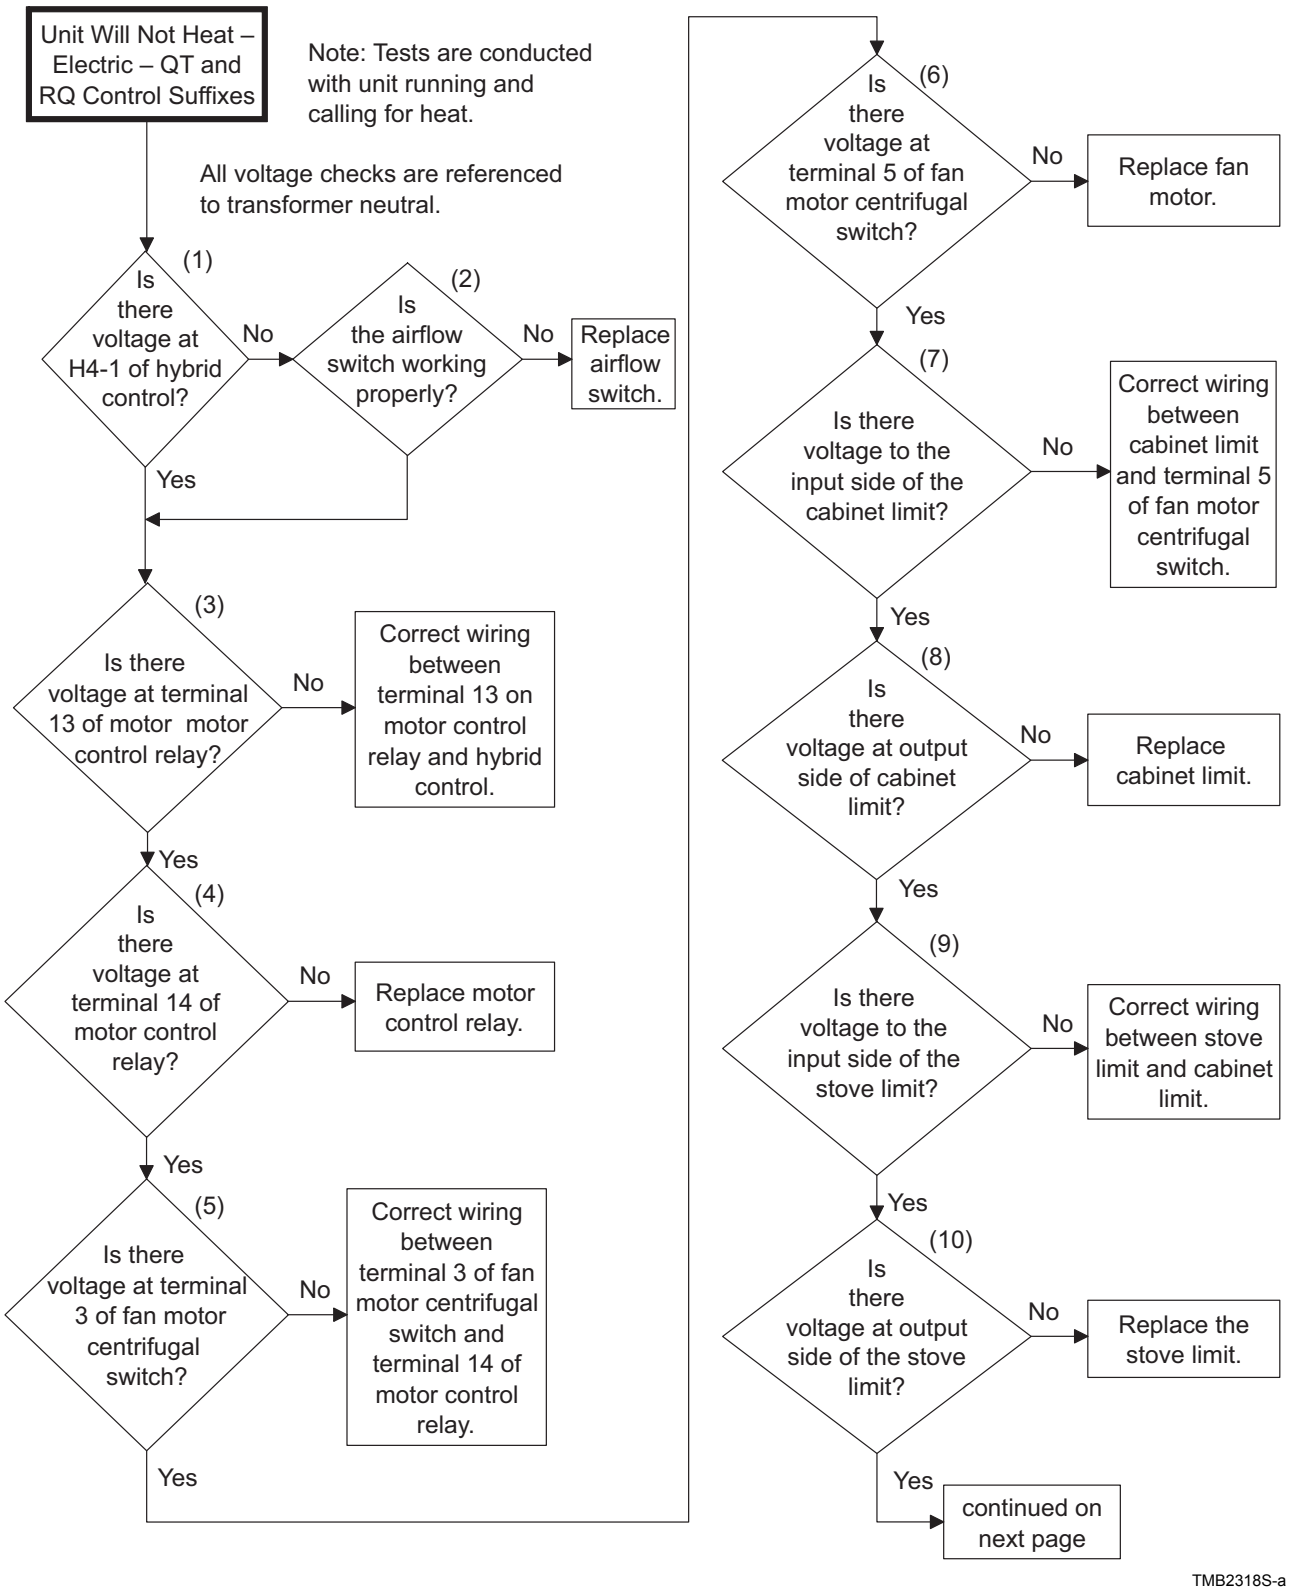
Unit Will Not Heat – Electric – QT and RQ Control Suffixes
Note: Tests are conducted with unit running and calling for heat.
All voltage checks are referenced to transformer neutral.
(1)
Is there voltage at H4-1 of hybrid control?
No
(2)
Is the airflow switch working properly?
No
Replace airflow switch.
Yes
(3)
Is there voltage at terminal 13 of motor motor control relay?
No
Correct wiring between terminal 13 on motor control relay and hybrid control.
Yes
(4)
Is there voltage at terminal 14 of motor control relay?
No
Replace motor control relay.
Yes
(5)
Is there voltage at terminal 3 of fan motor centrifugal switch?
No
Correct wiring between terminal 3 of fan motor centrifugal switch and terminal 14 of motor control relay.
Yes
(6)
Is there voltage at terminal 5 of fan motor centrifugal switch?
No
Replace fan motor.
Yes
(7)
Is there voltage to the input side of the cabinet limit?
No
Correct wiring between cabinet limit and terminal 5 of fan motor centrifugal switch.
Yes
(8)
Is there voltage at output side of cabinet limit?
No
Replace cabinet limit.
Yes
(9)
Is there voltage to the input side of the stove limit?
No
Correct wiring between stove limit and cabinet limit.
Yes
(10)
Is there voltage at output side of the stove limit?
No
Replace the stove limit.
Yes
continued on next page
TMB2318S-a

81. Unit Will Not Heat – Electric – QT and RQ Control Suffixes (continued)

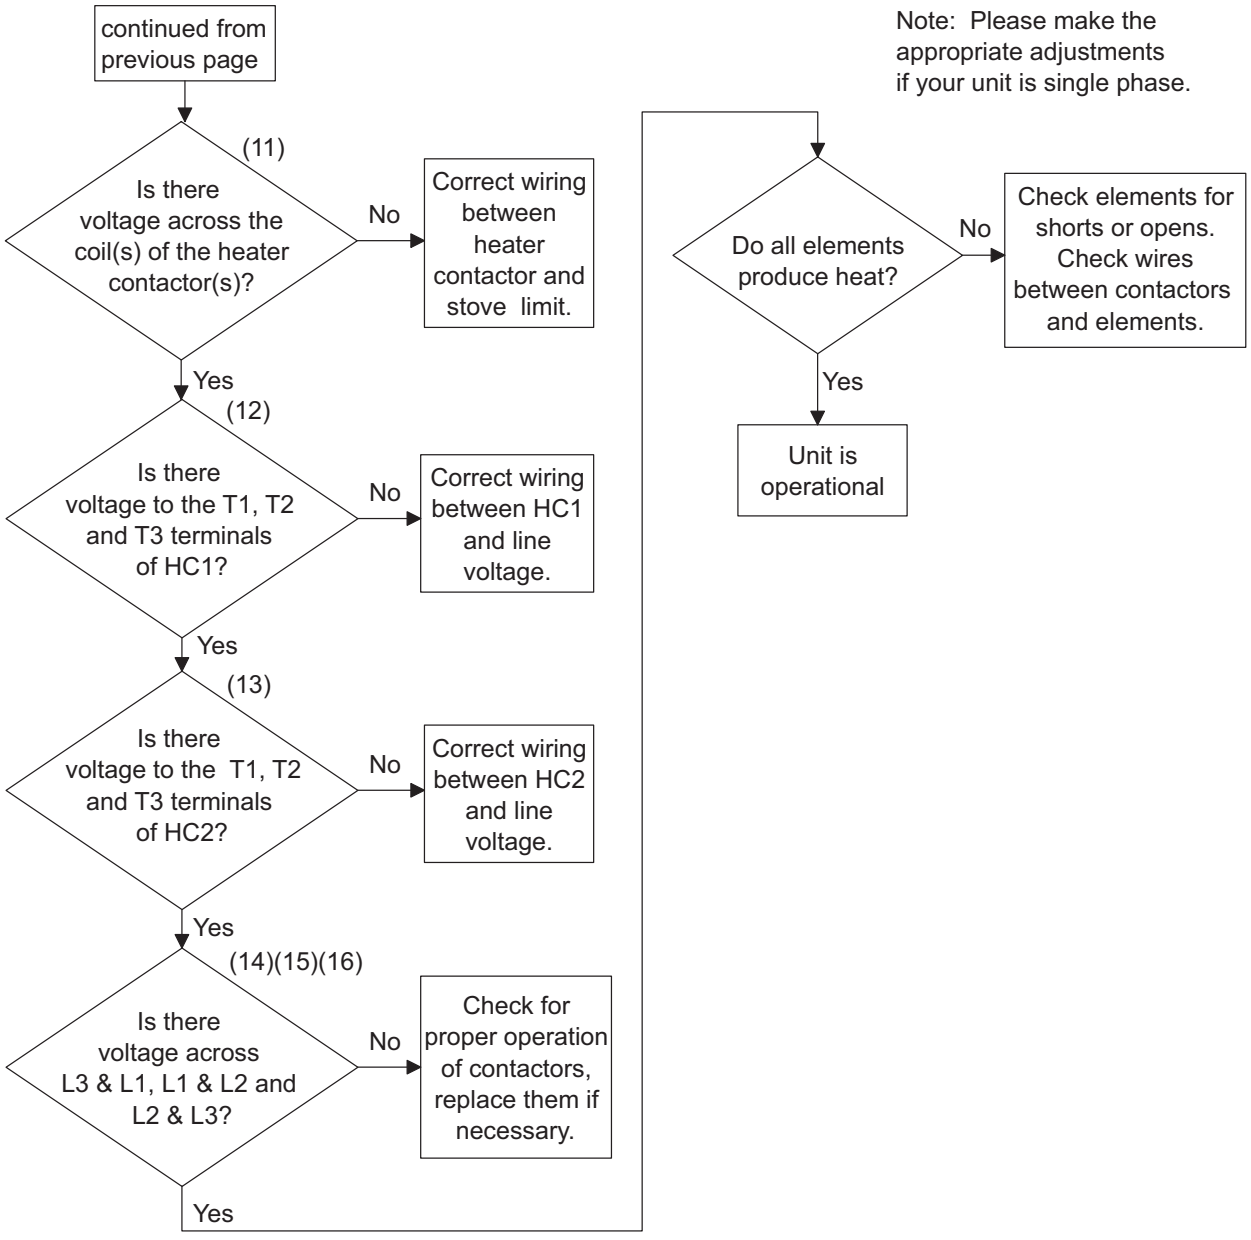
continued from previous page
(11)
Is there voltage across the coil(s) of the heater contactor(s)?
No
Correct wiring between heater contactor and stove limit.
Yes
(12)
Is there voltage to the T1, T2 and T3 terminals of HC1?
No
Correct wiring between HC1 and line voltage.
Yes
(13)
Is there voltage to the T1, T2 and T3 terminals of HC2?
No
Correct wiring between HC2 and line voltage.
Yes
(14)(15)(16)
Is there voltage across L3 & L1, L1 & L2 and L2 & L3?
No
Check for proper operation of contactors, replace them if necessary.
Yes
Note: Please make the appropriate adjustments if your unit is single phase.
Do all elements produce heat?
No
Check elements for shorts or opens. Check wires between contactors and elements.
Yes
Unit is operational
TMB2318S-b

Please see following page for wiring diagram information.

Unit Will Not Heat – Electric – QT and RQ Control Suffixes

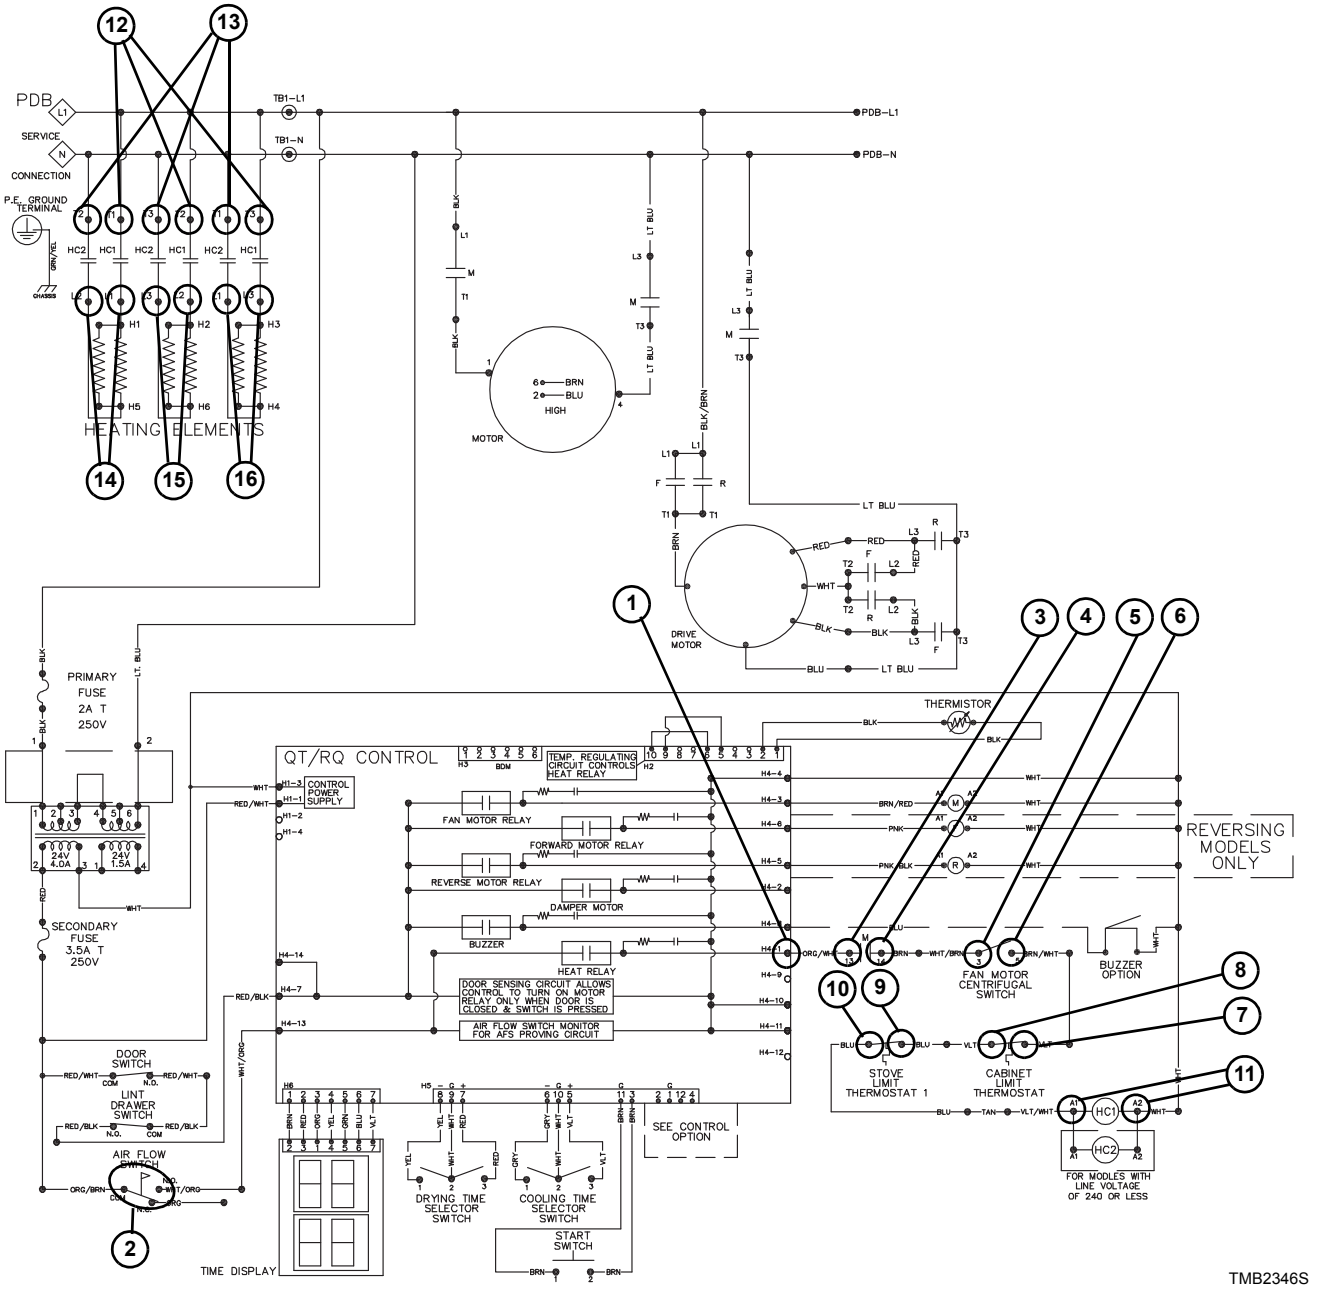

TMB2346S

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:
- **Disconnect electric power to the tumbler before servicing.**
- **Close gas shut-off valve to gas tumbler before servicing.**
- **Close steam valve to steam tumbler before servicing.**
- **Never start the tumbler with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the tumbler is properly grounded.**

W002

82. Error Codes

Display	Definition	Corrective Action
OP	Open thermistor error.	• Check thermistor. Replace if inoperative. • Check wiring between control and thermistor. Refer to wiring diagram for proper wiring. • Check control. Replace if inoperative.
SH	Shorted thermistor error.	• Check thermistor. Replace if inoperative. • Check wiring between control and thermistor. Refer to wiring diagram for proper wiring. • Check control. Replace if inoperative.
AF-1	Airflow switch closed when cycle started.	• Check airflow switch. Replace if inoperative.
AF-2	Airflow switch failed to closed after cycle started.	• Check airflow switch. Replace if inoperative.
AF (flashing)	Airflow switch opened/closed 5 or more times in a running cycle.	• Check airflow switch. Replace if inoperative.

Section 10
Electronic Control Troubleshooting

Models with KB, KC, KW, KX, KY, KZ, LB, LC, LW, LX, LY, LZ, WB, WC, WW, WX, WY and WZ Control Suffixes

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:
- **Disconnect electric power to the tumbler before servicing.**
- **Close gas shut-off valve to gas tumbler before servicing.**
- **Close steam valve to steam tumbler before servicing.**
- **Never start the tumbler with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the tumbler is properly grounded.**

W002

83. No Infrared Communication

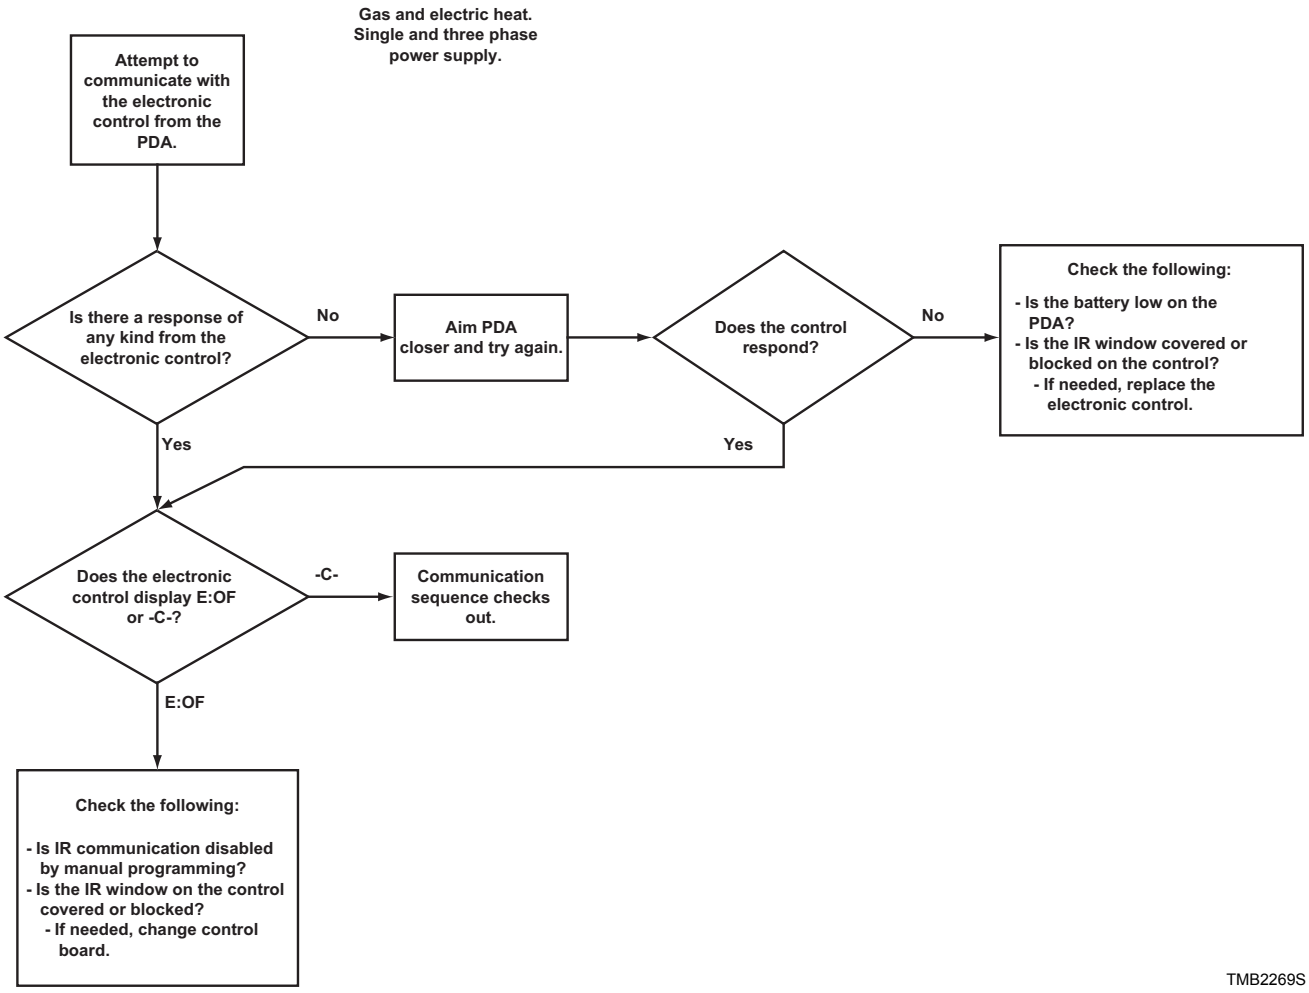
Gas and electric heat.
Single and three phase
power supply.
Attempt to communicate with the electronic control from the PDA.
Is there a response of any kind from the electronic control?
No
Aim PDA closer and try again.
Does the control respond?
No
Check the following:
- Is the battery low on the PDA?
- Is the IR window covered or blocked on the control?
- If needed, replace the electronic control.
Yes
Yes
Does the electronic control display E:OF or -C-?
-C-
Communication sequence checks out.
E:OF
Check the following:
- Is IR communication disabled by manual programming?
- Is the IR window on the control covered or blocked?
- If needed, change control board.
TMB2269S

84. Coins Ignored When Entered

L and W Control Suffixes only

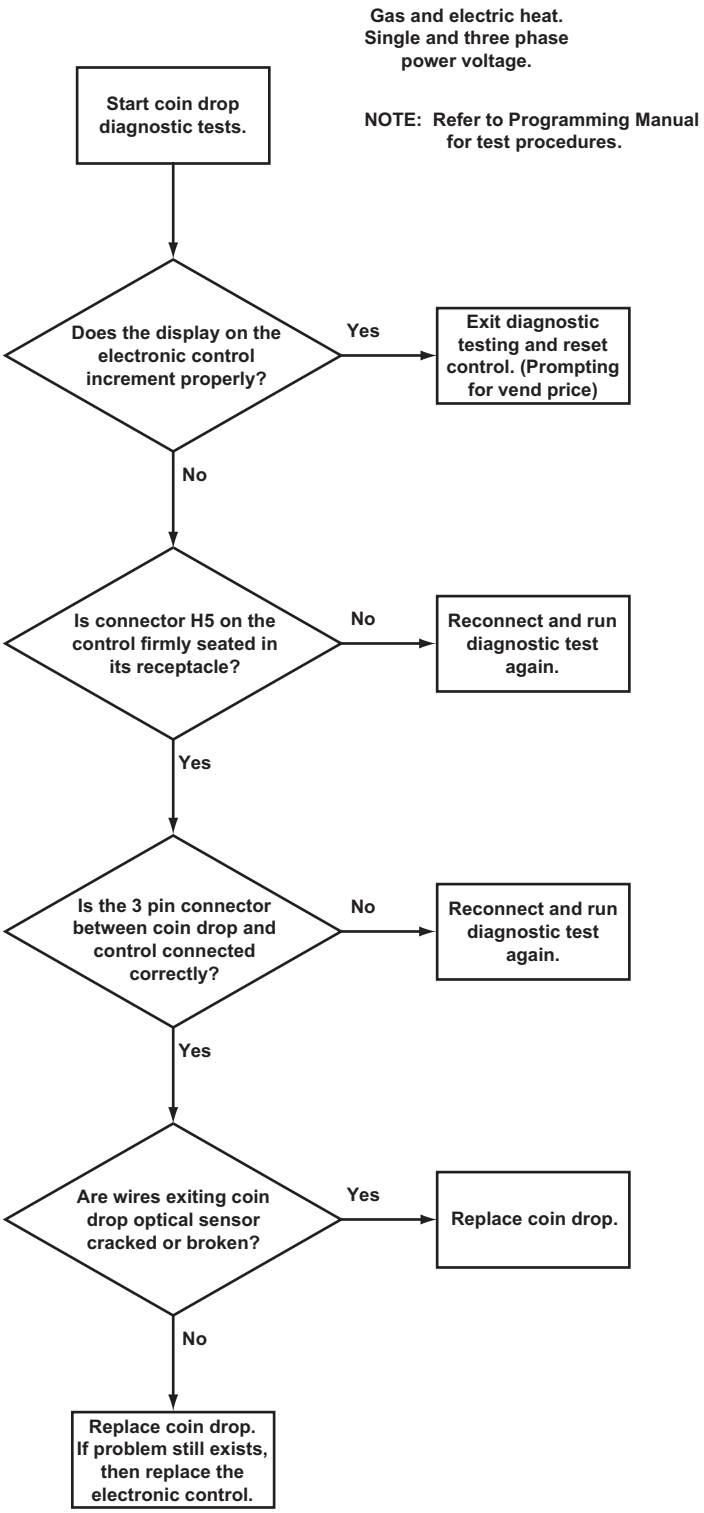

TMB1794S

85. No Display

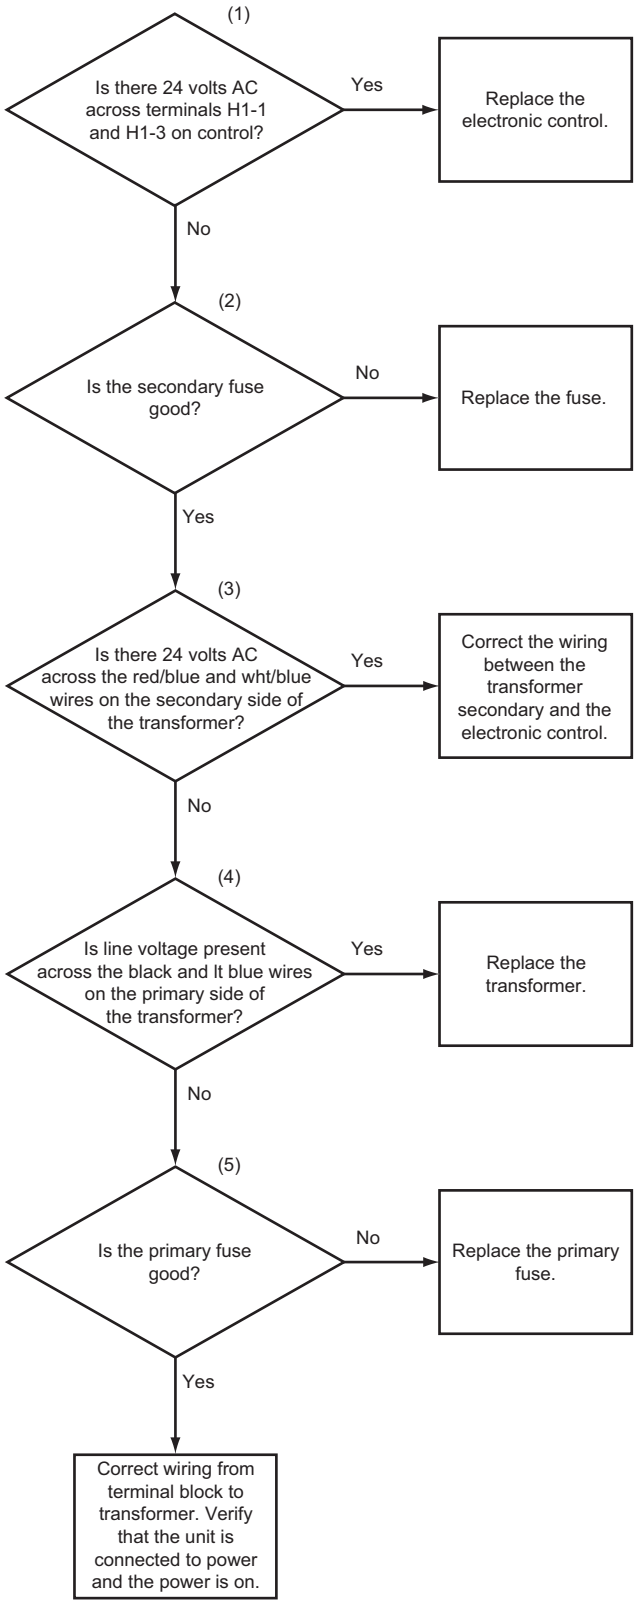
(1)
Is there 24 volts AC across terminals H1-1 and H1-3 on control?
Yes
Replace the electronic control.
No
(2)
Is the secondary fuse good?
No
Replace the fuse.
Yes
(3)
Is there 24 volts AC across the red/blue and wht/blue wires on the secondary side of the transformer?
Yes
Correct the wiring between the transformer secondary and the electronic control.
No
(4)
Is line voltage present across the black and lt blue wires on the primary side of the transformer?
Yes
Replace the transformer.
No
(5)
Is the primary fuse good?
No
Replace the primary fuse.
Yes
Correct wiring from terminal block to transformer. Verify that the unit is connected to power and the power is on.

TMB2299S

No Display

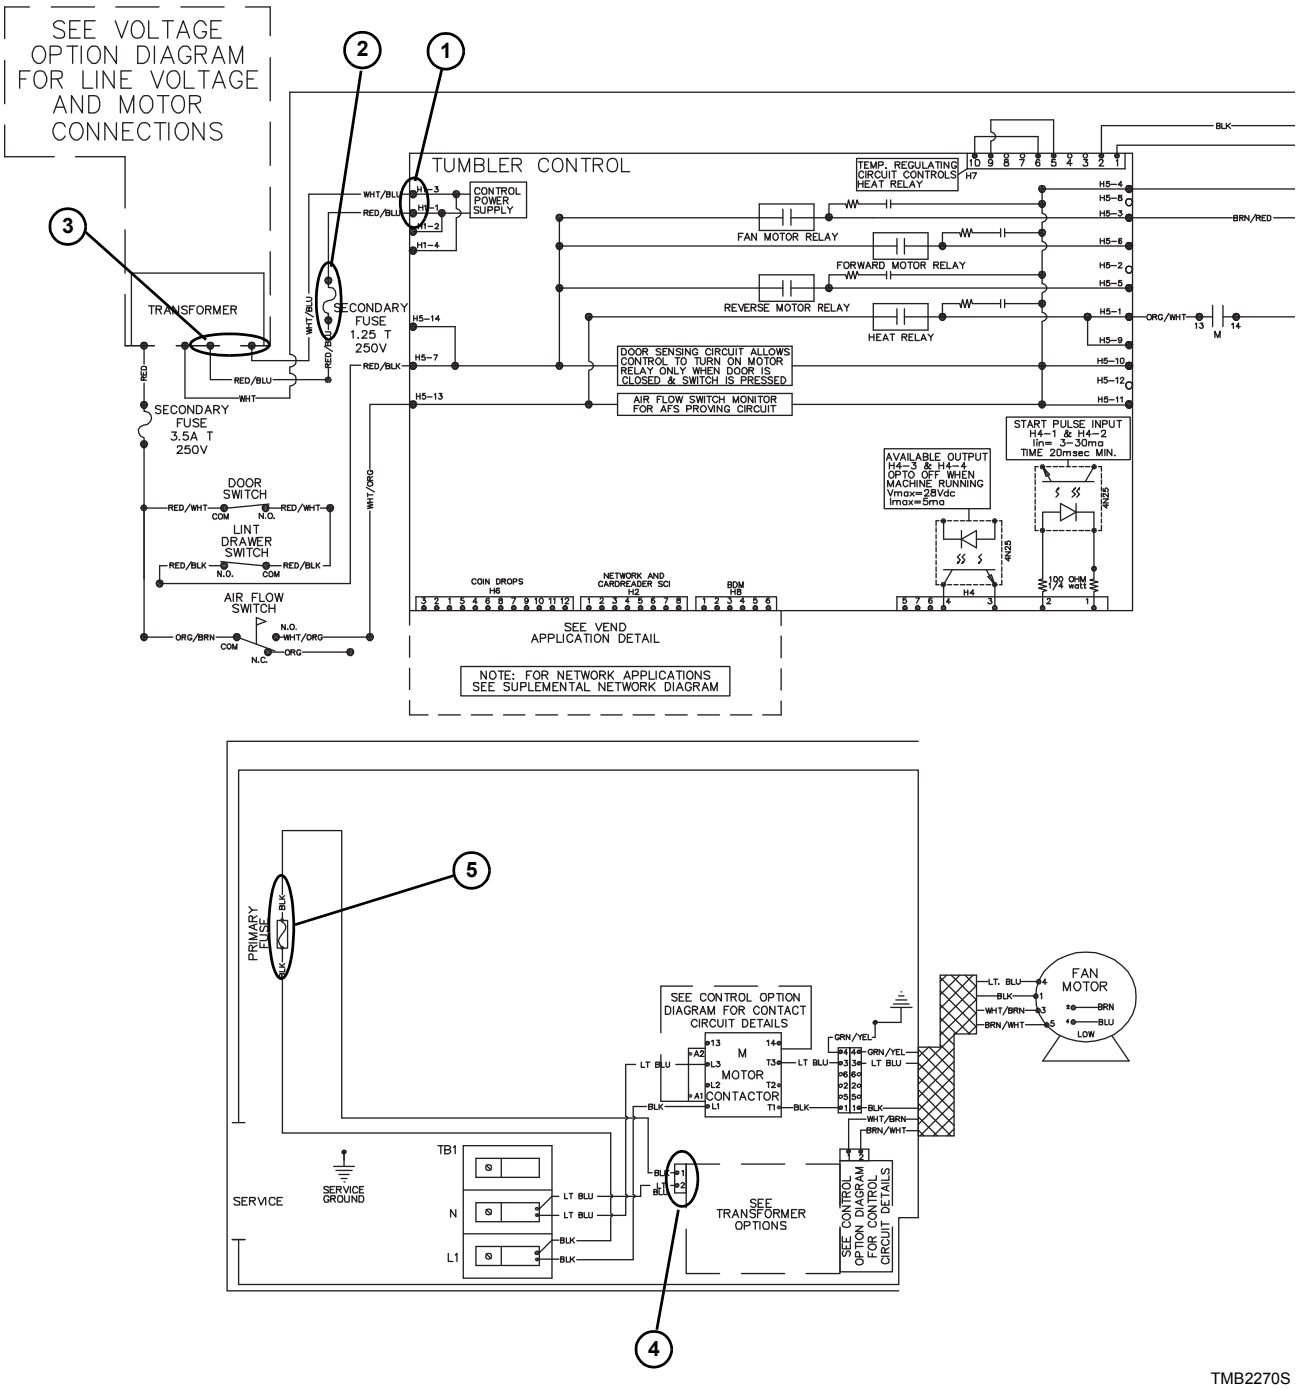
SEE VOLTAGE OPTION DIAGRAM FOR LINE VOLTAGE AND MOTOR CONNECTIONS
TUMBLER CONTROL
TRANSFORMER
SECONDARY FUSE 1.25 T 250V
SECONDARY FUSE 3.5A T 250V
CONTROL POWER SUPPLY
TEMP. REGULATING CIRCUIT CONTROLS HEAT RELAY
FAN MOTOR RELAY
FORWARD MOTOR RELAY
REVERSE MOTOR RELAY
HEAT RELAY
DOOR SENSING CIRCUIT ALLOWS CONTROL TO TURN ON MOTOR RELAY ONLY WHEN DOOR IS CLOSED & SWITCH IS PRESSED
AIR FLOW SWITCH MONITOR FOR AFS PROVING CIRCUIT
START PULSE INPUT H4-1 & H4-2 Iin= 3-30ma TIME 20msec MIN.
AVAILABLE OUTPUT H4-3 & H4-4 OPTO OFF WHEN MACHINE RUNNING Vmax=28Vdc Imax=5ma
DOOR SWITCH
LINT DRAWER SWITCH
AIR FLOW SWITCH
COIN DROPS H6
NETWORK AND CARDREADER SCI H2
BDM H8
SEE VEND APPLICATION DETAIL
NOTE: FOR NETWORK APPLICATIONS SEE SUPLEMENTAL NETWORK DIAGRAM
PRIMARY FUSE
SERVICE
SERVICE GROUND
TB1
SEE TRANSFORMER OPTIONS
SEE CONTROL OPTION DIAGRAM FOR CONTROL CIRCUIT DETAILS
SEE CONTROL OPTION DIAGRAM FOR CONTACT CIRCUIT DETAILS
M MOTOR CONTACTOR
FAN MOTOR
1
2
3
4
5

TMB2270S

86. “Door Open” Indicator

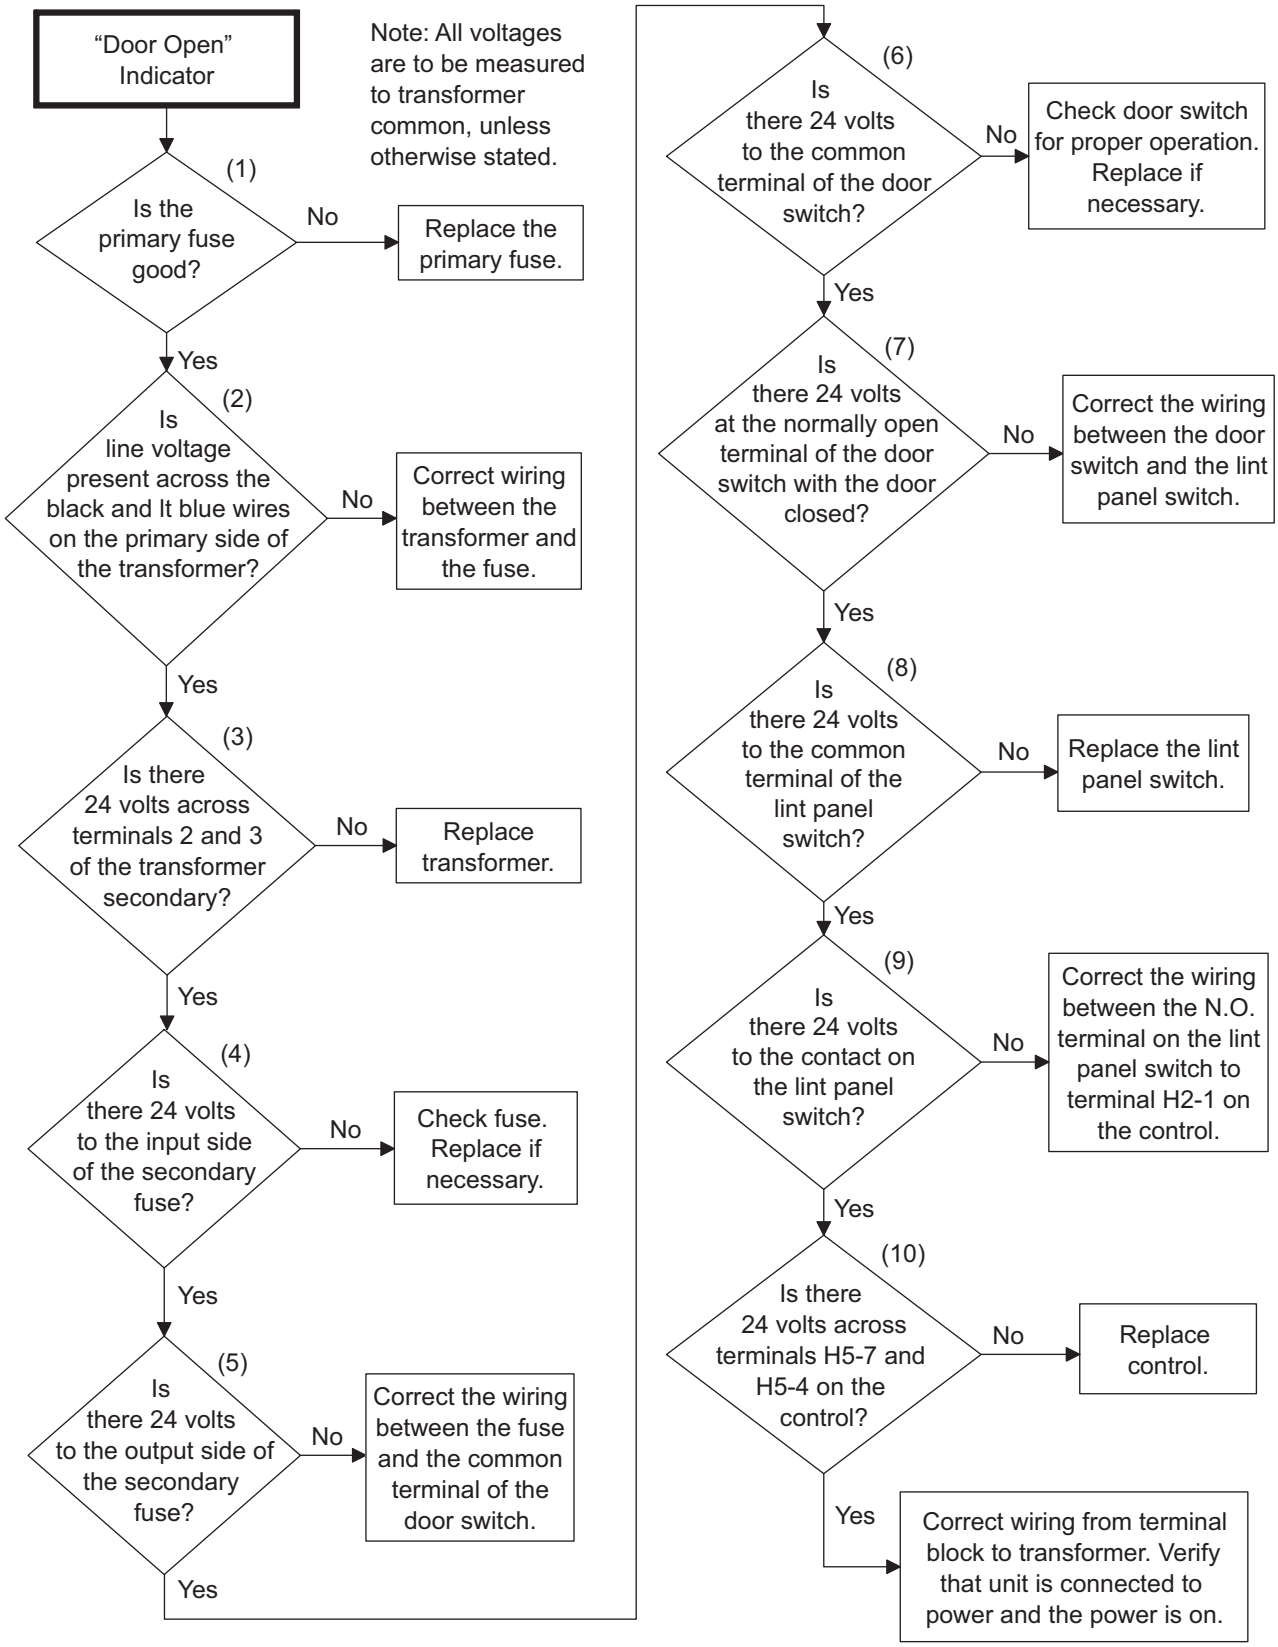
“Door Open” Indicator
Note: All voltages are to be measured to transformer common, unless otherwise stated.
(1)
Is the primary fuse good?
No
Replace the primary fuse.
Yes
(2)
Is line voltage present across the black and lt blue wires on the primary side of the transformer?
No
Correct wiring between the transformer and the fuse.
Yes
(3)
Is there 24 volts across terminals 2 and 3 of the transformer secondary?
No
Replace transformer.
Yes
(4)
Is there 24 volts to the input side of the secondary fuse?
No
Check fuse. Replace if necessary.
Yes
(5)
Is there 24 volts to the output side of the secondary fuse?
No
Correct the wiring between the fuse and the common terminal of the door switch.
Yes
(6)
Is there 24 volts to the common terminal of the door switch?
No
Check door switch for proper operation. Replace if necessary.
Yes
(7)
Is there 24 volts at the normally open terminal of the door switch with the door closed?
No
Correct the wiring between the door switch and the lint panel switch.
Yes
(8)
Is there 24 volts to the common terminal of the lint panel switch?
No
Replace the lint panel switch.
Yes
(9)
Is there 24 volts to the contact on the lint panel switch?
No
Correct the wiring between the N.O. terminal on the lint panel switch to terminal H2-1 on the control.
Yes
(10)
Is there 24 volts across terminals H5-7 and H5-4 on the control?
No
Replace control.
Yes
Correct wiring from terminal block to transformer. Verify that unit is connected to power and the power is on.

TMB2401S

"Open Door" Indicator

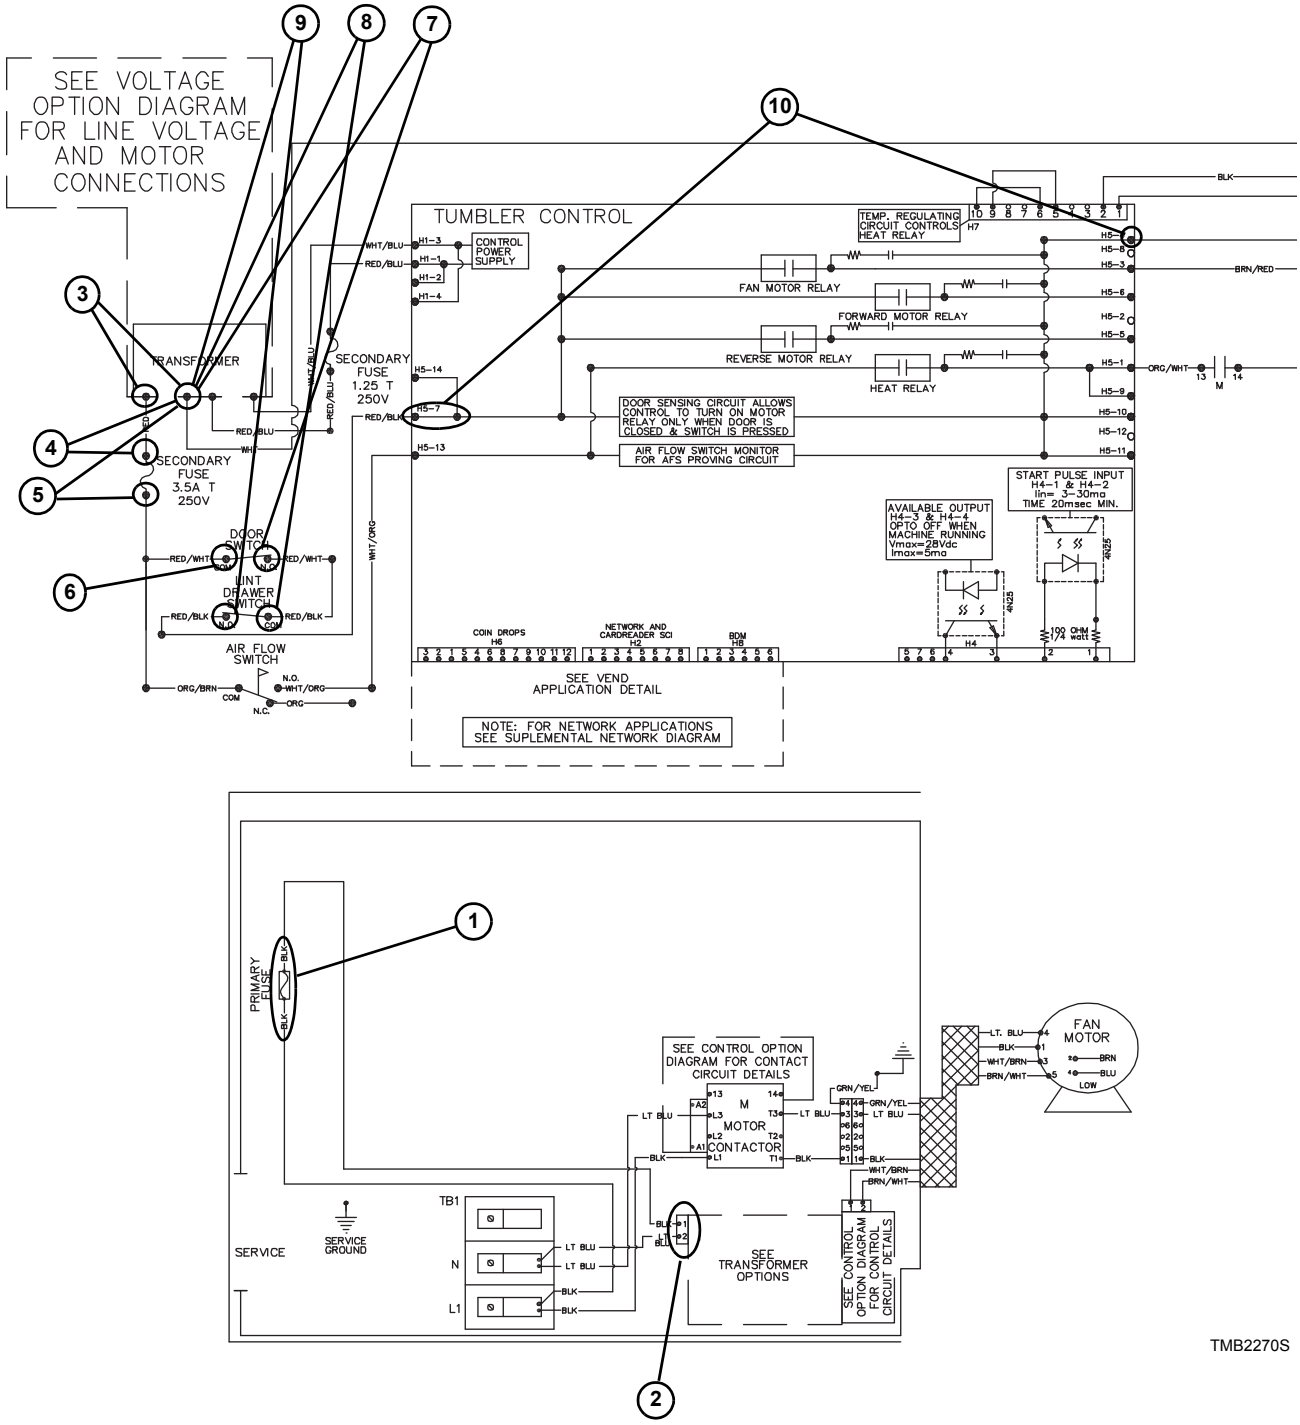
SEE VOLTAGE OPTION DIAGRAM FOR LINE VOLTAGE AND MOTOR CONNECTIONS
TUMBLER CONTROL
TRANSFORMER
SECONDARY FUSE 1.25 T 250V
SECONDARY FUSE 3.5A T 250V
DOOR SWITCH
LINT DRAWER SWITCH
AIR FLOW SWITCH
CONTROL POWER SUPPLY
TEMP. REGULATING CIRCUIT CONTROLS HEAT RELAY
FAN MOTOR RELAY
FORWARD MOTOR RELAY
REVERSE MOTOR RELAY
HEAT RELAY
DOOR SENSING CIRCUIT ALLOWS CONTROL TO TURN ON MOTOR RELAY ONLY WHEN DOOR IS CLOSED & SWITCH IS PRESSED
AIR FLOW SWITCH MONITOR FOR AFS PROVING CIRCUIT
START PULSE INPUT H4-1 & H4-2 Iin= 3-30ma TIME 20msec MIN.
AVAILABLE OUTPUT H4-3 & H4-4 OPTO OFF WHEN MACHINE RUNNING Vmax=28Vdc Imax=5ma
COIN DROPS H6
NETWORK AND CARDREADER SCI H2
BDM H8
SEE VEND APPLICATION DETAIL
NOTE: FOR NETWORK APPLICATIONS SEE SUPLEMENTAL NETWORK DIAGRAM
PRIMARY FUSE
SERVICE
SERVICE GROUND
TB1
SEE CONTROL OPTION DIAGRAM FOR CONTACT CIRCUIT DETAILS
M CONTACTOR
MOTOR
FAN MOTOR
SEE TRANSFORMER OPTIONS
SEE CONTROL OPTION DIAGRAM FOR CONTROL CIRCUIT DETAILS
TMB2270S

87. No Start/Run

***Note: For steps 2 and 3. For 208/240 1 phase, both lines to the motor are controlled by contacts. Please check second set of contacts. For 3 phase units, the three legs supplied to the moter will be controlled by N.O. contacts. Please check all three legs.**

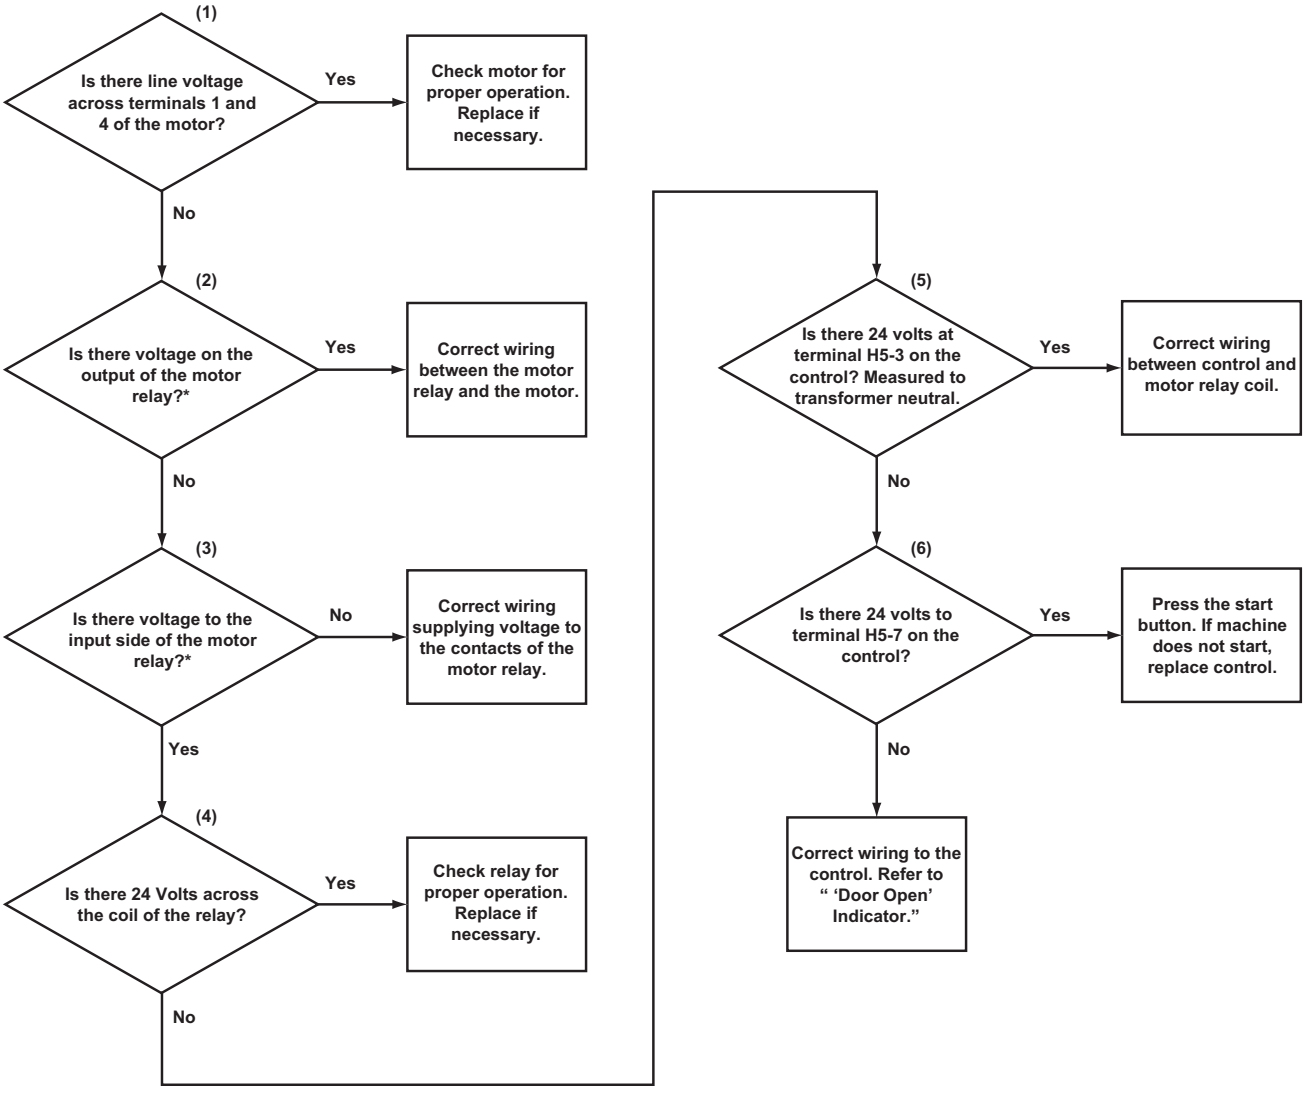
(1)
Is there line voltage across terminals 1 and 4 of the motor?
Yes
Check motor for proper operation. Replace if necessary.
No
(2)
Is there voltage on the output of the motor relay?*
Yes
Correct wiring between the motor relay and the motor.
No
(3)
Is there voltage to the input side of the motor relay?*
No
Correct wiring supplying voltage to the contacts of the motor relay.
Yes
(4)
Is there 24 Volts across the coil of the relay?
Yes
Check relay for proper operation. Replace if necessary.
No
(5)
Is there 24 volts at terminal H5-3 on the control? Measured to transformer neutral.
Yes
Correct wiring between control and motor relay coil.
No
(6)
Is there 24 volts to terminal H5-7 on the control?
Yes
Press the start button. If machine does not start, replace control.
No
Correct wiring to the control. Refer to " 'Door Open' Indicator."

TMB2272S

No Start/Run

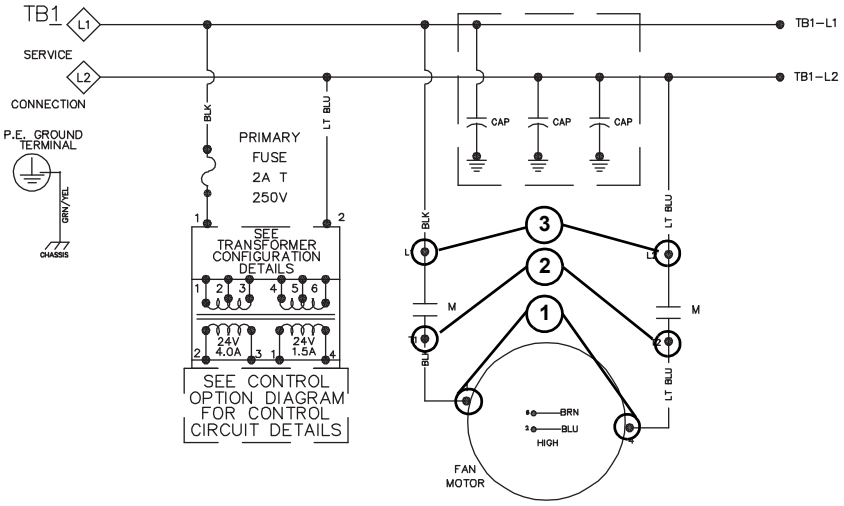

TMB2273S

No Start/Run

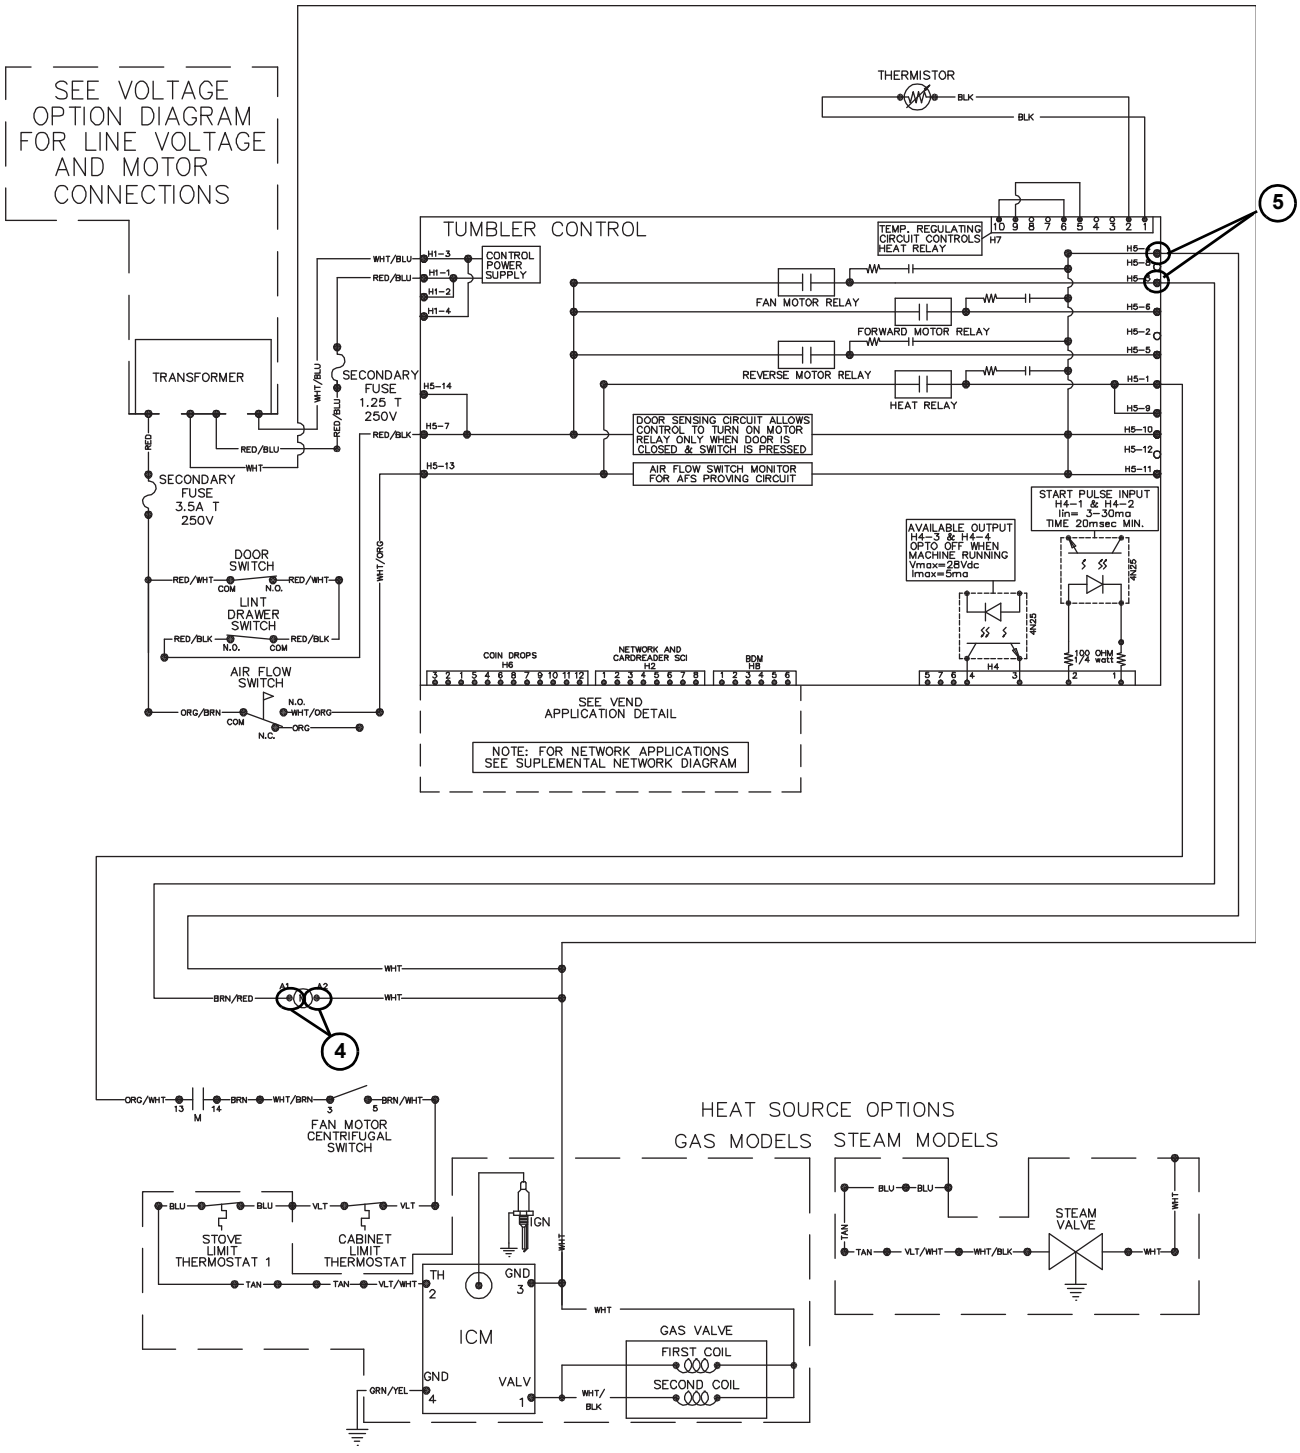

TMB2274S

88. Unit Will Not Heat – Gas

Note: Tests are conducted with unit running and calling for heat.

All voltage checks are referenced to transformer neutral.

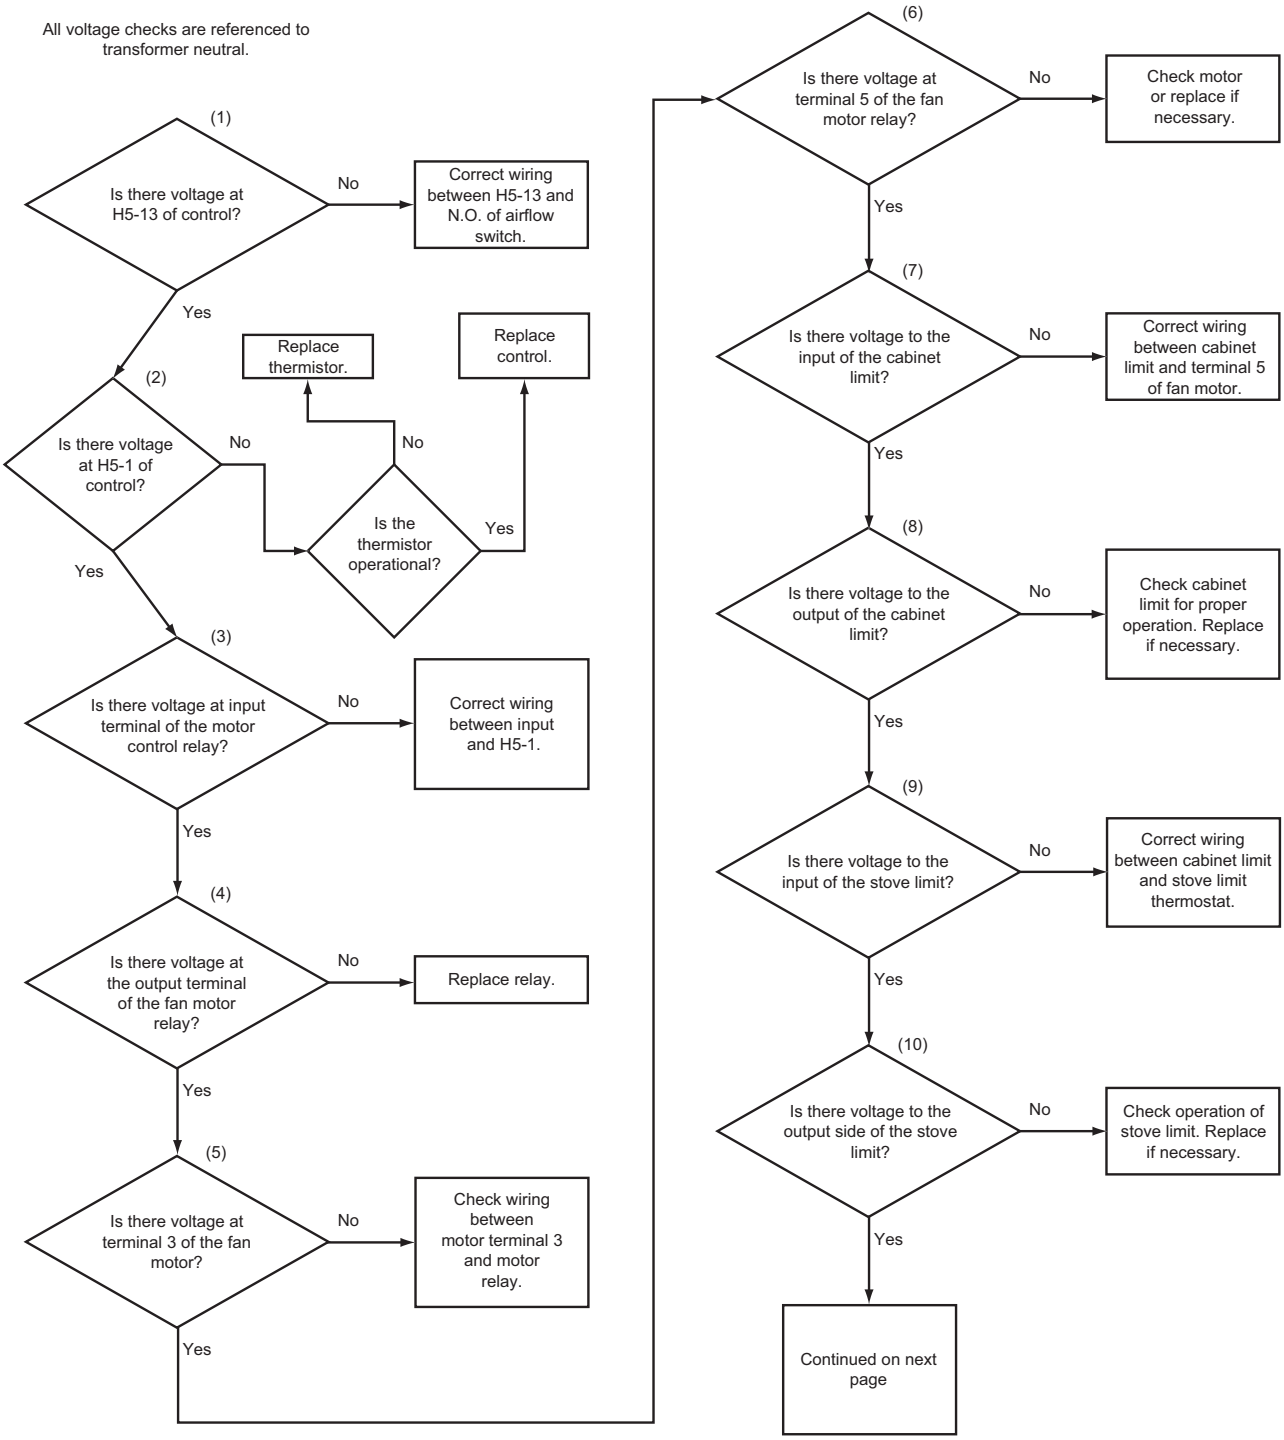

TMB2275S-a

88. Unit Will Not Heat – Gas (continued)

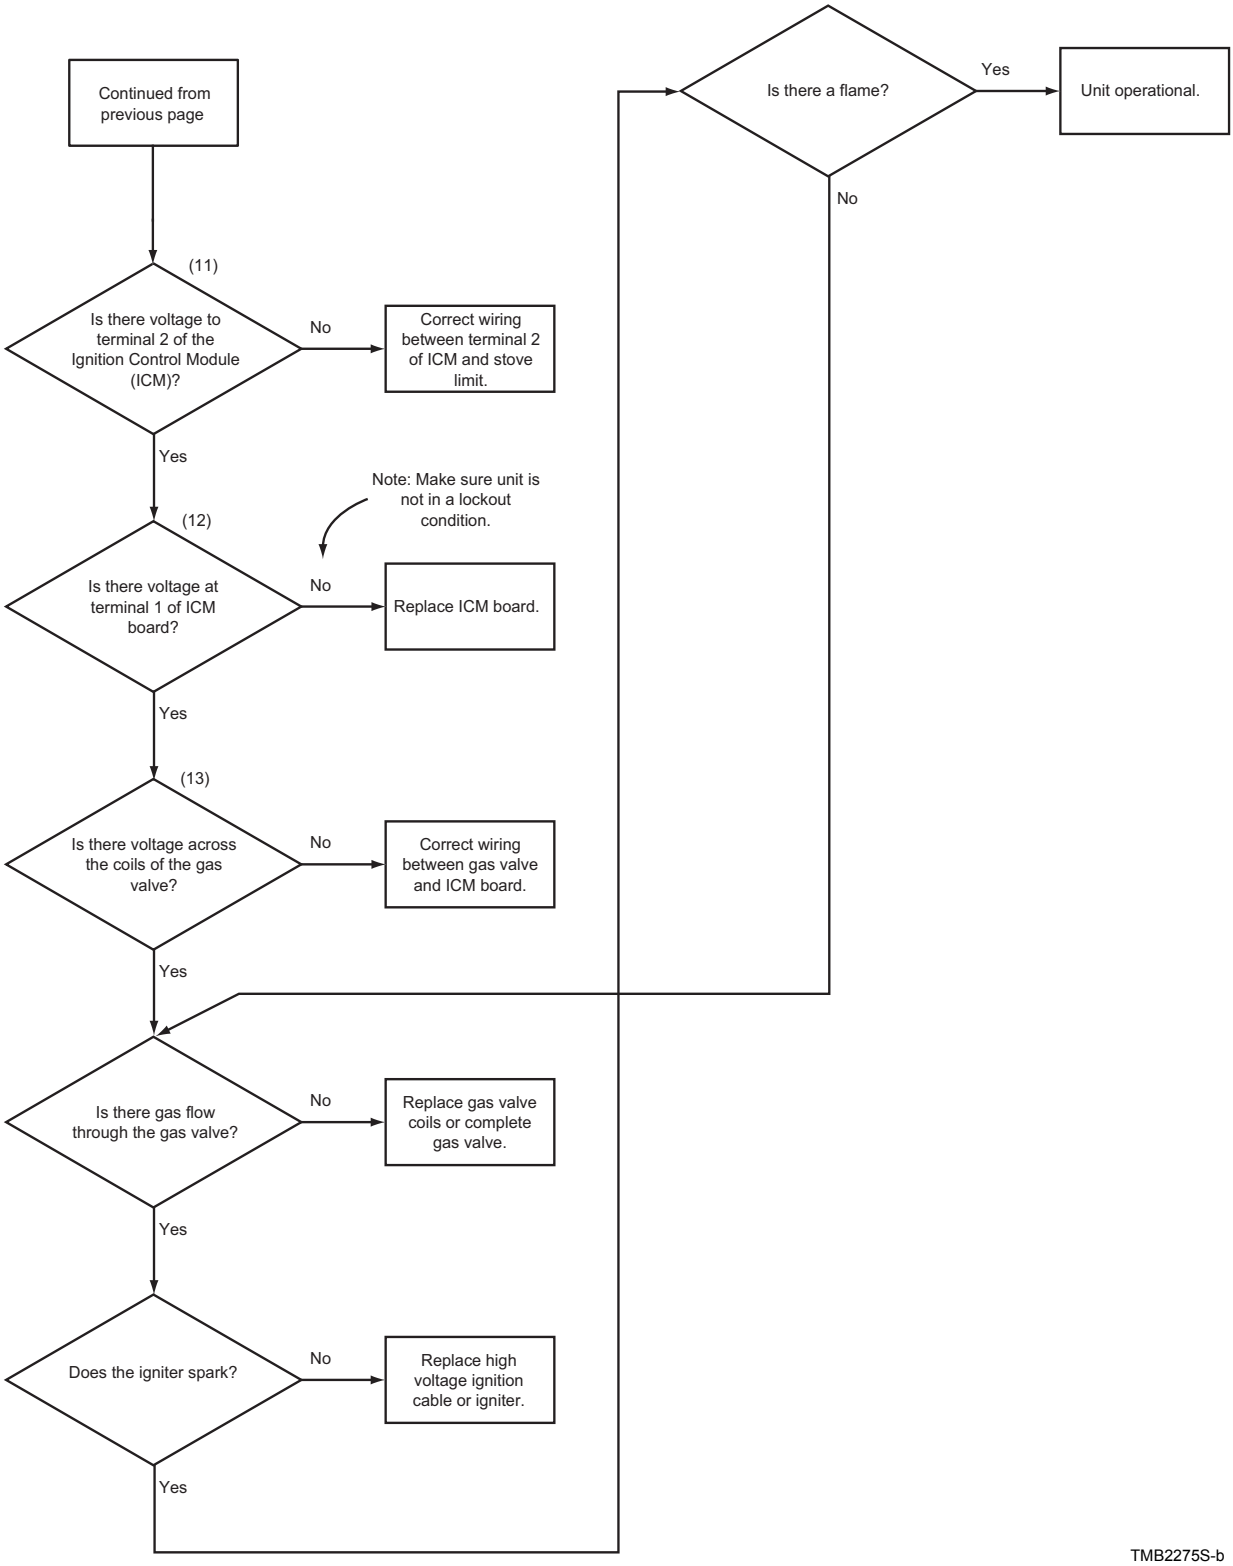

Please see following page for wiring diagram information.

Unit Will Not Heat – Gas

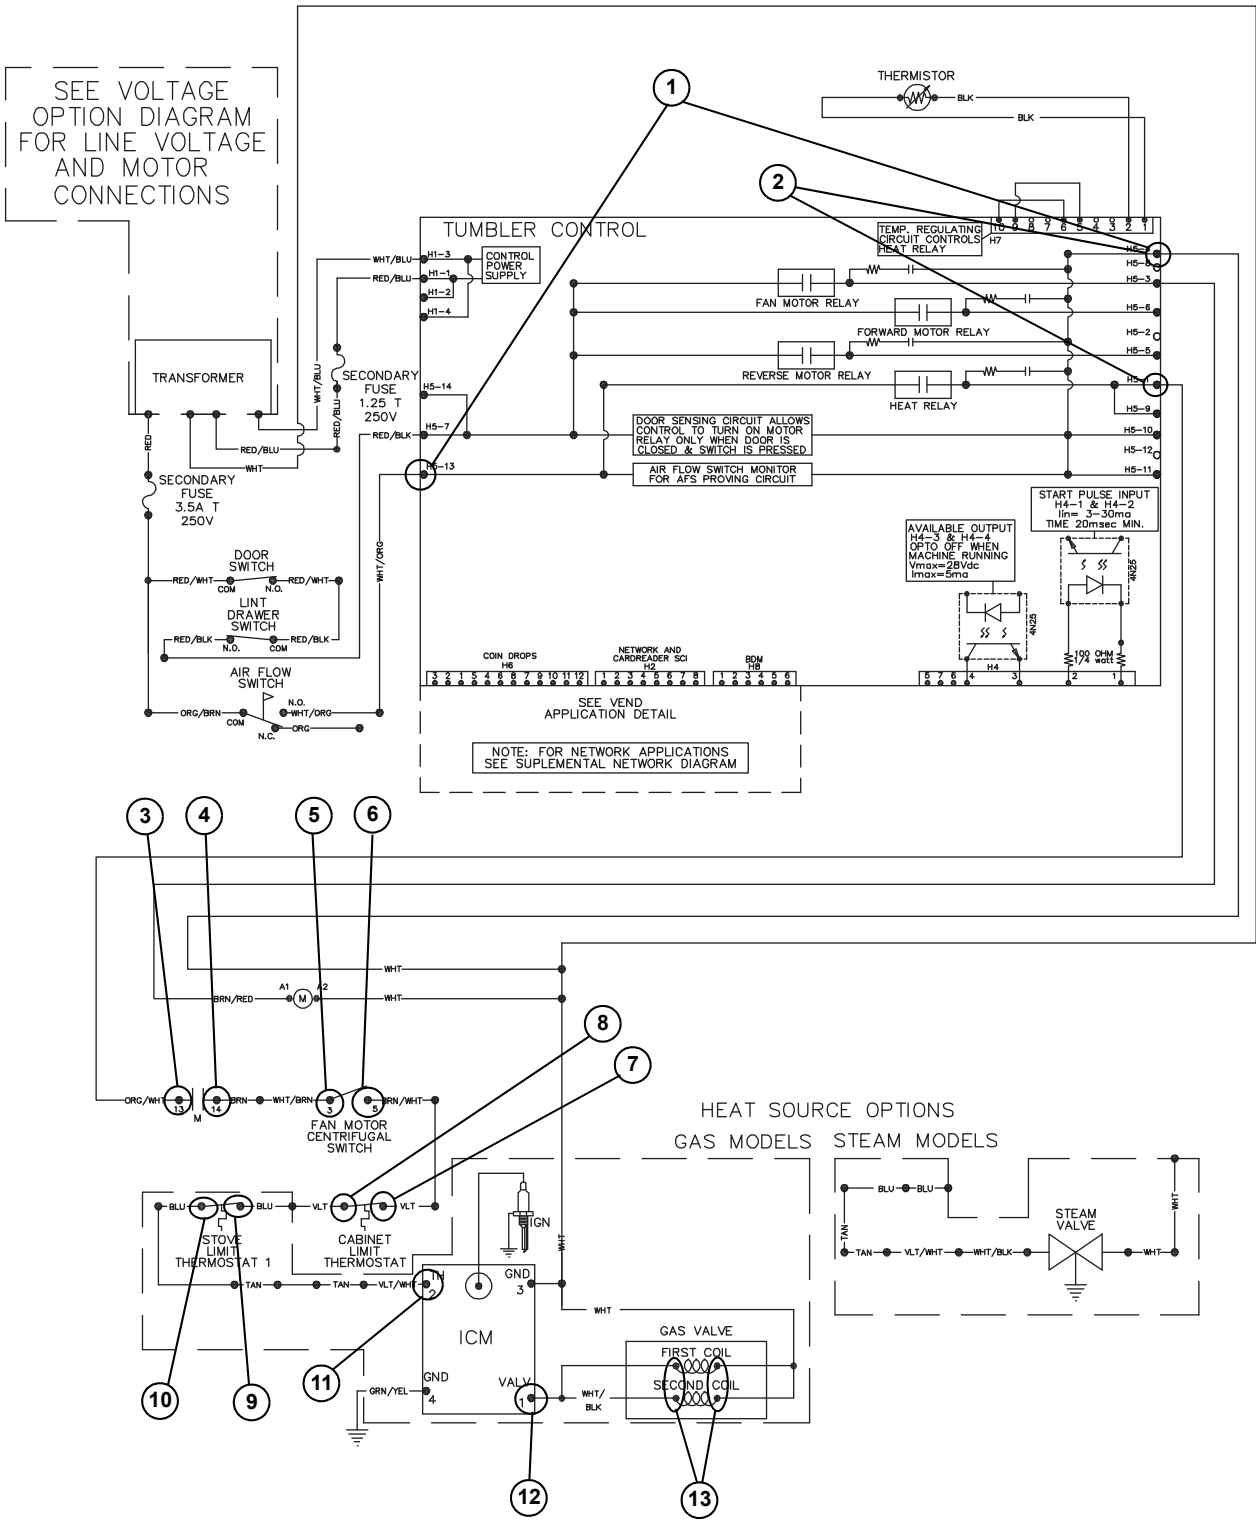

TMB2274S

89. Unit Will Not Heat – Steam

Note: Tests are conducted with unit running and calling for heat.

All voltage checks are referenced to transformer neutral.

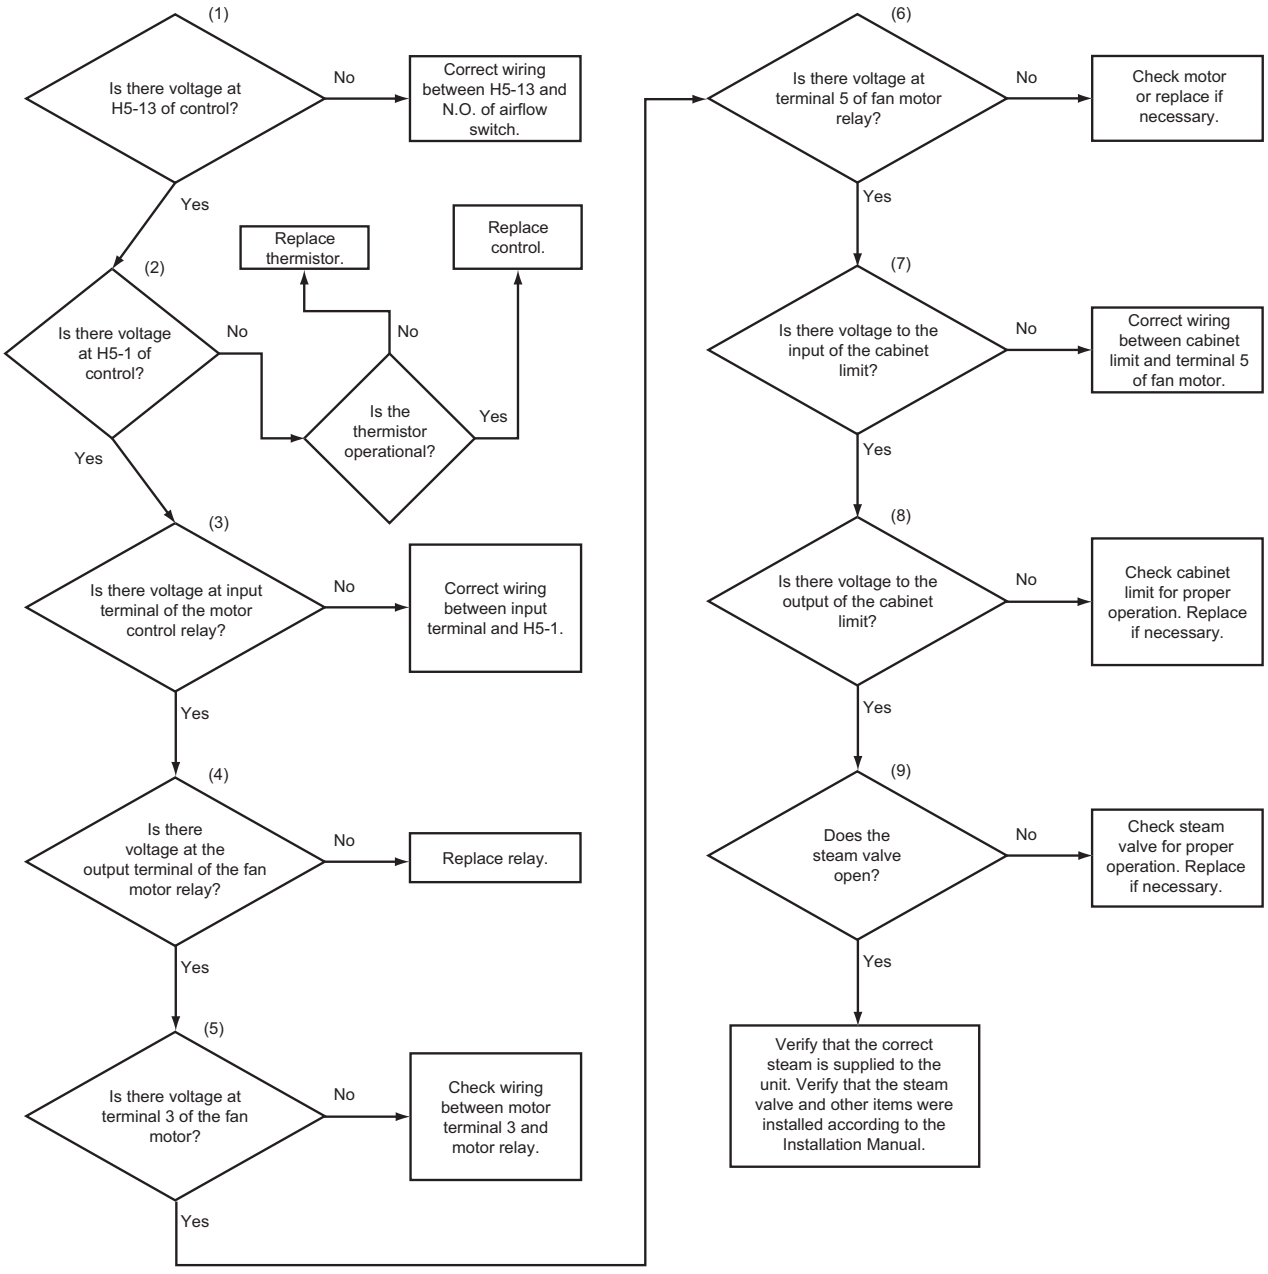
(1)
Is there voltage at H5-13 of control?
No
Correct wiring between H5-13 and N.O. of airflow switch.
Yes
(2)
Is there voltage at H5-1 of control?
No
Replace thermistor.
No
Is the thermistor operational?
Yes
Replace control.
Yes
(3)
Is there voltage at input terminal of the motor control relay?
No
Correct wiring between input terminal and H5-1.
Yes
(4)
Is there voltage at the output terminal of the fan motor relay?
No
Replace relay.
Yes
(5)
Is there voltage at terminal 3 of the fan motor?
No
Check wiring between motor terminal 3 and motor relay.
Yes
(6)
Is there voltage at terminal 5 of fan motor relay?
No
Check motor or replace if necessary.
Yes
(7)
Is there voltage to the input of the cabinet limit?
No
Correct wiring between cabinet limit and terminal 5 of fan motor.
Yes
(8)
Is there voltage to the output of the cabinet limit?
No
Check cabinet limit for proper operation. Replace if necessary.
Yes
(9)
Does the steam valve open?
No
Check steam valve for proper operation. Replace if necessary.
Yes
Verify that the correct steam is supplied to the unit. Verify that the steam valve and other items were installed according to the Installation Manual.

TMB2276S

Unit Will Not Heat – Steam

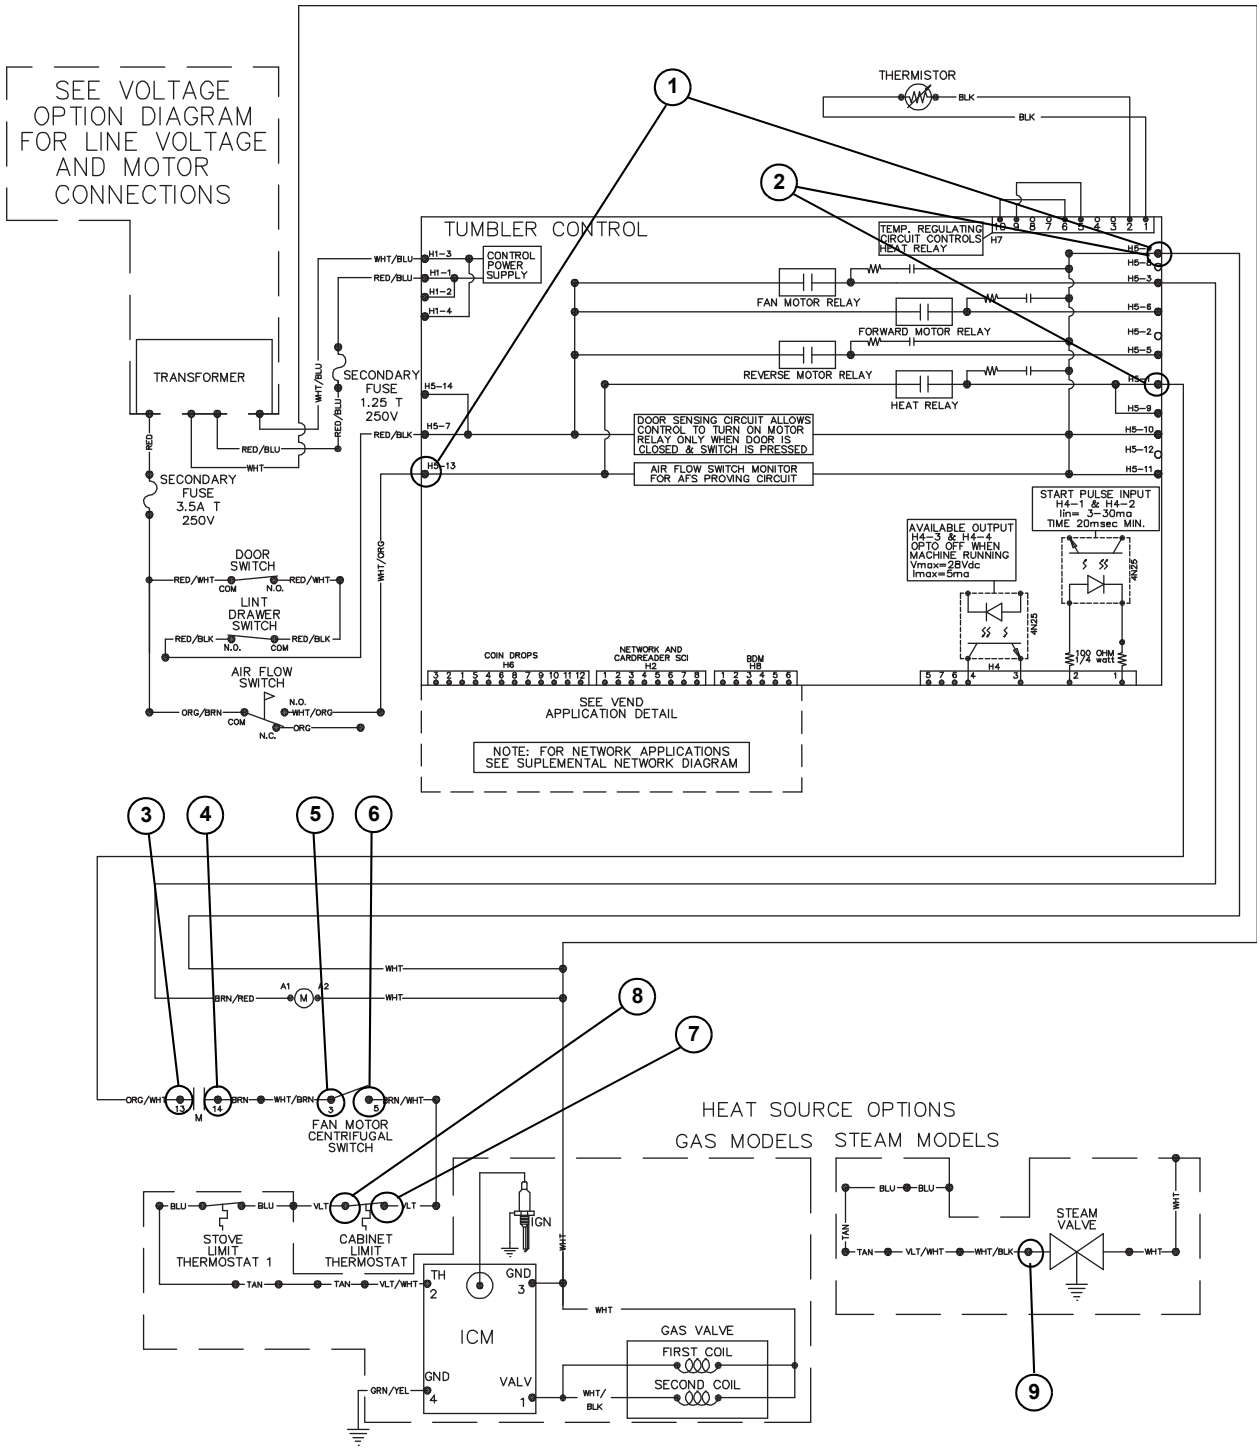

TMB2274S

90. Unit Will Not Heat – Electric

Note: Tests are conducted with unit running and calling for heat.

All voltage checks are referenced to transformer neutral.

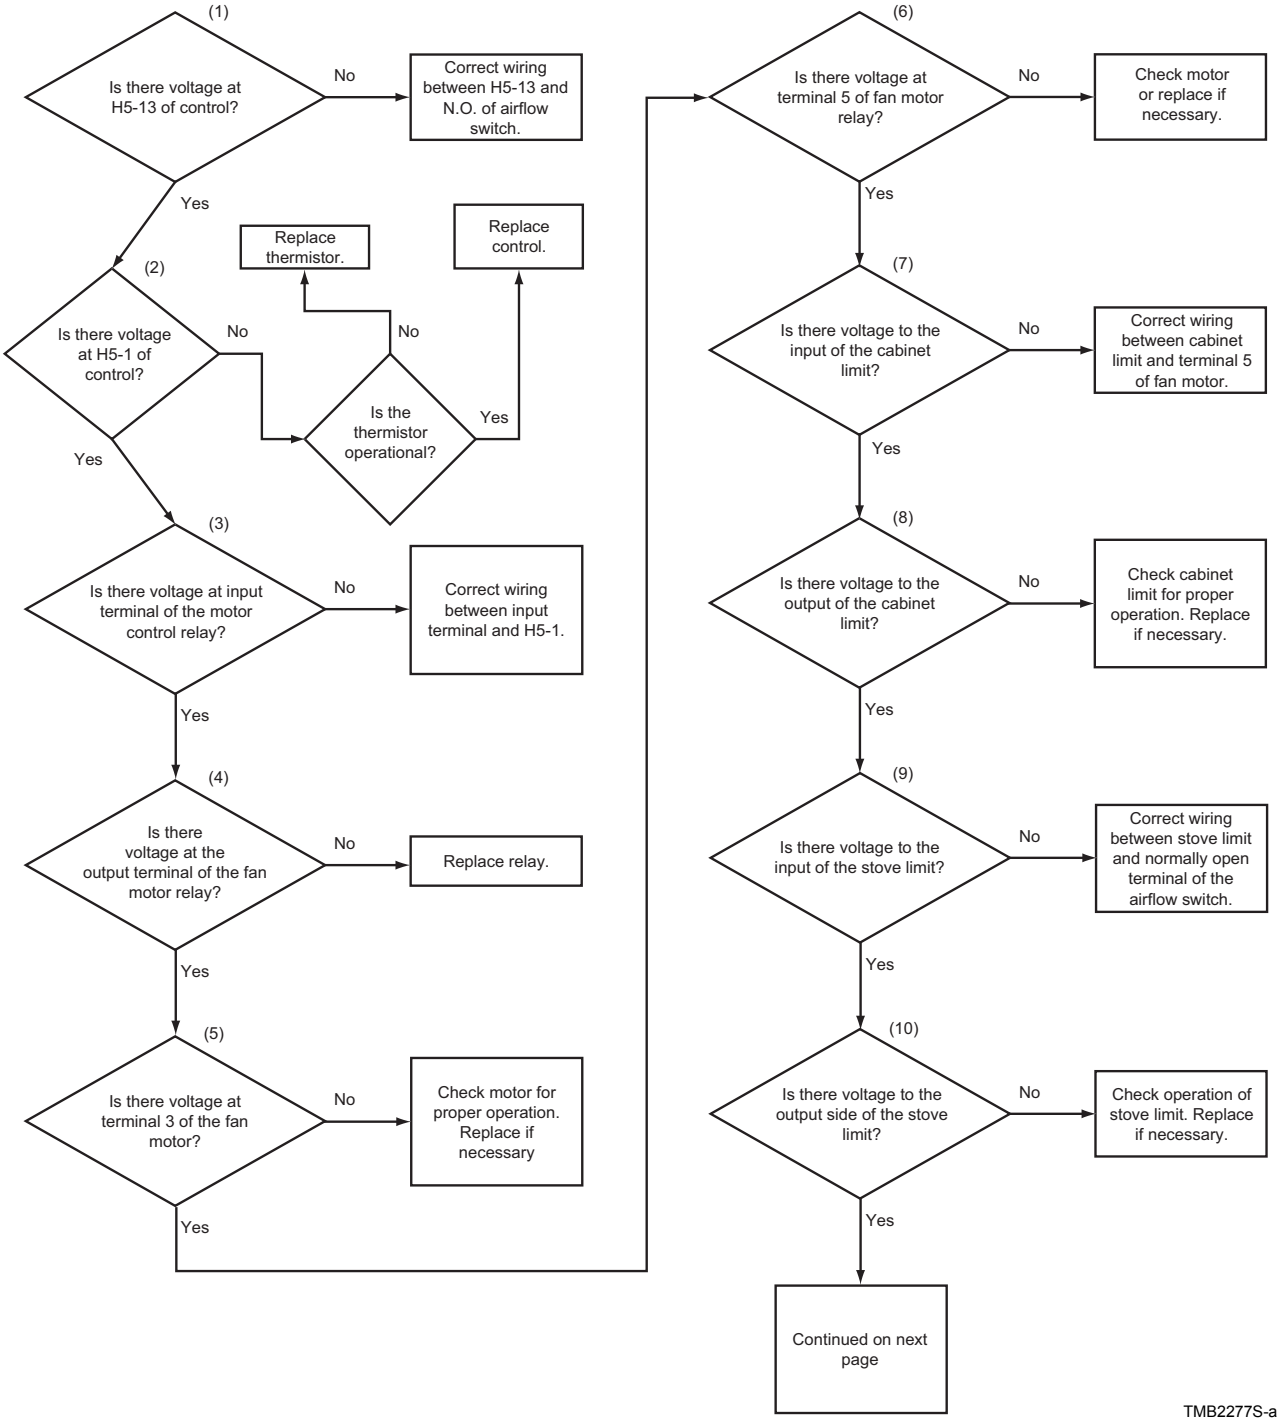

TMB2277S-a

90. Unit Will Not Heat – Electric (continued)

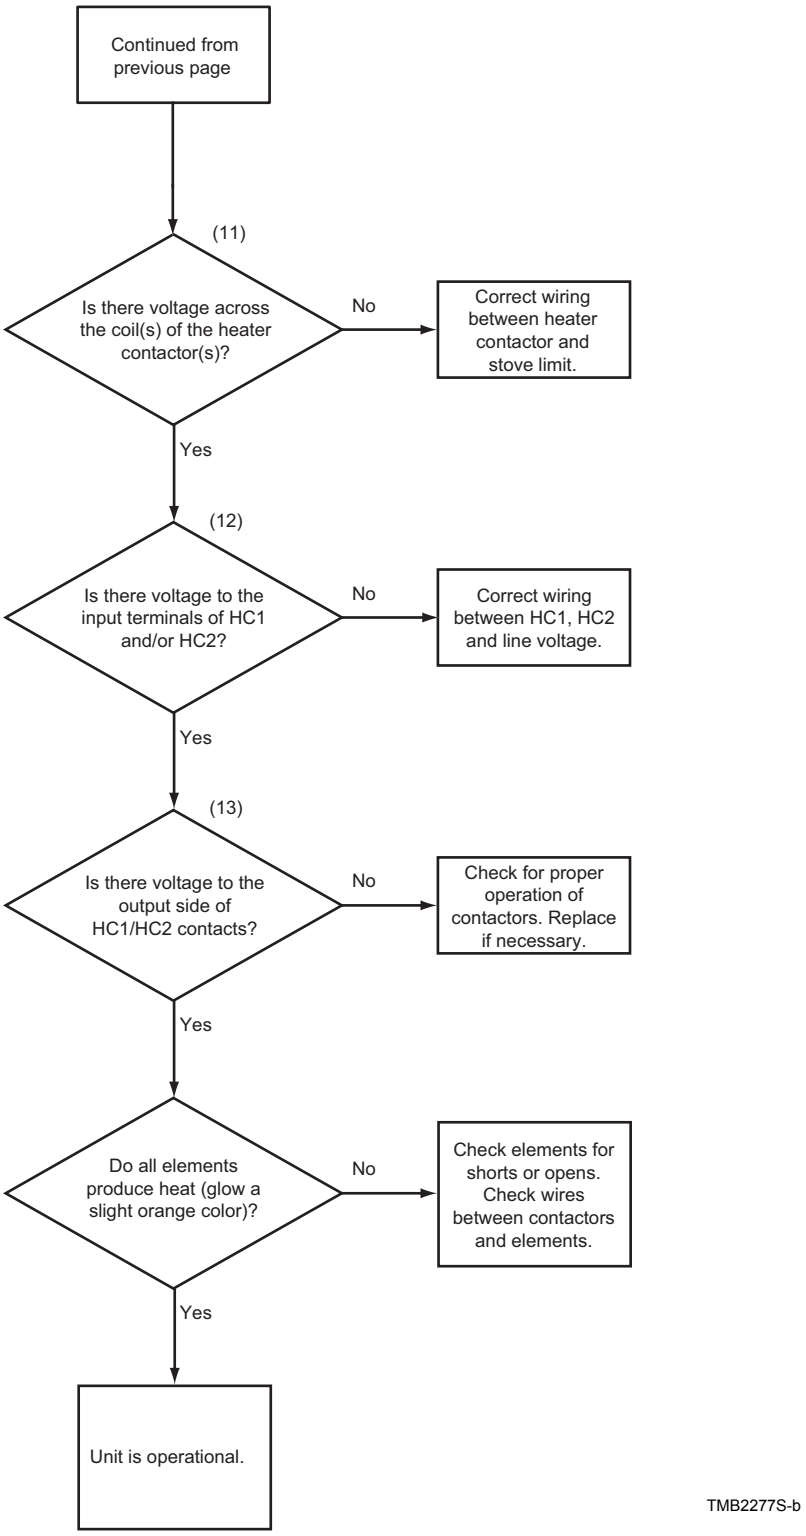
Continued from previous page
(11)
Is there voltage across the coil(s) of the heater contactor(s)?
No
Correct wiring between heater contactor and stove limit.
Yes
(12)
Is there voltage to the input terminals of HC1 and/or HC2?
No
Correct wiring between HC1, HC2 and line voltage.
Yes
(13)
Is there voltage to the output side of HC1/HC2 contacts?
No
Check for proper operation of contactors. Replace if necessary.
Yes
Do all elements produce heat (glow a slight orange color)?
No
Check elements for shorts or opens. Check wires between contactors and elements.
Yes
Unit is operational.
TMB2277S-b

Please see following page for wiring diagram information.

Unit Will Not Heat – Electric

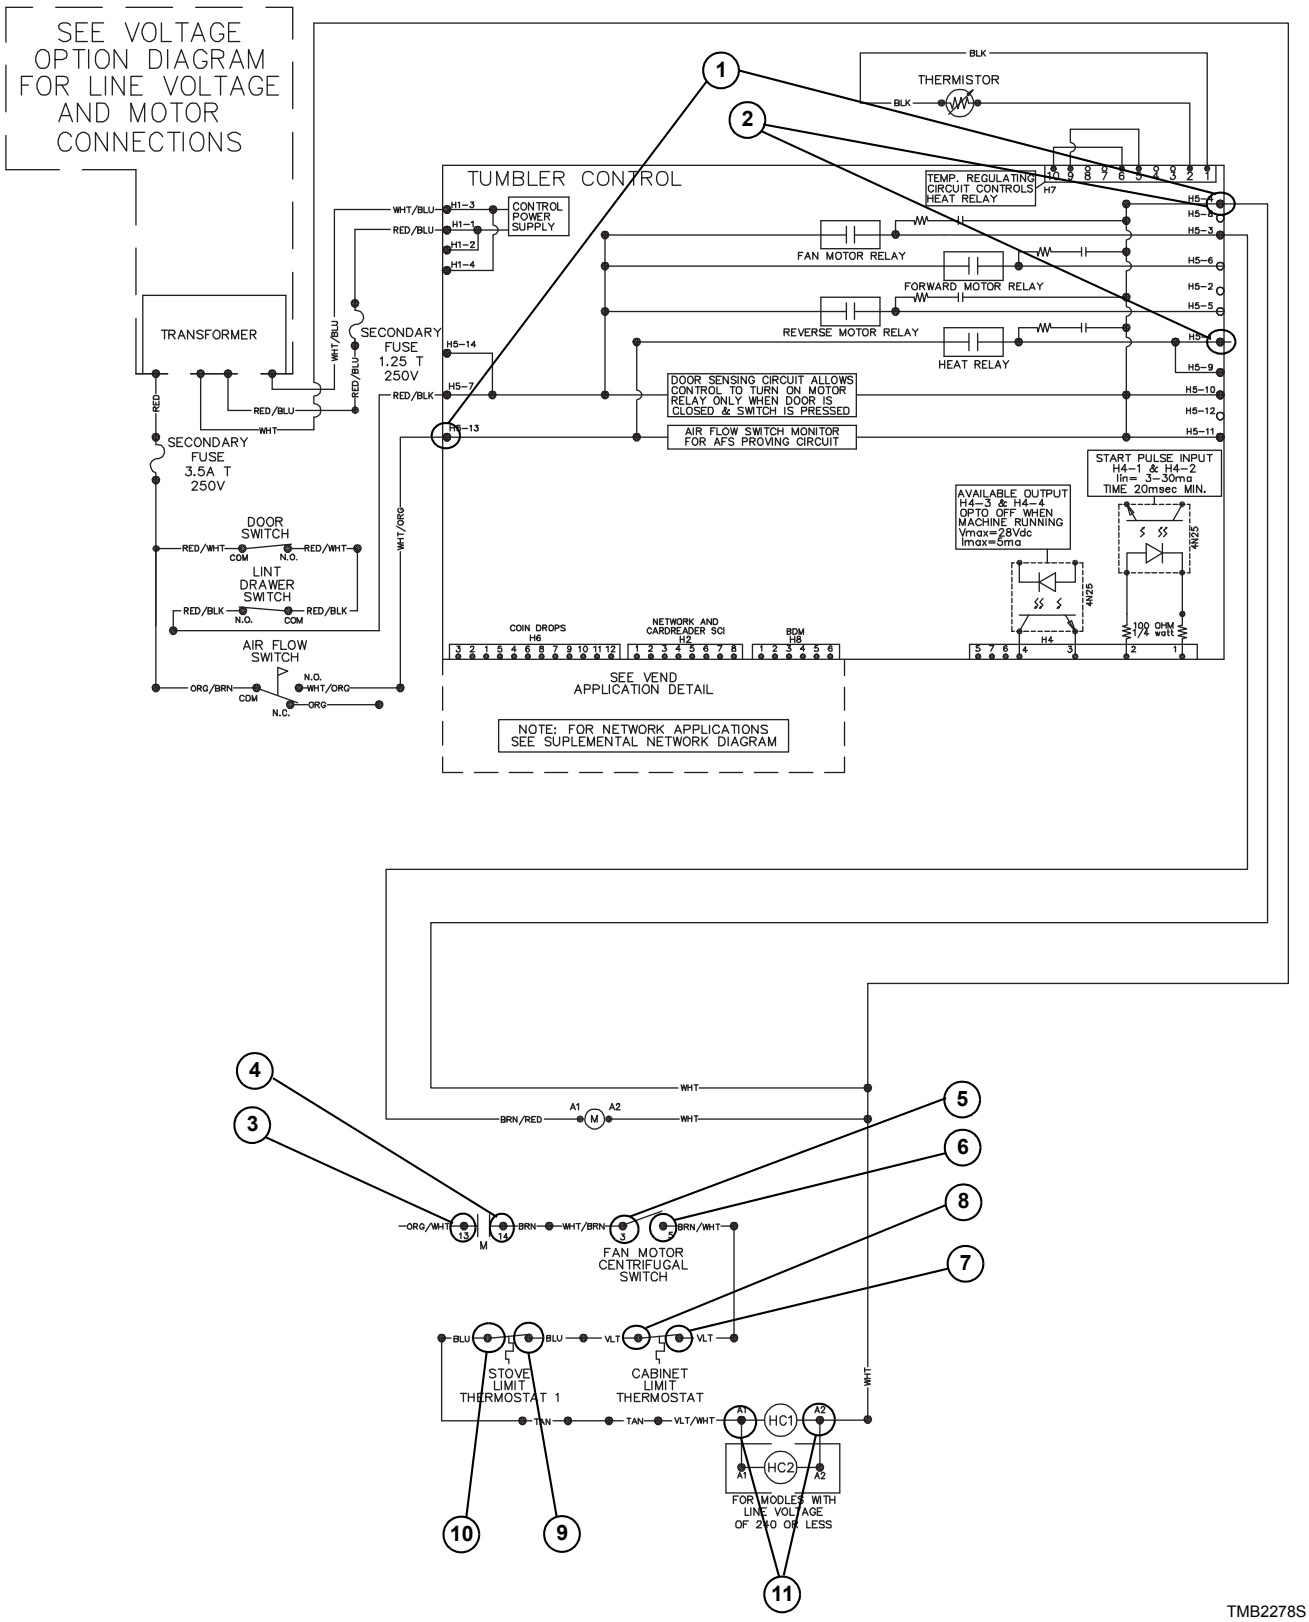

TMB2278S

Unit Will Not Heat – Electric

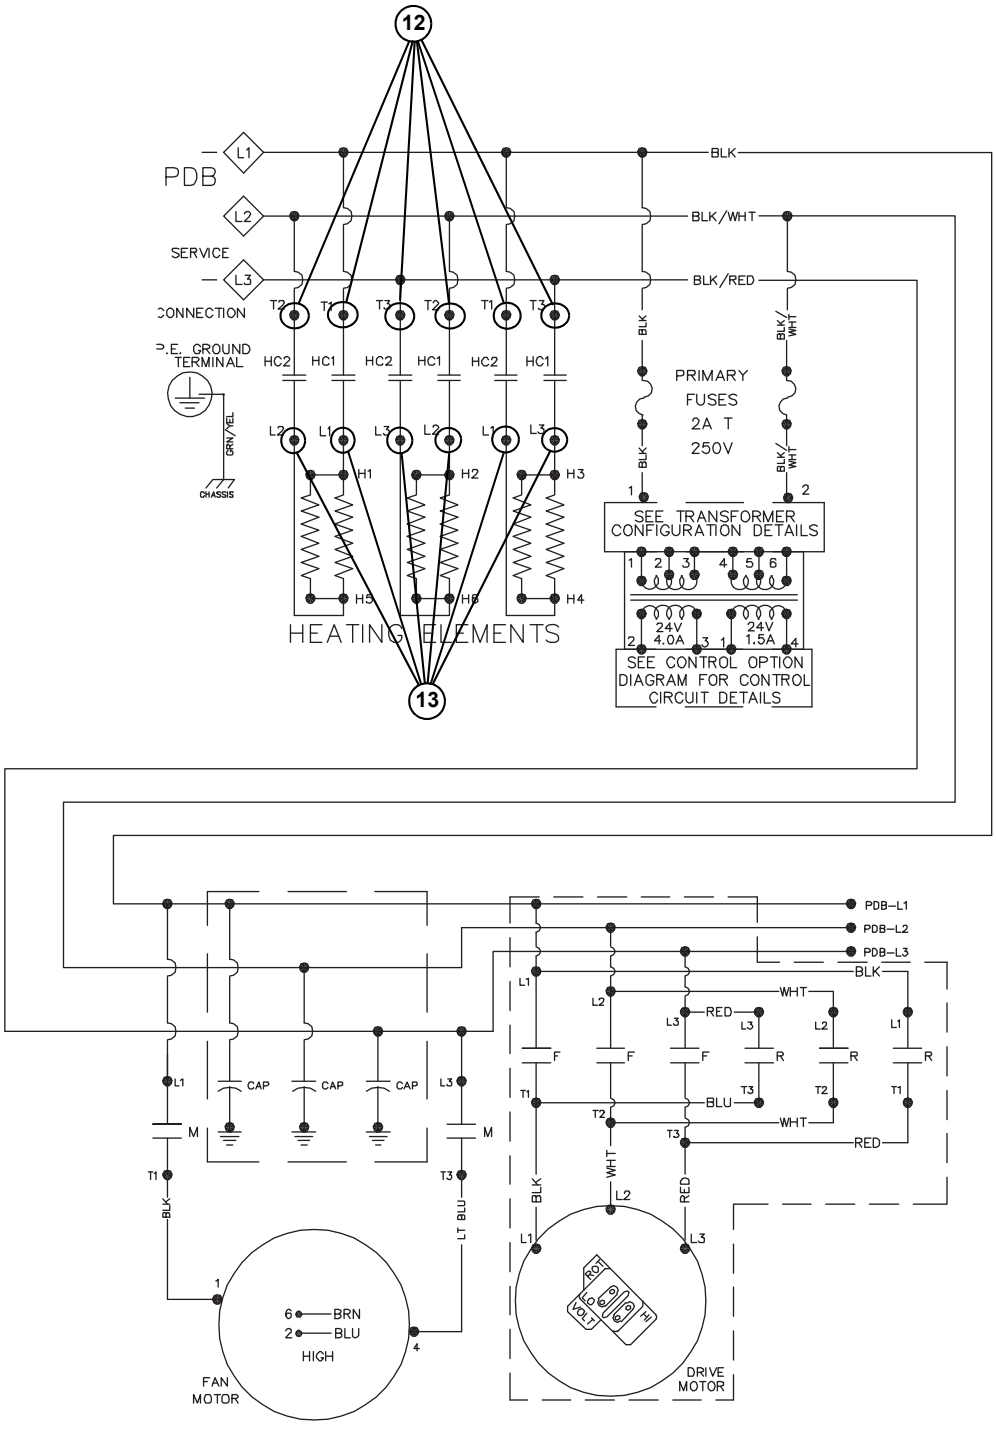

TMB2279S

91. CE Models No Display

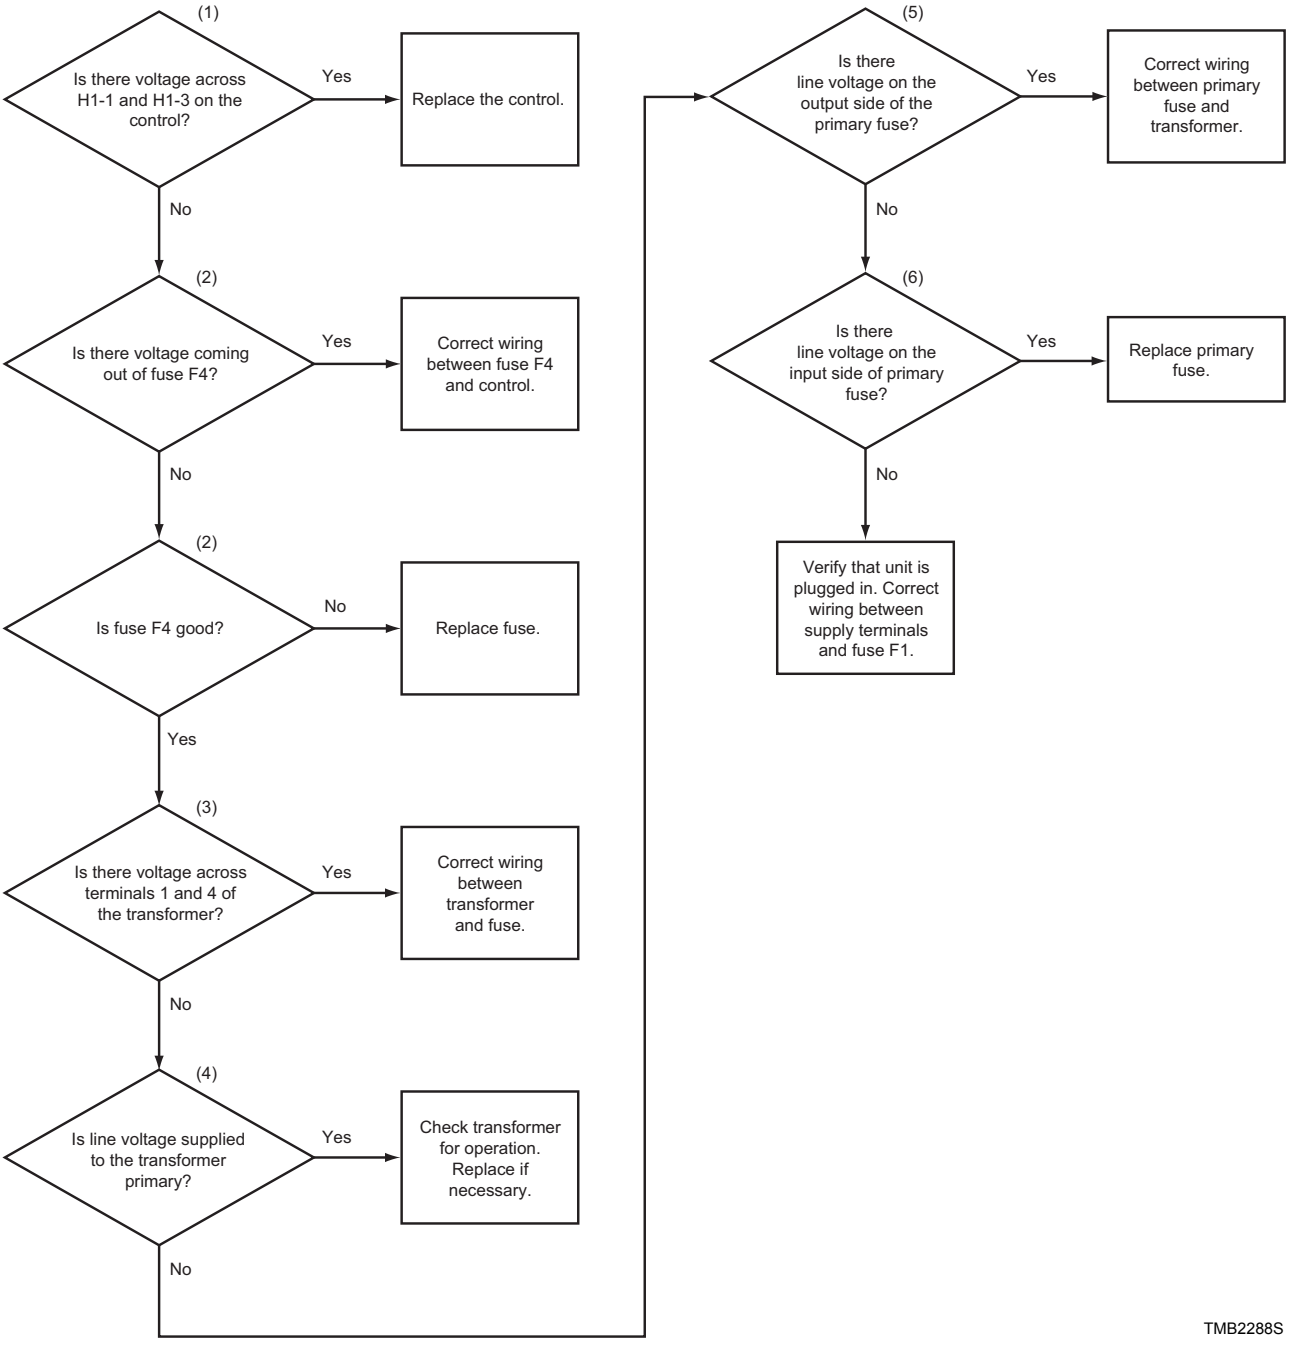

TMB2288S

CE Models No Display

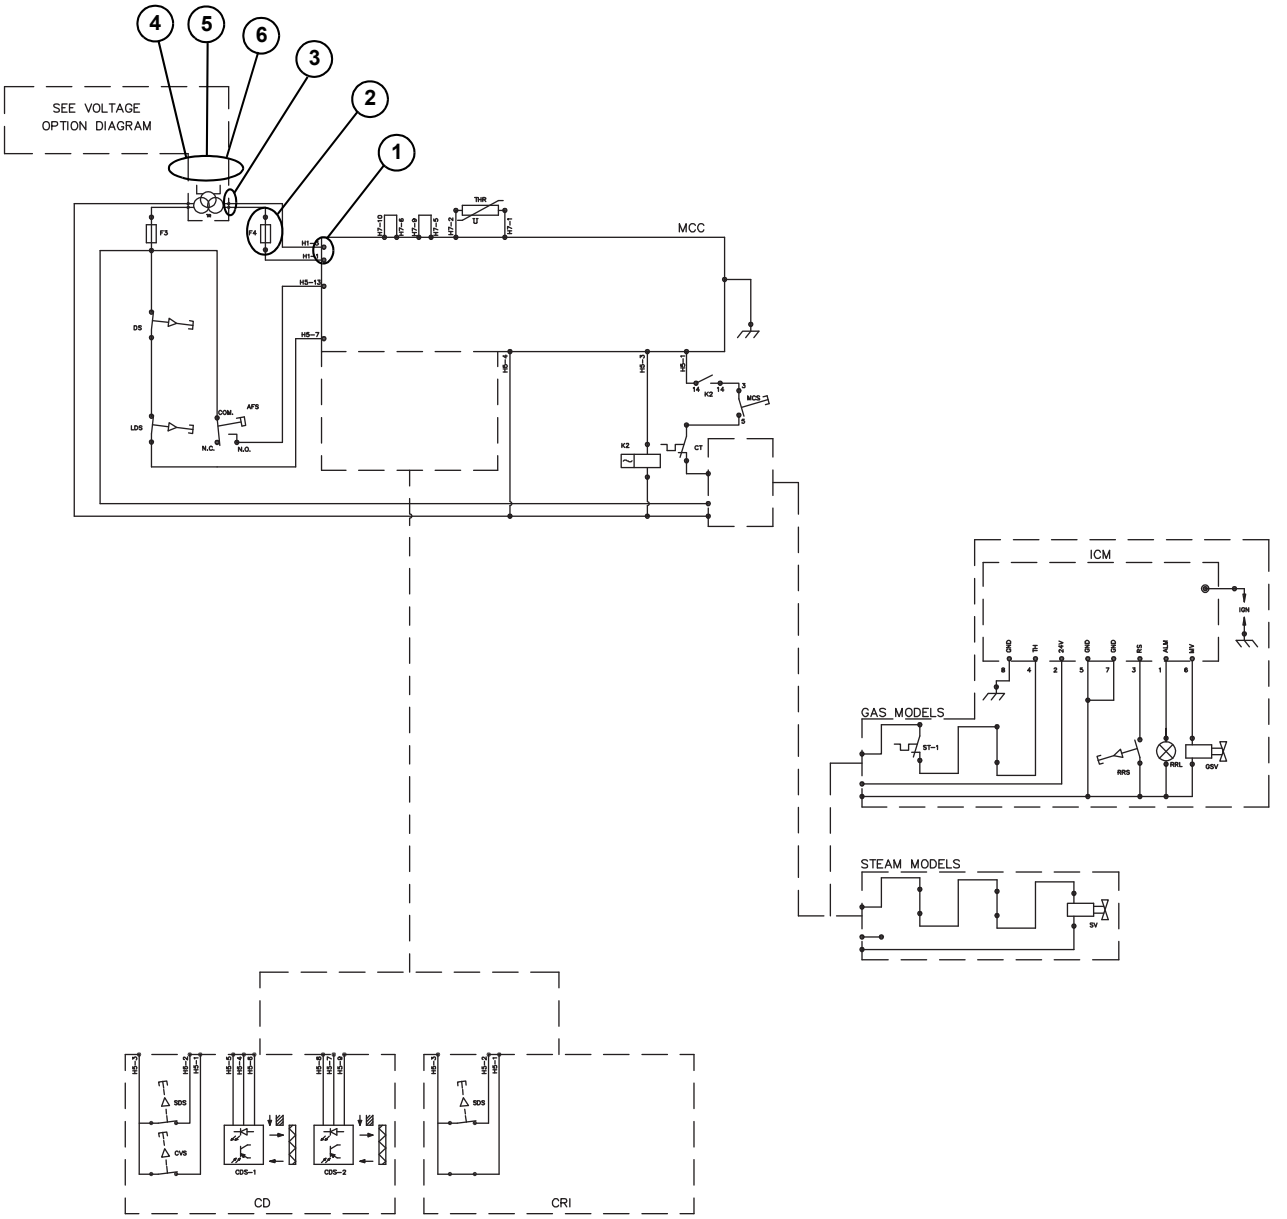

TMB2287S

92. CE Models “Door Open” Indicator

Note: All voltage checks are referenced to the transformer common unless otherwise stated.

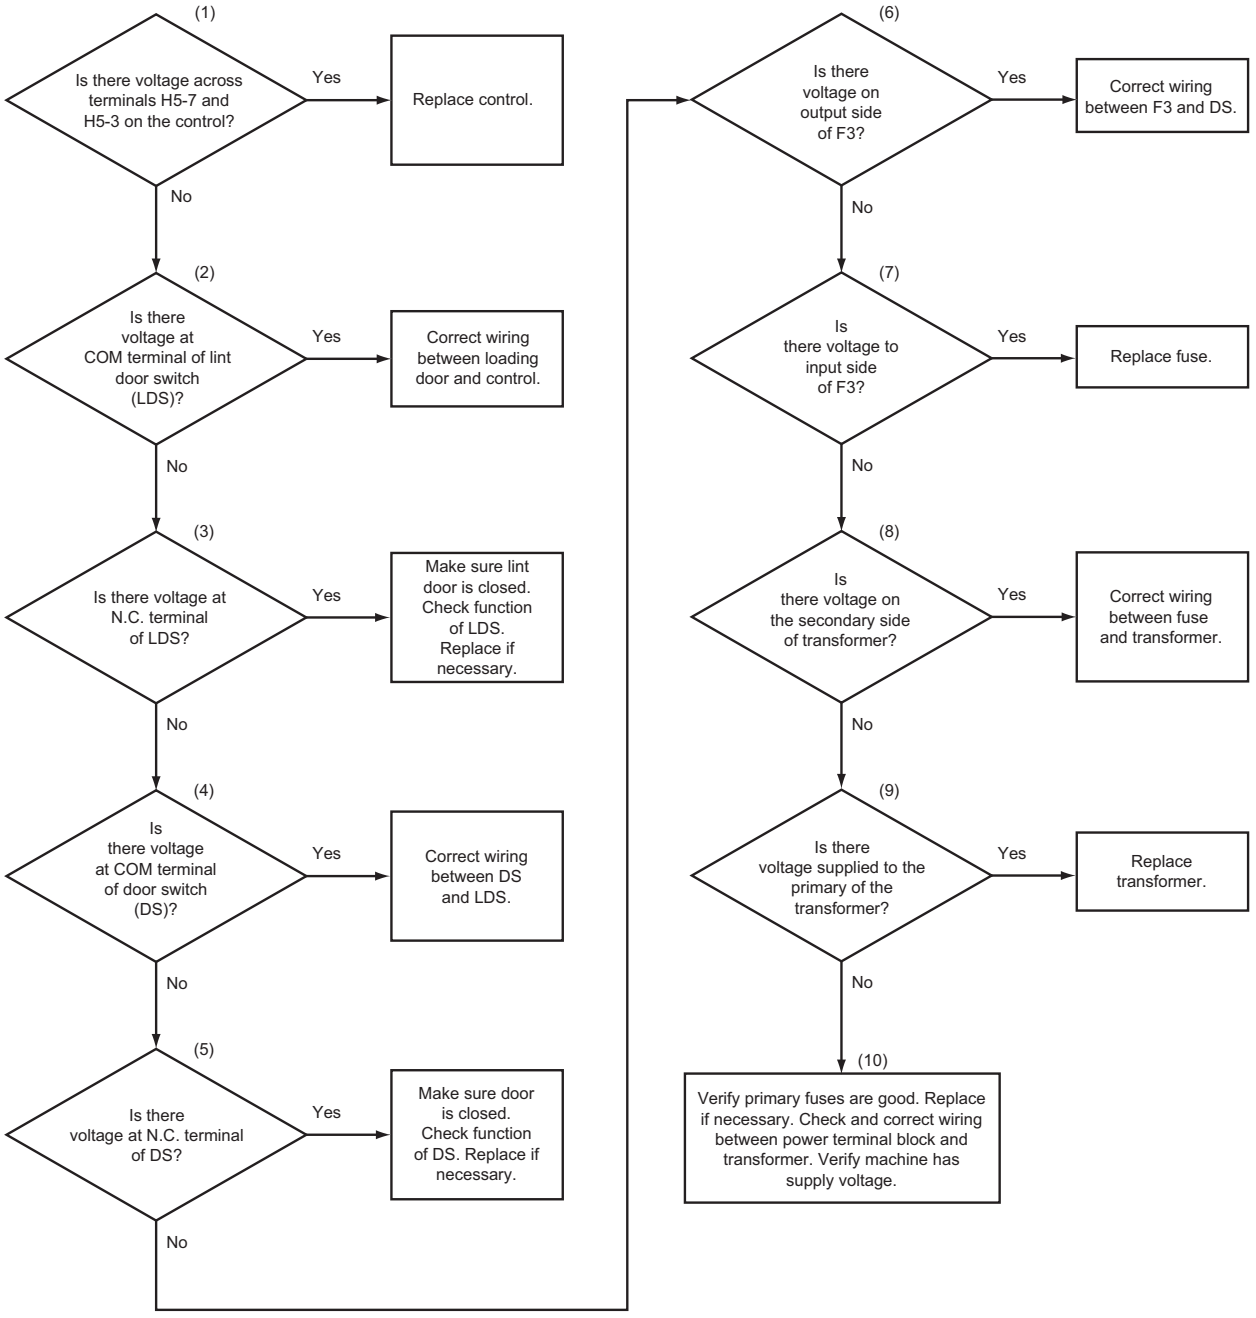
(1)
Is there voltage across terminals H5-7 and H5-3 on the control?
Yes
Replace control.
No
(2)
Is there voltage at COM terminal of lint door switch (LDS)?
Yes
Correct wiring between loading door and control.
No
(3)
Is there voltage at N.C. terminal of LDS?
Yes
Make sure lint door is closed. Check function of LDS. Replace if necessary.
No
(4)
Is there voltage at COM terminal of door switch (DS)?
Yes
Correct wiring between DS and LDS.
No
(5)
Is there voltage at N.C. terminal of DS?
Yes
Make sure door is closed. Check function of DS. Replace if necessary.
No
(6)
Is there voltage on output side of F3?
Yes
Correct wiring between F3 and DS.
No
(7)
Is there voltage to input side of F3?
Yes
Replace fuse.
No
(8)
Is there voltage on the secondary side of transformer?
Yes
Correct wiring between fuse and transformer.
No
(9)
Is there voltage supplied to the primary of the transformer?
Yes
Replace transformer.
No
(10)
Verify primary fuses are good. Replace if necessary. Check and correct wiring between power terminal block and transformer. Verify machine has supply voltage.

TMB2289S

CE Models “Door Open” Indicator

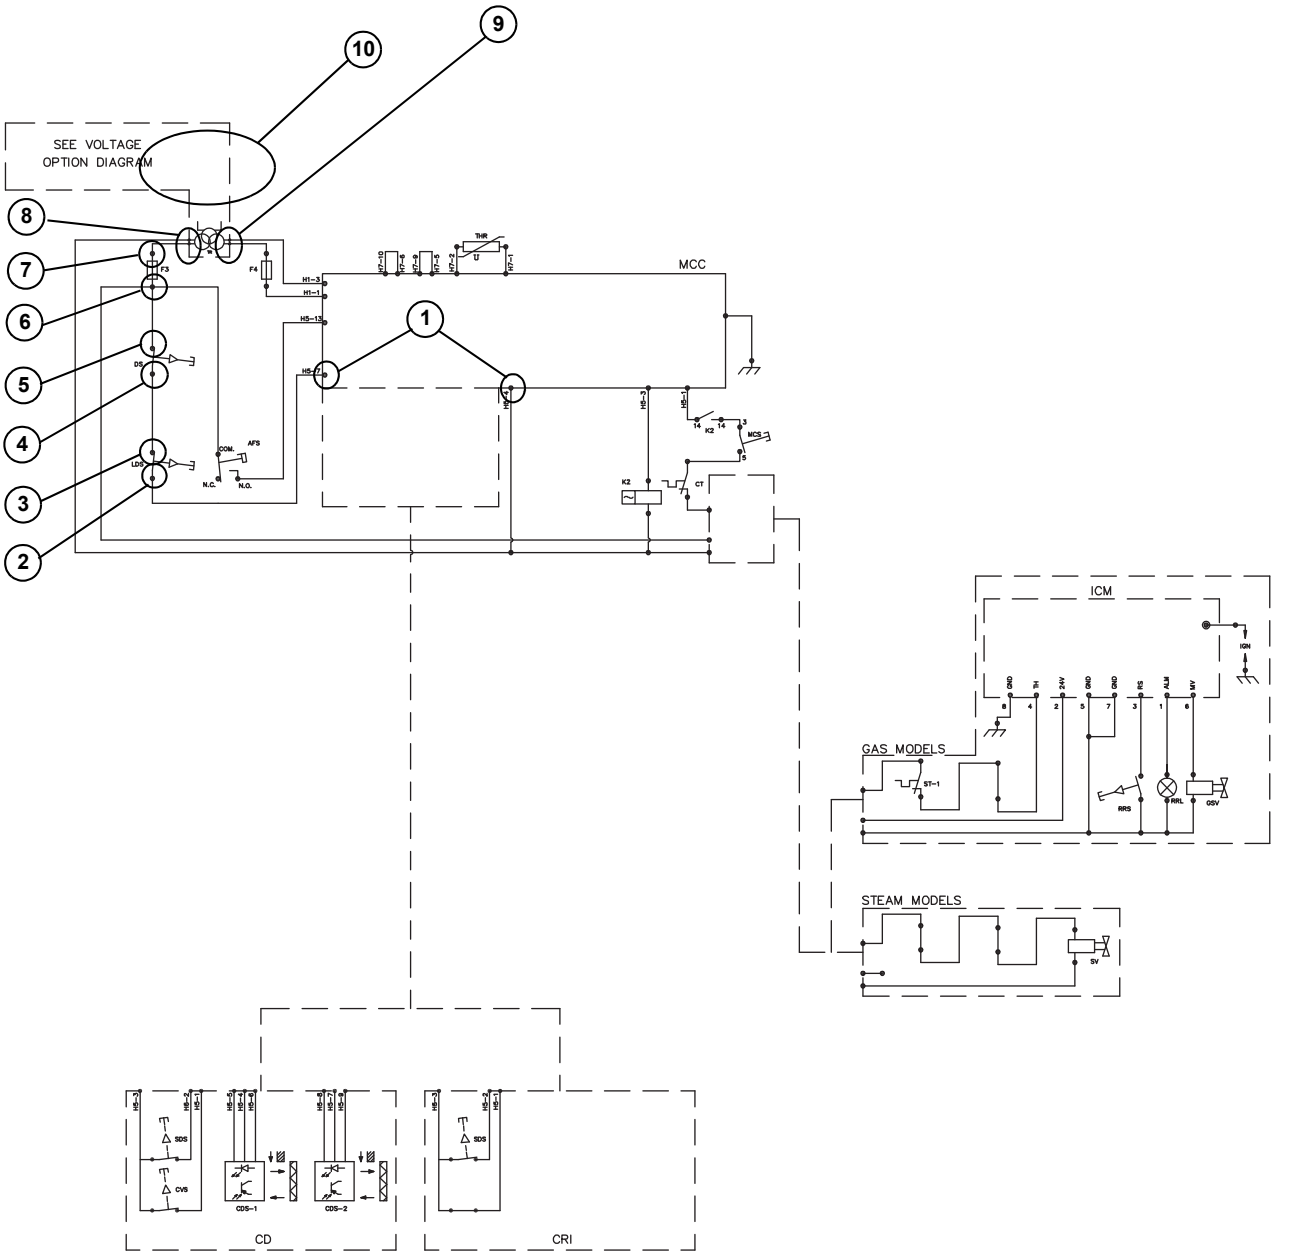

TMB2287S

93. CE Models No Start/Run

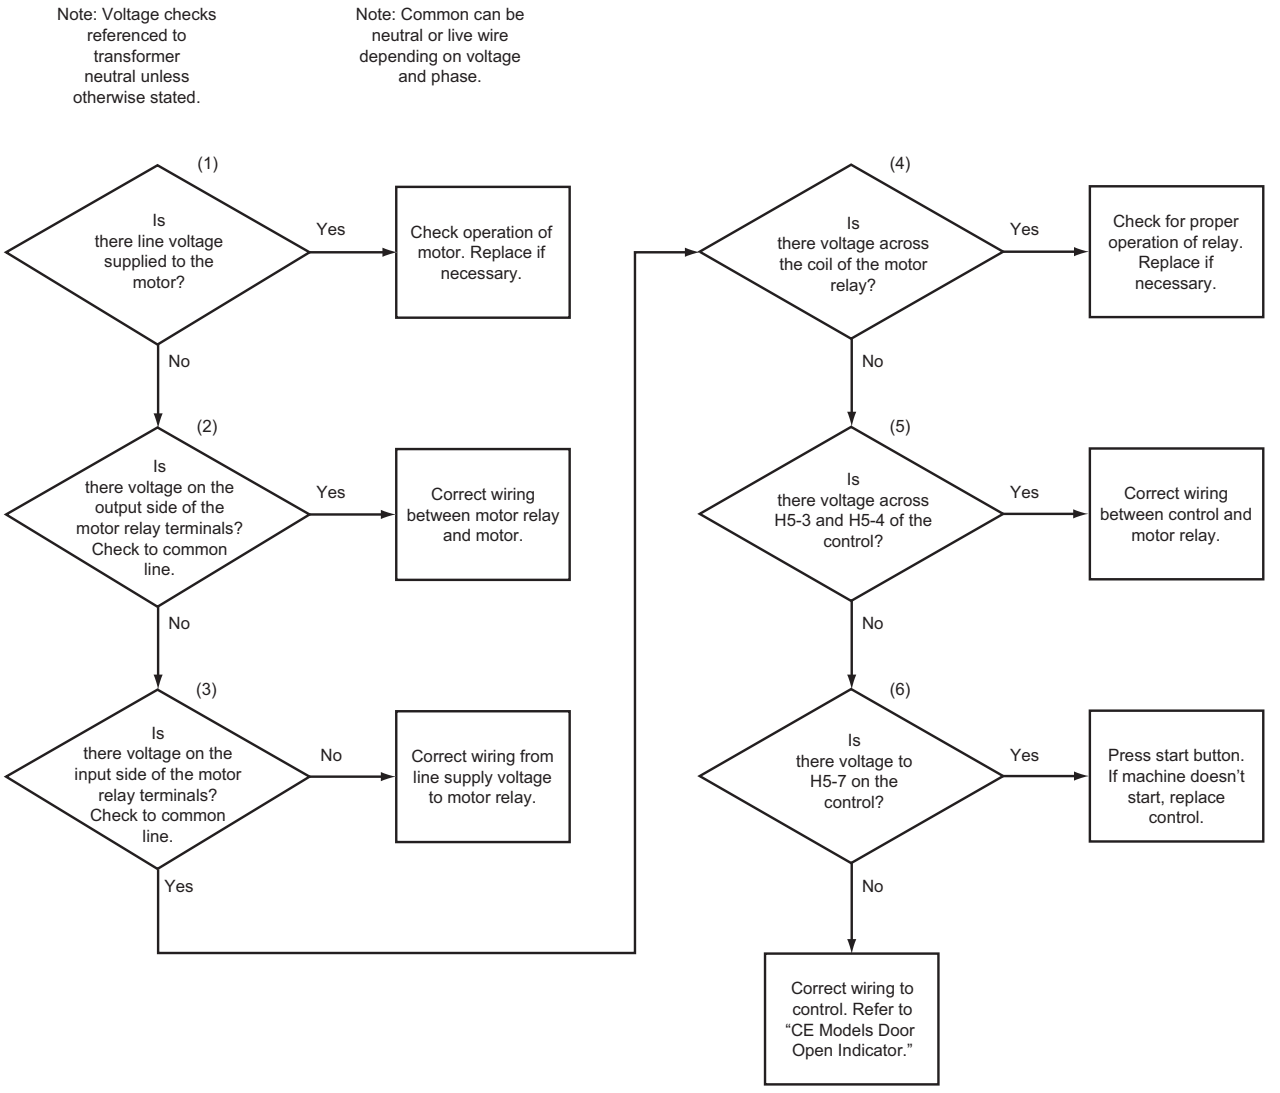
Note: Voltage checks referenced to transformer neutral unless otherwise stated.
Note: Common can be neutral or live wire depending on voltage and phase.
(1)
Is there line voltage supplied to the motor?
Yes
Check operation of motor. Replace if necessary.
No
(2)
Is there voltage on the output side of the motor relay terminals? Check to common line.
Yes
Correct wiring between motor relay and motor.
No
(3)
Is there voltage on the input side of the motor relay terminals? Check to common line.
No
Correct wiring from line supply voltage to motor relay.
Yes
(4)
Is there voltage across the coil of the motor relay?
Yes
Check for proper operation of relay. Replace if necessary.
No
(5)
Is there voltage across H5-3 and H5-4 of the control?
Yes
Correct wiring between control and motor relay.
No
(6)
Is there voltage to H5-7 on the control?
Yes
Press start button. If machine doesn't start, replace control.
No
Correct wiring to control. Refer to "CE Models Door Open Indicator."

TMB2291S

CE Models No Start/Run

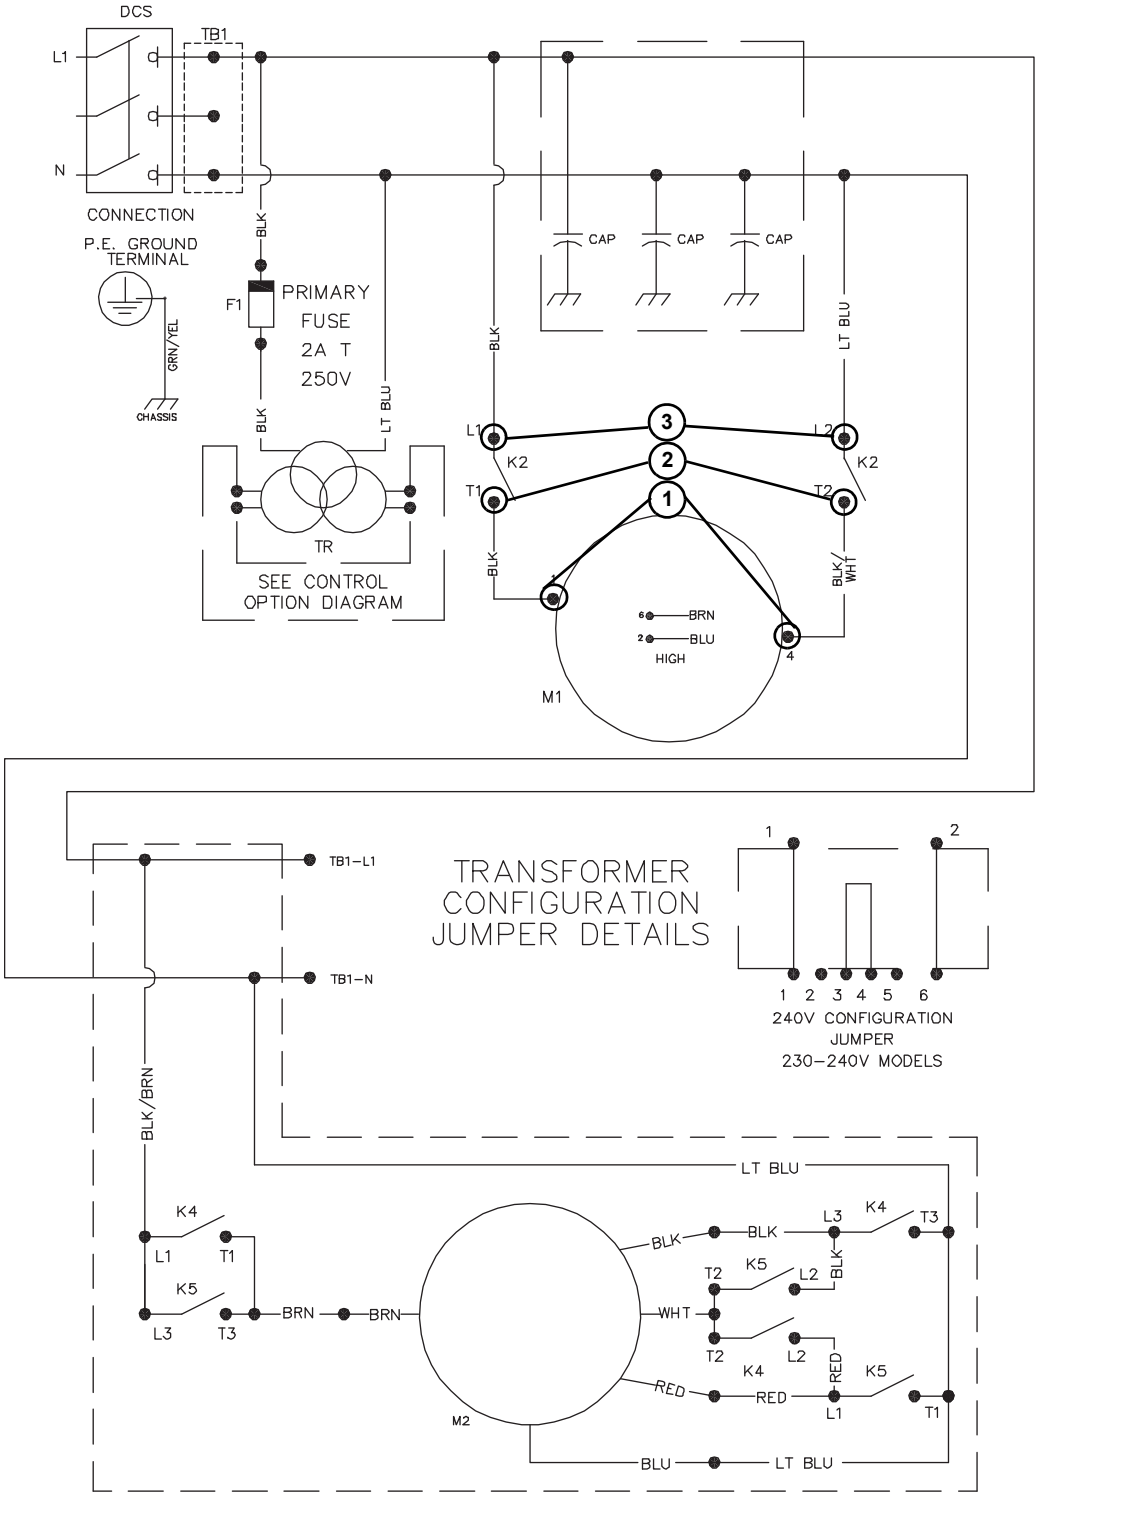

TMB2290S

CE Models No Start/Run

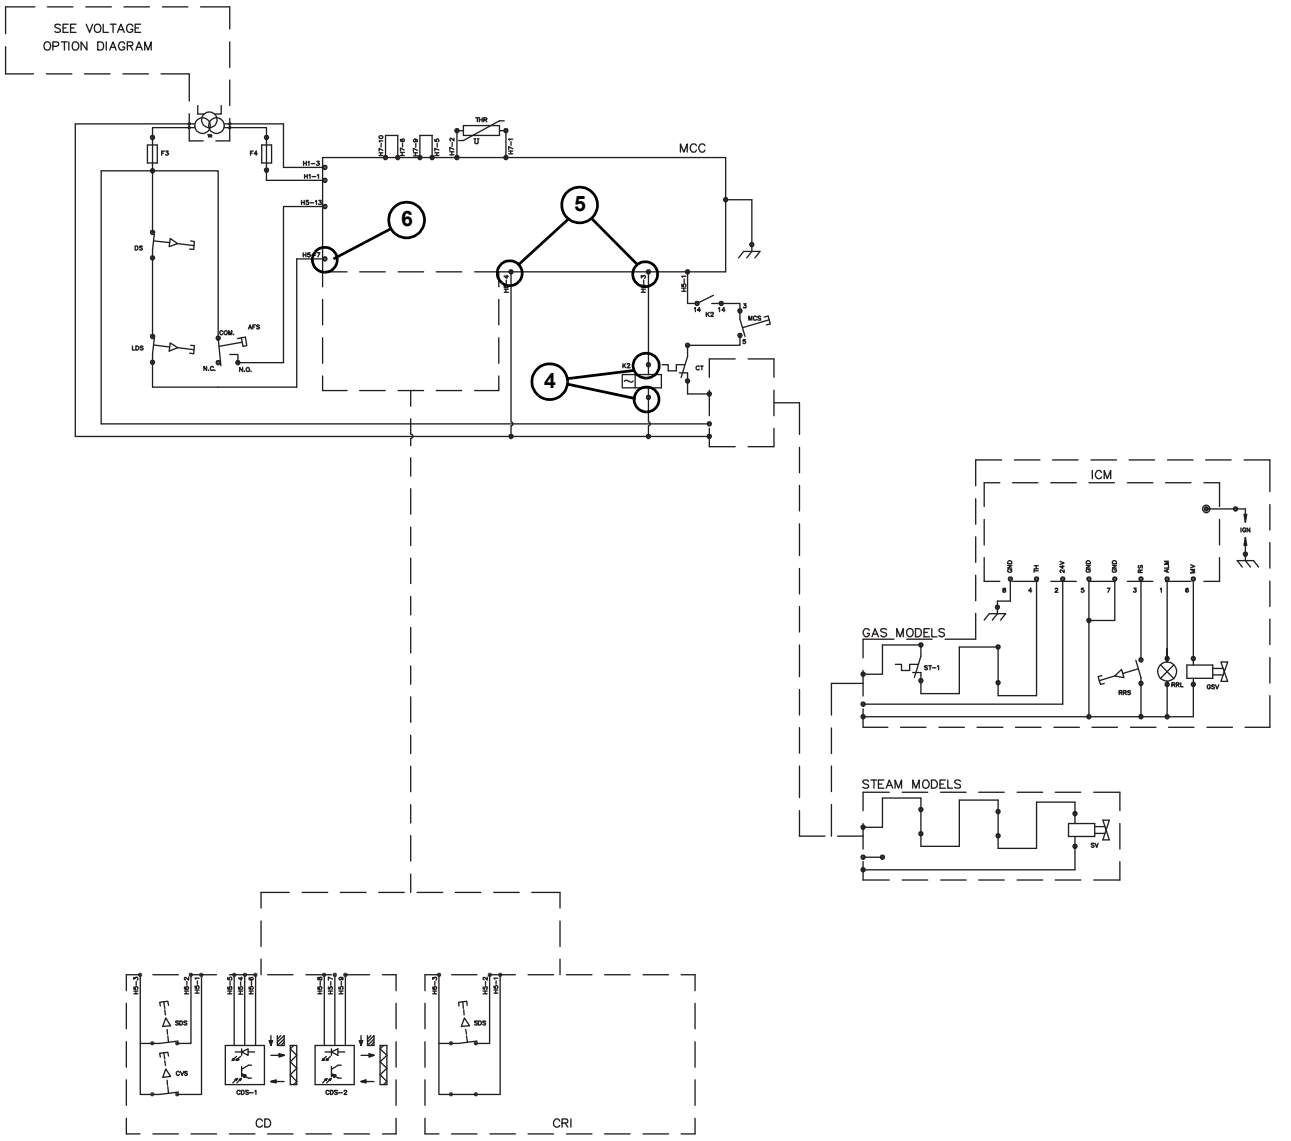

TMB2287S

94. CE Models Will Not Heat – Gas/Steam

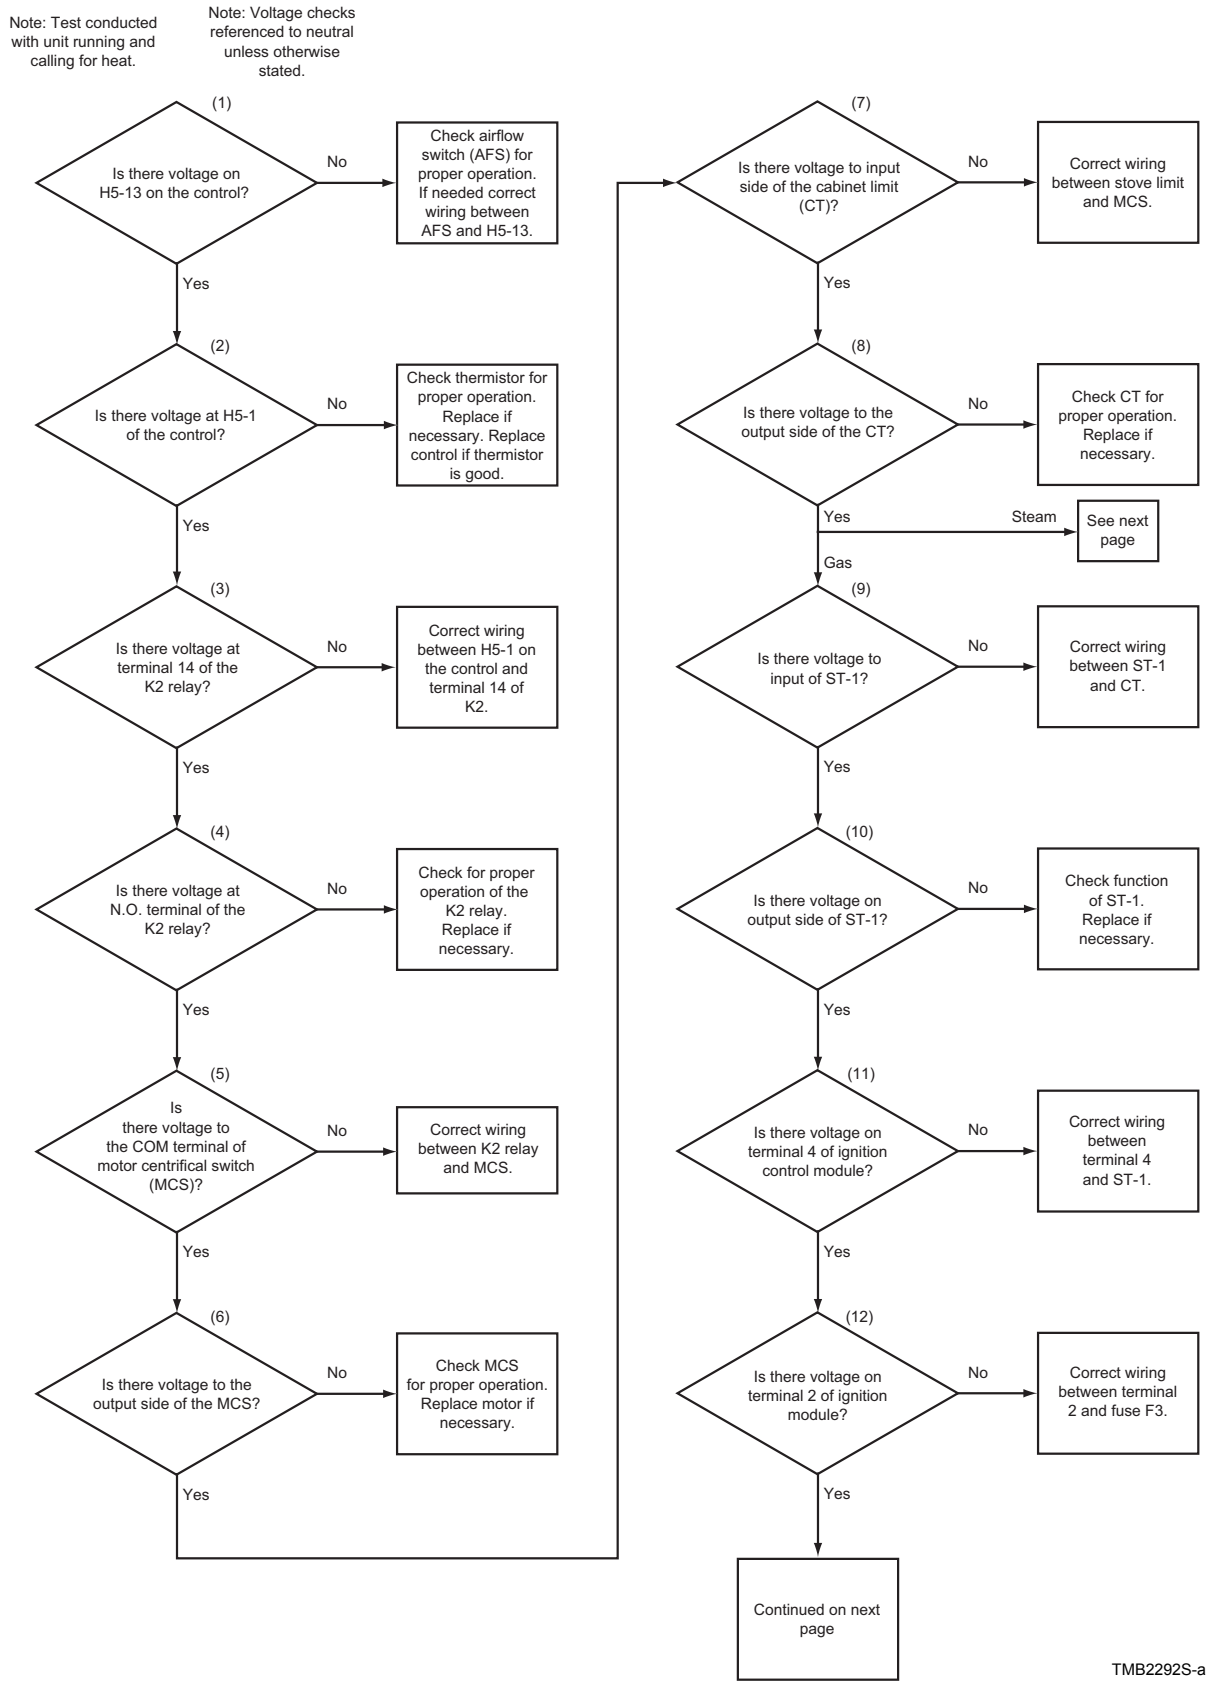
Note: Test conducted with unit running and calling for heat.
Note: Voltage checks referenced to neutral unless otherwise stated.
(1)
Is there voltage on H5-13 on the control?
No
Check airflow switch (AFS) for proper operation. If needed correct wiring between AFS and H5-13.
Yes
(2)
Is there voltage at H5-1 of the control?
No
Check thermistor for proper operation. Replace if necessary. Replace control if thermistor is good.
Yes
(3)
Is there voltage at terminal 14 of the K2 relay?
No
Correct wiring between H5-1 on the control and terminal 14 of K2.
Yes
(4)
Is there voltage at N.O. terminal of the K2 relay?
No
Check for proper operation of the K2 relay. Replace if necessary.
Yes
(5)
Is there voltage to the COM terminal of motor centrifical switch (MCS)?
No
Correct wiring between K2 relay and MCS.
Yes
(6)
Is there voltage to the output side of the MCS?
No
Check MCS for proper operation. Replace motor if necessary.
Yes
(7)
Is there voltage to input side of the cabinet limit (CT)?
No
Correct wiring between stove limit and MCS.
Yes
(8)
Is there voltage to the output side of the CT?
No
Check CT for proper operation. Replace if necessary.
Yes
Steam
See next page
Gas
(9)
Is there voltage to input of ST-1?
No
Correct wiring between ST-1 and CT.
Yes
(10)
Is there voltage on output side of ST-1?
No
Check function of ST-1. Replace if necessary.
Yes
(11)
Is there voltage on terminal 4 of ignition control module?
No
Correct wiring between terminal 4 and ST-1.
Yes
(12)
Is there voltage on terminal 2 of ignition module?
No
Correct wiring between terminal 2 and fuse F3.
Yes
Continued on next page
TMB2292S-a

94. CE Models Will Not Heat – Gas/Steam (continued)

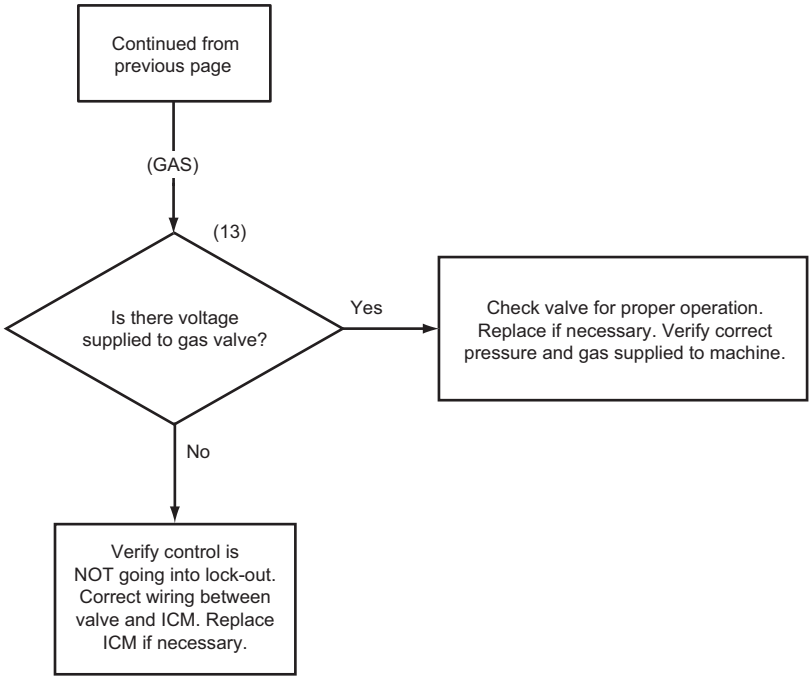
Continued from previous page
(GAS)
(13)
Is there voltage supplied to gas valve?
Yes
Check valve for proper operation. Replace if necessary. Verify correct pressure and gas supplied to machine.
No
Verify control is NOT going into lock-out. Correct wiring between valve and ICM. Replace ICM if necessary.

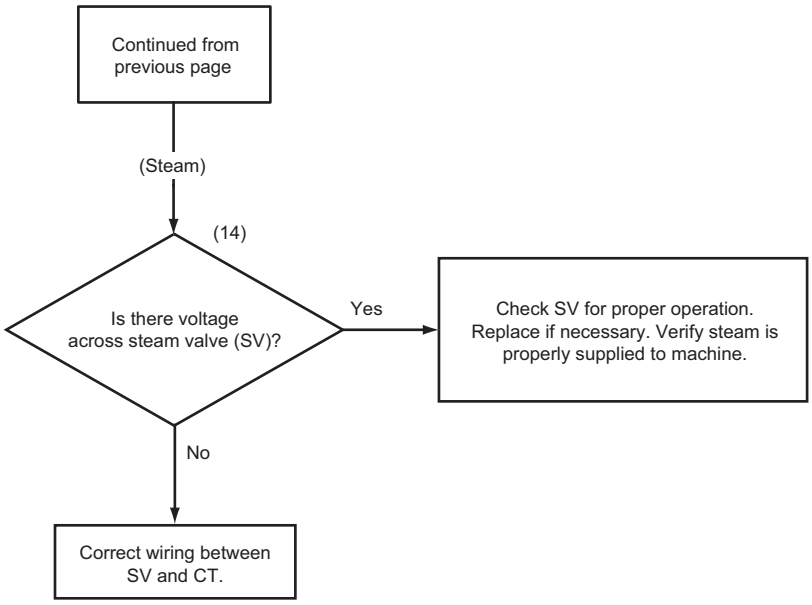
Continued from previous page
(Steam)
(14)
Is there voltage across steam valve (SV)?
Yes
Check SV for proper operation. Replace if necessary. Verify steam is properly supplied to machine.
No
Correct wiring between SV and CT.

TMB2292S-b

Please see following page for wiring diagram information.

CE Models Will Not Heat – Gas/Steam

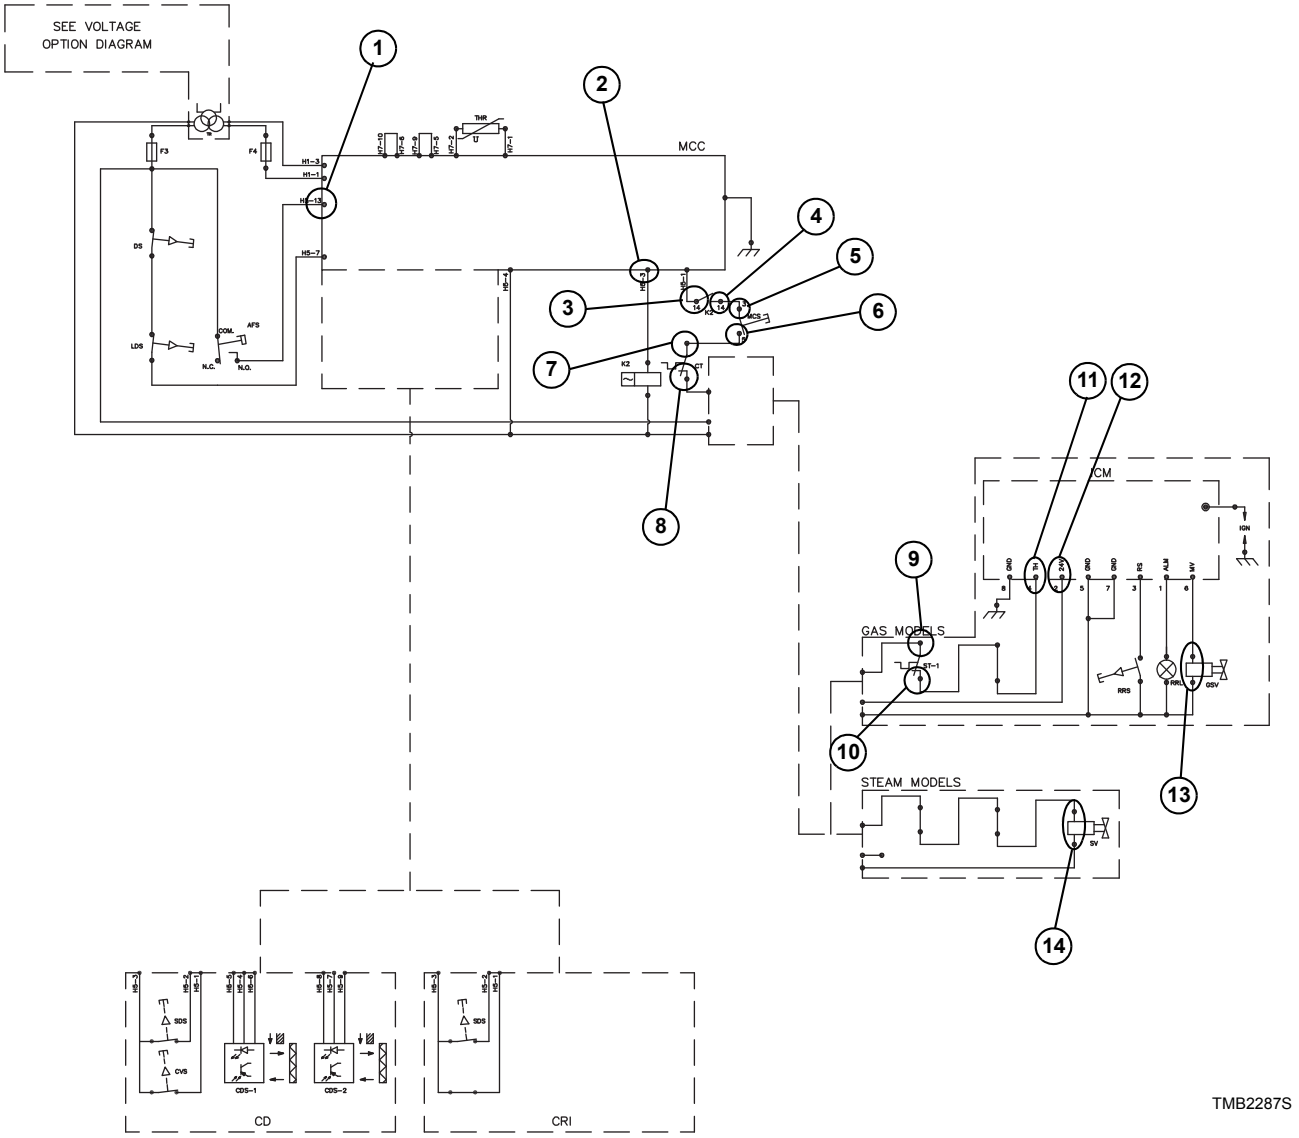

TMB2287S

95. CE Models Will Not Heat – Electric

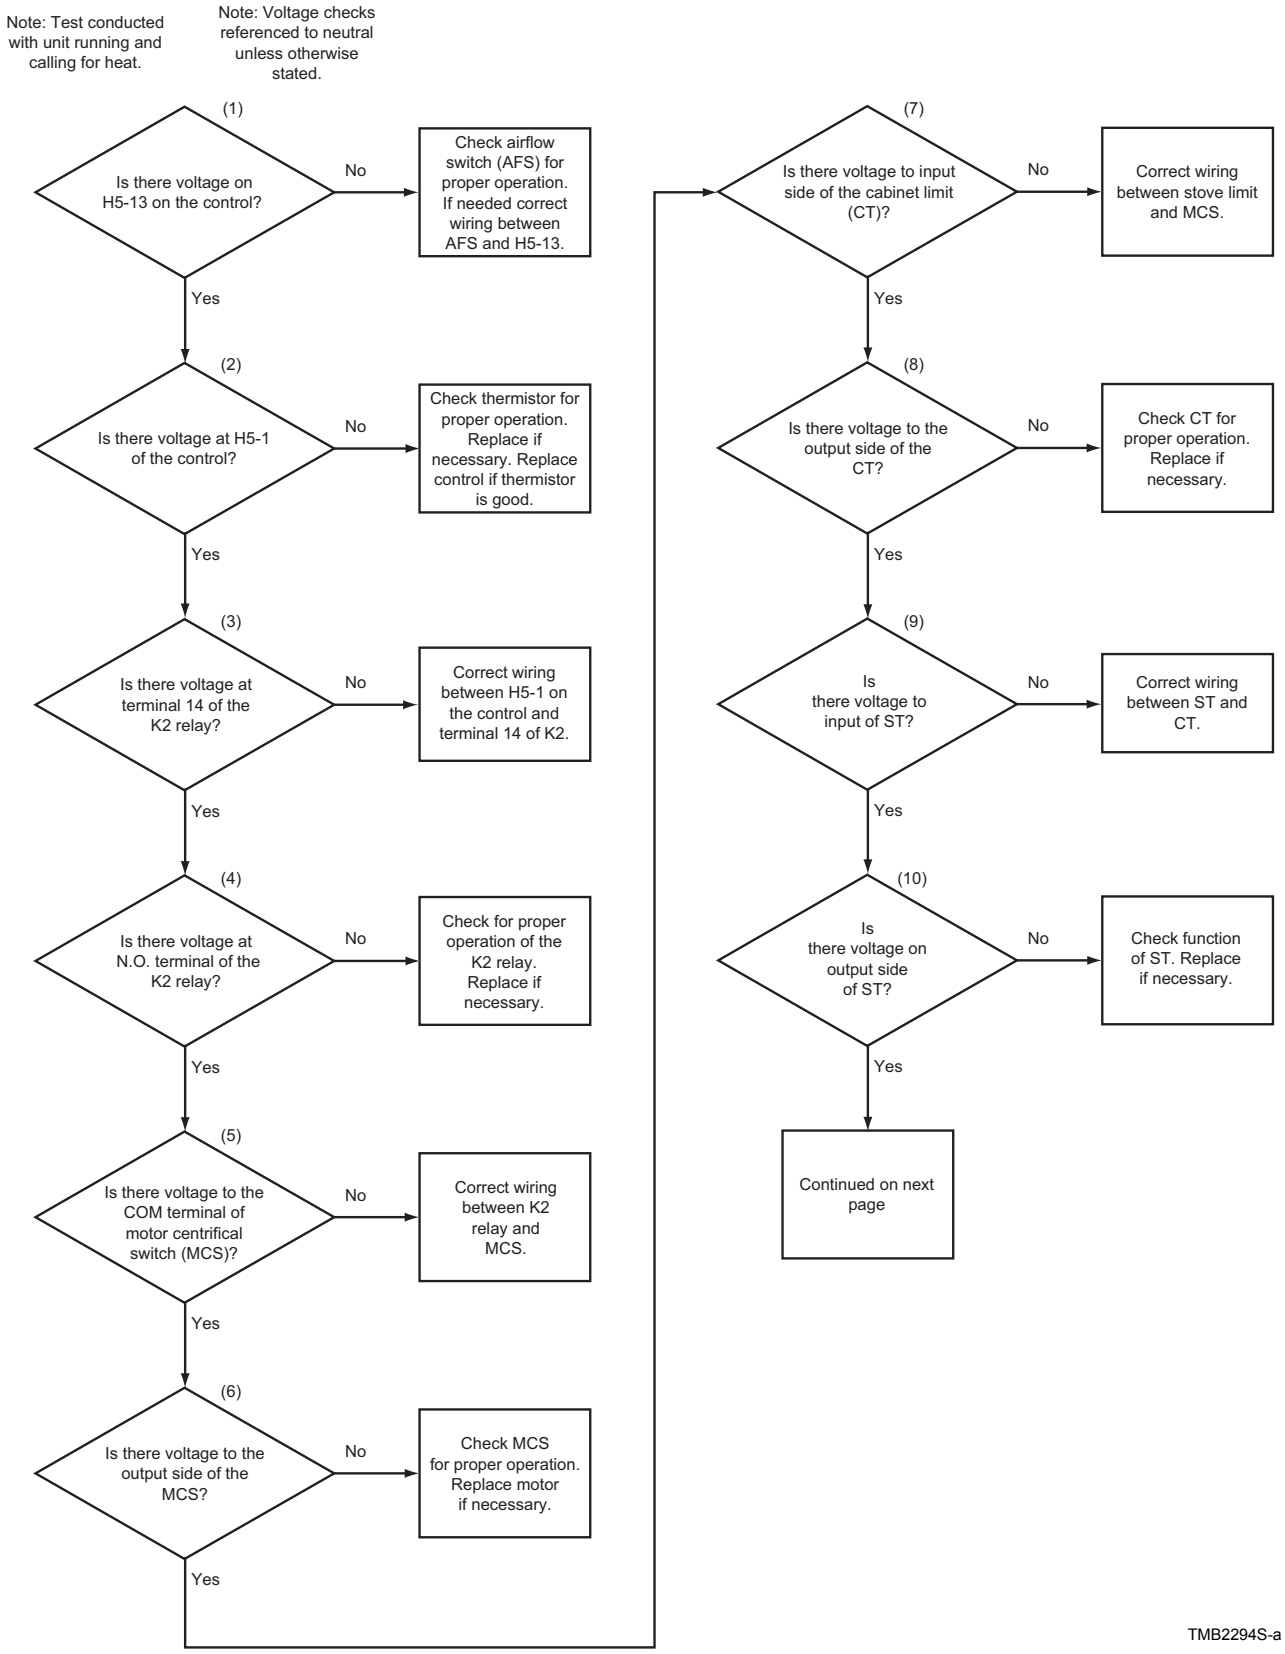
Note: Test conducted with unit running and calling for heat.
Note: Voltage checks referenced to neutral unless otherwise stated.
(1)
Is there voltage on H5-13 on the control?
No
Check airflow switch (AFS) for proper operation. If needed correct wiring between AFS and H5-13.
Yes
(2)
Is there voltage at H5-1 of the control?
No
Check thermistor for proper operation. Replace if necessary. Replace control if thermistor is good.
Yes
(3)
Is there voltage at terminal 14 of the K2 relay?
No
Correct wiring between H5-1 on the control and terminal 14 of K2.
Yes
(4)
Is there voltage at N.O. terminal of the K2 relay?
No
Check for proper operation of the K2 relay. Replace if necessary.
Yes
(5)
Is there voltage to the COM terminal of motor centrifical switch (MCS)?
No
Correct wiring between K2 relay and MCS.
Yes
(6)
Is there voltage to the output side of the MCS?
No
Check MCS for proper operation. Replace motor if necessary.
Yes
(7)
Is there voltage to input side of the cabinet limit (CT)?
No
Correct wiring between stove limit and MCS.
Yes
(8)
Is there voltage to the output side of the CT?
No
Check CT for proper operation. Replace if necessary.
Yes
(9)
Is there voltage to input of ST?
No
Correct wiring between ST and CT.
Yes
(10)
Is there voltage on output side of ST?
No
Check function of ST. Replace if necessary.
Yes
Continued on next page
TMB2294S-a

95. CE Models Will Not Heat – Electric (continued)

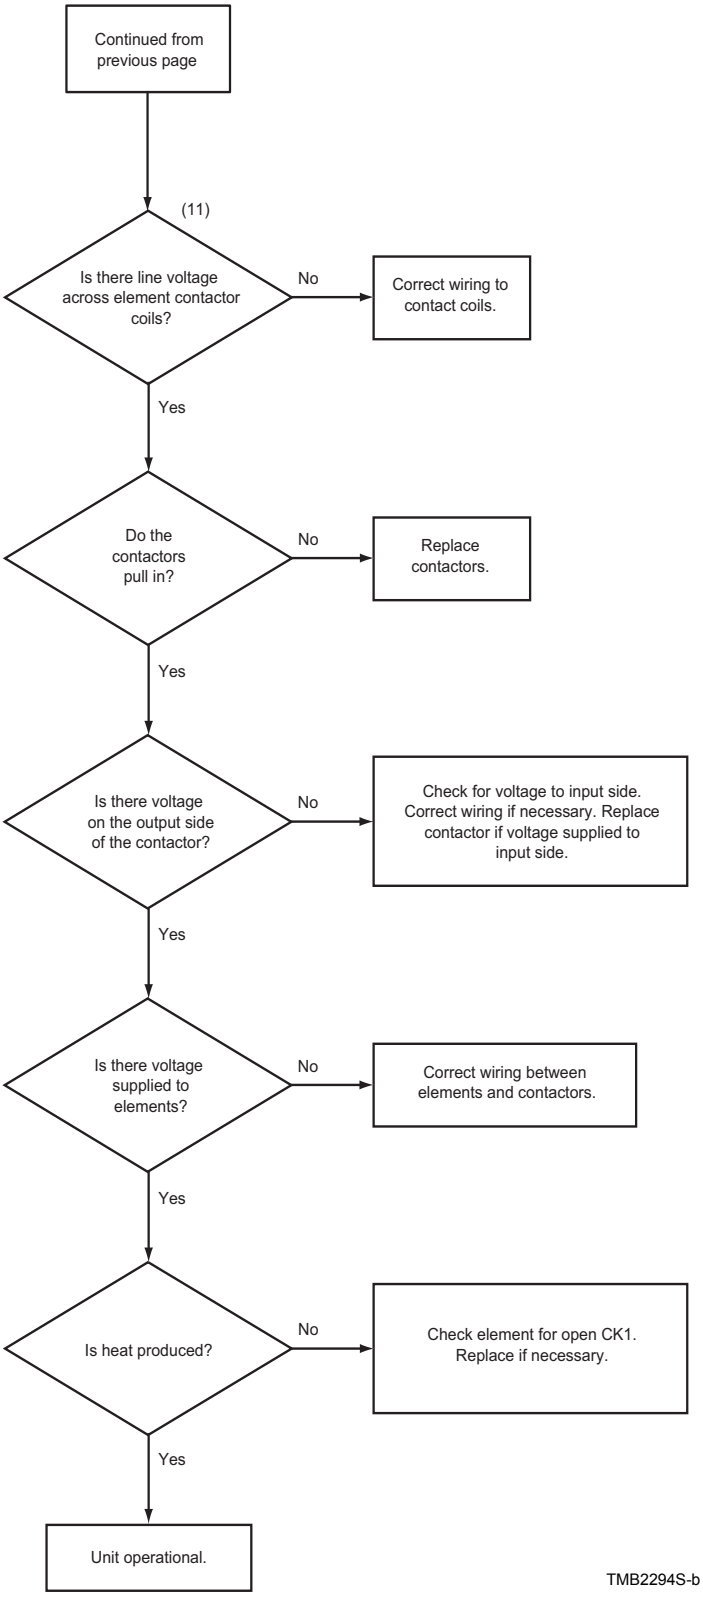

CE Models Will Not Heat – Electric

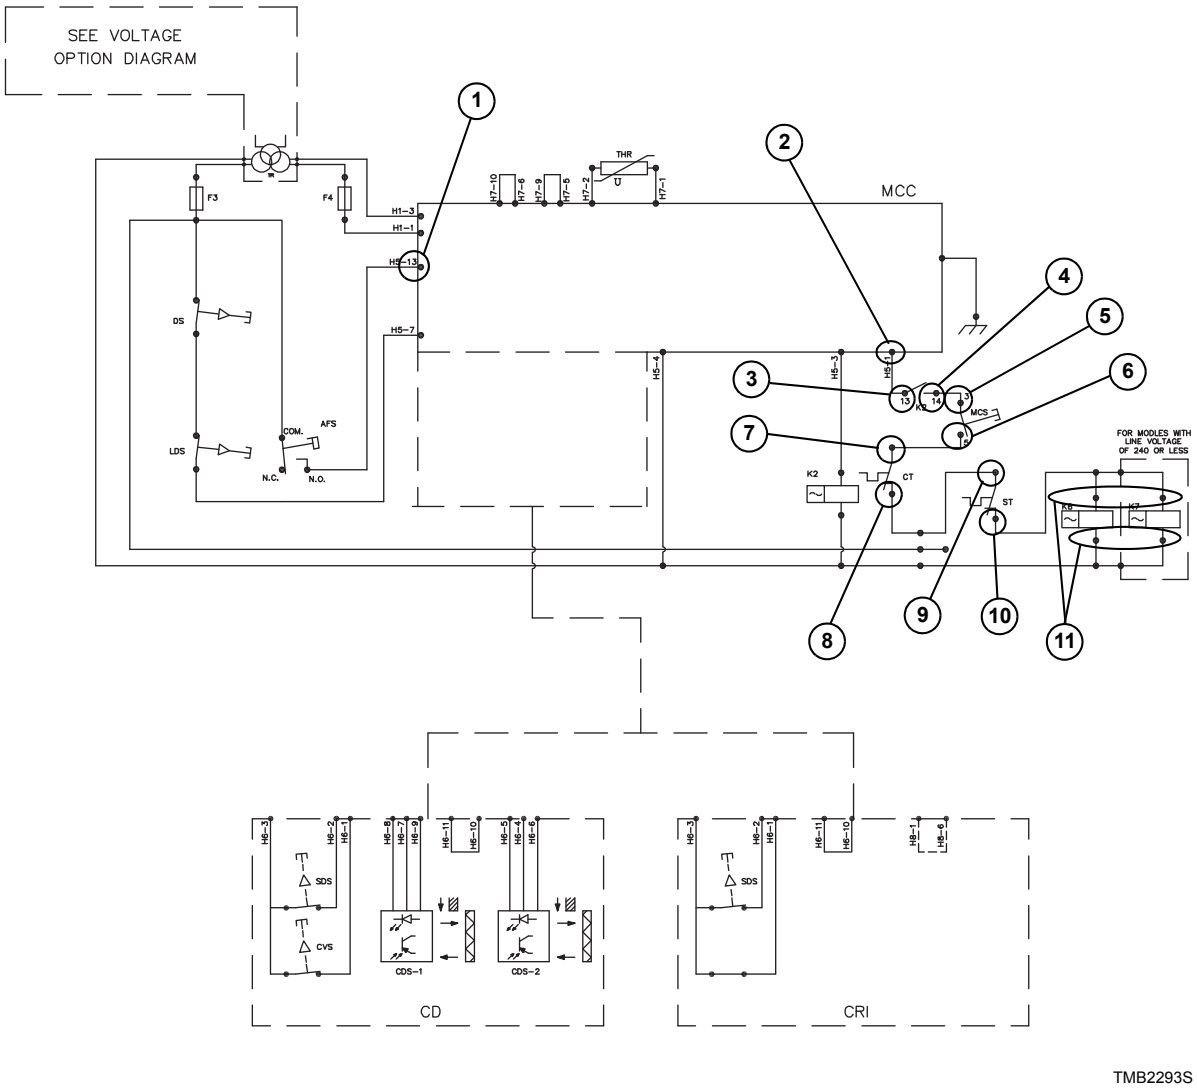

TMB2293S

Section 11
LED OPL and UniLinc Troubleshooting
Models with EO, RE, RU and UO Control Suffixes

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:
- **Disconnect electric power to the tumble dryer before servicing.**
- **Close gas shut-off valve to gas tumble dryer before servicing.**
- **Close steam valve to steam tumble dryer before servicing.**
- **Never start the tumble dryer with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the tumble dryer is properly grounded.**

W002R1

NOTE: The UniLinc's Inputs and Outputs Menu can be used to check the current status of inputs as well as control the state of any output.

Both UniLinc and LED OPL Controls contain a comprehensive test cycle that can be used to verify machine configuration and functionality.

Diagnostic LEDs

Before troubleshooting the following errors, verify that the front-end control is trying to turn the output on by checking for the corresponding red diagnostic LED on the Input/Output (I/O) Board. Diagnostic LEDs can be found for the following outputs:

- Forward Motor
- Reverse Motor
- Fan Motor
- Damper Motor
- External Alarm
- Heater

In addition, the I/O Board has a LED labeled "+5VDC" that indicates whether the I/O Board is powered. When lit, the I/O Board and front-end control should both be powered. If the LED does not light and both are powered, verify that the loading door and lint door are closed, and, if checking heater-related errors, that the heat interlock chain is closed (AirFlow Switch, Fan Contactor, Fan Centrifugal Switch, Cabinet Limit and Stove Limit). If the LED still does not light, check the connection between the front-end control and the I/O Board. If they are connected properly and voltage is present at the pin corresponding to the error with the ground pin on the same connector, the I/O Board must be replaced. If voltage is not present, the front-end control must be replaced.

96. No Fan Motor Rotation

NOTE: All mechanical checks should be performed prior to starting the electrical checks. Ensure the belt(s), basket, idler and pulleys are rotating freely.

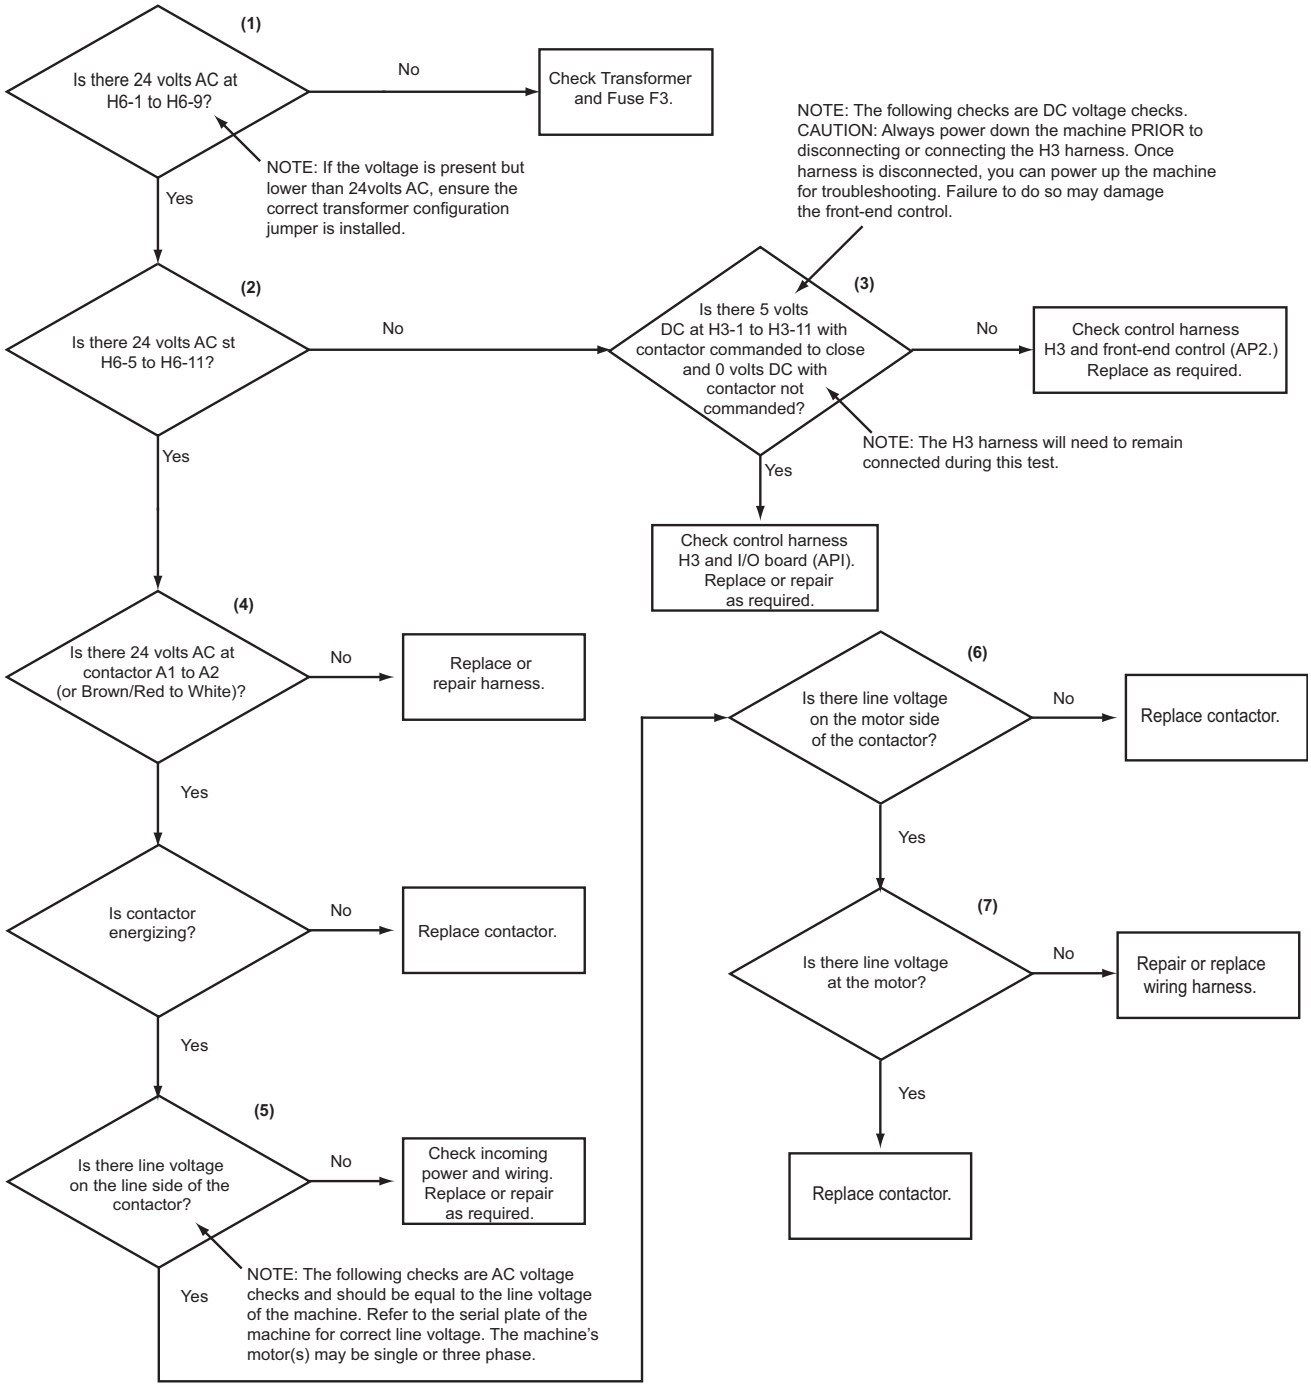
(1)
Is there 24 volts AC at H6-1 to H6-9?
No
Check Transformer and Fuse F3.
NOTE: If the voltage is present but lower than 24volts AC, ensure the correct transformer configuration jumper is installed.
Yes
(2)
Is there 24 volts AC st H6-5 to H6-11?
No
NOTE: The following checks are DC voltage checks. CAUTION: Always power down the machine PRIOR to disconnecting or connecting the H3 harness. Once harness is disconnected, you can power up the machine for troubleshooting. Failure to do so may damage the front-end control.
(3)
Is there 5 volts DC at H3-1 to H3-11 with contactor commanded to close and 0 volts DC with contactor not commanded?
No
Check control harness H3 and front-end control (AP2.) Replace as required.
NOTE: The H3 harness will need to remain connected during this test.
Yes
Check control harness H3 and I/O board (API). Replace or repair as required.
Yes
(4)
Is there 24 volts AC at contactor A1 to A2 (or Brown/Red to White)?
No
Replace or repair harness.
Yes
Is contactor energizing?
No
Replace contactor.
Yes
(5)
Is there line voltage on the line side of the contactor?
No
Check incoming power and wiring. Replace or repair as required.
NOTE: The following checks are AC voltage checks and should be equal to the line voltage of the machine. Refer to the serial plate of the machine for correct line voltage. The machine's motor(s) may be single or three phase.
Yes
(6)
Is there line voltage on the motor side of the contactor?
No
Replace contactor.
Yes
(7)
Is there line voltage at the motor?
No
Repair or replace wiring harness.
Yes
Replace contactor.

TMB2374S

No Fan Motor Rotation (Drawing 1 of 2)

NOTE: The door and lint door must be closed for voltage to be present at the fan.

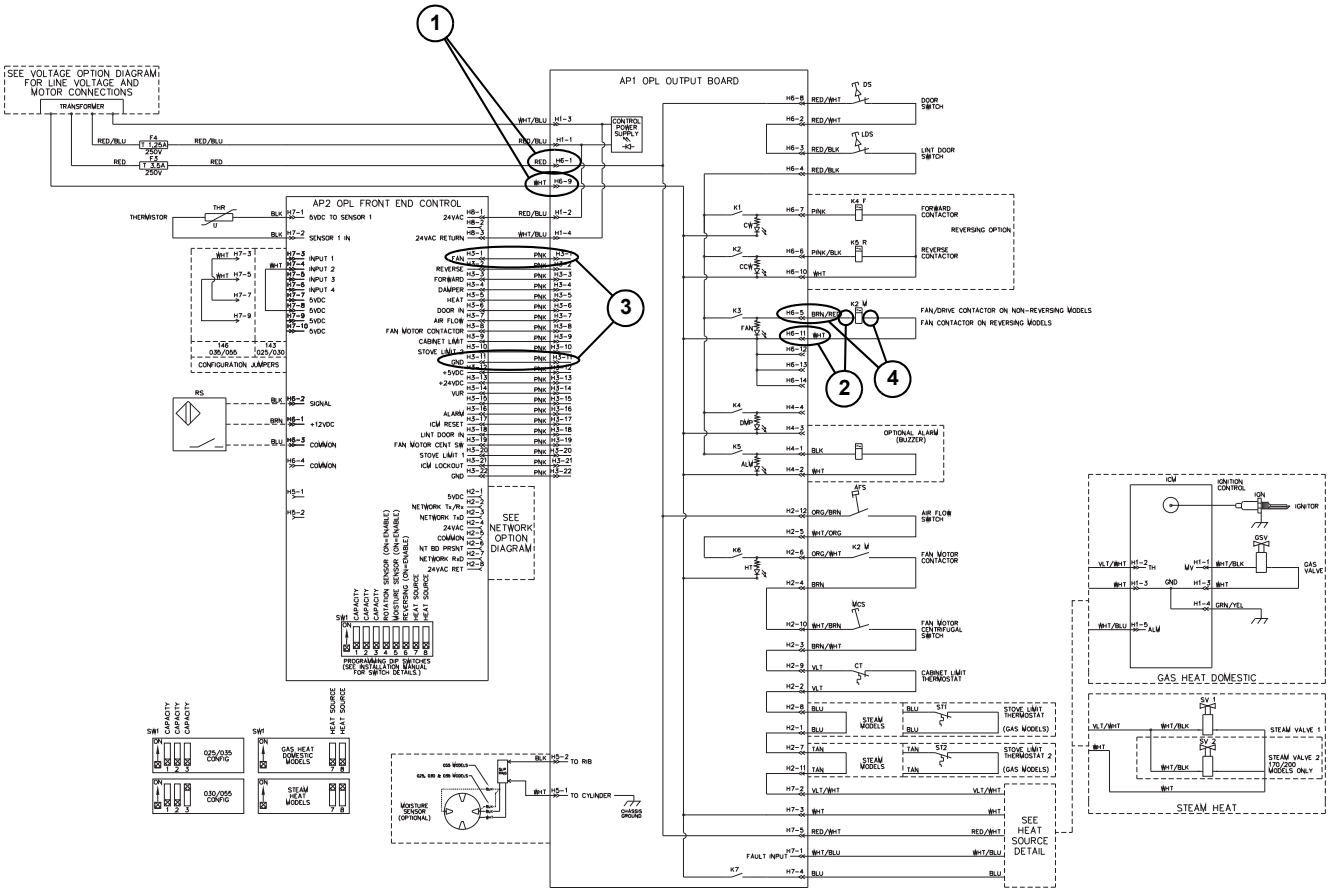

TMB2383S

No Fan Motor Rotation (Drawing 2 of 2)

NOTE: The door and lint door must be closed for voltage to be present at the fan.

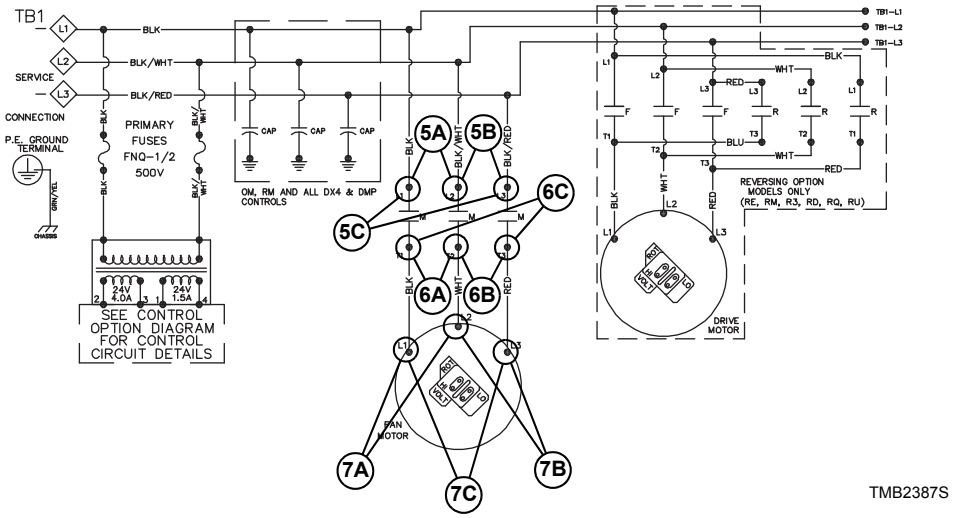

97. No Drive Motor Rotation

NOTE: This is for machines with the reversing option only. Each step has a F (Forward) or R (Reverse) representing the direction of rotation. Ensure the cycle is programmed for either reversing or non-reversing.

NOTE: All mechanical checks should be performed prior to starting the electrical checks. Ensure the belt(s), basket, idler and pulleys are rotating freely.

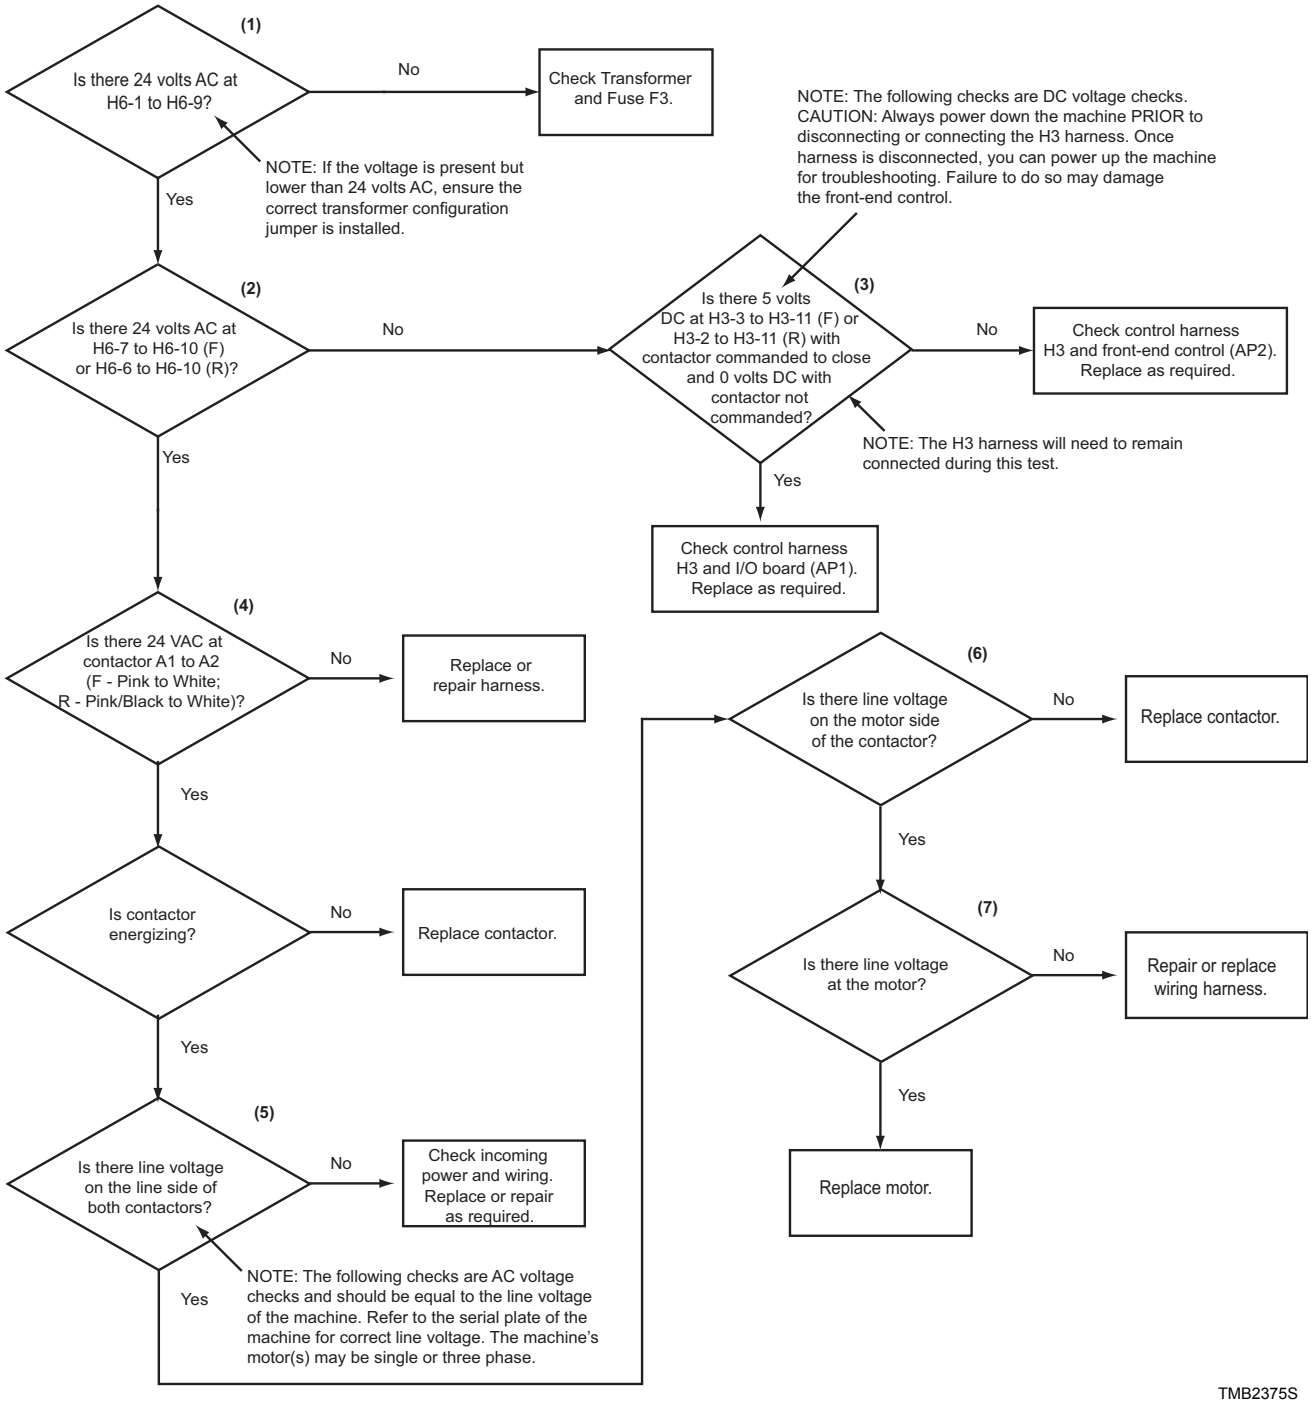
(1)
Is there 24 volts AC at H6-1 to H6-9?
No
Check Transformer and Fuse F3.
NOTE: If the voltage is present but lower than 24 volts AC, ensure the correct transformer configuration jumper is installed.
Yes
(2)
Is there 24 volts AC at H6-7 to H6-10 (F) or H6-6 to H6-10 (R)?
No
NOTE: The following checks are DC voltage checks. CAUTION: Always power down the machine PRIOR to disconnecting or connecting the H3 harness. Once harness is disconnected, you can power up the machine for troubleshooting. Failure to do so may damage the front-end control.
(3)
Is there 5 volts DC at H3-3 to H3-11 (F) or H3-2 to H3-11 (R) with contactor commanded to close and 0 volts DC with contactor not commanded?
No
Check control harness H3 and front-end control (AP2). Replace as required.
NOTE: The H3 harness will need to remain connected during this test.
Yes
Check control harness H3 and I/O board (AP1). Replace as required.
Yes
(4)
Is there 24 VAC at contactor A1 to A2 (F - Pink to White; R - Pink/Black to White)?
No
Replace or repair harness.
Yes
Is contactor energizing?
No
Replace contactor.
Yes
(5)
Is there line voltage on the line side of both contactors?
No
Check incoming power and wiring. Replace or repair as required.
Yes
NOTE: The following checks are AC voltage checks and should be equal to the line voltage of the machine. Refer to the serial plate of the machine for correct line voltage. The machine's motor(s) may be single or three phase.
(6)
Is there line voltage on the motor side of the contactor?
No
Replace contactor.
Yes
(7)
Is there line voltage at the motor?
No
Repair or replace wiring harness.
Yes
Replace motor.

TMB2375S

No Drive Motor Rotation (Drawing 1 of 2)

NOTE: The door and lint door must be closed for voltage to be present at the forward and reverse outputs.

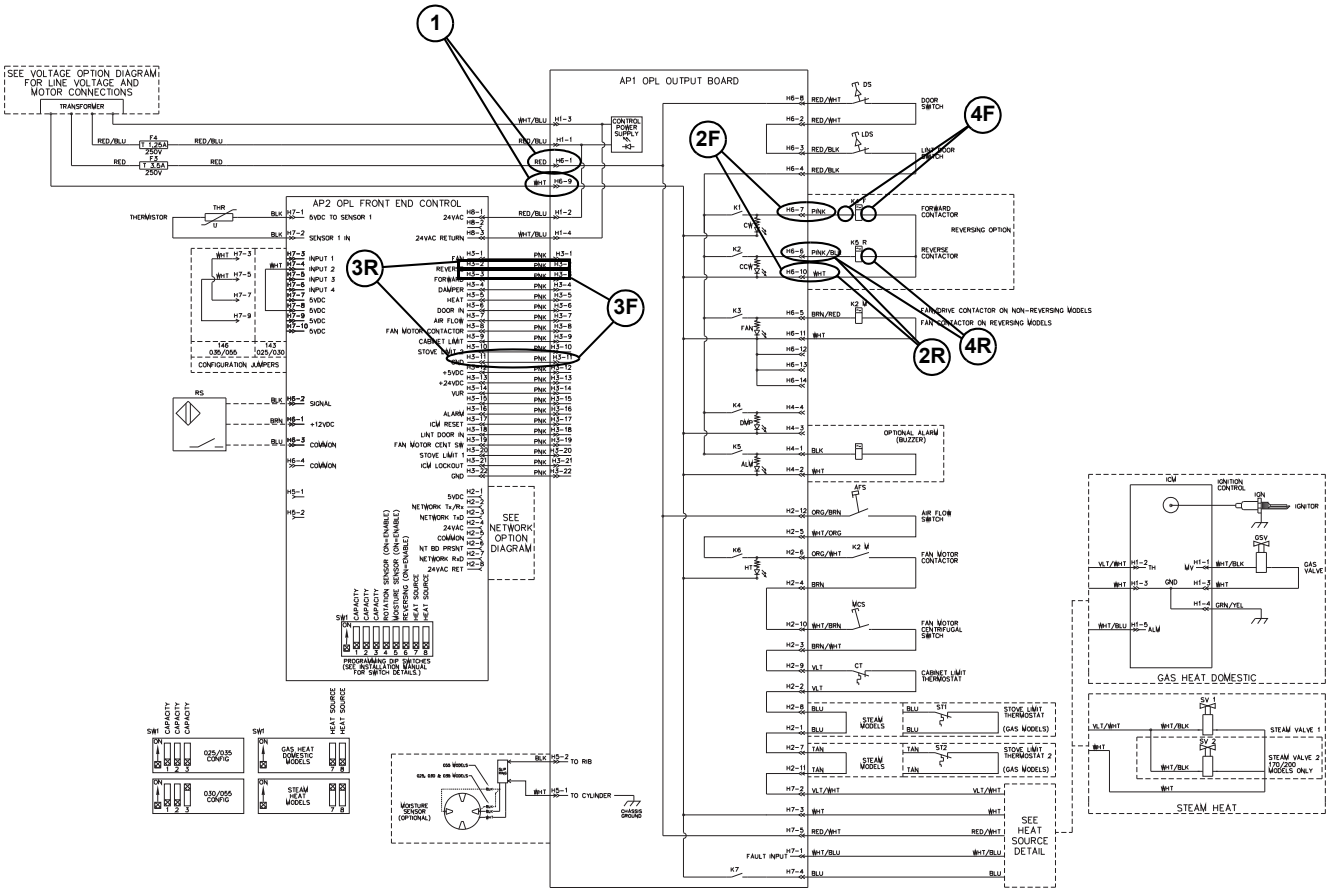

TMB2383S

No Drive Motor Rotation (Drawing 2 of 2)

NOTE: The door and lint door must be closed for voltage to be present at the forward and reverse outputs.

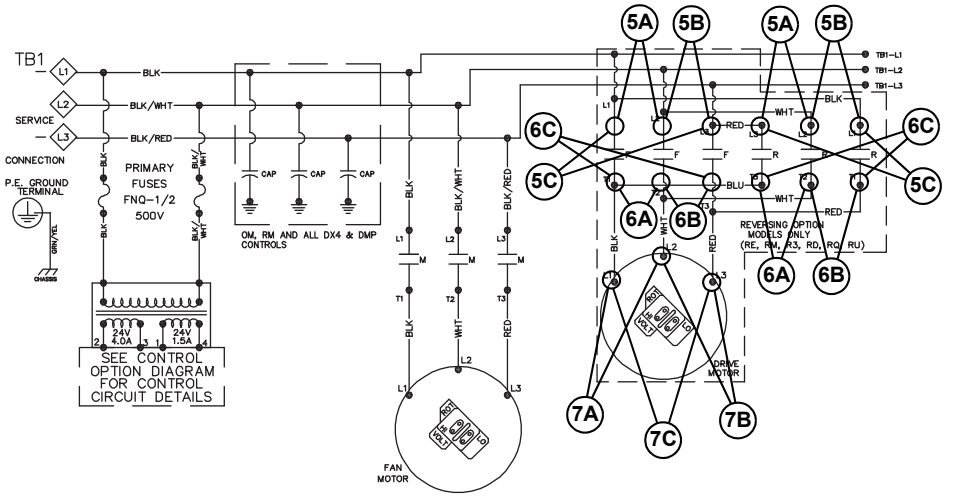

TMB2387S

98. Stove and Cabinet Limit Errors

UniLinc Error Display: Stove and Cabinet Limit Errors
LED OPL Error Display: E Cab
E SL
E SL2

NOTE: The machine must currently be trying to heat with airflow switch closed, fan motor contactor engaged and fan motor centrifugal switch closed before checking the status of the cabinet, stove and stove 2 limits.

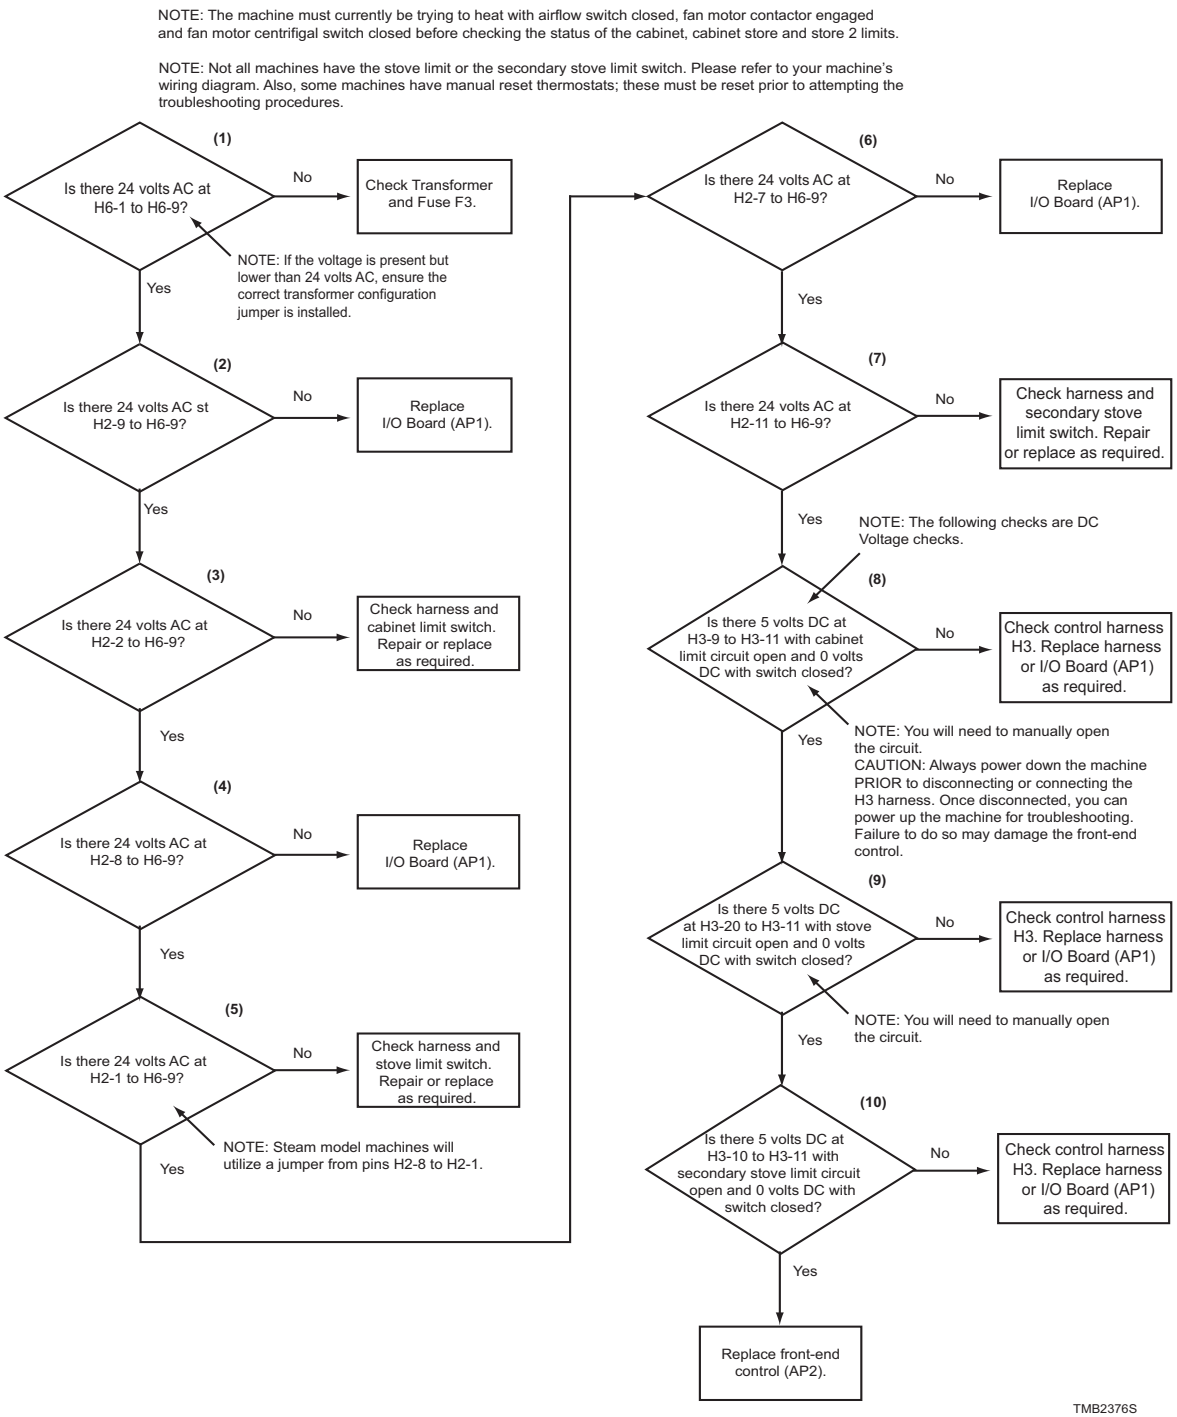
NOTE: The machine must currently be trying to heat with airflow switch closed, fan motor contactor engaged and fan motor centrifigal switch closed before checking the status of the cabinet, cabinet store and store 2 limits.
NOTE: Not all machines have the stove limit or the secondary stove limit switch. Please refer to your machine's wiring diagram. Also, some machines have manual reset thermostats; these must be reset prior to attempting the troubleshooting procedures.
(1)
Is there 24 volts AC at H6-1 to H6-9?
No
Check Transformer and Fuse F3.
NOTE: If the voltage is present but lower than 24 volts AC, ensure the correct transformer configuration jumper is installed.
Yes
(2)
Is there 24 volts AC st H2-9 to H6-9?
No
Replace I/O Board (AP1).
Yes
(3)
Is there 24 volts AC at H2-2 to H6-9?
No
Check harness and cabinet limit switch. Repair or replace as required.
Yes
(4)
Is there 24 volts AC at H2-8 to H6-9?
No
Replace I/O Board (AP1).
Yes
(5)
Is there 24 volts AC at H2-1 to H6-9?
No
Check harness and stove limit switch. Repair or replace as required.
NOTE: Steam model machines will utilize a jumper from pins H2-8 to H2-1.
Yes
(6)
Is there 24 volts AC at H2-7 to H6-9?
No
Replace I/O Board (AP1).
Yes
(7)
Is there 24 volts AC at H2-11 to H6-9?
No
Check harness and secondary stove limit switch. Repair or replace as required.
Yes
NOTE: The following checks are DC Voltage checks.
(8)
Is there 5 volts DC at H3-9 to H3-11 with cabinet limit circuit open and 0 volts DC with switch closed?
No
Check control harness H3. Replace harness or I/O Board (AP1) as required.
Yes
NOTE: You will need to manually open the circuit.
CAUTION: Always power down the machine PRIOR to disconnecting or connecting the H3 harness. Once disconnected, you can power up the machine for troubleshooting. Failure to do so may damage the front-end control.
(9)
Is there 5 volts DC at H3-20 to H3-11 with stove limit circuit open and 0 volts DC with switch closed?
No
Check control harness H3. Replace harness or I/O Board (AP1) as required.
Yes
NOTE: You will need to manually open the circuit.
(10)
Is there 5 volts DC at H3-10 to H3-11 with secondary stove limit circuit open and 0 volts DC with switch closed?
No
Check control harness H3. Replace harness or I/O Board (AP1) as required.
Yes
Replace front-end control (AP2).
TMB2376S

Stove Cabinet Limit Errors

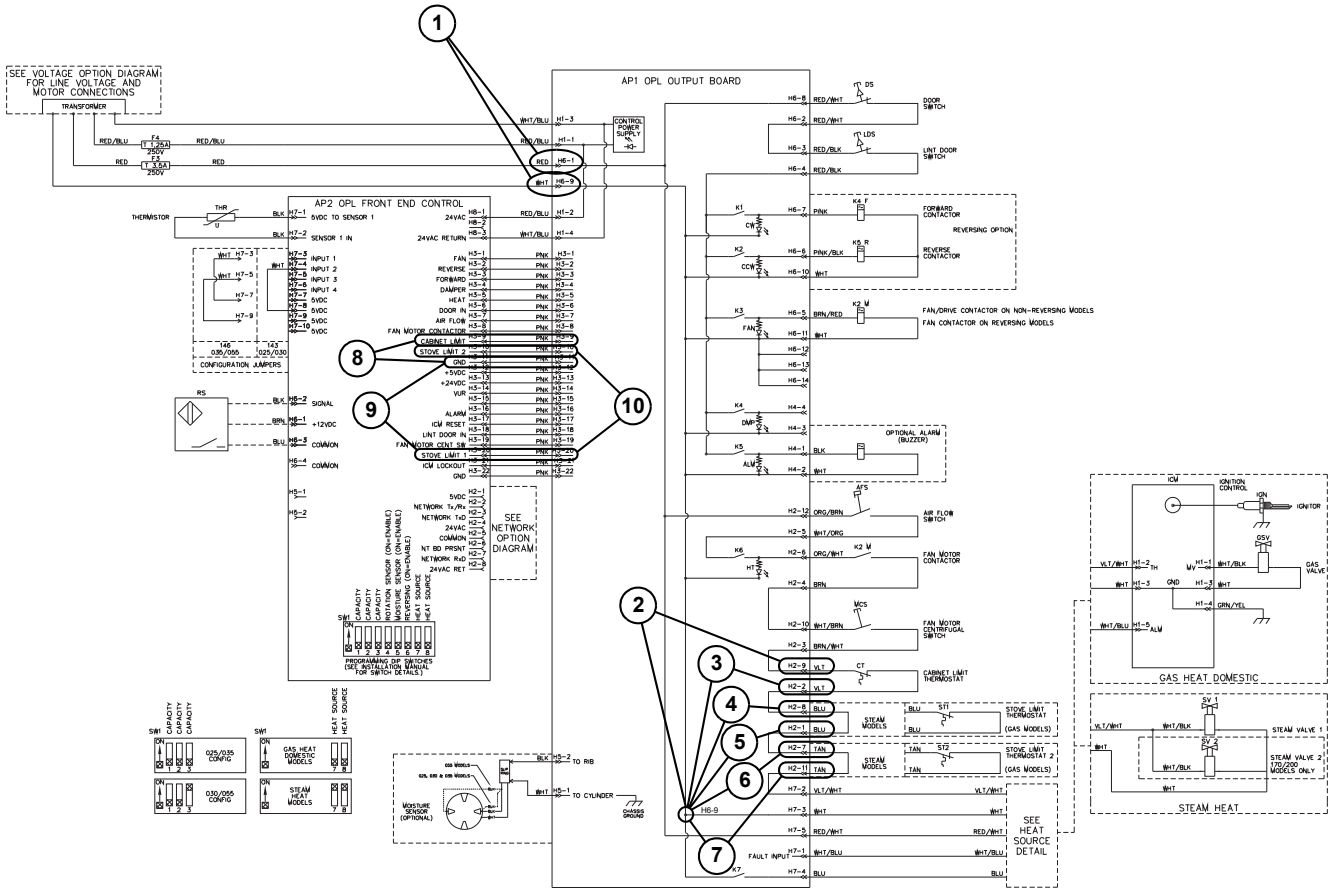

TMB2383S

99. No Display

NOTE: On the UniLinc LCD-equipped machines, verify the contrast is set correctly prior to troubleshooting.

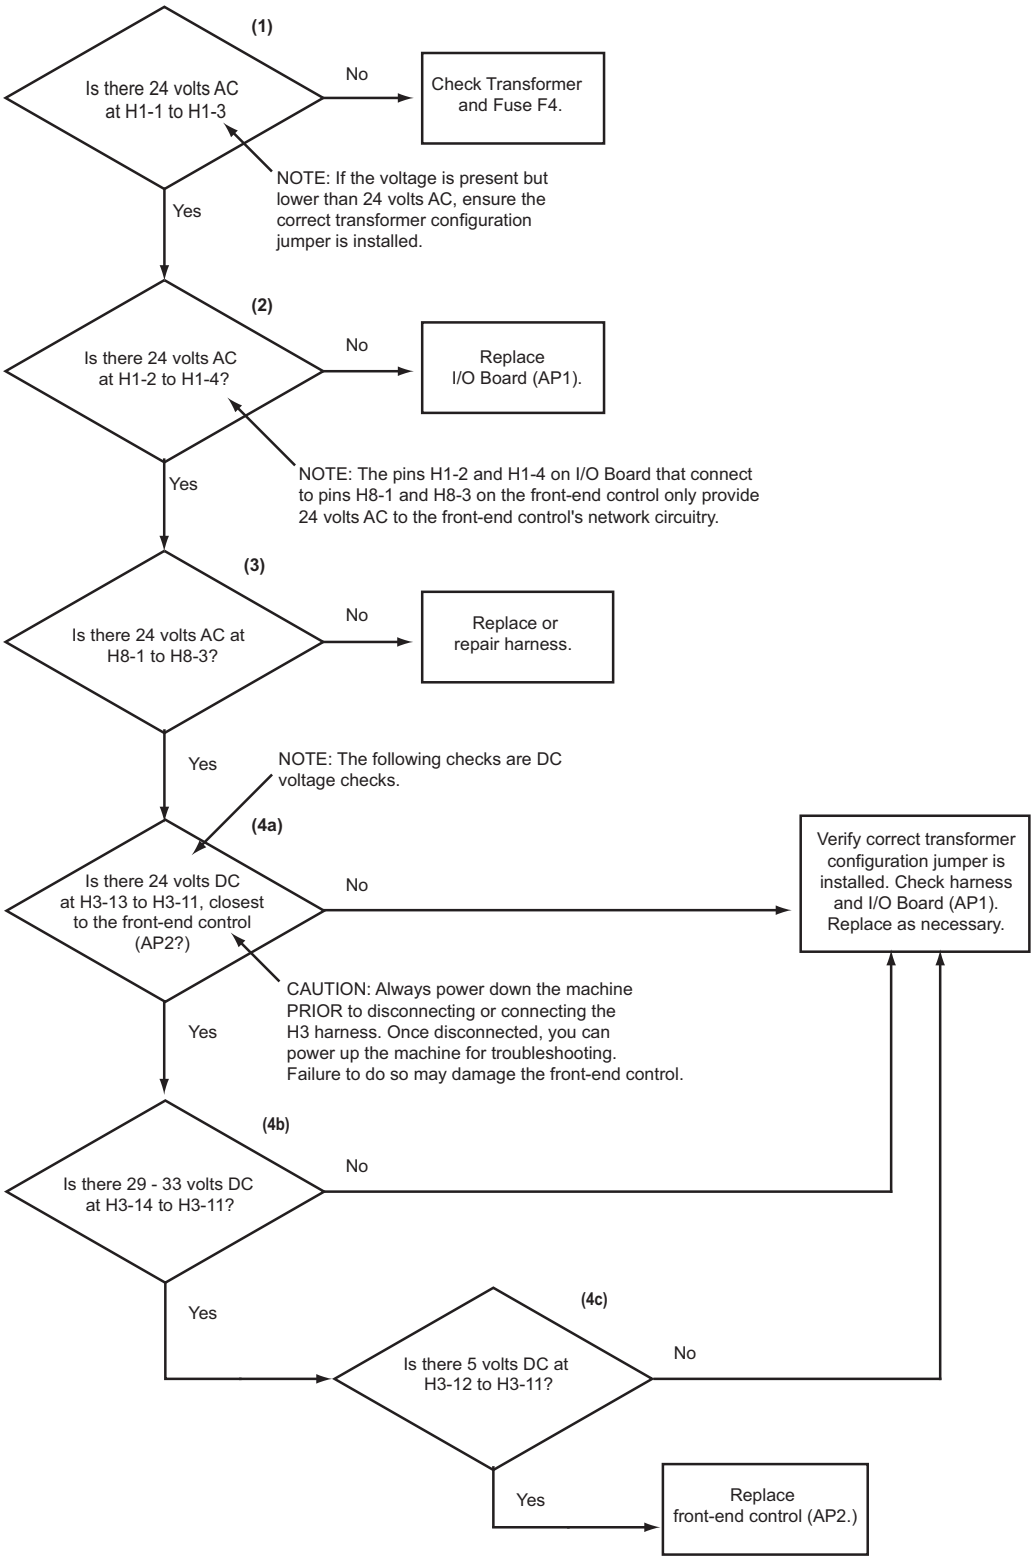
(1)
Is there 24 volts AC at H1-1 to H1-3
No
Check Transformer and Fuse F4.
NOTE: If the voltage is present but lower than 24 volts AC, ensure the correct transformer configuration jumper is installed.
Yes
(2)
Is there 24 volts AC at H1-2 to H1-4?
No
Replace I/O Board (AP1).
NOTE: The pins H1-2 and H1-4 on I/O Board that connect to pins H8-1 and H8-3 on the front-end control only provide 24 volts AC to the front-end control's network circuitry.
Yes
(3)
Is there 24 volts AC at H8-1 to H8-3?
No
Replace or repair harness.
Yes
NOTE: The following checks are DC voltage checks.
(4a)
Is there 24 volts DC at H3-13 to H3-11, closest to the front-end control (AP2?)
No
Verify correct transformer configuration jumper is installed. Check harness and I/O Board (AP1). Replace as necessary.
CAUTION: Always power down the machine PRIOR to disconnecting or connecting the H3 harness. Once disconnected, you can power up the machine for troubleshooting. Failure to do so may damage the front-end control.
Yes
(4b)
Is there 29 - 33 volts DC at H3-14 to H3-11?
No
Yes
(4c)
Is there 5 volts DC at H3-12 to H3-11?
No
Yes
Replace front-end control (AP2.)

TMB2377S

No Display

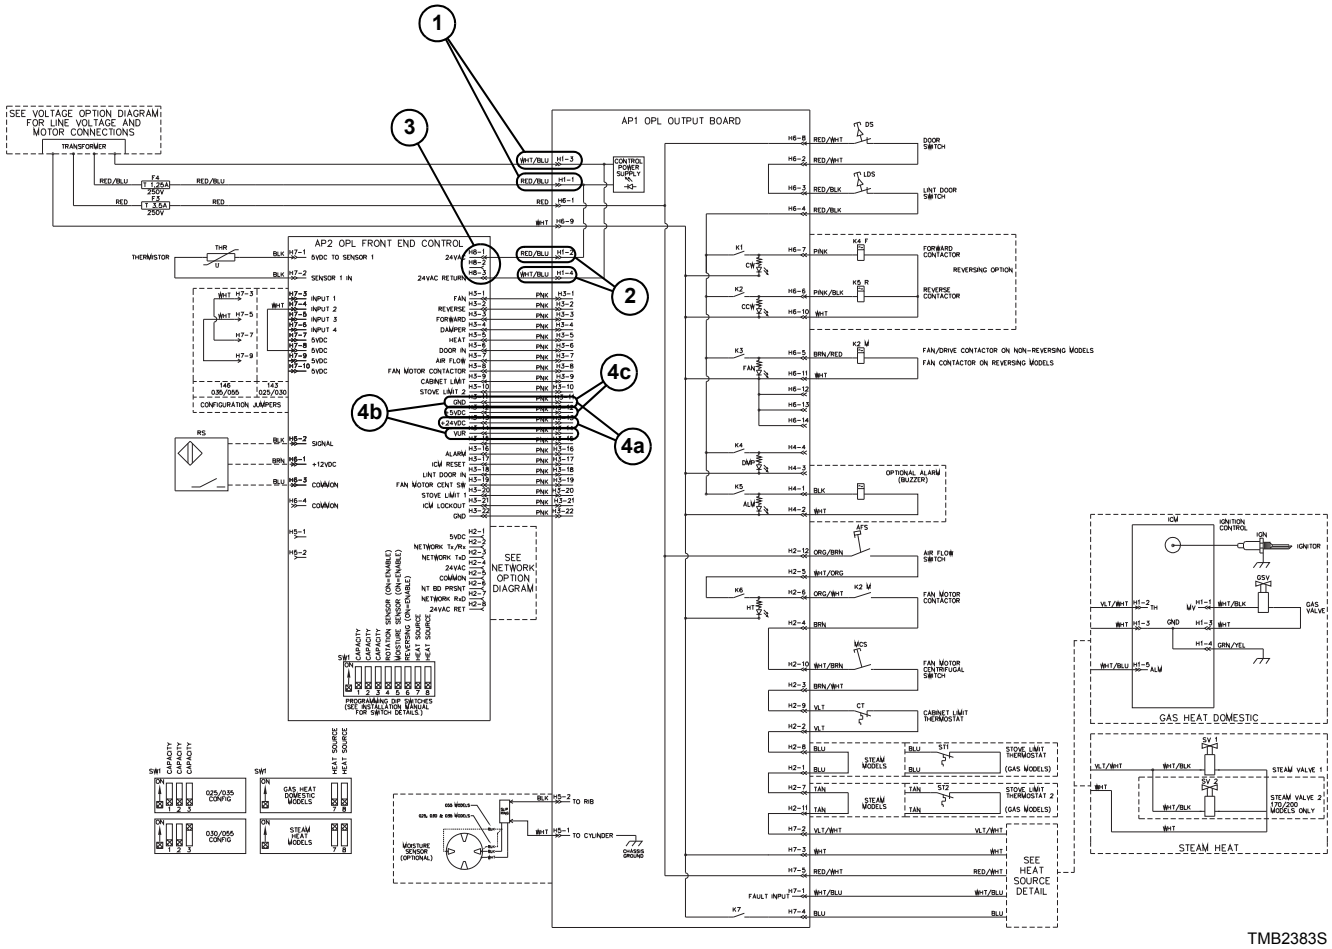
1
2
3
4a
4b
4c
AP1 OPL OUTPUT BOARD
AP2 OPL FRONT END CONTROL
SEE VOLTAGE OPTION DIAGRAM FOR LINE VOLTAGE AND MOTOR CONNECTIONS
TRANSFORMER
CONTROL POWER SUPPLY
THERMISTOR
CONFIGURATION JUMPERS
SEE NETWORK OPTION DIAGRAM
DOOR SWITCH
LINT DOOR SWITCH
FORWARD CONTACTOR
REVERSE CONTACTOR
REVERSING OPTION
FAN/DRIVE CONTACTOR ON NON-REVERSING MODELS
FAN CONTACTOR ON REVERSING MODELS
OPTIONAL ALARM (BUZZER)
AIR FLOW SWITCH
FAN MOTOR CONTACTOR
FAN MOTOR CENTRIFUGAL SWITCH
CABINET LIMIT THERMOSTAT
STOVE LIMIT THERMOSTAT 1
STOVE LIMIT THERMOSTAT 2
(GAS MODELS)
STEAM MODELS
SEE HEAT SOURCE DETAIL
IGNITION CONTROL
IGNITOR
GAS VALVE
GAS HEAT DOMESTIC
STEAM VALVE 1
STEAM VALVE 2
170/200 MODELS ONLY
STEAM HEAT
MOISTURE SENSOR (OPTIONAL)
TO RIB
TO CYLINDER
CHASSIS GROUND
TMB2383S

100.Airflow Errors

UniLinc Error Display: **Airflow Switch Sensed Closed While Not In Run Mode**
Airflow Switch Does Not Close After Cycle Started
Airflow Switch Bounces During A Running Cycle

LED OPL Error Display: **E AF1**
E AF2
E AF

NOTE: Check airflow switch for proper mechanical operation; ensure there is no lint or other items interfering with the proper operation.

NOTE: The airflow switch is required to be open prior to the beginning of the cycle. The switch is also required to close within the cycle.

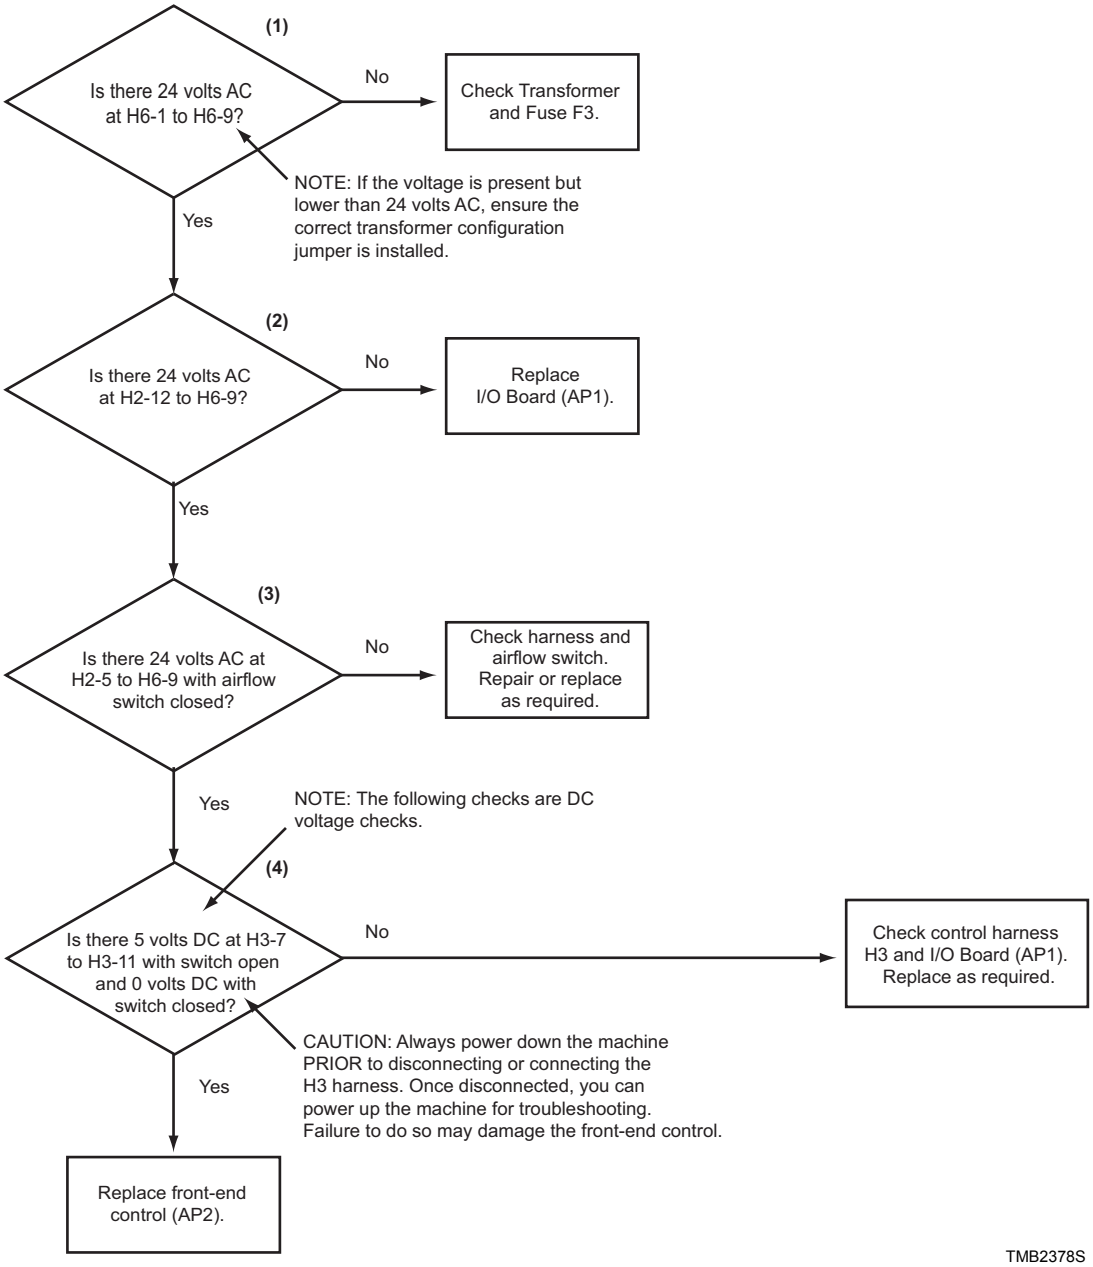
(1)
Is there 24 volts AC at H6-1 to H6-9?
No
Check Transformer and Fuse F3.
NOTE: If the voltage is present but lower than 24 volts AC, ensure the correct transformer configuration jumper is installed.
Yes
(2)
Is there 24 volts AC at H2-12 to H6-9?
No
Replace I/O Board (AP1).
Yes
(3)
Is there 24 volts AC at H2-5 to H6-9 with airflow switch closed?
No
Check harness and airflow switch. Repair or replace as required.
Yes
NOTE: The following checks are DC voltage checks.
(4)
Is there 5 volts DC at H3-7 to H3-11 with switch open and 0 volts DC with switch closed?
No
Check control harness H3 and I/O Board (AP1). Replace as required.
CAUTION: Always power down the machine PRIOR to disconnecting or connecting the H3 harness. Once disconnected, you can power up the machine for troubleshooting. Failure to do so may damage the front-end control.
Yes
Replace front-end control (AP2).
TMB2378S

Airflow Errors

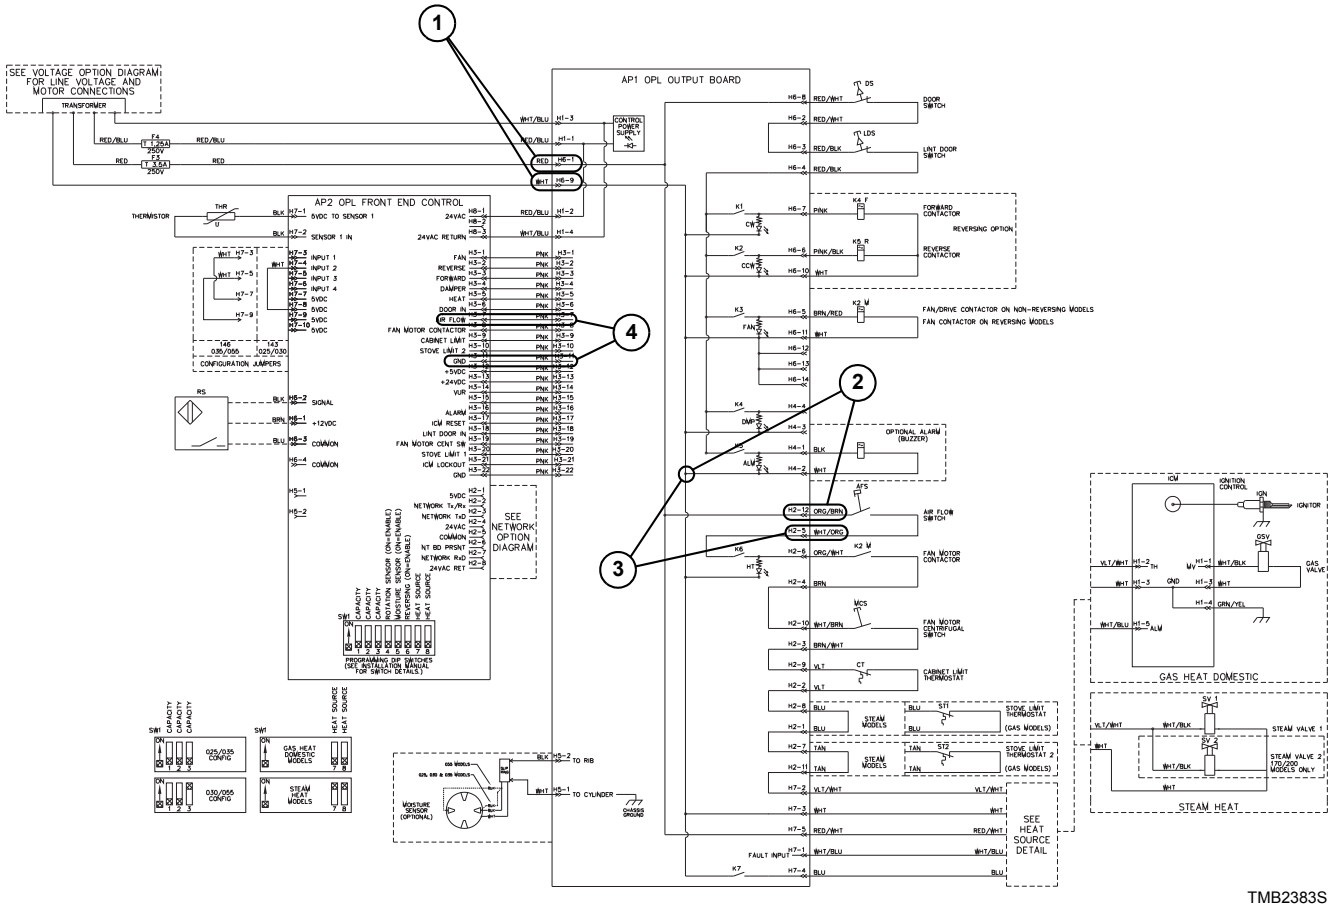

TMB2383S

101.Fan Motor Centrifugal Switch Error

UniLinc Error Display: Fan Motor Centrifugal Switch Error
LED OPL Error Display: E FnCs

NOTE: Before performing these checks, the airflow switch must be pulled in, the fan motor contactor must be closed, and the motor must be running.

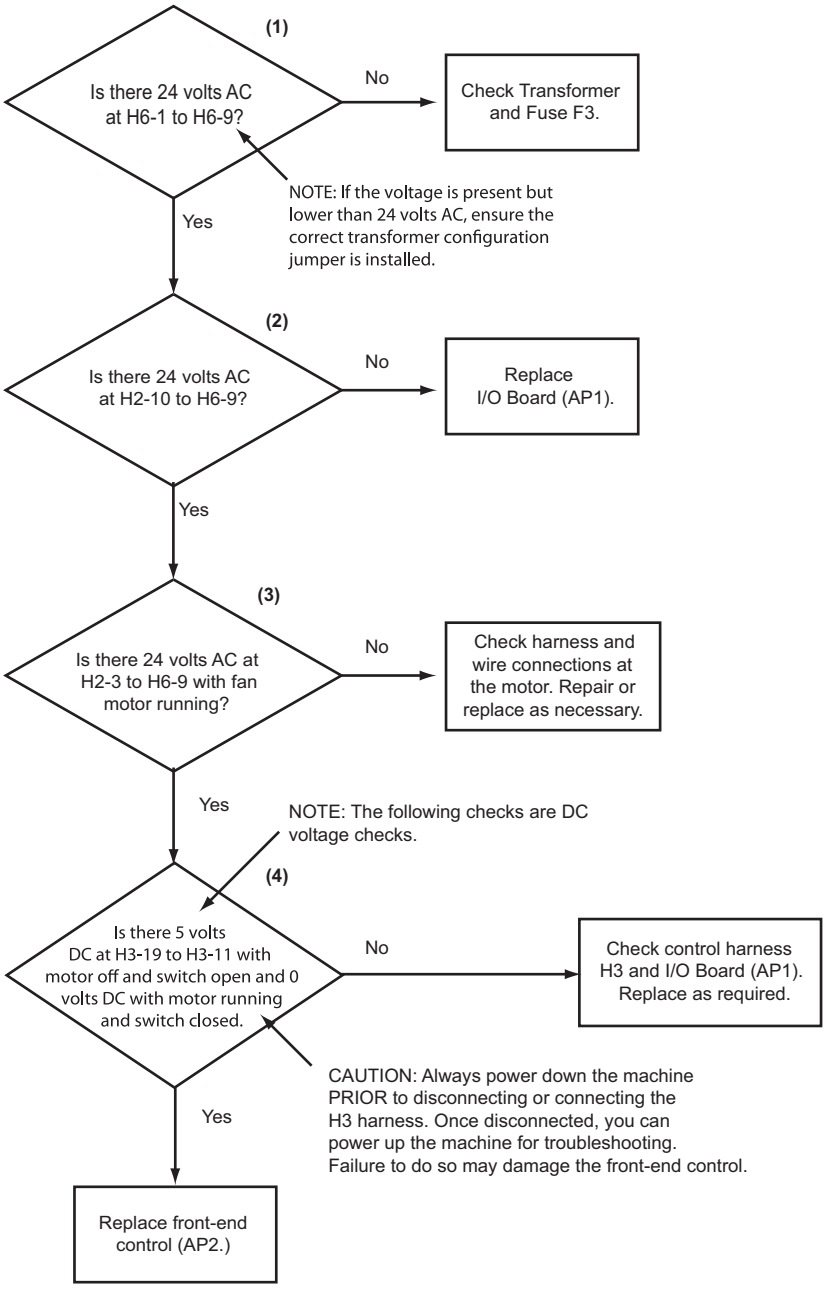
(1)
Is there 24 volts AC at H6-1 to H6-9?
No
Check Transformer and Fuse F3.
NOTE: If the voltage is present but lower than 24 volts AC, ensure the correct transformer configuration jumper is installed.
Yes
(2)
Is there 24 volts AC at H2-10 to H6-9?
No
Replace I/O Board (AP1).
Yes
(3)
Is there 24 volts AC at H2-3 to H6-9 with fan motor running?
No
Check harness and wire connections at the motor. Repair or replace as necessary.
Yes
NOTE: The following checks are DC voltage checks.
(4)
Is there 5 volts DC at H3-19 to H3-11 with motor off and switch open and 0 volts DC with motor running and switch closed.
No
Check control harness H3 and I/O Board (AP1). Replace as required.
CAUTION: Always power down the machine PRIOR to disconnecting or connecting the H3 harness. Once disconnected, you can power up the machine for troubleshooting. Failure to do so may damage the front-end control.
Yes
Replace front-end control (AP2.)

TMB2379S

Fan Motor Centrifugal Switch Error

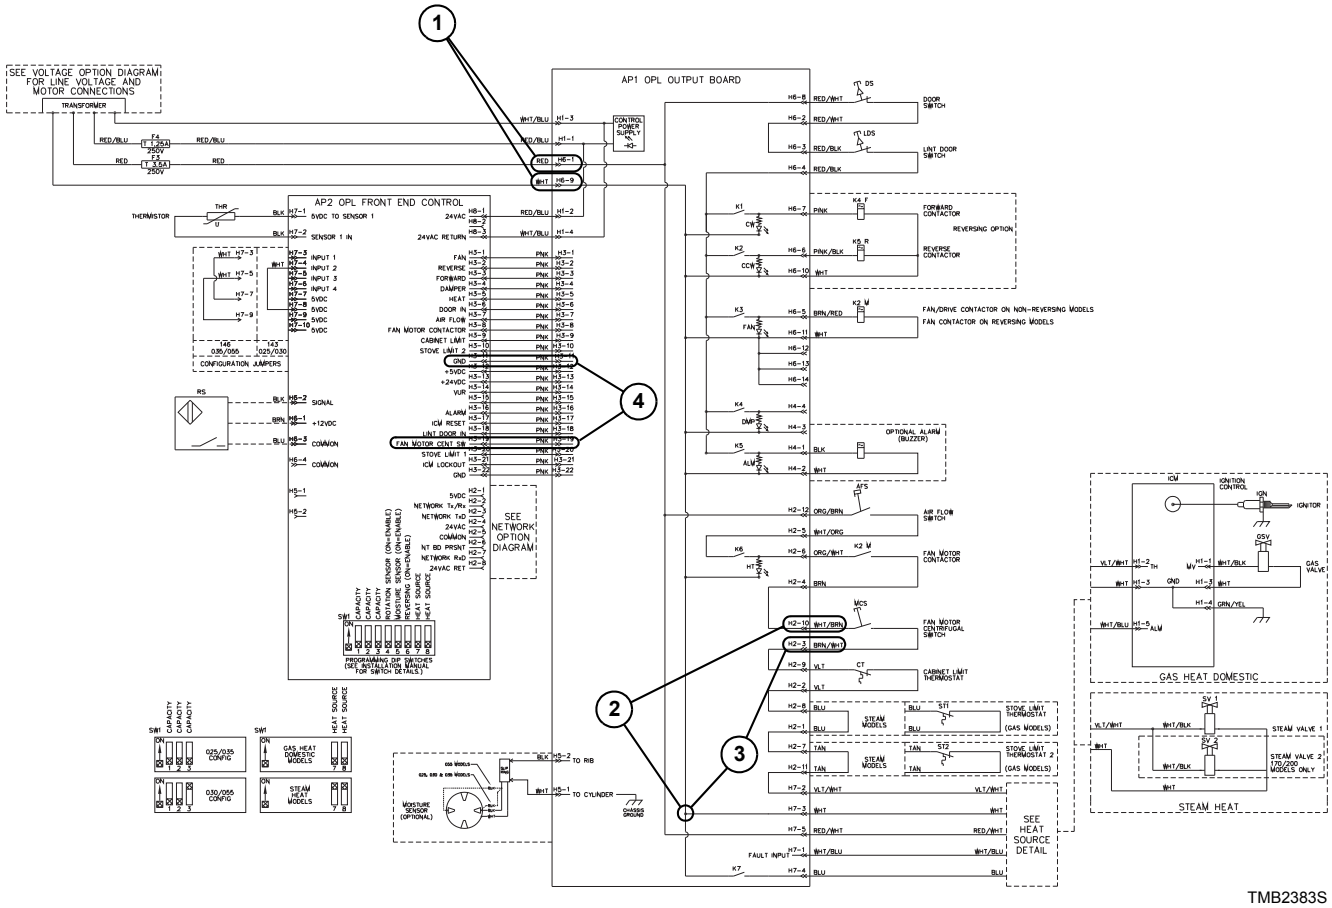

TMB2383S

102.Close Door Indication

NOTE: Before proceeding, check the lint door, loading doors and switches for proper mechanical operation.

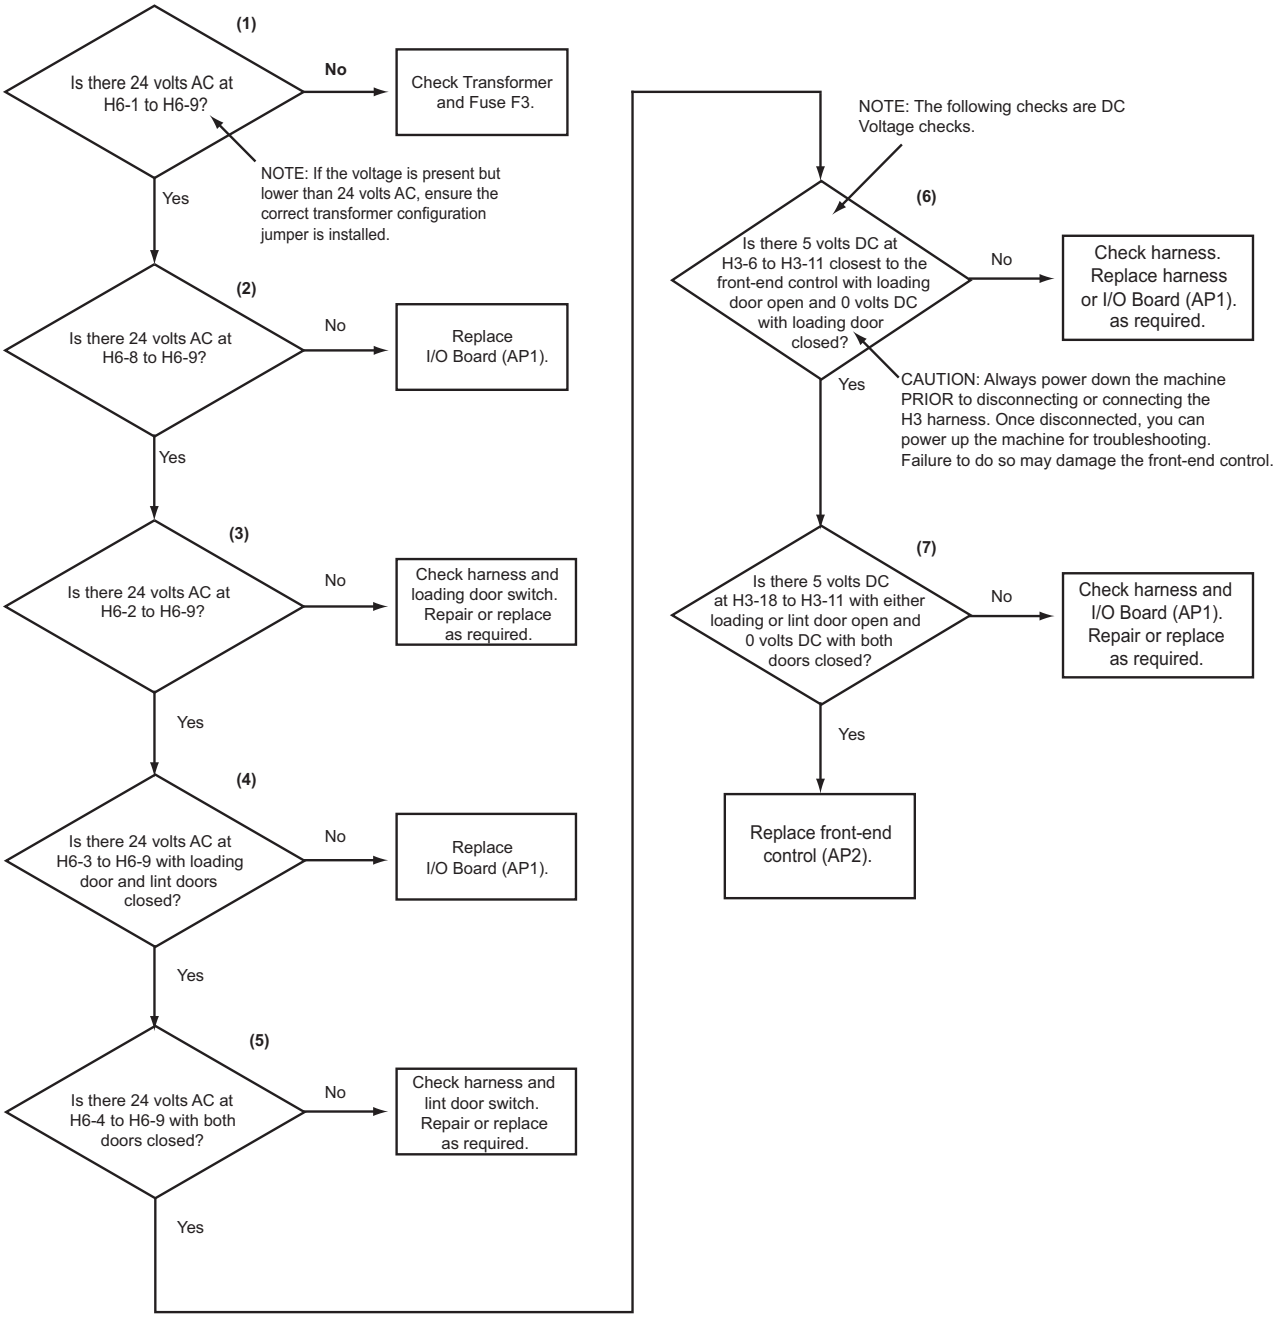
(1)
Is there 24 volts AC at H6-1 to H6-9?
No
Check Transformer and Fuse F3.
NOTE: If the voltage is present but lower than 24 volts AC, ensure the correct transformer configuration jumper is installed.
Yes
(2)
Is there 24 volts AC at H6-8 to H6-9?
No
Replace I/O Board (AP1).
Yes
(3)
Is there 24 volts AC at H6-2 to H6-9?
No
Check harness and loading door switch. Repair or replace as required.
Yes
(4)
Is there 24 volts AC at H6-3 to H6-9 with loading door and lint doors closed?
No
Replace I/O Board (AP1).
Yes
(5)
Is there 24 volts AC at H6-4 to H6-9 with both doors closed?
No
Check harness and lint door switch. Repair or replace as required.
Yes
NOTE: The following checks are DC Voltage checks.
(6)
Is there 5 volts DC at H3-6 to H3-11 closest to the front-end control with loading door open and 0 volts DC with loading door closed?
No
Check harness. Replace harness or I/O Board (AP1). as required.
Yes
CAUTION: Always power down the machine PRIOR to disconnecting or connecting the H3 harness. Once disconnected, you can power up the machine for troubleshooting. Failure to do so may damage the front-end control.
(7)
Is there 5 volts DC at H3-18 to H3-11 with either loading or lint door open and 0 volts DC with both doors closed?
No
Check harness and I/O Board (AP1). Repair or replace as required.
Yes
Replace front-end control (AP2).

TMB2380S

Close Door Indication

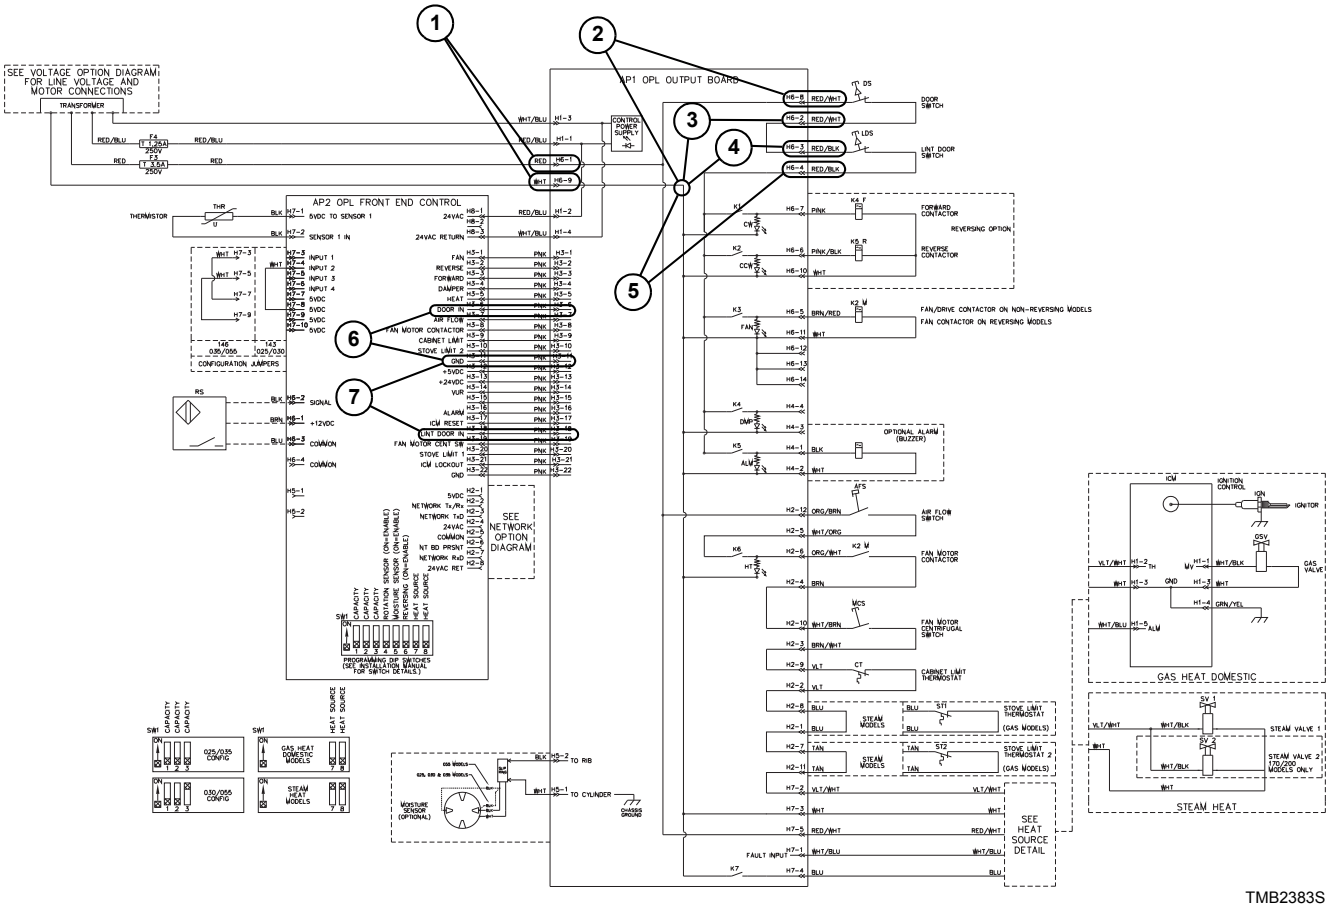

103.Moisture Sensor Error

UniLinc Error Display: Moisture Sensor Error
LED OPL Error Display: EnoiST

NOTE: Before troubleshooting the Moisture Sensor Error, run the Moisture Sensor Tests found in *Table 5*.

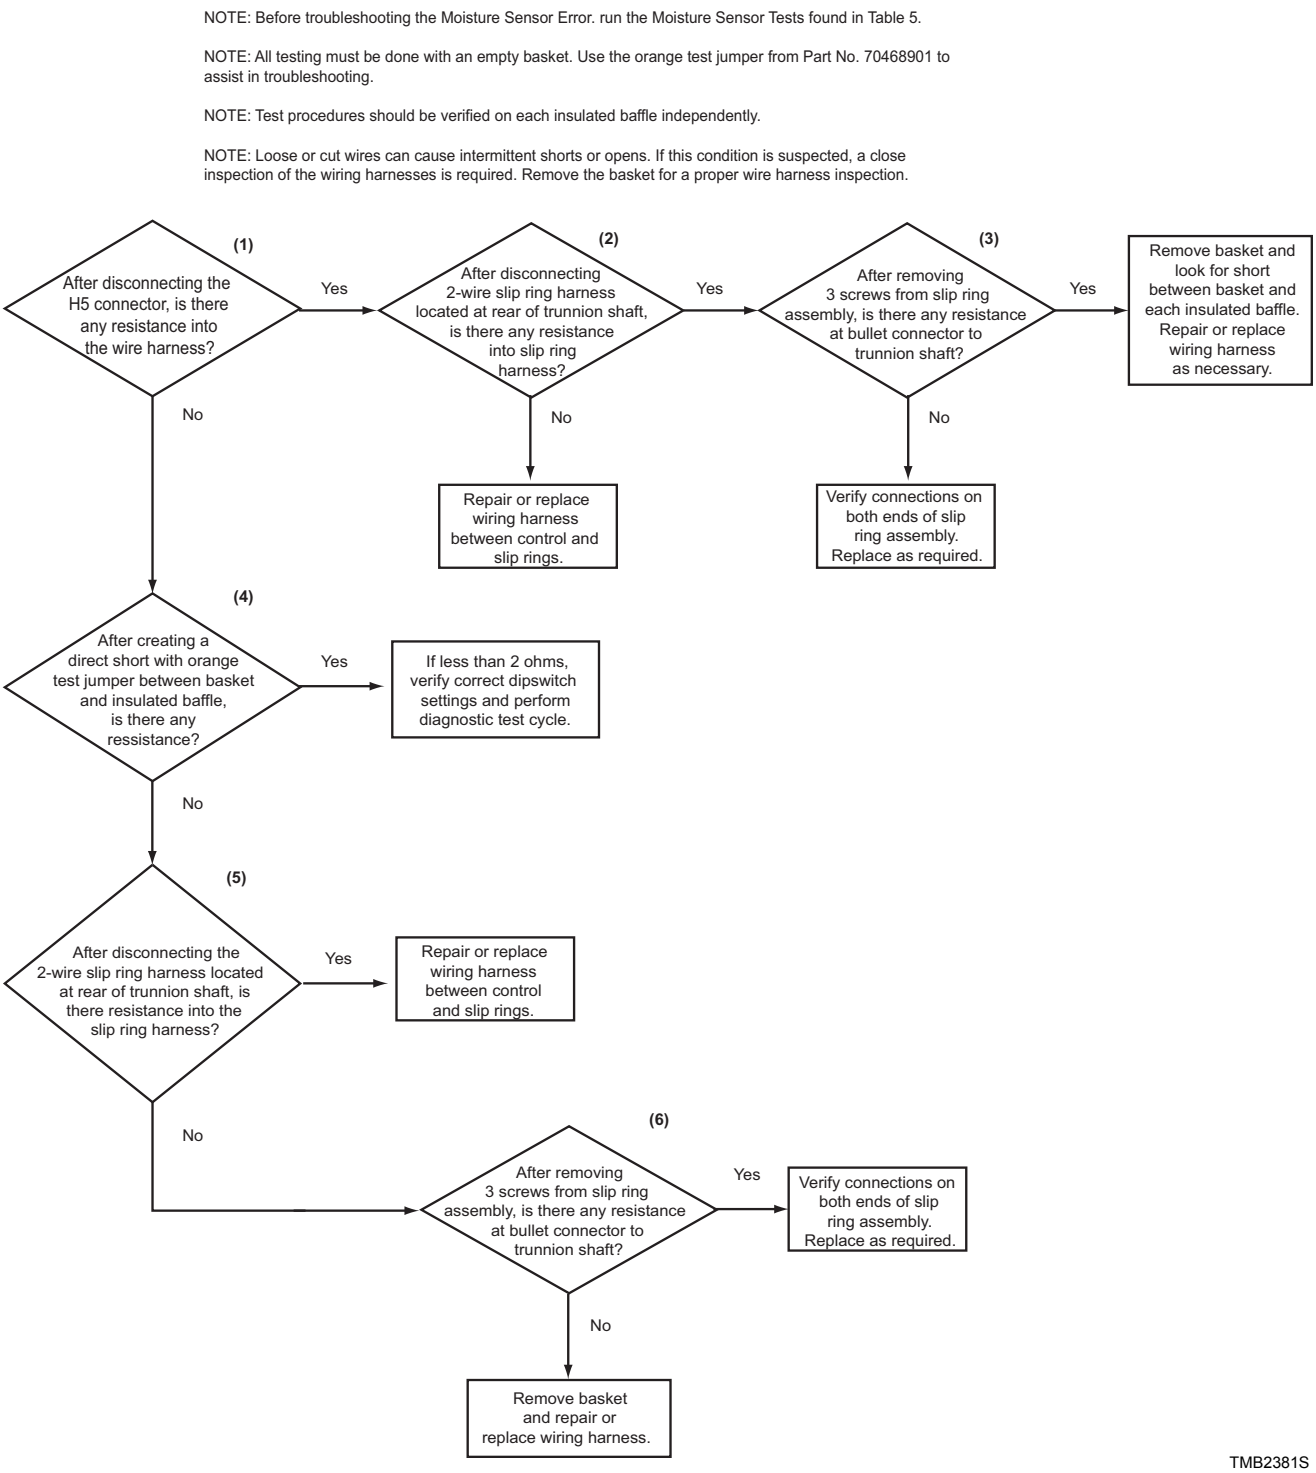
NOTE: Before troubleshooting the Moisture Sensor Error. run the Moisture Sensor Tests found in Table 5.
NOTE: All testing must be done with an empty basket. Use the orange test jumper from Part No. 70468901 to assist in troubleshooting.
NOTE: Test procedures should be verified on each insulated baffle independently.
NOTE: Loose or cut wires can cause intermittent shorts or opens. If this condition is suspected, a close inspection of the wiring harnesses is required. Remove the basket for a proper wire harness inspection.
(1)
After disconnecting the H5 connector, is there any resistance into the wire harness?
Yes
(2)
After disconnecting 2-wire slip ring harness located at rear of trunnion shaft, is there any resistance into slip ring harness?
Yes
(3)
After removing 3 screws from slip ring assembly, is there any resistance at bullet connector to trunnion shaft?
Yes
Remove basket and look for short between basket and each insulated baffle. Repair or replace wiring harness as necessary.
No
Repair or replace wiring harness between control and slip rings.
No
Verify connections on both ends of slip ring assembly. Replace as required.
No
(4)
After creating a direct short with orange test jumper between basket and insulated baffle, is there any ressistance?
Yes
If less than 2 ohms, verify correct dipswitch settings and perform diagnostic test cycle.
No
(5)
After disconnecting the 2-wire slip ring harness located at rear of trunnion shaft, is there resistance into the slip ring harness?
Yes
Repair or replace wiring harness between control and slip rings.
No
(6)
After removing 3 screws from slip ring assembly, is there any resistance at bullet connector to trunnion shaft?
Yes
Verify connections on both ends of slip ring assembly. Replace as required.
No
Remove basket and repair or replace wiring harness.
TMB2381S

Moisture Sensor Error

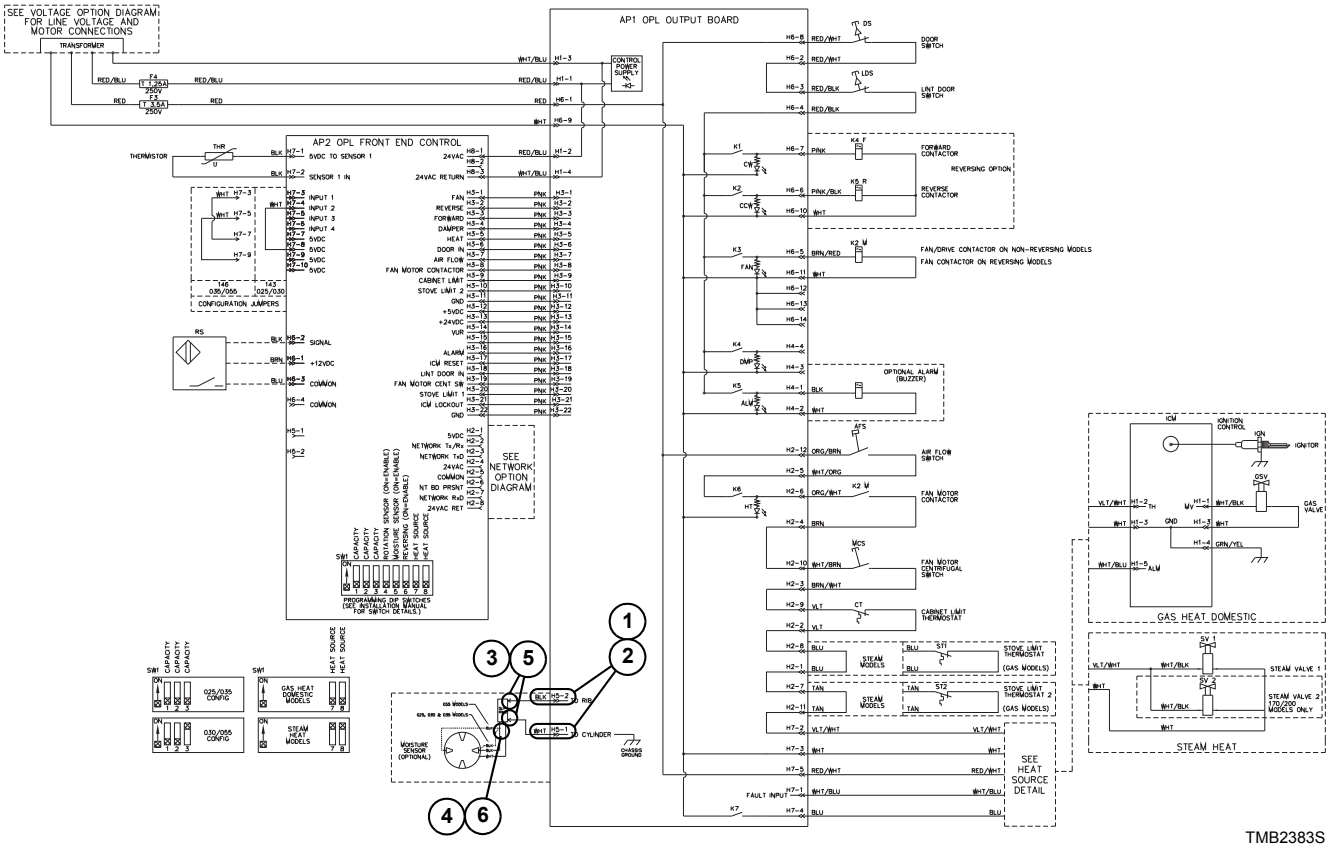

TMB2383S

Troubleshooting the Moisture Sensor Circuit

WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:
- **Disconnect electric power to the tumble dryer before servicing.**
- **Close gas shut-off valve to gas tumble dryer before servicing.**
- **Close steam valve to steam tumble dryer before servicing.**
- **Never start the tumble dryer with any guards/panels removed.**
- **Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the tumble dryer is properly grounded.**

W002R1

NOTE: Troubleshooting must be done with the machine basket empty.

104.Troubleshooting at the Control

1. On the control board, unplug the harness from header H5 (Refer to *Figure 25*).

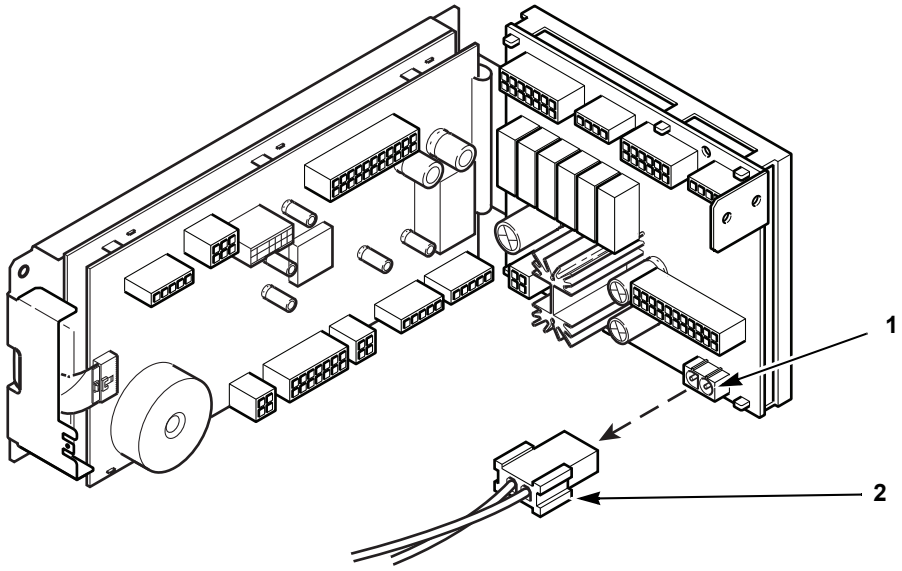

TMB2396S

1	H5
2	Harness

Figure 25

2. Insert ohm meter probes into pins 1 and 2 of the harness. If the metered value is infinite resistance, open load (OL), proceed to step 3. If not, proceed to *Paragraph 105*.
3. Create a direct short between machine basket and moisture sensing baffle/ground using test jumper (Refer to *Figure 26*). If metered value is less than 1 ohm, circuit is functioning properly; double-check machine configuration and cycle programming. If 1 ohm or greater, proceed to *Paragraph 105*.

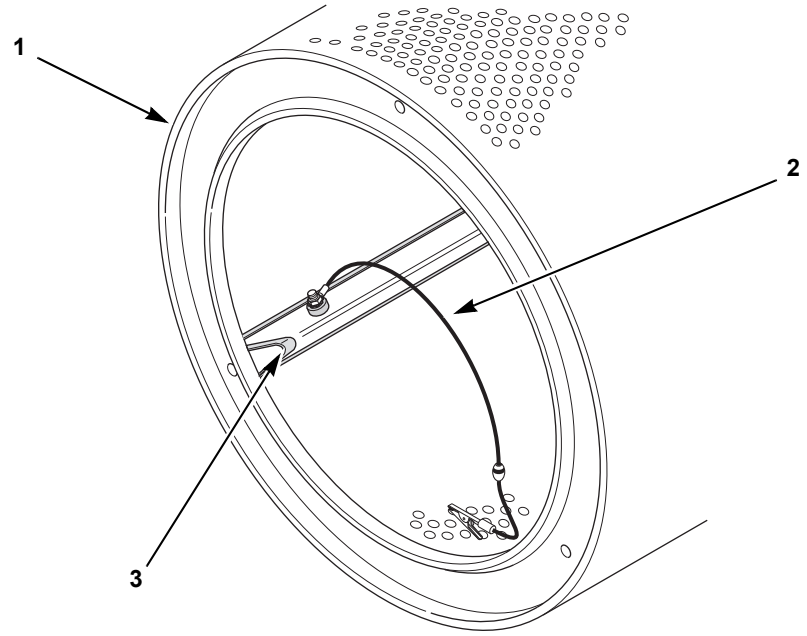

TMB2397S

1	Basket
2	Test Jumber
3	Moisture Sensing Baffle

Figure 26

105.Troubleshooting From Control to Slip Ring Assembly

1. At the control, unplug harness at header H5 (Refer to *Figure 25*).
2. At the slip ring assembly, unplug the moisture sensing harness on the control side of the slip ring assembly (Refer to *Figure 27*).

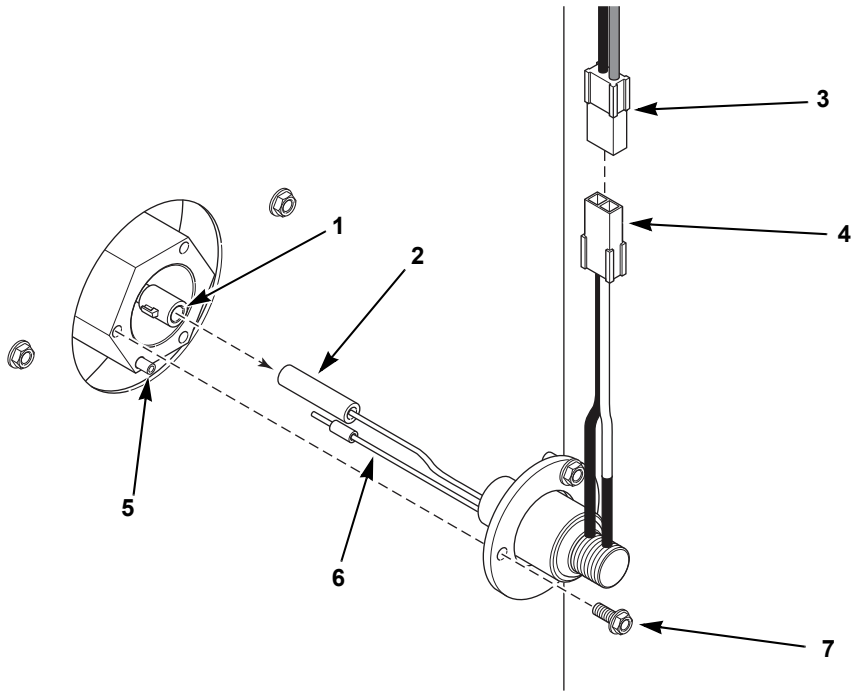

1	Connector
2	Black Wire
3	Moisture Sensing Harness
4	Slip Ring Assembly Harness
5	Set-Screw
6	White Wire
7	Screws

Figure 27

3. The harness from the control leads into a junction panel before reaching the slip ring assembly. Inspect junction panel for intermittent connections or unplugged harnesses (Refer to *Figure 28*).

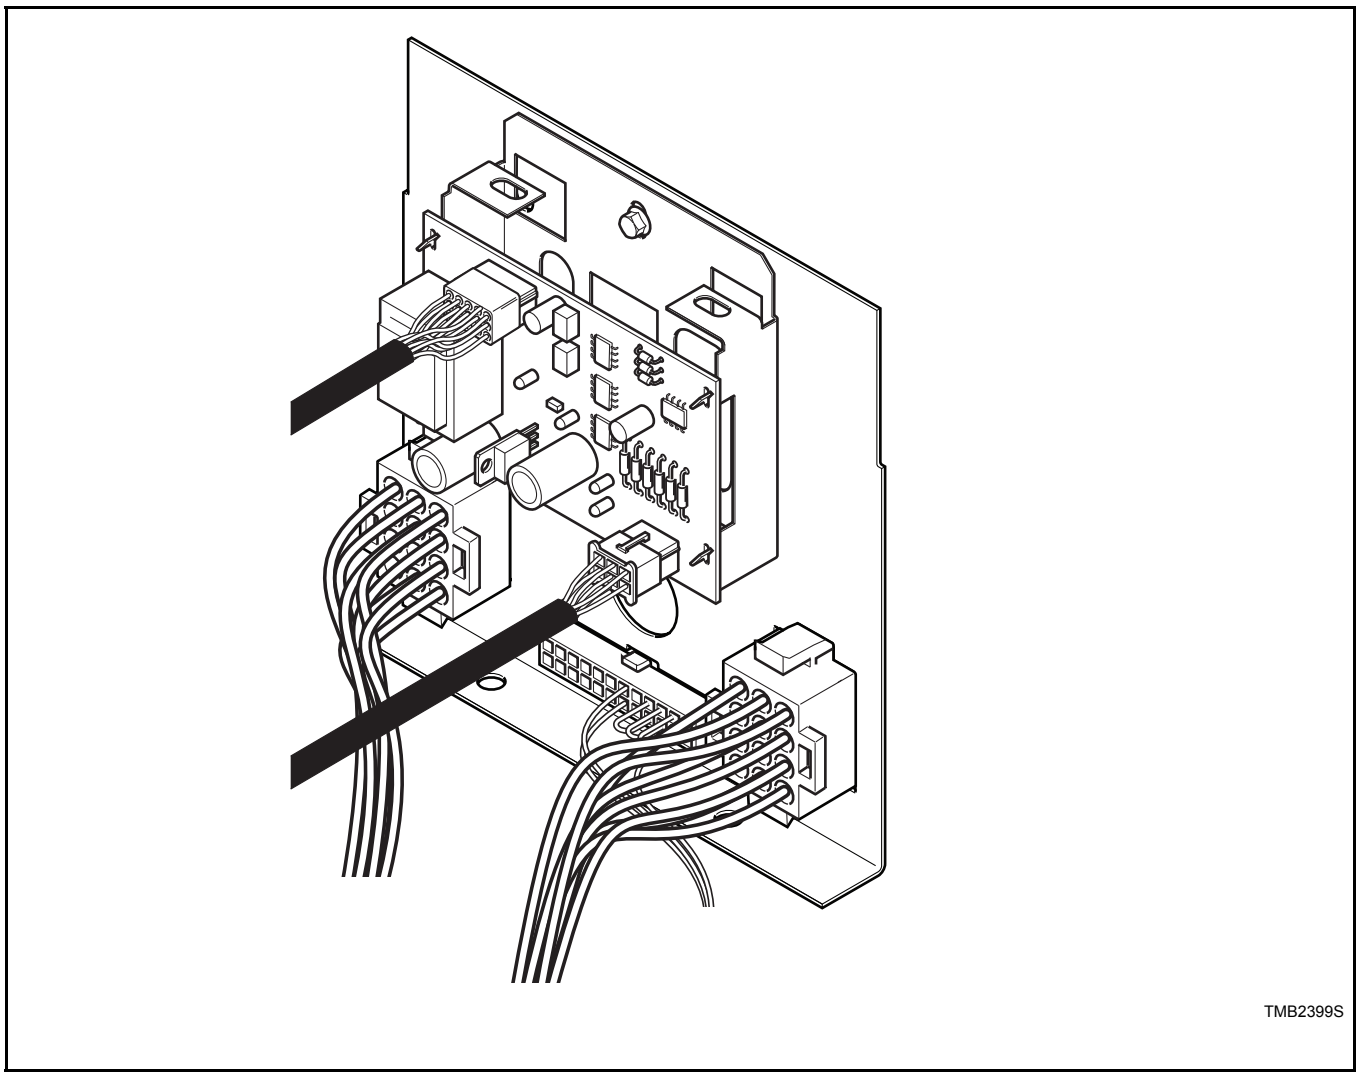

Figure 28

4. An additional harness connection exists between the junction panel and the slip ring assembly. Inspect connection for intermittent connections or unplugged harness.
5. Insert ohm meter probes into pins 1 and 2 of the harness unplugged from H5. If the metered value is infinite resistance, open load (OL), proceed to Step 6. If not, replace harness and return to *Paragraph 104*.
6. Create a direct short between pin 1 and 2 of the moisture sensing harness on the control side of the slip ring assembly (Refer to *Figure 27*). If the metered value is less than 1 ohm, proceed to *Paragraph 106*. If 1 ohm or greater, replace harness and return to *Paragraph 104*.

106.Troubleshooting At Slip Ring Assembly

1. At the slip ring assembly, unplug the slip ring assembly harness on the control side of the slip ring assembly (Refer to *Figure 27*).
2. Remove the three (3) screws holding the slip ring assembly to basket shaft.
3. Carefully disconnect the white wire of the slip ring assembly from the set-screw on the basket shaft.
4. Carefully disconnect the black wire of the slip ring assembly from the connector in the basket shaft.
5. Connect one ohm meter probe to the black wire on the basket side of the slip ring assembly, and connect the other ohm meter probe to the black wire of the slip ring assembly harness. If the metered value is less than 1 ohm, proceed to Step 6. If 1 ohm or greater, replace slip ring assembly and return to *Paragraph 104*.
6. Connect one ohm meter probe to white wire on the basket side of the slip ring assembly, and connect the other ohm meter probe to the white wire of the slip ring assembly harness. If the metered value is less than 1 ohm, proceed to *Paragraph 107*. If 1 ohm or greater, replace slip ring assembly and return to *Paragraph 104*.

107.Troubleshooting From Slip Ring Assembly to Moisture Sensing Baffle and Basket

1. Remove three (3) screws holding slip ring assembly to basket shaft.
2. Carefully disconnect the white wire of the slip ring assembly from the set-screw on the basket shaft.
3. Carefully disconnect the black wire of slip ring assembly from the connector in the basket shaft.
4. Connect one ohm meter probe to the connector in the basket shaft. Connect the other ohm meter probe to the basket shaft itself. If the metered value is infinite resistance, open load (OL), proceed to Step 5. If not, remove machine basket and proceed to *Paragraph 108*.
5. Create a direct short between basket and moisture sensing baffle (Refer to *Figure 26*).
6. Connect one ohm meter probe to the connector in the basket shaft. Connect the other ohm meter probe to the basket shaft itself. If the metered value is less than 1 ohm, circuit is functioning properly; double-check machine configuration and cycle programming. If 1 ohm or greater, remove machine basket and proceed to *Paragraph 108*.

108.Troubleshooting from Basket Shaft to Moisture Sensing Baffle with Machine Basket Removed

1. Disconnect and remove slip ring assembly before removing machine basket.
2. Remove machine basket.

3. Connect one ohm meter probe to the connector in the basket shaft (Refer to *Figure 29*).

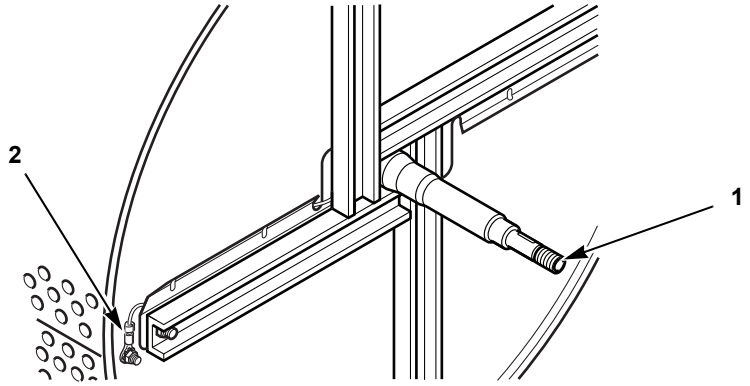

1 Connector
2 Gray Wire Harness Terminal

Figure 29

4. Connect the other ohm meter probe to one of the gray wire harness terminals on the back end of the machine basket. If the metered value is less than 1 ohm, proceed to Step 5. If 1 ohm or greater, replace harness and return to *Paragraph 104*.
5. Connect one ohm meter probe to the connector in the basket shaft.
6. Connect the other ohm meter probe to the other gray wire harness terminal on the back end of the machine basket. If the metered value is less than 1 ohm, proceed to Step 7. If 1 ohm or greater, replace harness and return to *Paragraph 104*.
7. Connect one ohm meter probe to the connector in the basket shaft.
8. Connect the other ohm meter probe to one of the moisture sensing baffles (Refer to *Figure 26*). If the metered value is less than 1 ohm, proceed to Step 9. If 1 ohm or greater, proceed to *Paragraph 109*.
9. Connect one ohm meter probe to the connector in the basket shaft.
10. Connect the other ohm meter probe to the other moisture sensing baffle. If the metered value is less than 1 ohm, circuit is functioning properly; double-check machine configuration and cycle programming. If 1 ohm or greater, proceed to *Paragraph 109*.

109.Troubleshooting at the Moisture Sensing Baffles with Machine Basket Removed

1. Disassemble moisture sensing baffle and inspect for lint buildup and foreign objects. Verify wire harness connections.
2. Disassemble other moisture sensing baffle and inspect for lint buildup and foreign objects. Verify wire harness connections.
3. Double-check machine configuration and cycle programming.

110.Fan Motor Contactor Error

UniLinc Error Display: Fan Motor Contactor Error
LED OPL Error Display: E FCon

NOTE: Before performing these checks, the airflow switch must be pulled in, and the motor must be running.

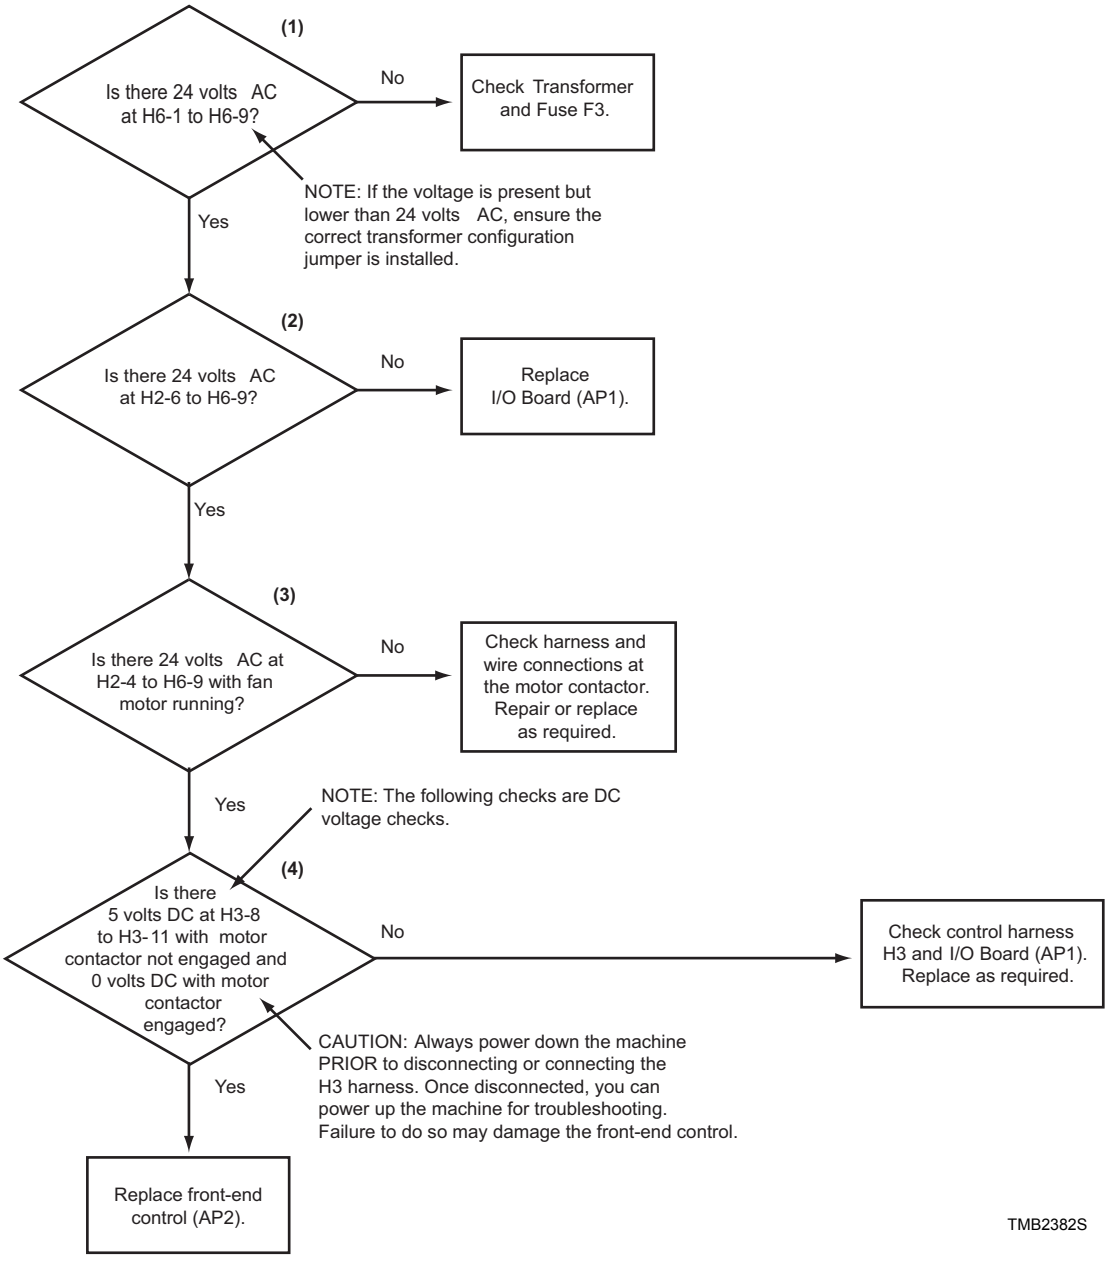
(1)
Is there 24 volts AC at H6-1 to H6-9?
No
Check Transformer and Fuse F3.
NOTE: If the voltage is present but lower than 24 volts AC, ensure the correct transformer configuration jumper is installed.
Yes
(2)
Is there 24 volts AC at H2-6 to H6-9?
No
Replace I/O Board (AP1).
Yes
(3)
Is there 24 volts AC at H2-4 to H6-9 with fan motor running?
No
Check harness and wire connections at the motor contactor. Repair or replace as required.
Yes
NOTE: The following checks are DC voltage checks.
(4)
Is there 5 volts DC at H3-8 to H3-11 with motor contactor not engaged and 0 volts DC with motor contactor engaged?
No
Check control harness H3 and I/O Board (AP1). Replace as required.
CAUTION: Always power down the machine PRIOR to disconnecting or connecting the H3 harness. Once disconnected, you can power up the machine for troubleshooting. Failure to do so may damage the front-end control.
Yes
Replace front-end control (AP2).
TMB2382S

Fan Motor Contactor Error

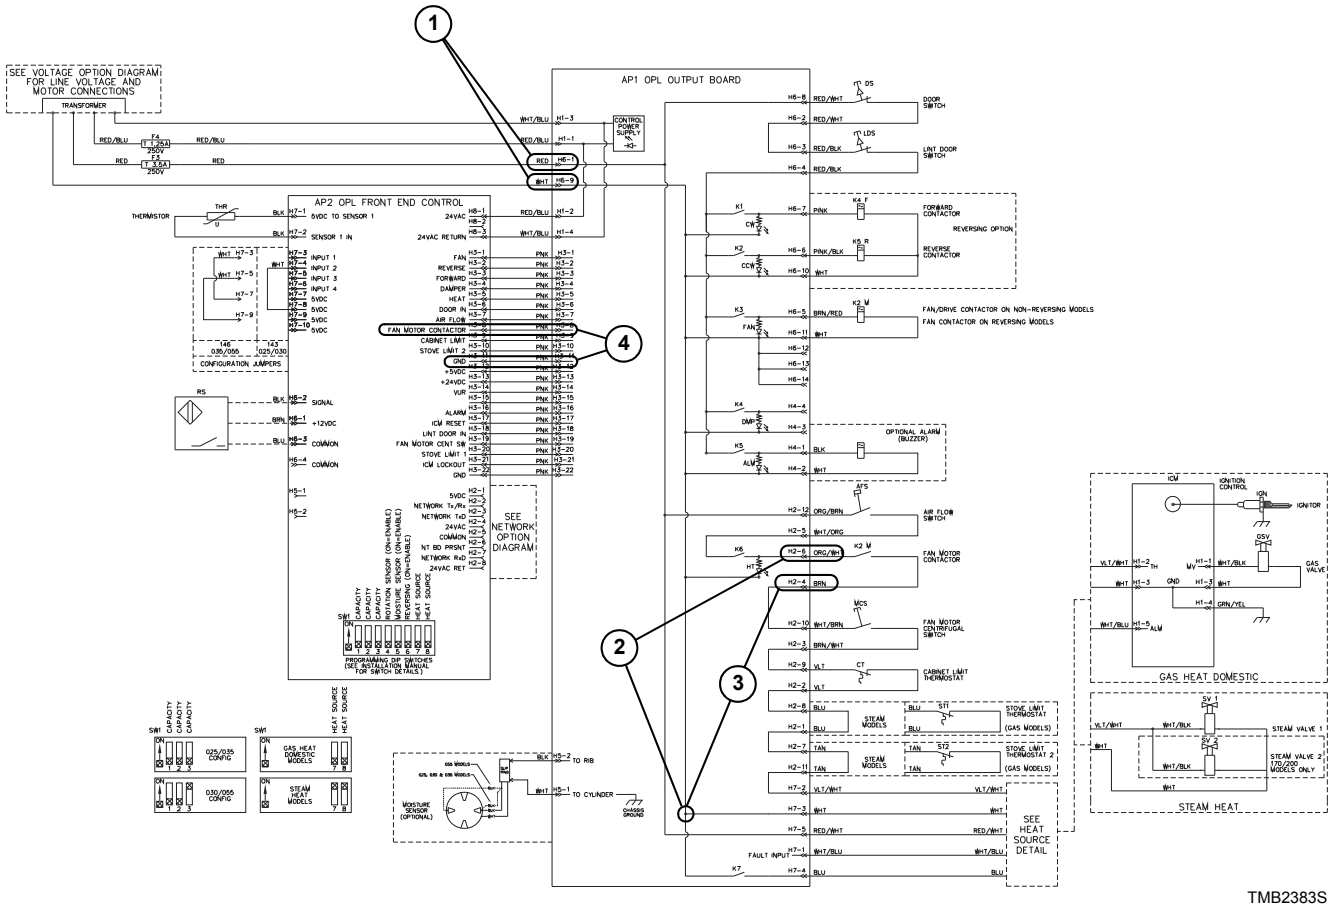

TMB2383S

111.Rotation Sensor Error

UniLinc Error Display: Rotation Sensor Error
LED OPL Error Display: E rot

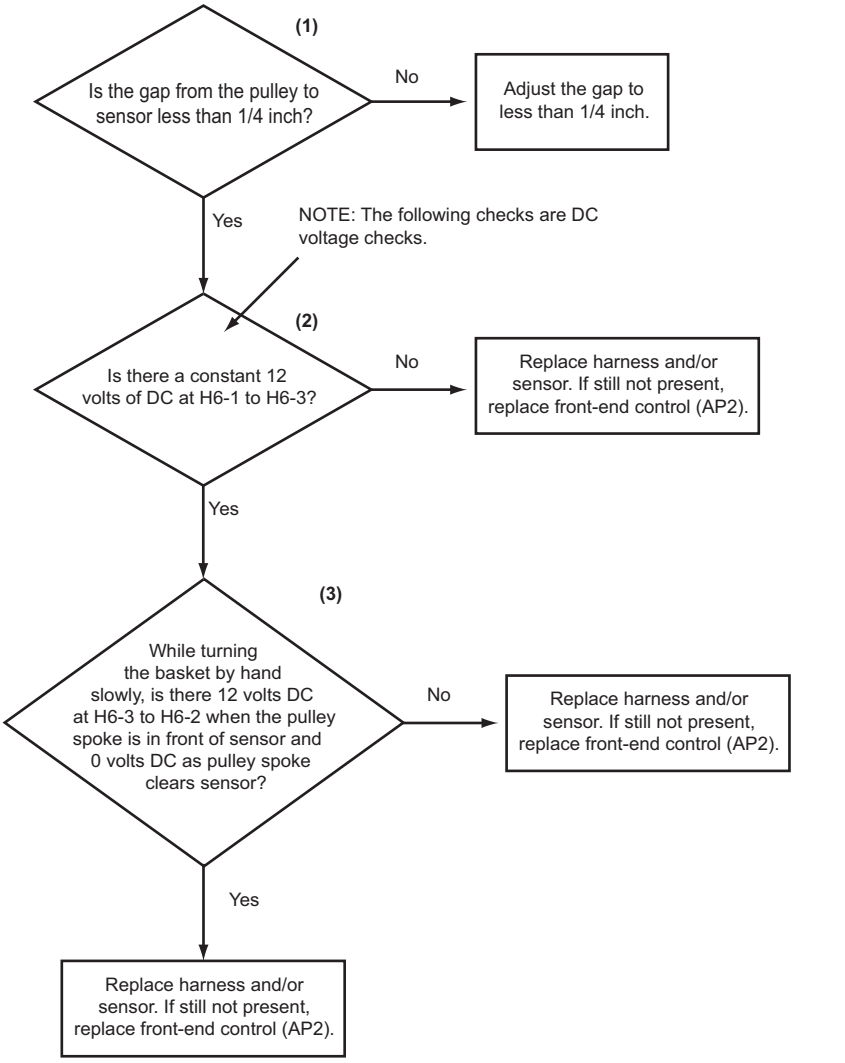
(1)
Is the gap from the pulley to sensor less than 1/4 inch?
No
Adjust the gap to less than 1/4 inch.
Yes
NOTE: The following checks are DC voltage checks.
(2)
Is there a constant 12 volts of DC at H6-1 to H6-3?
No
Replace harness and/or sensor. If still not present, replace front-end control (AP2).
Yes
(3)
While turning the basket by hand slowly, is there 12 volts DC at H6-3 to H6-2 when the pulley spoke is in front of sensor and 0 volts DC as pulley spoke clears sensor?
No
Replace harness and/or sensor. If still not present, replace front-end control (AP2).
Yes
Replace harness and/or sensor. If still not present, replace front-end control (AP2).

TMB2392S

Rotation Sensor Error

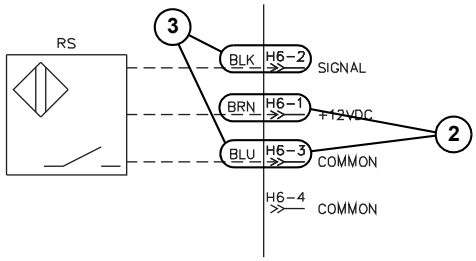

TMB2389S

112.Shorted or Open Thermistor

UniLinc Error Display: Shorted Thermistor
Open Thermistor
LED OPL Error Display: ESH
EoP

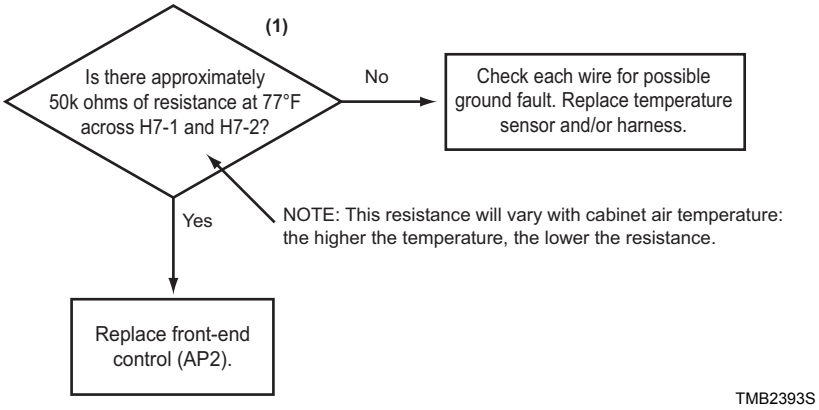
(1)
Is there approximately 50k ohms of resistance at 77°F across H7-1 and H7-2?
No
Check each wire for possible ground fault. Replace temperature sensor and/or harness.
Yes
NOTE: This resistance will vary with cabinet air temperature: the higher the temperature, the lower the resistance.
Replace front-end control (AP2).
TMB2393S

Shorted or Open Thermistor

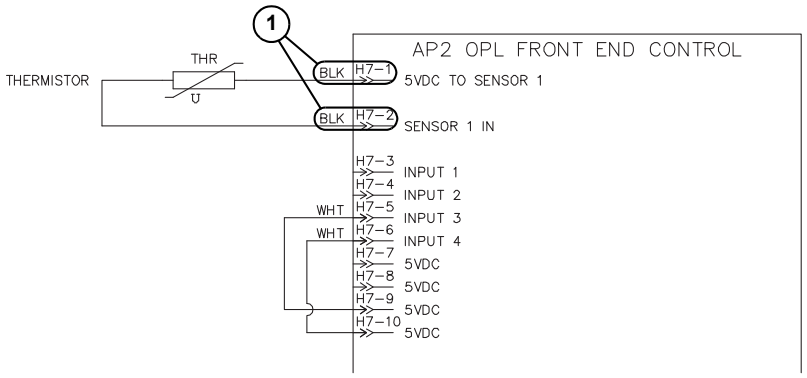

TMB2390S

113.Fuses and Transformer Configuration Jumper

Check F3 and F4 fuses and verify the jumper. Jumper options shown below.

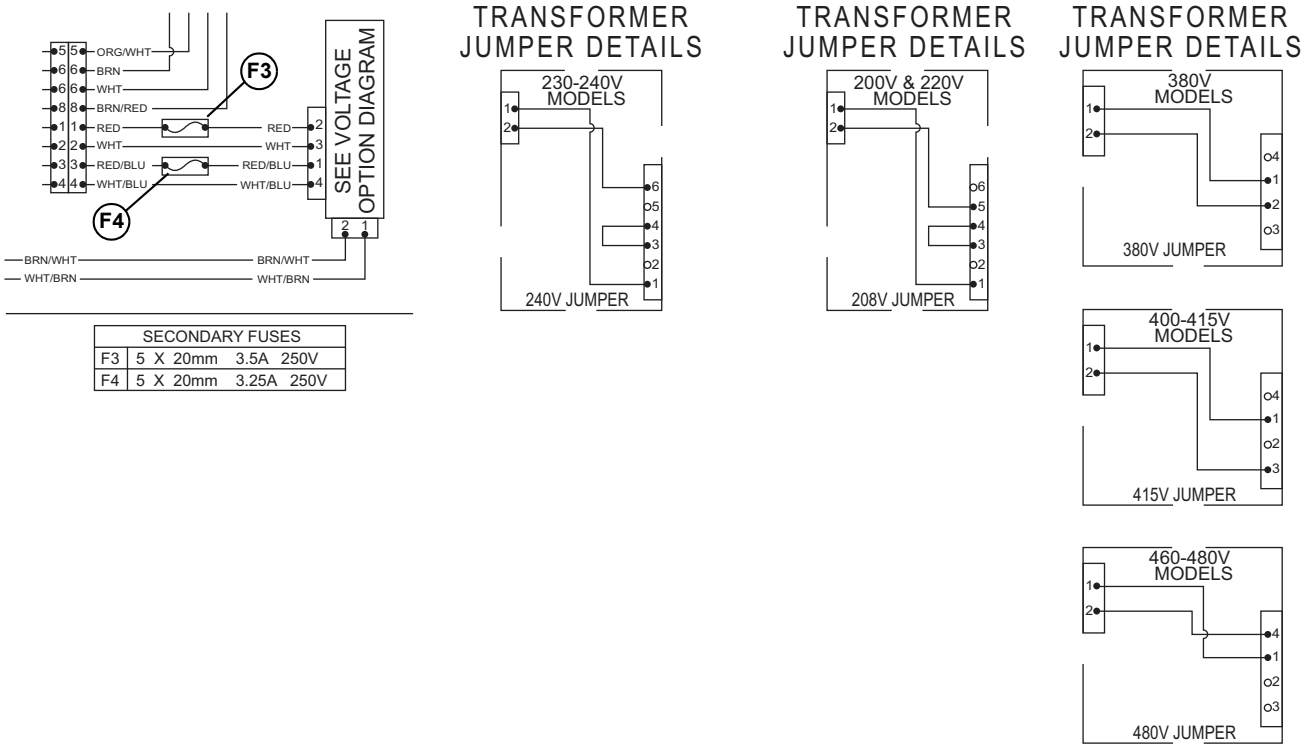

SECONDARY FUSES	
F3	5 X 20mm 3.5A 250V
F4	5 X 20mm 3.25A 250V

TMB2391S

114.Dip Switch/Harness Index Mismatch

Verify the dip switches are in the correct position and the jumper harness is installed on front-end control (AP2).

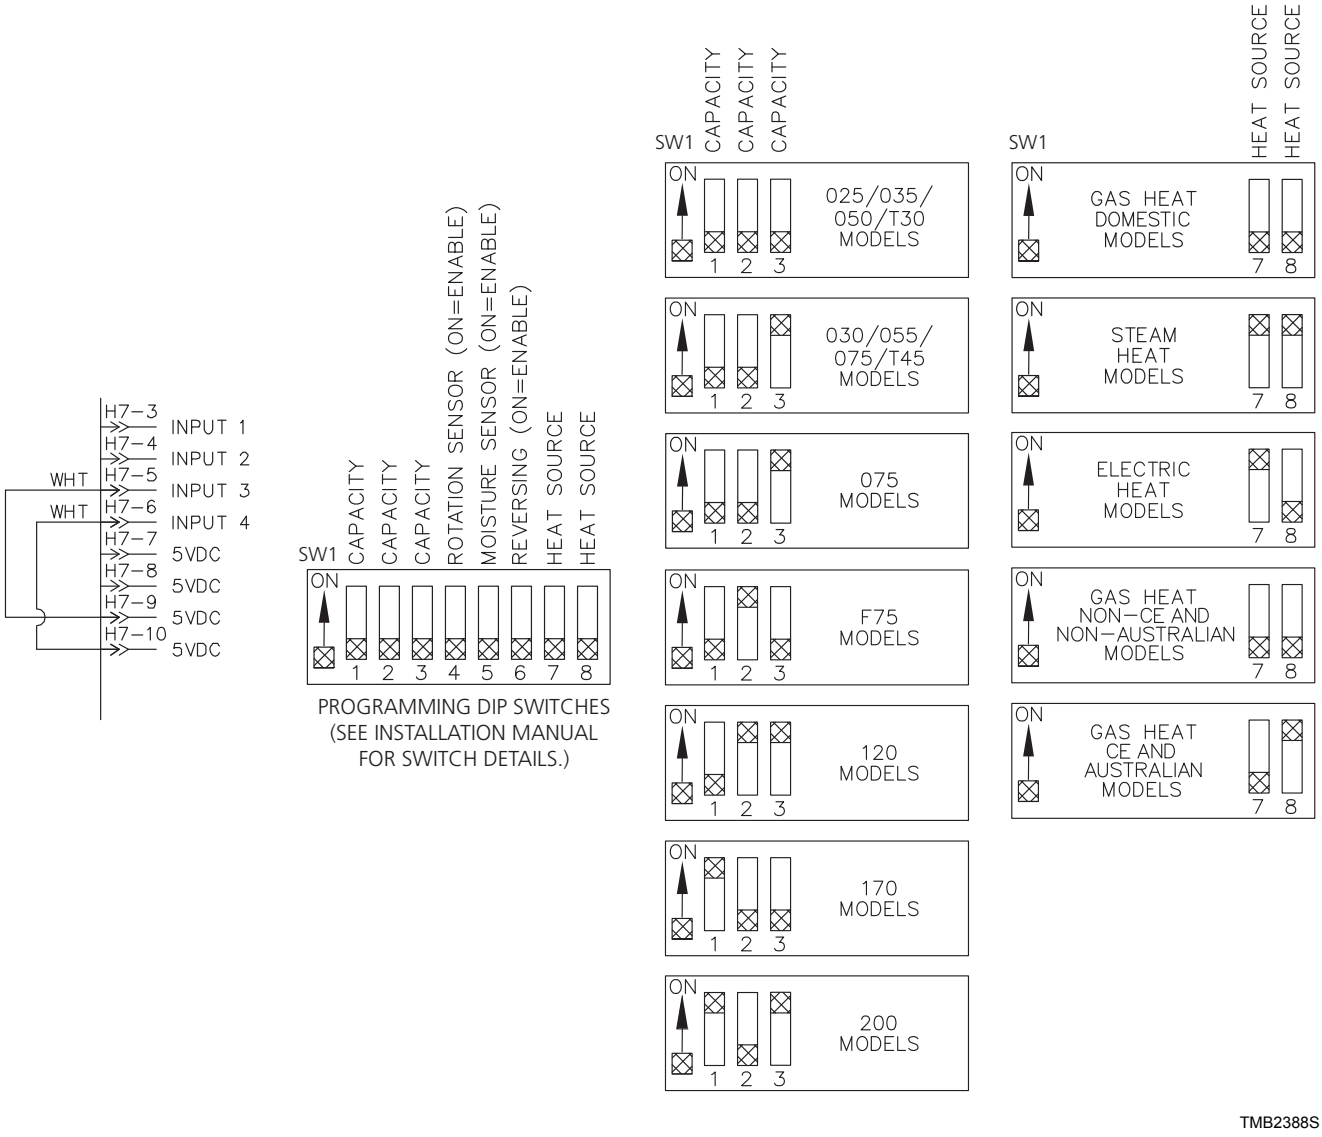

TMB2388S

115.Electronic Control Testing

Models with EO and RE Control Suffixes

This feature allows the owner to run diagnostic tests on various tumble dryer operations without servicing the tumble dryer. The tests that are available are shown in *Table 1*.

For an overview of the manual diagnostic test feature, refer to the flowchart on the following page.

How to Enter Testing Feature

1. Enter Manual Mode. Refer to ***Entering the Manual Mode***.
2. Press the Up (↑) or the Down (↓) keypad until "d iAG" appears.
3. Press the Start (◇/↵) keypad. Display will change to "dSoFt" indicating the control software version number test.
4. Press the Up (↑) or the Down (↓) keypad to scroll through the diagnostic test options.

How to Start Tests

To start a diagnostic test, refer to the quick reference chart below (*Table 1*). Press the Start (◇/↵) keypad when the desired test is displayed. For detailed information on each test, read the appropriate description.

How to Exit Testing Feature

Press the Back (←) keypad. The display will return to Idle Mode.

Diagnostic (Testing) Mode - Quick Reference Chart	
Display	**Diagnostic Mode**
"dSoFt"	Control Software Version
"ddoor"	Loading Door Status
"dL int"	Lint Door Status
"dHEAt"	Heater Interlock Test
"FCOnHH"	Fan Motor Contactor Status (HH represents input status, open "OP" or closed "CL"
"FnCSHH"	Fan Motor Centrifugal Switch Status (HH represents input status, open "OP" or closed "CL"
"CAb HH"	Cabinet High Limit Thermostat Status (HH represents input status, open "OP" or closed "CL"
"SL HH"	Stove High Limit Thermostat 1 Status (HH represents input status, open "OP" or closed "CL"
"SL2 HH"	Stove High Limit Thermostat 2 Status (HH represents input status, open "OP" or closed "CL"
"dd iP"	DIP Switch Status
"d iCnAL"	ICM Alarm Status
"d iCnrS"	ICM Reset Test
"dEALrn"	External Alarm Test
"ddryon"	Dryer On Temperature Test
"dtHEr"	Thermistor Temperature Test
"dConF2"	Machine Config #2 Display
"dConF3"	Machine Config #3 Display
"dAFS"	Airflow Switch Test
"dFAn"	Fan Motor Test
"ddAnPr"	Damper Motor Test*
"drEuSE"	Reverse Motor Test*
"drotAt"	Rotation Sensor Test*
"drnC 1"	Moisture Sensor Test (Shorted test jumper)*
"drnC 2"	Moisture Sensor Test (Resistance test jumper)*

* = Tests only shown if enabled by the DIP switch configuration.

Table 1

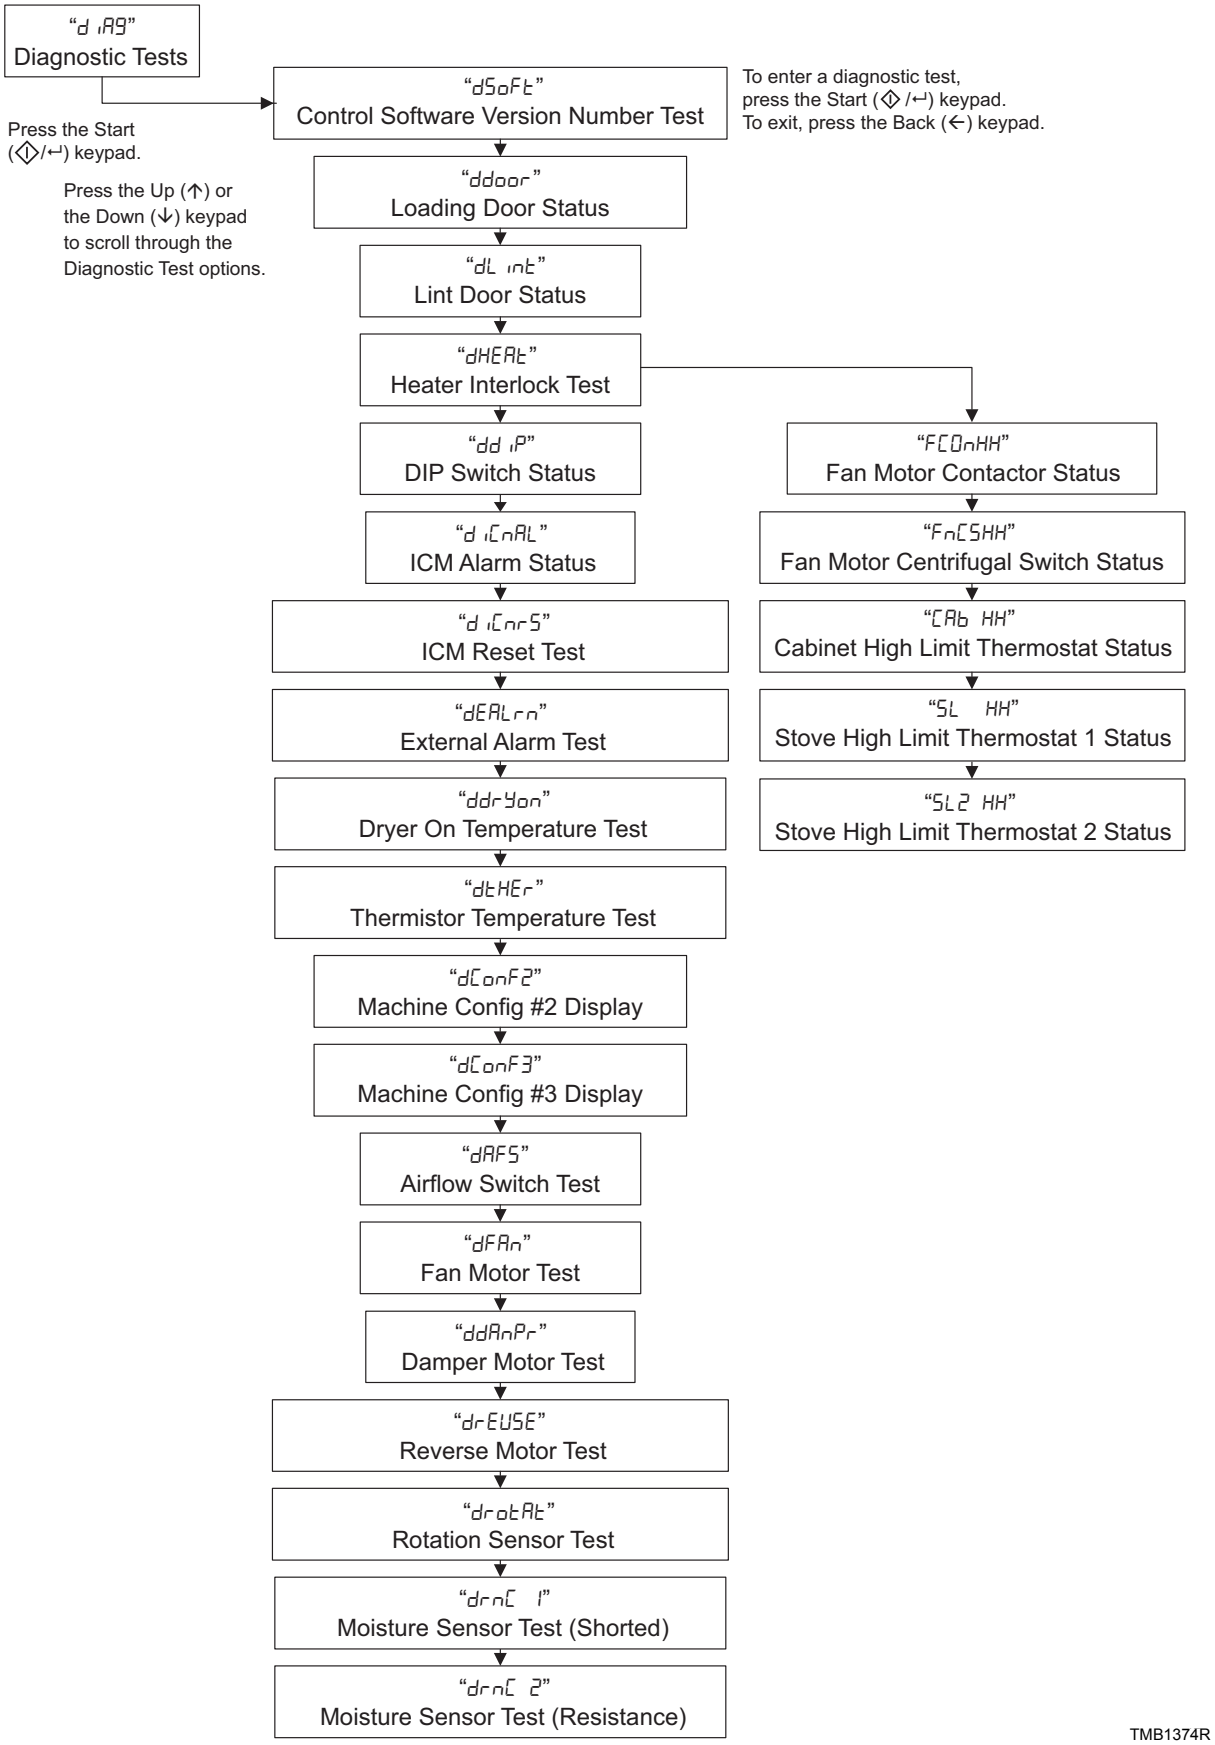
"d iAG"
Diagnostic Tests
Press the Start (◈/↵) keypad.
Press the Up (↑) or the Down (↓) keypad to scroll through the Diagnostic Test options.
"dSoFt"
Control Software Version Number Test
To enter a diagnostic test, press the Start (◈/↵) keypad.
To exit, press the Back (←) keypad.
"ddoor"
Loading Door Status
"dL int"
Lint Door Status
"dHEAt"
Heater Interlock Test
"dd iP"
DIP Switch Status
"d iCnAL"
ICM Alarm Status
"d iCnrS"
ICM Reset Test
"dEALrn"
External Alarm Test
"ddrYon"
Dryer On Temperature Test
"dtHEr"
Thermistor Temperature Test
"dConF2"
Machine Config #2 Display
"dConF3"
Machine Config #3 Display
"dAFS"
Airflow Switch Test
"dFAn"
Fan Motor Test
"ddAnPr"
Damper Motor Test
"drEUSE"
Reverse Motor Test
"drotAt"
Rotation Sensor Test
"drnC 1"
Moisture Sensor Test (Shorted)
"drnC 2"
Moisture Sensor Test (Resistance)
"FCOnHH"
Fan Motor Contactor Status
"FnCSHH"
Fan Motor Centrifugal Switch Status
"CAb HH"
Cabinet High Limit Thermostat Status
"SL HH"
Stove High Limit Thermostat 1 Status
"SL2 HH"
Stove High Limit Thermostat 2 Status

TMB1374R

Diagnostic Test Descriptions

Control Software Version Number Test "dSoFt"

This option displays the control software version number. To start test, control must be in the Testing Mode. Refer to *"How to Enter Testing Feature"* at the beginning of this section.

To enter, press the Start (◈/↵) keypad. The display will show "S HH" where "HH" is the software version number.

To exit the Software Version Number Test, press the Back (←) keypad. The control will return to the testing mode.

Loading Door Test "ddoor"

This option tests the loading door switch. To start test, control must be in the Testing Mode. Refer to *"How to Enter Testing Feature"* at the beginning of this section.

To enter, press the Start (◈/↵) keypad. The display will show "doorOP" when the loading door switch is open and "doorCL" when the loading door switch is closed.

The loading door switch has to be closed or open for at least one second for the control to register the switch as closed or open.

To exit the Loading Door Test, press the Back (←) keypad. The control will return to the testing mode.

Lint Door Test "dL Int"

This option tests the lint door switch. To start test, control must be in the Testing Mode. Refer to *"How to Enter Testing Feature"* at the beginning of this section.

To enter, press the Start (◈/↵) keypad. The display will show "L IntOP" when the lint door switch is open and "L IntCL" when the lint door switch is closed.

The lint door switch has to be closed or open for at least one second for the control to register the switch as closed or open.

NOTE: Loading door must be closed while testing lint door.

To exit the Lint Door Test, press the Back (←) keypad. The control will return to the testing mode.

Heater Interlock Test "dHEAt"

While this test is running, the control will show the status of the following inputs for two seconds each. The control will continue scrolling through the input status displays until the test is aborted.

To start test, the control must be in the Testing Mode. Refer to *"How to Enter Testing Feature"* at the beginning of this section.

To enter, press Start (◈/↵). Refer to five sections below for more details on individual statuses.

NOTE: These switches are tested in sequence. If one switch is sensed open, the rest will be open as well. For example, if the fan motor contactor switch is open, all of the switches will be open.

To exit the test, press the Back (←) keypad. The control will return to the testing mode.

Fan Motor Contactor Switch "FCOnHH"

The display will show "FCOnOP" if the switch is sensed open and "FCOnCL" if the switch is sensed closed.

Fan Motor Centrifugal Switch "FnCSHH"

The display will show "FnCSOP" if the switch is sensed open and "FnCSCL" if the switch is sensed closed.

Cabinet High Limit Thermostat "CAb HH"

The display will show "CAb OP" if sensed open for at least 1.5 seconds and "CAb CL" if sensed closed for at least one second.

Stove High Limit Thermostat 1 "SL HH"

The display will show "SL OP" if sensed open for at least 1.5 seconds and "SL CL" if sensed closed for at least one second.

Stove High Limit Thermostat 2 "SL2 HH"

The display will show "SL2 OP" if sensed open for at least 1.5 seconds and "SL2 CL" if sensed closed for at least one second.

Dip Switch Status "ddiP"

The control will show the displays in *Table 2* according to the DIP switch configuration. The control will show which switches are in the ON position. For example, to verify that DS3, DS5 and DS7 are in the ON position, the display will show "dSC084" (DS3=4, DS5=16 and DS7 = 64, 4+16+64 =84).

DS8	DS7	DS6	DS5	DS4	DS3	DS2	DS1	Display
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	dSC000
OFF	OFF	OFF	OFF	OFF	OFF	OFF	**ON**	dSC001
OFF	OFF	OFF	OFF	OFF	OFF	**ON**	OFF	dSC002
OFF	OFF	OFF	OFF	OFF	**ON**	OFF	OFF	dSC004
OFF	OFF	OFF	OFF	**ON**	OFF	OFF	OFF	dSC008
OFF	OFF	OFF	**ON**	OFF	OFF	OFF	OFF	dSC016
OFF	OFF	**ON**	OFF	OFF	OFF	OFF	OFF	dSC032
OFF	**ON**	OFF	OFF	OFF	OFF	OFF	OFF	dSC064
ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	dSC128

Table 2

ICM Alarm Status "diCnAL"

This option shows the status of the ICM (Ignition Control Module) Alarm.

To start test, control must be in the Testing Mode. Refer to *"How to Enter Testing Feature"* at the beginning of this section.

To enter, press the Start (◇/↵) keypad. The display will show " iAL on" if the alarm is active for at least one second or " iALOFF" if the alarm is not active for one second.

To exit the test, press the Back (←) keypad. The control will return to the testing mode.

ICM Reset Test "diCnrS"

The ICM Reset Test can be used to both activate the ICM alarm signal and reset the ICM alarm. When this test is started, the ICM reset will become active. If the reset signal is active for a long enough period of time (4 seconds) the ICM Lockout input will become active. To reset the ICM, stop the ICM Reset Test and then start the test again until the ICM Lockout input becomes inactive (4 seconds) and then stop the ICM Reset Test. If " irESEt" shows on the display, ICM Reset output is active.

External Alarm Test "dEALrn"

This option tests whether the external alarm is working.

To start test, control must be in the Testing Mode. Refer to *"How to Enter Testing Feature"* at the beginning of this section.

To enter, press the Start (◇/↵) keypad. The display will show "EALArn" and the external alarm will sound until the test is exited.

To exit this test, press the Back (←) keypad. The control will return to the testing mode.

Tumble Dryer On Temperature Test "ddryon"

This option tests the temperature inside the cylinder while running a cycle.

To start test, control must be in the Testing Mode. Refer to *"How to Enter Testing Feature"* at the beginning of this section.

To enter, press the Start (◇/↵) keypad. The display will show "P HHHF" (Fahrenheit) or "P HHHC" (Celsius). Use the Up (↑) or the Down (↓) keypad to select desired temperature. Press the Start (◇/↵) keypad to begin cycle. While the test is running the control will display the temperature estimated in the cylinder ("HHH F " or "HHH C "). Once the cylinder temperature stabilizes at the target temperature, the heater is turned off and there is a two minute cool down period. During cool down, the control will display the time remaining as " nn 55".

NOTE: This test does not increment the Total # of Cycles audit counter.

To exit the test, press the Back (←) keypad. The control will return to the testing mode.

Thermistor Temperature Test "dtHEr"

This option displays the temperature sensed at the thermistor in 5°F (3°C) increments.

To start test, control must be in the Testing Mode. Refer to *"How to Enter Testing Feature"* at the beginning of this section.

To enter, press the Start (◇/↵) keypad. The display will show " HHHF" or " HHHC". The "F" will show Fahrenheit, the "C" will show Celsius and the "HHH" will show degrees. If control senses a shorted thermistor, the display will show " SH ". If the control senses an open thermistor, the display will show " OP ".

To exit this test, press the Back (←) keypad. The control will return to the testing mode.

Machine Configuration Display #2 Test "dConF2"

This option shows the machine configuration values for the machine type.

To start test, control must be in the Testing Mode. Refer to *"How to Enter Testing Feature"* at the beginning of this section.

To enter, press the Start (◇/↵) keypad. The display will show "C HHH", with "HHH" the number corresponding to the machine capacity. Refer to *Table 3*.

Value	Description
2	25, 30 Pound Tumble Dryer
4	30, 45 Pound Stack Tumble Dryer
5	35, 55 Pound Tumble Dryer
12	50, 75, F75, 120, 170, 200 Pound Tumble Dryer

Table 3

To exit Machine Configuration Display #2 Test, press the Back (←) keypad. The control will return to the testing mode.

Machine Configuration Display #3 Test "dConF3"

This option shows the machine configuration values for the machine capacity.

To start test, control must be in the Testing Mode. Refer to *"How to Enter Testing Feature"* at the beginning of this section.

To enter, press the Start (◇/↵) keypad. The display will show "d HHH", with "HHH" representing the machine capacity. Refer to *Table 4*.

To exit Machine Configuration Display #3 Test, press the Back (←) keypad. The control will return to the testing mode.

Value	Description
0	Tumble Dryer
17	25 Pound Tumble Dryer
18	30 Pound Tumble Dryer
19	30 Pound Stack Tumble Dryer
20	30 Pound Stack Tumble Dryer – Lower Pocket
21	30 Pound Stack Tumble Dryer – Upper Pocket
22	35 Pound Tumble Dryer
23	45 Pound Stack Tumble Dryer
24	45 Pound Stack Tumble Dryer – Lower Pocket
25	45 Pound Stack Tumble Dryer – Upper Pocket
26	50 Pound Tumble Dryer
27	55 Pound Tumble Dryer
28	75, F75 Pound Tumble Dryer
29	120 Pound Tumble Dryer
30	170 Pound Tumble Dryer
31	200 Pound Tumble Dryer

Table 4

Airflow Switch Test "dAFS"

This option shows the current state of the airflow switch.

To start test, control must be in the Testing Mode. Refer to *"How to Enter Testing Feature"* at the beginning of this section.

To enter, press the Start (◇/↵) keypad. The display will show "AF OP" or "AF CL", with "AF OP" being open and "AF CL" being closed.

Switch has to be closed for at least one second or open for at least one second for a valid change.

To exit Airflow Switch Test, press the Back (←) keypad. The control will return to the testing mode.

Fan Motor Test "dFAn"

This option shows the fan motor running.

To start test, control must be in the Testing Mode. Refer to *"How to Enter Testing Feature"* at the beginning of this section.

To enter, press the Start (◇/↵) keypad. The display will show "FAn " to indicate the fan motor is going to run.

The test must run for at least six seconds before it can be exited and off for six seconds before the test can be run again.

NOTE: This test does not count towards the total machine run time operation.

To exit Fan Motor Test, press the Back (←) keypad. The control will return to the testing mode.

Damper Motor Test "ddAnPr"

This option shows the damper motor running.

To start test, control must be in the Testing Mode. Refer to *"How to Enter Testing Feature"* at the beginning of this section.

To enter, press the Start (◇/↵) keypad. The display will show "dAnPEr" to indicate the damper motor is going to run.

The test must run for at least six seconds before it can be exited and off for six seconds before the test can be run again.

NOTE: This test does not count towards the total machine run time operation.

To exit Damper Motor Test, press the Back (←) keypad. The control will return to the testing mode.

Reverse Motor Test "drEUSE"

This option shows the reverse motor running.

To start test, control must be in the Testing Mode. Refer to *"How to Enter Testing Feature"* at the beginning of this section.

To enter, press the Start (◈/↵) keypad. The display will show "rnotor" to indicate the reverse motor is going to run.

The test must run for at least six seconds before it can be exited and off for six seconds before the test can be run again.

NOTE: This test does not count towards the total machine run time operation.

To exit Reverse Motor Test, press the Back (←) keypad. The control will return to the testing mode.

Rotation Sensor Test "drotAt"

This option shows the RPM of the tumble dryer cylinder.

To start test, control must be in the Testing Mode. Refer to "*How to Enter Testing Feature*" at the beginning of this section.

To enter, press the Start keypad. The display will show "rPnHHH". The display is updated every ten seconds. The test must run for at least six seconds before it can be exited and off for six seconds before the test can be run again.

NOTE: This test does not count towards the total machine run time operation.

To exit Rotation Sensor Test, press the Back (←) keypad. The control will return to the testing mode.

Moisture Sensor Test (Shorted Test Jumper) "drnC 1"

This step is skipped if the control is not configured for Moisture Sensing. When entering this test, the control will show "rnC 1" while flashing the Start LED one second on/one second off, allowing the user to short the cylinder to the baffle (orange jumper). When the Start key is pressed, this test step energizes the Fan Motor Contactor and Forward Motor Contactor and the control will show " HH". The moisture sensor test is 30 seconds. During this 30 second period, the control is continually monitoring the moisture sensor input for the expected short circuit. If an intermittent signal or high resistance is sensed before the 30 seconds expire, the test is terminated and the control will show "OPEn ", indicating that the test has failed. At this time the user has the option to press the Back (←) keypad to return and run the test again. If the control ran the whole test reading the expected moisture sensor level and without an intermittent signal or high resistance, "PASS " will be shown. If either the loading or lint doors are opened during the test, the control will reset the test step and allow it to be run again. When the test is complete and result is displayed, the control sounds a 5 second audio signal. Press a key to advance to the next test step. If the Up (↑) or Down (↓) keypad is pressed while the test is in progress the control will toggle between displays " HH", "rnC HH" and "SnrHHH". If the display is left on "rnC HH" or "SnrHHH" for 5 seconds the control will revert to showing "rnC 1".

Moisture Sensor Test (Resistance Test Jumper) "dmC 2"

This step is skipped if the control is not configured for Moisture Sensing. When entering this test, the control will show "mC 2" while flashing the Start key LED one second on/one second off, allowing the user to place the 510k Ohm resistor between the cylinder and the baffle (black jumper) which simulates an expected moisture sensor level. When the Start keypad is pressed, this step energizes the Fan Motor Contactor and Forward Motor Contactor and the control will show " HH". The moisture sensor test is 30 seconds. During this 30 second period, the control is continually monitoring the moisture sensor input for the expected moisture sensor level. If an intermittent signal or unexpected resistance is sensed before the time expires, the test is terminated and the control will show "OPEn ", indicating that the test has failed. At this time, the user has the option to press the Back (←) keypad to return and run the test again. If the control ran the test reading the expected moisture sensor level and without an inttermittent signal or unexpected resistance, "PASS " will be shown. If either the loading or lint doors are opened during the test, the control will reset the test step and allow it to be run again. When the test is complete and result is displayed, the control sounds a 5 second audio signal. Press a key to advance to the next test step. If the Up (↑) or Down (↓) keypad is pressed while the test is in progress the control will toggle between " HH", "mC HH" and "SnrHHH". If the display is left on "mC HH" or "SnrHHH" for 5 seconds the control will revert to showing "mC 2".

Production Test Cycle

To Enter Production Test Cycle

1. Be certain control is in Idle Mode.
2. While pressing and holding the Down (↓) keypad with one hand, press the Back (←) keypad with the other hand.
3. When the control enters the Production Test Cycle, it will first display "5 HH" with the "HH" showing the software version of the control.
4. The control will advance through the sequence of test steps whenever any keypad is pressed, with the exception of the Keypad Test. Refer to *Table 5* for all tests in the Production Test Cycle.

To Exit Production Test Cycle

The test will be exited when the time reaches "00" on the control in the 10 Minute Test Cycle. Otherwise, the control must be powered down to end the test.

Production Test Cycle Quick Reference Table		
Display	**Test Mode**	**Comments**
"5 HH"	Software Version	HH is the software version number.
"CE HHH"	Control Type	2, 3, 4, 5 or 6, depending on brand.
"PAd "	Keypad Test	When a key is pressed, the control will display the number assigned to the keypad. As each keypad is pressed, the control will display the number assigned to it in the last digit of the display until the next key is pressed (example, if Key 1 is pressed the control will show "PAd 1"). When all keypads have been pressed, the control will advance to next step after a one second delay.
"doorOP" or "doorCL"	Loading Door Test	The control will display the status of the loading door: "doorOP" if door is open or "doorCL" if door is closed.
"LintOP" or "LintCL"	Lint Door Test	The control will display the status of the lint door: "LintOP" if door is open or "LintCL" if door is closed. Loading door must be closed.
All LEDs and display segments will light	Show Entire Display Mode	The audio signal is turned off. Control will stay in this mode until any key is pressed.
"C HH"	Machine Configuration #2 Display	HH is the configuration byte value. The control will remain in this mode until any key is pressed.
"dSCHHH"	DIP Switch Configuration	The control will show the sum of all switches in the On position. The control will remain in this mode until any key is pressed.
Degrees in 5°F (3°C) increments, " SH ", " OP "	Thermistor Temperature Test	The temperature will be displayed in either Fahrenheit or Celsius, depending on machine's configuration (refer to ***Programming Control***). If control senses a shorted thermistor, SH will be displayed. If control senses an open thermistor, OP will be displayed.
–	Moisture Sensor 1 Test (Shorted)	Refer to ***Diagnostic Test Descriptions***. Test step lasts for 15 seconds.
–	Moisture Sensor 2 Test (Resistance)	Refer to ***Diagnostic Test Descriptions***. Test step lasts for 15 seconds.
" nn 55"	10 Minute Test Cycle	Determines if tumble dryer can function in a cycle for 10 minutes. Start pad will flash one second on and one second off. The Start pad can be used to decrease time remaining. If Start pad is not pressed within 4.25 minutes, the control will return to Idle Mode.

NOTE: If power to the control is turned off before 10 Minute Test Cycle has ended, the cycle will be cleared from control.

Table 5

116.Diagnostic Testing
Models with RU and UO Control Suffixes

Diagnostic Menu

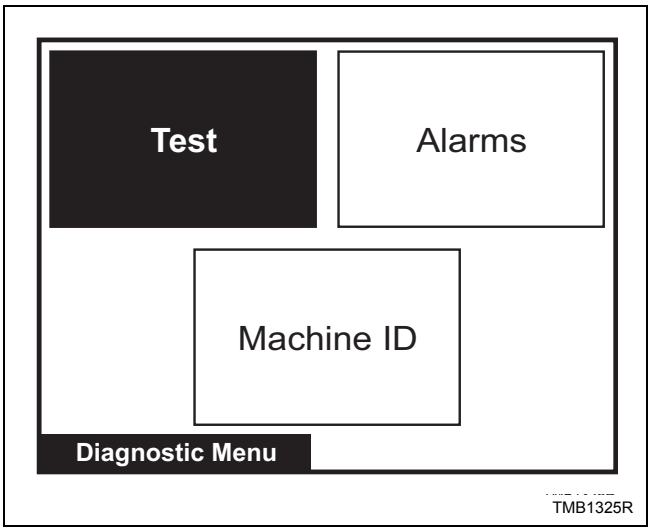

Figure 30

The Diagnostic Menu contains Test, Alarm and Machine ID Menus. The menus contain specific diagnostic information and manufacturing data for the machine. The ← , → , LCD ↑ and ↓ keypads position the highlighted box. Press the START ENTER keypad to select the menu choice.

Press the BACK keypad while in the Diagnostic Menu to return to System Menu.

Test Menu

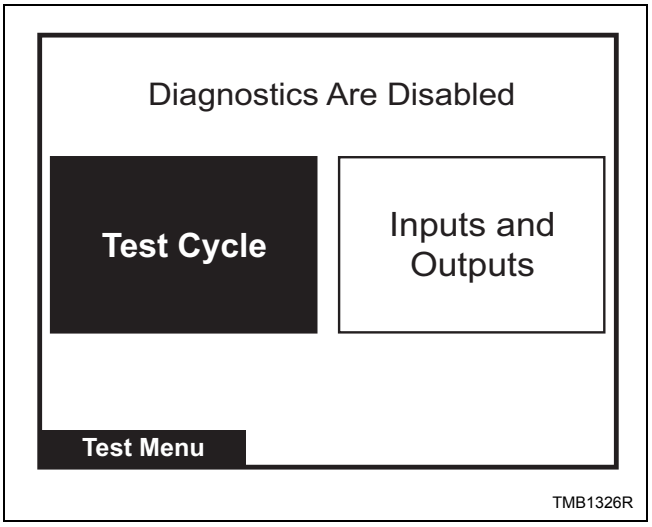

Figure 31

The Test Menu provides features for manufacturing and customer service testing. The highlighted box is moved horizontally and vertically using the ← → LCD ↑ and ↓ keypads. Press the START ENTER keypad to select the menu choice.

Press the BACK keypad to return to Diagnostic Menu.

The screen will display “Diagnostics Are Disabled” if the manual diagnostics have been programmed off. Diagnostic test commands via PDA and network will still function.

Test Cycle Menu

The Test Cycle Menu is used to run several test steps as well as a ten-minute cycle. Step 01 keypad test requires the user to press each keypad. Step 02 Door Status shows whether the loading and lint doors are open or closed. Press any key to advance. Step 03 Screen Test shows four screens that test the LCD screen. Press any key to advance through each of the four test steps.

The Test Cycle Menu for Test Steps 4-13 is shown in *Figure 32*.

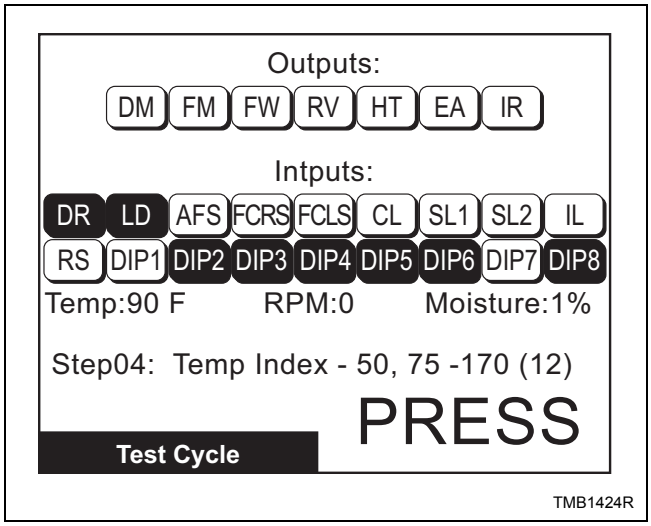
Outputs:
DM FM FW RV HT EA IR
Intputs:
DR LD AFS FCRS FCLS CL SL1 SL2 IL
RS DIP1 DIP2 DIP3 DIP4 DIP5 DIP6 DIP7 DIP8
Temp:90 F RPM:0 Moisture:1%
Step04: Temp Index - 50, 75 -170 (12)
PRESS
Test Cycle
TMB1424R

Figure 32

It is similar to the Inputs/Outputs Menu except that the test step is shown at the bottom of the display and a key press prompt message is shown in the lower right corner. Press START ENTER to advance through the steps. Refer to *Table 6* for more details of each step. Press STOP ON/OFF to terminate the test.

Inputs Outputs Menu

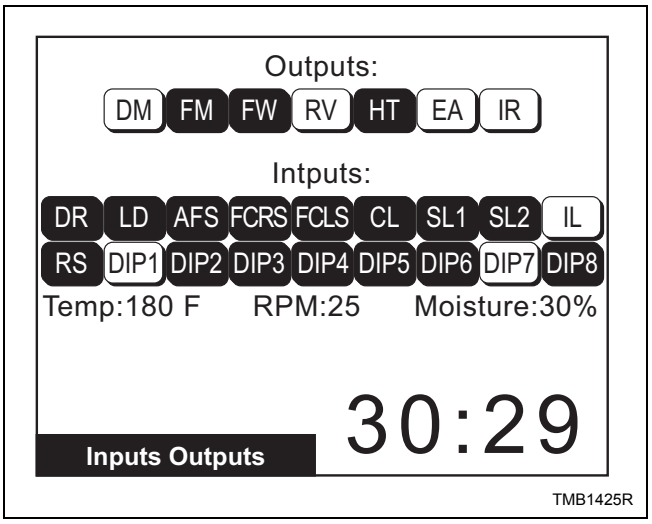

Figure 25

When the Inputs Outputs Menu is accessed through the Diagnostic Menu, the user can manually turn on outputs. The user can scroll through the outputs using any of the arrow keys, the cursor is indicated by flashing the active output on the screen. The user must "setup" the outputs to be turned on. The STOP ON/OFF keypad is used to select individual outputs to be turned on or off. After the START ENTER keypad is pressed the control will turn the selected outputs on and display the text "RUNNING". The outputs cannot be selected until the STOP ON/OFF keypad is pressed. The text "RUNNING" is no longer displayed. The screen will still show the selected outputs on the screen and the user can again select outputs to be turned on or off. If the BACK or STOP ON/OFF keypad is pressed at any time during this test, the control will turn off all outputs if the test is running or return to the previous screen if the test is not running.

If the Inputs Outputs Menu is accessed through the Run Diagnostic Menu (pressing the → keypad during a running cycle) the menu shows only what is turned on and off as the cycle runs. Refer to *Figure 25*.

Abbreviations for the Inputs and Outputs are defined in the following table:

Inputs	
DR	Loading Door
LD	Lint Door
AFS	Airflow Switch
FCRS	Fan Motor Contactor Switch
FCLS	Fan Motor Centrifugal Switch
CL	Cabinet High Limit
SL1	Store 1 High Limit
SL2	Store 2 High Limit
IL	Ignition Lockout
RS	Rotation Sensed
DIP1	Dip Switch 1
DIP2	Dip Switch 2
DIP3	Dip Switch 3
DIP4	Dip Switch 4
DIP5	Dip Switch 5
DIP6	Dip Switch 6
DIP7	Dip Switch 7
DIP8	Dip Switch 8
Temp	Temperature
RPM	Rotations per Minute
Moisture	Moisture Level
Outputs	
DM	Damper Motor
FM	Fan Motor
FW	Forward Contactor
RV	Reverse Contactor
HT	Heater
EA	External Alarm
IR	Ignition Reset

Table 6

Alarms Menus

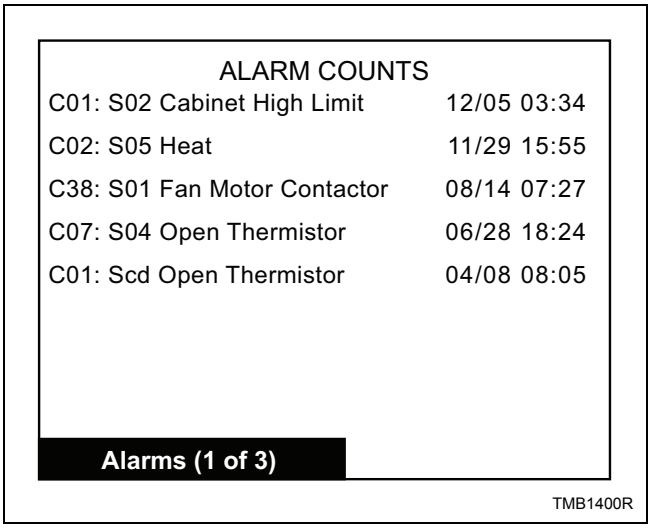
ALARM COUNTS
C01: S02 Cabinet High Limit 12/05 03:34
C02: S05 Heat 11/29 15:55
C38: S01 Fan Motor Contactor 08/14 07:27
C07: S04 Open Thermistor 06/28 18:24
C01: Scd Open Thermistor 04/08 08:05
Alarms (1 of 3)
TMB1400R

Figure 26

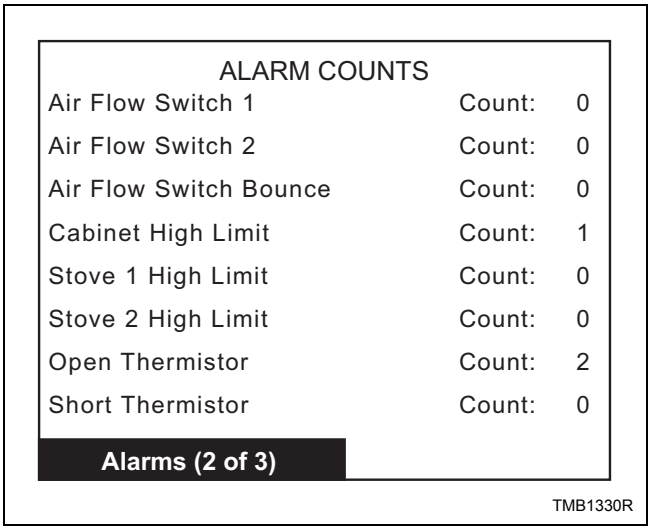
ALARM COUNTS
Air Flow Switch 1 Count: 0
Air Flow Switch 2 Count: 0
Air Flow Switch Bounce Count: 0
Cabinet High Limit Count: 1
Stove 1 High Limit Count: 0
Stove 2 High Limit Count: 0
Open Thermistor Count: 2
Short Thermistor Count: 0
Alarms (2 of 3)
TMB1330R

Figure 27

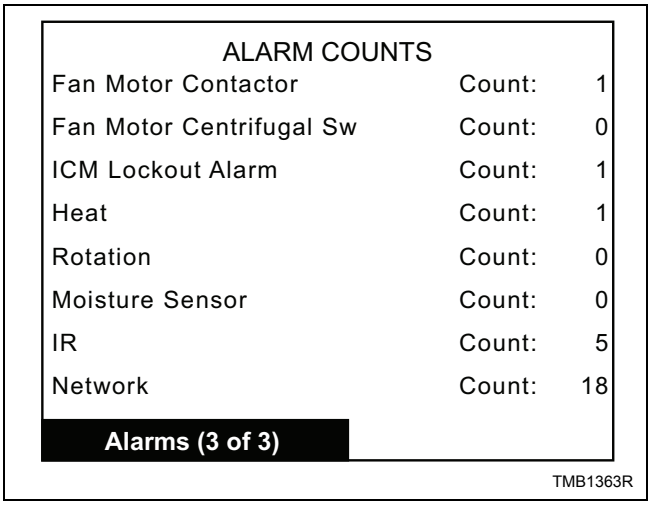

Figure 28

The Alarms Menu contains three screens of information. On the first screen, Alarms (1 of 3), the eight most recent alarms will contain Cycle Number, Segment Number, Alarm Type, and the Date/Time of the Alarm.

The second screen, Alarms (2 of 3), alarm counts list 1 through 8. Alarm counts consist of how many times a specific alarm has occurred.

The third screen, Alarms (3 of 3), is a continuation of the alarm counts 9 through 16.

Press the ← or → keypad to navigate to the different screens in the Alarms Menu. Press the ← keypad to go from screen 1 to screen 3. The actual menus are informational only and cannot be navigated. Press the BACK keypad to return to display to Diagnostic Menu or the Run Diagnostic Menu.

Machine ID Menu

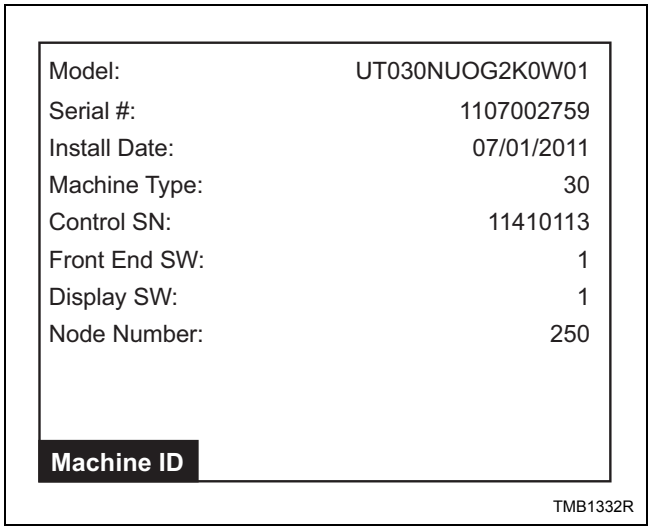

Figure 29

The Machine ID Menu provides several different types of manufacturing and machine information that can be useful to the user and technician. The Machine ID Menu cannot be navigated. Pressing the BACK keypad will return to Diagnostic Menu or the Run Diagnostic Menu.